

TUNEUP PROCEDURE

The transmitter is professionally installed. The rf power output is set upon installation. The power level is set through software at a maintenance port. An rf power meter is used to measure the rf power output and the appropriate level (up to +24 dBm) is set by adjusting the PL software code. There are no other alignments necessary for the transmitter.