

AdvanTag 9100

AdvanTag Gateway

Technical Manual



Rev. A Date: 06/05/2003
Printed on Standard Paper
P/N: 2000-3160-02

Copyright ©2003
Asyst Technologies, Incorporated
All rights reserved.

Disclaimers

This manual may not be reproduced, either wholly or in part, for any reason whatsoever, without prior written permission from Asyst Technologies, Inc. ("Asyst"). Material contained in this manual is provided for informational purposes and is subject to change without notice.

If this manual is marked "Preliminary" or "Draft," then Asyst has not yet released a final version of the manual and the manual is likely to be incomplete and will be revised. Contact Asyst at the address below to obtain a final copy of the manual.

Manual Information

PCN: E12464
Part Number: 2000-3160-02
Date: 06/05/2003
Release: x
Printing Description: Printed on Standard Paper.

Asyst Technologies, Inc.
48761 Kato Road
Fremont, California 94538
Telephone: (510) 661-5000
FAX: (510) 661-5166
Technical Support: 1-800-342-SMIF

Trademarks

Asyst, the Asyst logo(s), FLOUROTRAC, KPOD, ADU and MANUFACTURING CONNECTIVITY are registered trademarks ® of Asyst Technologies, Inc.

VERSAPORT, PLUS, INX, ADVAN-TAG, LINK MANAGER, SMART-TAG, SMART-STATION, SMART-STORAGE, SMART-TRAVELER, SMART-COMM, AXYS, FASTRACK, FASTMOVE, FASTLOAD, FASTORE are trademarks™ of Asyst Technologies, Inc.

All other product and company names mentioned herein may be trademarks and/or service marks of their respective owners.

Equipment Modification

Any change, alteration, or modification to this equipment, as well as use of this equipment in a manner inconsistent with its intended use will void this equipment's warranty and may render this equipment unsafe for use or unfit for its intended purposes.

Training and Languages

User training for equipment operation and maintenance is conducted in English. Translators are available on an as needed basis. English versions of the manuals and other technical materials are provided and reviewed during the training. Please contact the Asyst Training department or <http://www.asyst.com> for the training schedule and signup requirements.

Warranty

For warranty information, see Asyst's Standard Terms and Conditions.

Reader Comments

We welcome your comments regarding this manual. Your comments and suggestions help us to improve our publications.

Please send comments and suggestions to:

Asyst Technologies, Inc.
Technical Publications Manager
48761 Kato Rd.
Fremont CA 94538

Or fax: Attention—Tech Pubs Manager at 1-510-661-5185

Or email: TechPubs@asyst.com

Include the following:

Name:

Company:

Contact Phone # (in case we have questions):

Email:

Document Information (Name of document, Part Number, Revision):

Location of comment (page number or other reference):

Comments: (The more specific the comments, the more useful they are to us.)

Thank you for helping to improve the manuals and to maintain accuracy.

Acronym List

AMHS	Automated Material Handling System
ASCII	American Standard Coding for Information Interchange
ATR	AdvanTag Reader
CAN	Control Area Network
CIM	Computer-Integrated Manufacturing
EMF	Electromagnetic Field
EMI	Electromagnetic Interference
EMO	Emergency (Machine) Off
ESD	Electrostatic Discharge
MID	Material IDentification
OEM	Original Equipment Manufacturer
PN or P/N	Part Number
RFID	Radio Frequency IDentification
SECS	Semiconductor Equipment Communication Standard
SEMI	Semiconductor Equipment and Materials International
SMIF	Standard Mechanical Interface



Revision History

Date	Author	Version	Revision Information
06/05/2003	Royden Tonomura	A	Original version - release ECN E12464



Table of Contents

Disclaimers	i
Manual Information	i
Trademarks	i
Equipment Modification	i
Training and Languages	i
Warranty	i
Reader Comments	ii
 Acronym List	 iii
 Revision History	 v
 Preface	 1
Purpose and Audience	1
About this Manual	1
References	1
Conventions	1
Safety Tags	2
 Chapter 1: General Information	 5
Technical Data (Specifications and Outline Drawing)	5
Safety	7
General Requirements	7
Servicing	7
ESD / EMI Precautions	7
Electrical Power/Input Power Requirements	7
Environmental	8
Warranty and Liability	8
FCC Compliance	8
Definition	8
Compliance	8
Antenna Requirements	8
Labeling Requirements	8
Location of Labels used on the AdvanTag	10
 Chapter 2: Theory of Operation	 11
AdvanTag Reader	11

AdvanTag Gateway	12
Multiplexing	13
Protocols and Connections	13
Message Format and Translation.	14
Messages Supported.	15
Specifications.	15
Features	16
LEDs.	16
Baud rates	16
Integration of Parts	17
Mounting	17
Ports	17
Data Storage—AdvanTag Reader	18
Memory	18
MicroTags	18
AdvanTag Gateway.	24
Commands Supported by the Gateway	24
Commands Routed to Heads (ATR 9100s connected on CAN bus):.	24
Code Upgrade Functionality in ATR Gateway	25
Interfaces	25
LEDs	25
Power Indicator	25
Host Comm	25
Read/Write (9100 Reader only)	26
Connectors	26
Power	26
Communication	27
Antenna	27
External Presence (9100 Reader only)	28
Ethernet (in development)	28
Buttons/Switches	28
Reset	28
Code Upgrade	28
Long Range (9100 Reader only)	29
Node Address (9100 Reader only).	29
Communications	30
To Host.	30
Read Range	30
SECS/ASCII.	30

Serial Communications Interface	31
CAN Communications	31
Ethernet Communications	31
Software.	31
Antenna Performance	32
Read/Write Performance Factors.	32
RF Field Diagrams (9100 Reader only)	32
Stick Antennas	32
Chapter 3: Troubleshooting.	35
Troubleshooting Chart.	35



List of Figures

Figure 1	Outline Drawing, AdvanTag 9100 Reader	6
Figure 2	Label Locations, AdvanTag 9100 Reader	10
Figure 3	Label Locations, AdvanTag	10
Figure 4	AdvanTag Top View	11
Figure 5	AdvanTag 9100 Gateway	12
Figure 6	ATR Gateway Connectivity with Host and Slave ATRs	13
Figure 7	AdvanTag 9100 Reader LEDs	25
Figure 8	Long Range Switch, AdvanTag 9100 Reader, Side View	29
Figure 9	Node Address Switches (9100 Reader only)	30
Figure 10	Stick Antenna 9700-9097-01 (Standard Range only).	33

List of Tables

Table 1	AdvanTag 9100 Specifications	5
Table 2	Labels	9
Table 3	Attribute Values (ECID and SVID)	19
Table 4	Power Cable Pin Outs	26
Table 5	Serial Port Pin Usage	31
Table 6	ATR Errors and Solutions	35



Purpose and Audience

This manual describes the Asyst AdvanTag 9100 Reader, also referred to as the ATR 9100, which is part of Asyst’s radio-frequency auto ID system, AdvanTag. The AdvanTag Reader is an Asyst OEM, SEMI-standard device that reads and writes to tags embedded in wafer cassettes, pods, FOUPs, reticle boxes, and so on.

This document is intended for user of the AdvanTag system and the ATR 9100. Service is not applicable to the ATR 9100; see [“Servicing” on page 7](#).

About this Manual

The AdvanTag Reader Manual is organized as follows:

Chapter 1, General Information, provides specifications and describes safety considerations and labeling for the AdvanTag 9100 Reader and the AdvanTag Gateway.

Chapter 2, Theory of Operation, provides an operational overview of the AdvanTag 9100 Reader and the AdvanTag Gateway.

Chapter 3 provides troubleshooting.

An Index is also provided in the back of the manual.

References

This manual uses information from several sources, including application notes and other internal documentation.

Conventions

The following keyboard conventions and terminology are used.

Example	Meaning
Bold	User action on keyboard keys or other objects are bold .
Choose	The word choose is used for menu choices. Submenus are separated by a >. For example: Choose File > Import > File...


Example	Meaning
Click	Refers to mouse actions. For example: Click the hand icon.
Courier New Font	Text displayed on the screen uses Courier New. DOS and windows path names are displayed in Courier New. For example: Use the C:\Folder\SubFolder\SubFolder2 to access this file. Source code or DOS commands use courier new. Hexidecimal streams and examples.
Double quotes	Used when discussing or describing an action, functional word, or definition.
Folder	Used instead of Directory, unless discussing DOS movement commands.
<i>Italic</i>	Italics are used to show computer entry from the users keyboard or Teach Pendant.
Press	Shows action by a user on a key or physical button. For example: Press PF1, then type the file name.
Select	Used if the user is to pick from several choices. For example: Select the lot number from the list supplies.
Type	Shows entry. For example: Type the <i>Product Name</i> and <i>Model Number</i> at the top of the page. Press Enter .


Safety Tags

Special tags are used in this document to alert technicians to personal and equipment safety hazards.

Before using this document, a thorough understanding of AdvanTag safety issues detailed in the AdvanTag Reader ATR 9100 Manual must be understood.

The following types of safety tags appear in this document. Note that the following are only examples; they do not indicate a specific hazard associated with the AdvanTag.


DANGER


CORROSION HAZARD

DANGERS ALERT PERSONNEL TO POTENTIALLY HAZARDOUS SITUATIONS WHICH, IF NOT AVOIDED, WILL RESULT IN SERIOUS INJURY OR DEATH.



WARNING



CORROSION HAZARD

WARNINGS ALERT PERSONNEL TO POTENTIALLY HAZARDOUS SITUATIONS WHICH, IF NOT AVOIDED, MAY RESULT IN SERIOUS INJURY OR DEATH.



CAUTION



GENERAL HAZARD

STANDARD CAUTIONS—AS OPPOSED TO EQUIPMENT-DAMAGE CAUTIONS SHOWN BELOW—ALERT PERSONNEL TO POTENTIALLY HAZARDOUS SITUATIONS WHICH, IF NOT AVOIDED, MAY RESULT IN INJURY.



CAUTION

THESE CAUTIONS ALERT PERSONNEL TO SITUATIONS THAT MAY LEAD TO EQUIPMENT DAMAGE. FAILURE TO FOLLOW DIRECTIONS WILL RESULT IN DAMAGE TO THE EQUIPMENT AND/OR DAMAGE TO RELATED PRODUCTS (E.G., WAFERS) AND VOIDING OF WARRANTY.



NOTE...

NOTES EMPHASIZE, OR EXPAND UPON, THE PRESENTED INFORMATION.

Chapter 1: General Information

Technical Data (Specifications and Outline Drawing)

TABLE 1 *AdvanTag 9100 Specifications*

Width	115.06 mm (4.53 inches)
Depth	41.15 mm (1.62 inches)
Height	40.39 mm (1.59 inches)
Weight	TBD
Communications	Serial RS-232, Ethernet, CANbus • Protocols: ASCII, CIDRW SECS, HSMS, CAN Open Host Protocols supported: ASCII, CIDRW SECS, HSMS
Power	Reader: 24 VDC ($\pm 10\%$); 70mA (current draw in normal condition—no read or write) 225mA maximum (short range, write mode), 125mA maximum (short range, read mode) 350mA maximum (long range, write mode), 250mA maximum (long range, read mode) Gateway: Reader: 24 VDC ($\pm 10\%$); 300mA
Environmental	Operating Temperature 0° to 30° C (non-condensing) Operating Humidity 30%- 95% (non-condensing) Storage Temperature 0° to +55° C Storage Humidity 5%- 90%
Mounting	Mounting hardware and mounting pattern provided

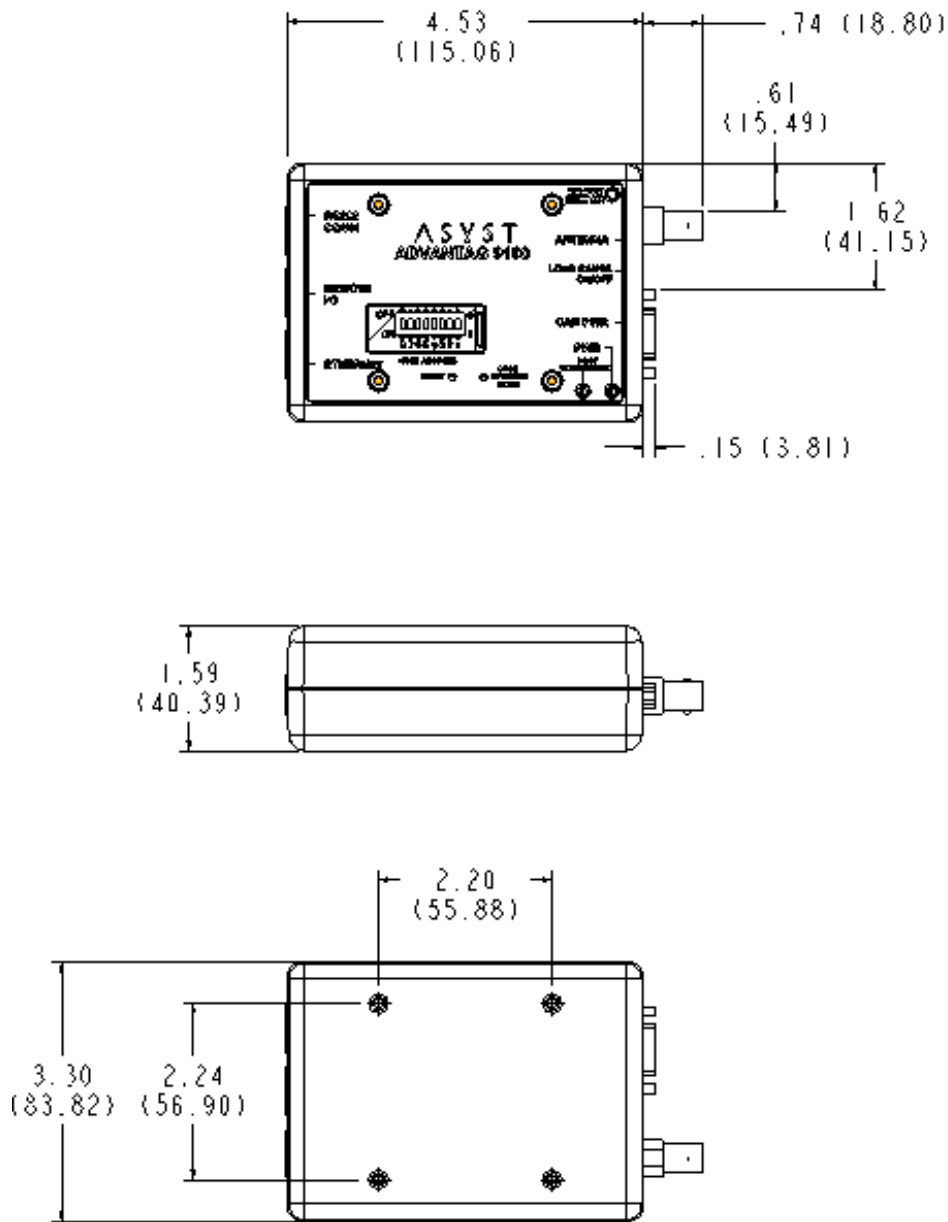


FIGURE 1 Outline Drawing, AdvanTag 9100 Reader

Safety

Before attempting any operation or service, it is essential that the information presented in this section be read and thoroughly understood. Important information is provided regarding safety hazards that may be encountered while working with these systems.

General Requirements

Warnings and cautions are used throughout this manual to identify potential hazards to personnel and equipment, respectively.

All warnings and cautions immediately precede the step or operation in which the hazardous condition may be encountered. All personnel operating or performing service on Asyst equipment must fully understand warnings, cautions, and all general safety regulations associated with electromechanical equipment.

Personnel should become thoroughly familiar with all aspects of safety for individuals and equipment prior to operating or performing service on this equipment.

Servicing

Refer all service to qualified personnel. There are no user-serviceable parts located inside the chassis. Return defective units to Asyst Technologies.

ESD / EMI Precautions

The AdvanTag is a certified Radiated EMI Class A product. Radiated susceptibility is 10kV.



CAUTION



GENERAL HAZARD

FOR ESD AND EMI CONSIDERATIONS AND POWER SUPPLY PROTECTION, THE GROUND CABLE **MUST** BE PROPERLY INSTALLED.

Electrical Power/Input Power Requirements

Electrical power for the AdvanTag is 24V DC ($\pm 10\%$). In the event of an emergency, all power can be removed from the AdvanTag by turning off the power to the Host equipment chassis if the AdvanTag is connected to the EMO of the Host equipment.



CAUTION



SHOCK HAZARD


DO NOT REMOVE COVERS. THERE IS A RISK OF SHOCK.

Environmental

The AdvanTag uses no chemicals or combustibles, and creates no hazardous waste.

Warranty and Liability

See [“Warranty” on page i](#).

 **NOTE...**

CHANGES OR MODIFICATIONS TO THE ADVANTAG 9100 NOT EXPRESSLY APPROVED BY ASYST COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Compliance

Definition

Class A digital device. A digital device that is marketed for use in a commercial, industrial or business environment, exclusive of a device which is marketed for use by the general public or is intended to be used in the home.

Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Antenna Requirements

The antenna is removable and does not employ a unique connector; however, the device is professionally installed and maintained. Therefore, the AdvanTag 9100 complies with FCC15.203.


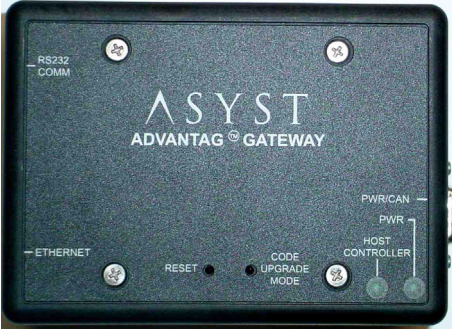

Labeling Requirements

The AdvanTag 9100 is not large enough to accommodate a label with the standard FCC compliance statement. It is therefore provided here as follows:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Labeling

TABLE 2 Labels

No.	Label	Description/Location
1	<p>AdvanTag 9100 Reader label</p> 	<p>The AdvanTag 9100 Reader Label identifies the various components of the unit. It is located on the top of the reader. See Figure 3 on page 10.</p>
2	<p>AdvanTag Gateway label</p> 	<p>The AdvanTag Gateway Label identifies the various components of the unit. It is located on the top of the reader. See Figure 3 on page 10.</p>
3	<p>Serial Number Label (9100 Reader and Gateway)</p> 	<p>The model and serial number labels for the AdvanTag 9100 Reader and AdvanTag Gateway are located on the bottom of the respective units. See Figure 3 on page 10.</p> <p>These numbers are required when contacting Asyst Technologies for any matter concerning the equipment.</p>

Location of Labels used on the AdvanTag

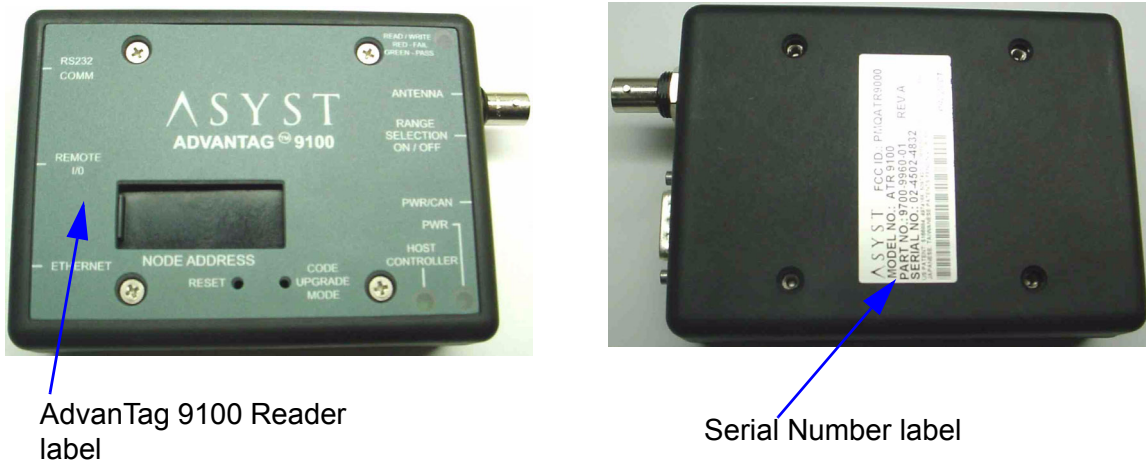


FIGURE 2 Label Locations, AdvanTag 9100 Reader

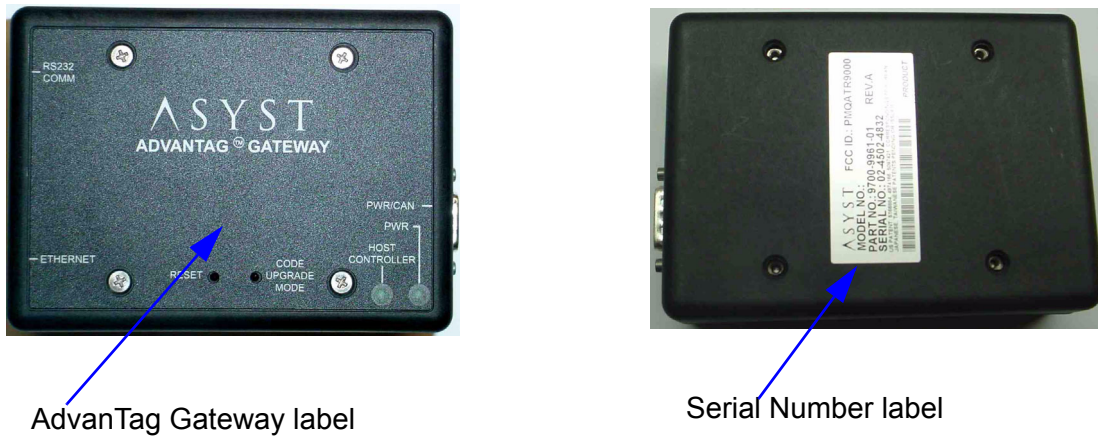


FIGURE 3 Label Locations, AdvanTag

Chapter 2: Theory of Operation

AdvanTag Reader

The AdvanTag Reader, designed to meet SEMI and Carrier ID standards, reads and writes to the MicroTag embedded in wafer cassettes, pods, FOUPs, reticle boxes, etc. The AdvanTag stores and automatically communicates detailed lot information to a process tool and fab CIM upon arrival at a load port or during transport in the AMHS.

The main component of this unit is a transmitter that generates radio waves through an antenna. This Tiris compatible, low-frequency (134.2 kHz), low-power RF energy is used to read from or write to a transponder near the antenna. The RFID Reader/Writer provides serial communication with a host through an RS-232 port, using either SECS or ASCII. It also supports HSMS protocol on its LAN Port and CAN open protocol on its CAN port. Power is supplied by an external source.

Operating program is field upgradeable via download over the serial host connection.

This unit is designed for versatile installation in many different situations. It can be installed within OEM tools, within load ports, inside stockers, and on tabletops. Once a power source, an external antenna, and a communication cable have been connected and the reader's address (TargetID and DeviceID as described in ["Communications" on page 30](#)) has been set, it is possible to communicate using Stream 18 SECS messages or ASCII messages (depending on the host protocol being used).

The software and hardware provide integrated self-test and diagnostics. A watchdog timer and non-volatile memory provide power-failure recovery.

The AdvanTag operates on 24V DC ($\pm 10\%$) supplied by an external power source. Communication is through a RS232 port, CAN Bus port (only for communicating with the Gateway), or the LAN port.

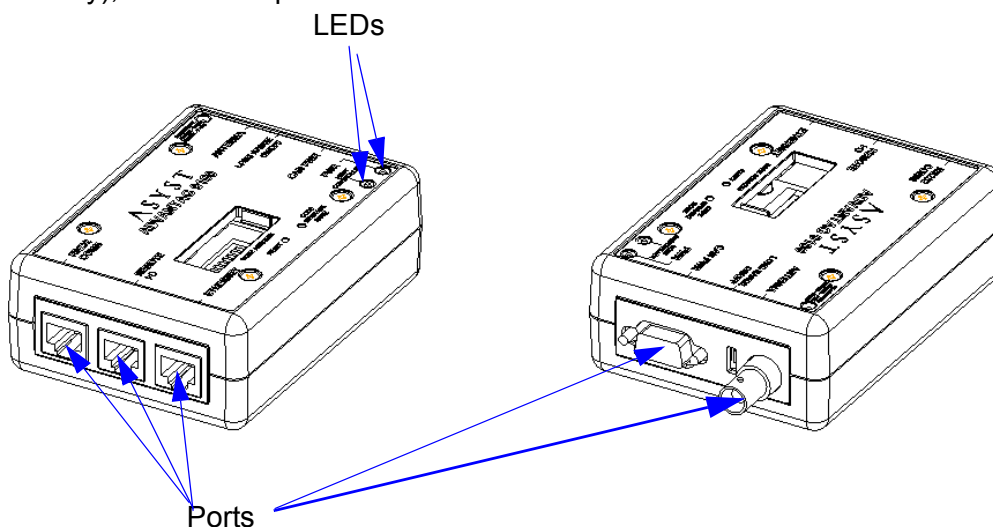


FIGURE 4 AdvanTag Top View

AdvanTag Gateway

The newest Multiplexer available in the Asyst Smart Traveler System (STS) product family, the ATR Gateway (see [Figure 5](#)) enables multiplexing of up to 31 ATR 9000s or 9100s via a single host. The Host system can address each of the ATRs via the Gateway, which makes the Gateway a transparent system. The communication between the host and the ATR Gateway is possible via CIDRW_SECS—on RS-232 (or soon-to-be-available HSMS over ethernet)—or CIDRW_ASCII messages. The communication between the ATR Gateway and the multiplexed ATRs occurs on the CAN bus (see [Figure 6 on page 13](#)).



FIGURE 5 *AdvanTag 9100 Gateway*

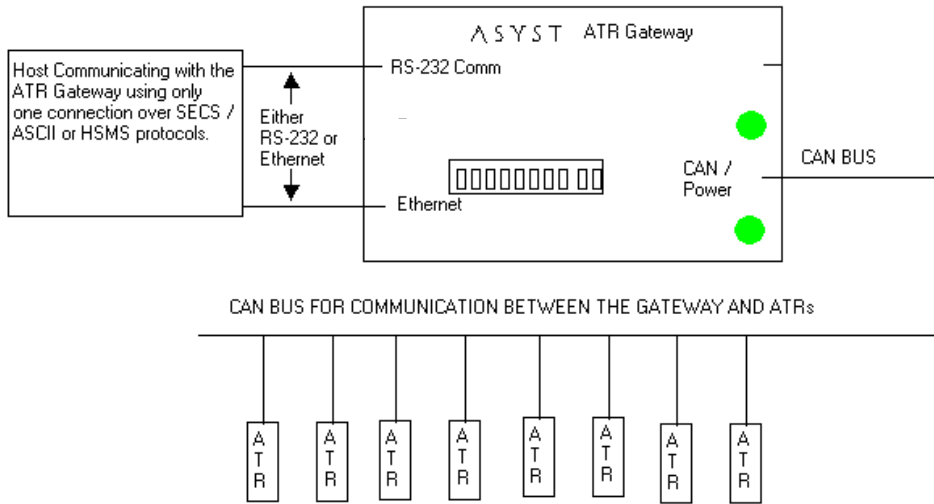


FIGURE 6 *ATR Gateway Connectivity with Host and Slave ATRs*

Multiplexing

The ATR Gateway 9100 can multiplex any SECS message received on the Host port (RS-232 or HSMS) to CAN bus, and vice versa. It can also multiplex any CIDRW ASCII message received on the RS-232 Host port to CAN bus. The multiplexing is limited to Asyst Technologies, Inc. specific CIDRW message standard.

Messages would be routed by Target ID mechanism. Target ID is the ID of each ATR box which can be set using the DIP Switches on the box. Target ID is always present in any CIDRW SECS / ASCII message. The ATR Gateway parses the incoming message from the Host and based on the Target ID value, routes the message to the targeted node connected on the CAN bus.

The Target ID of the ATR Gateway itself is always 0. Target Ids 1 through 8 would be dedicated for each of the connected ATRs.

Protocols and Connections

The ATR Gateway can communicate with the host on the SECS or HSMS ports. Please note that at a time only one of the two channels can be used as a host port.

USING SECS PROTOCOL AS HOST. The ATR gateway can receive a SECS/II message on its RS-232 port. In this mode normal SECS 1 handshake takes place between the Host and the ATR Gateway. Once the entire SECS message is received by the ATR, its sent over to the desired node as described in next section. Please note that only CIDRW SECS messages are supported by the ATR Gateway for multiplexing.

USING HSMS PROTOCOL AS HOST. The HSMS protocol can be used in two modes ACTIVE mode and PASSIVE mode. The ATR gateway would be used as a PASSIVE device. In this mode of operation, the ATR Gateway opens up a socket which would listen for an incoming connection request from an ACTIVE HSMS host. After the initial handshake, a connection between the Host and the ATR gateway is established. Once a connection had been established, the host and ATR Gateway can exchange messages between each other.

To establish a connection with an ATR Gateway, the following gateway specific information must be present with the host:

- **ATR Gateway IP Address:** The IP address of the ATR Gateway must be known to the host so that a connection request could be made on that address. Please note that HSMS is an IP address associated protocol thus for HSMS communication IP address of the Passive entity must be known to the Active entity.
- **ATR Gateway Port Number:** The ATR gateway opens a listening socket as mentioned earlier but the connection is opened on an ETHERNET PORT. This number also must be used by the Active entity (the host) to establish a connection.

 **NOTE . . .**

IT MIGHT BE NOTED THAT THE IP ADDRESS ASSIGNED TO THE ATR GATEWAY WOULD BE A STATIC IP ADDRESS AND NOT ONE OBTAINED VIA DHCP SERVER. THE REASON FOR THIS IS THAT HSMS IS AN IP ADDRESS BASED PROTOCOL.

Message Format and Translation

The messages as described in Section 1.1 have to be of the CIDRW SECS and ASCII standard. The host could communicate with the ATR Gateway on either the RS-232 port or the ethernet port. On the RS-232 port, the host could communicate over SECS or ASCII version. When the host communicates over the ethernet, the communication would happen over the HSMS protocol.

Each CIDRW SECS message (either on the SECS or HSMS port) would have a target ID in its message body as an item. For example, the command Read MID (S18F9) has the format

S18F9: 'S18F9' W

<A '###'>. * Target ID.

The item ## represents the Target ID of the node which the host wants to access. Assuming the host needs to read the MID from node '09', following is the sequence of operations that would take place.

1. Host sends S18F9 command to the ATR Gateway.
2. ATR Gateway parses the message for validity of data and format and extracts the Target ID out of the data stream.

3. ATR Gateway converts the command to CIDRW ASCII format. (09 HCS RMID)
4. ATR Gateway sends this command on the CAN Bus via the CAN-Open Master protocol.
5. The ATR connected on the node address 09 (Target ID 09) receives the message and since this command has to read the MID written in the Micro Tag, issues the command to read the MID.
6. If the radio communication was successful, the MID data would be returned by the ATR to the ATR Gateway on ASCII command RMIDA.
7. The ATR Gateway receives this command from the ATR, converts the same in to CIDRW SECS protocol and sends the SECS message to the host. Message Received on the host

S18F10

<L[4]

<A '09'> *Target ID

<A'NO'> *SSACK

<A'ABCDE'> *MID (Assuming ABCDE was the MID in MicroTag)

<L[4]

<A">

<A">

<A">

<A">

>

>.

Messages Supported

The ATR Gateway supports only CIDRW ASCII And CIDRW SECS messages as described in the message set documents CIDRW_ASCII_R.DOC and CIDRW_SECS_R.Doc

For any other message which is not described on the above said message sets, the ATR sends back an error message saying that the command is not supported.

At a time only one message can be sent to one of the nodes on the ATR Gateway. The host has to wait for receiving the reply of a previous message before sending another message to the same node.

Specifications

- Firmware of the gateway can be upgraded using Software command over the RS-232 port.
- Can connect to a host on serial port at baud rates of 9600 and 19200.

-
- Supports a 10/100 Base-T ethernet connection for HSMS communication.
 - Runs CAN - Open Master protocol for CAN communication and message routing.

Features

LEDs

See [“Interfaces” on page 25](#) for details.

Baud rates

The AdvanTag supports 9600 and 19200 baud rates for communication through the serial port. Default is 9600.

TCP/IP data rate is 10/100 base T.

Integration of Parts

Mounting



CAUTION



GENERAL HAZARD

ALL MOUNTING OPERATIONS SHOULD BE PERFORMED WITH THE POWER CORD TO THE ADVANTAG DISCONNECTED. ALSO, BE SURE THE 24 VDC POWER CONNECTOR IS DISCONNECTED. FAILURE TO DISCONNECT BOTH COULD RESULT IN DAMAGE TO THE ADVANTAG AND PERSONAL INJURY FROM MECHANICAL AND/OR ELECTRICAL HAZARDS WITHIN THE FRONT-LOAD ENCLOSURE.

IF REMOVAL OF THE LOAD PORT FROM THE HOST TOOL IS REQUIRED, ENSURE THAT THE POWER TO THE HOST TOOL IS REMOVED AND THE POWER DISCONNECT DEVICE IS LOCKED OUT IN THE OFF POSITION.

On the back of the AdvanTag reader, there are four M3 X .5 holes that can be used for mounting. An installation kit for mounting the unit to an Asyst 300mm Front-Load is available; contact Asyst for details.

Other details:

- Install the AdvanTag reader in a dry and clean environment.
- The AdvanTag reader should be mounted to a grounded panel.
- *The AdvanTag reader should be mounted where there is easy access to the front and rear panels and where the air vents on the top and front panel are unblocked.*
- The AdvanTag reader should be located as close as possible to the physical center of the devices that will be connected to it (the maximum recommended serial cable length is 10 meters).

For more details, consult instructions for the appropriate installation kit.

Ports

For details on the AdvanTag reader's ports, see ["Connectors" on page 26](#).

Data Storage—AdvanTag Reader

Memory

The ATR9100 can read/write up to 136 bytes of data from/to the transponder (MicroTag). This memory is divided into two sections. The first is for Material Identification (MID), which is configurable using the attribute set and can be up to 136 bytes long (range: 8-136, standard: 16). The second (Notepad) is for the balance of the memory. The amount of available MID and Notepad memory is dependent upon the MicroTag used. Two types of MicroTags are available, single page and seventeen page versions. Each page contains 64 bits, resulting in eight bytes of memory per page. MicroTags are available as read/write or read only.

MicroTags

The AdvanTag reader can interact with MicroTags with regard to the following information:

SECS communication:

- Are You There - This message is used to perform the heartbeat between the host and the connected device.
- Read Attribute Request - This message requests the current values of ECID or SVID of the subsystem component indicated in TargetID.
- Write Attribute Request - This message requests the subsystem to set the value of ECID of the component specified in TargetID to configure desired behavior. Only applicable write-able attributes (like ECID) may be used in this message.
- Read Data Request - This message reads the “NOTEPAD” (Linear Memory) section of the subsystem component indicated in TargetID.
- Write Data Request - This message writes data to the NOTEPAD section of the subsystem component indicated in TargetID.
- Read Material ID Request - This message is used to request the subsystem indicated by TargetID to read an MID.
- Write Material ID Request - This message is used to request the subsystem indicated by TargetID to write a Material identifier.
- Subsystem Command Request - This message is used to request the subsystem indicated in TargetID to perform a specific action. Included in this set are the following commands: SSCMD 04 - LED BLINK/ON/OFF on Node Device; SSCMD 07 - Perform Diagnostics; SSCMD 13 - Reset; SSCMD 15 - Change State; SSCMD GetStatus.
- Event Report Send - This message is used to send events to the host. Included in this set are the following commands: CEID 01 - Material (Pod/Cassette) Arrival Event; CEID 02 Material (pod/Cassette) Removal Event; CEID 03 - Operator Arrival Event; CEID 04 - Operator Leaving Event; CEID 08 - AdvanTag/LinkManager Power up; CEID 09 - Code Upgrade Event.

- Read STATE Request - This message will query the CIDRW state of the transition model.

ASCII communication:

- Are You There - This message is used to perform the heartbeat between the host and the connected device.
- Read Attribute Request - This message requests the current values of ECID or SVID of the subsystem component indicated in TargetID.
- Read Data Request - This message reads the “NOTEPAD” (Linear Memory) section of the subsystem component indicated in TargetID.
- Write Data Request - This message writes data to the NOTEPAD section of the subsystem component indicated in TargetID.
- Read Material ID Request - This message is used to request the subsystem indicated by TargetID to read an MID.
- Write Material ID Request - This message is used to request the subsystem indicated by TargetID to write Material identifier
- Subsystem Command Request - This message is used to request the subsystem indicated in TargetID to perform a specific action. Included in this set are the following commands: SSCMD 04 - Blink LED on Node/Device; SSCMD 07 - Perform Diagnostics; SSCMD 13 - Reset; SSCMD 15 - Change State; SSCMD GetStatus.
- Event Report Send - This message is used to send events to the host. Included in this set are the following commands: CEID 01 - Material (Pod/Cassette) Arrival Event; CEID 02 Material (pod/Cassette) Removal Event; CEID 03 - Operator Arrival Event; CEID 04 - Operator Leaving Event; CEID 08 - AdvanTag/LinkManager Power up.
- Read STATE Request - This message will query the CIDRW state of the transition model.

Attribute Values:

TABLE 3 *Attribute Values (ECID and SVID)*

Attribute	Description and Limits or Values
AlarmStatus	The Alarm Status Value = 0 or 1
CarrierIDOffset	0 to CID_MAX_LENGTH-1 CarrierIDOffset + CarrierIDLength <= CID_MAX_LENGTH
CarrierIDLength	1 to CID_MAX_LENGTH CarrierIDOffset + CarrierIDLength <= CID_MAX_LENGTH
CID_MAX_LENGTH	(8*N) N = Page1 to 17

TABLE 3 *Attribute Values (ECID and SVID)*

Attribute	Description and Limits or Values
CID_DISPLAY	ON = Enable OFF= Disable
CID_NP_ASCII	ON = Enable OFF= Disable
CID_ERROR	ON = Enable OFF= Disable
CID_JUSTIFY	R = Right L= Left
CID_PAD	NUL = 0x00 ZERO = 0x30
Configuration (Applicable only to version 21A and later)	01 through 31
ENABLE_EVENTS	Enable Events (Pod or Operator arrival/removal, and powerup. ON = Event will be generated. OFF = Events will not be generated. Default = ON
EXTENDEDSSACK (Applicable only to version 20C and later)	Enables the extended error codes in SSACK. The SEMI standard specifies only five codes (NO, EE, CE, HE, and TE). When this option is ON, up to 100 error codes might be generated. Please see SSACK for all error code. ON = All error codes generated. OFF= Only SEMI standard error codes generated
HardwareRevisionLevel Applicable only to version 21A and later	Subsystem Hardware Rev. of Upstream Controller OR Head (as applicable) Up to 8 bytes
HeadID (Applicable only to version 21A and later)	Returns the HeadID or TargetID Two digits
HeadStatus (Applicable only to version 21A and later)	IDLE or MANT
HSMS_IP (SECS only)	HSMS IP address (Passive Connection)
HSMS_PORT (SECS only)	HSMS Port address (Passive Connection)
HWREV	Same as HardwareRevisionLevel

TABLE 3 *Attribute Values (ECID and SVID)*

Attribute	Description and Limits or Values
Manufacturer (Applicable only to version 21A and later)	Returns “Asyst”
MANTWRITEONLY	If this attribute is enabled, then MID (CID) and Data is read and written according to the E99 standard EN = Enable DI = Disable Default = DI
MDLN	Asyst Model designation of Upstream Controller OR Head (as applicable) Up to 8 bytes
ModelNumber (Applicable only to version 21A and later)	Same as MDLN
OIP	Operator Arrival Status
OIP_AUTOREAD	Auto read On or OFF ON = On OFF = Off Default = OFF
OIP_AUTOREAD_DATA	The memory type to read upon Pod-In-Place Event: (Offset, or MID Note: Offset applies only to NOTEPAD. This attribute should be modified with respect to OIP_AUTOREAD_LENGTH Default = MID
OIP_AUTOREAD_LENGTH	Length of NOTPAD data to read upon Operator arrival. Applies only to NOTEPAD Note: This attribute should be modified with respect to OIP_AUTOREAD_DATA Default = 16
OIP_SENSOR_POLARITY	OIP Sensor Polarity. HI = Active-High. When Sensor goes high, Operator Arrival event is generated LO = Active-Low. When Sensor goes low, Operator Arrival event is generated Default = LO
OperationalStatus (Applicable only to version 21A and later)	IDLE or MANT Note: Set through only Subsystem commands

TABLE 3 *Attribute Values (ECID and SVID)*

Attribute	Description and Limits or Values
PIP	Pod In Place status
PIP_AUTOREAD_DATA	The memory type to read upon Pod-In-Place Event: (Offset, or MID) Note: Offset applies only to NOTEPAD. Note: This attribute should be modified with respect to PIP_AUTOREAD_LENGTH Default = MID
PIP_AUTOREAD_LENGTH	Length of NOTEPAD data to read upon Pod arrival. Note: Applicable only if data type is NOTEPAD Note: This attribute should be modified with respect to PIP_AUTOREAD_DATA Default = 16
PIP_SENSOR_POLARITY	PIP Sensor Polarity. HI = Active-High. When Sensor goes high, Pod Arrival event is generated LO = Active-Low. When Sensor goes low, Pod Arrival event is generated Default = LO
RDA (Applicable only to version 21A and later)	AdvanTag returns either RD or RDA in response to the ASCII RD command. EN = Enabled, returns RDA DI = Disabled, returns RD Default = EN
SECS_T1 (SECS only)	SECS T1 timeout Default = 5
SECS_T2 (SECS only) (Host port on LM)	SECS T2 timeout Default = 50
SECS_T3 (SECS only) (Host port on LM)	SECS T3 timeout Default = 45
SECS_T4 (SECS only) (Host port on LM)	SECS T4 timeout Default = 45
SECS_RETRY (SECS only) (Host port on LM)	SECS-1 Protocol Retry limit Default = 3
SERIALNUM	The SerialNumber
SerialNumber (Applicable only to version 21A and later)	Same as SerialNumber

TABLE 3 *Attribute Values (ECID and SVID)*

Attribute	Description and Limits or Values
SOFTREV	Subsystem Software Rev. of Upstream Controller OR Head (as applicable) 8 bytes
SoftwareRevisionLevel (Applicable only to version 21A and later)	Same as SOFTREV
SELF_TEST_RESULT	Last self test result P = Pass F = Fail
TARGETID	The TargetID of the device, set-able through the DIP switches

Please refer to the Asyst CIDRW Messages SECS protocol manual (Asyst part number 2000-1442-01) and Asyst CIDRW Messages ASCII protocol manual (Asyst part number 2000-1455-01) for more detailed information on communication with the AdvanTag.

AdvanTag Gateway

Commands Supported by the Gateway

S1F1. This command is supported on the Gateway only. The Gateway would respond with a reply of S1F2 with the model number of “AG9100” and Soft Rev of “G10AB1”.

S18F1. This command is intended for reading the attributes of the Gateway itself. The attributes supported by the Gateway are “Configuration”, “AlarmStatus”, “Operational Status”, “SoftwareRevisionLevel”, “ModelNumber”, “DeviceType”, “Manufacturer”, “BAUDRATE”, “SECS_T1”, “SECS_T2”, “SECS_T3”, “SECS_T4”, “SECS_RETRY”. S18F2 is returned with the values of each of the attributes requested.

S18F3. This command is intended for writing the attributes to the Gateway. The attributes supported are described in the previous section B. S18F4 is returned with the appropriate SSACK response.

Sub System Commands. The Gateway supports the following sub system commands:

- **Sub system command 7 (Perform Diagnostics):** The Gateway performs diagnostics on itself and returns a S18F14.
- **Sub system command 13 (Reset):** The Gateway accepts the Reset command and resets itself. No event is sent on reset of the Gateway.

 **NOTE . . .**

THE HOST SOFTWARE MUST WAIT FOR AT LEAST 10 SECONDS BEFORE ISSUING ANY COMMAND TO THE GATEWAY OR ONE OF THE HEADS.

- **Sub system command GetStatus:** The Gateway returns the status to be either IDLE or MANT depending upon its current status.

Commands Routed to Heads (ATR 9100s connected on CAN bus):

The commands supported by the ATR Gateway to be routed to the nodes on the CAN bus are in the E99 standard. The commands with a target ID of 1 through 31 are routed on the CAN bus. The commands supported are:

S18F1 (Read Attribute)
S18F3 (Write Attribute)
S18F5 (Read Data)
S18F7 (Write Data)
S18F9 (ReadID)
S18F11 (Write ID)
S18F13 (Subsystem commands)
S18F79 (Read Status)

Code Upgrade Functionality in ATR Gateway

Code Upgrade functionality would be provided by the processor's On Chip boot loader. To achieve the Code Upgrade functionality, the ATR needs to be switched to the Code Upgrade mode. See ["Code Upgrade" on page 28](#) for further details.

Interfaces

There are three LEDs to signify activity, a RESET button, and a switch panel for specifying the unit's address (TargetID). See below for more details.

LEDs

The LEDs located on the top of the reader (see [Figure 7](#)) indicate the operational status of the AdvanTag.

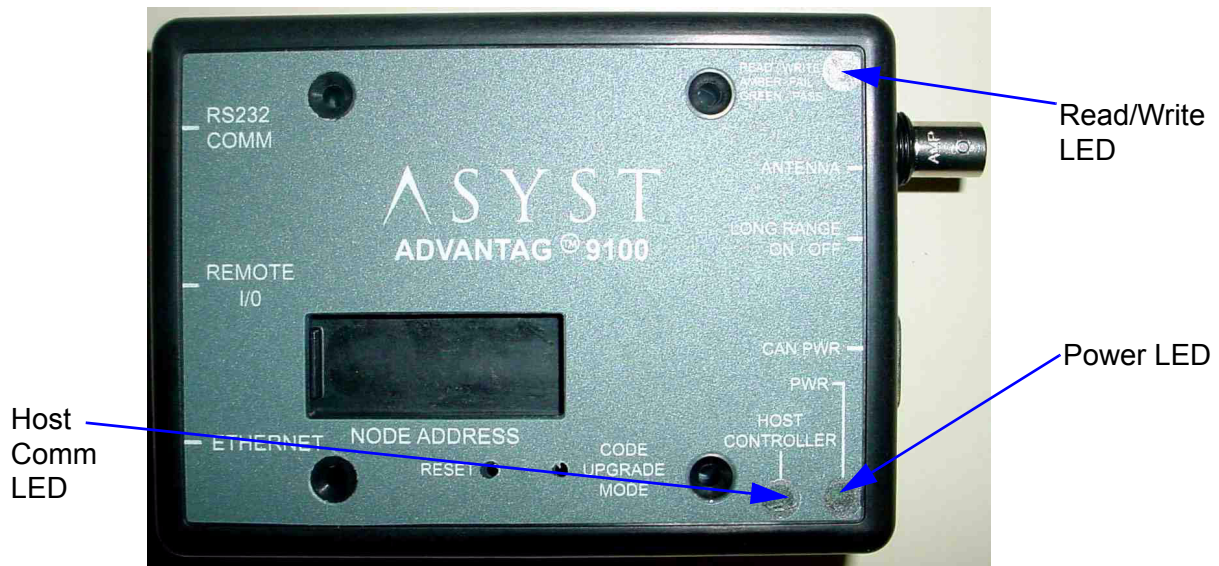


FIGURE 7 AdvanTag 9100 Reader LEDs

Power Indicator

The POWER indicator, when lit, indicates that power is applied to the AdvanTag.

Light Status	Power
Off	No power
Green	Power on

Host Comm

Green/Red/Amber, controllable by host command (on/off/blinking).

Read/Write (9100 Reader only)

The Read/Write LEDs indicates communication status:

Light	Communication Status
Off	Radio off
Green	Successful read/write
Red	Read/Write failure (details below)

Read/Write failures occur as a result of one of the following:

- Attempted to read multiple pages of a single-page MicroTag
- Multiple MicroTags are in range
- Attempted a write operation on a read-only MicroTag or a looked page

For read/write ranges, see [“Antenna Performance” on page 32](#).

Connectors

The AdvanTag reader features four external ports.

Power

The port labeled PWR/CAN is for a power supply of 24VDC. Asyst can supply a 120-220V adapter or the OEM can supply this power.

This is a DB9 male receptacle, 24 VDC (+/- 10%), 70mA typical, 350mA maximum (Gateway is 300mA); see [Table 1, “AdvanTag 9100 Specifications,” on page 5](#) for further details. The following table shows the pin outs.

TABLE 4 *Power Cable Pin Outs*

From	Color	To	From	To	Color	Signal
X-9	RED/1	Y-9	--	--	--	24VDC
		J1-1	P1-1	PS+12VDC	BLK	
Y-6	BLK/1	V-6	--	--	--	GND
Y-5	BLK/7	Y-5	--	--	--	GND
		J1-2	P1-2	P/S-GND	BLK	
Y-3	BLK-3	Y-3	--	--	--	GND
Y-2	WHT/3	Y-7	--	--	--	CAN-L
Y-7	BLU/4	Y-7	--	--	--	CAN-H

Communication

The port labeled RS232 COMM is for RS232 communication. This is a shielded RJ45 socket. A cable which connects the Reader to a PC is available from Asyst.

Pin	Signal
4	Ground
5	Tx Data
6	Rx Data

CAUTION

SHOCK HAZARD
 DO NOT TOUCH THE INSIDE OF THE ANTENNA CONNECTOR. FAILURE TO COMPLY MAY RESULT IN INJURY.

Antenna

CAUTION
 ANTENNAS SHOULD ONLY BE INSTALLED BY QUALIFIED PERSONNEL. FAILURE TO COMPLY MAY RESULT IN MALFUNCTION OR DAMAGE TO THE UNIT AND/OR ANTENNA.

The port labeled REMOTE ANTENNA is for an external antenna. Contact Asyst for available antennas. This is a BNC socket; use with Asyst antennas is required.

CAUTION

GENERAL HAZARD
 NEVER USE A NON-ASYST ANTENNA WITH THE ADVANTAG 9100. FAILURE TO COMPLY WILL VOID FCC AND CE CERTIFICATION.

External Presence (9100 Reader only)

The port labeled REMOTE I/O is for an external presence sensor that detects events such as pod arrival and pod removal.

The REMOTE I/O port is a shielded RJ45 socket used for the external presence sensor.

Pin	Signal
1	24 VDC
2	Presence
4	Ground

Ethernet (in development)

The Ethernet port is a shielded RJ45 socket used for communication to a host using HSMS.

Pin	Signal
1	TX+
2	TX-
3	RX+
6	RX-

 **NOTE...**

FOR INFORMATION ON COMMUNICATION THROUGH ALL PORTS, PLEASE REFER TO THE SOFTWARE MANUAL.

Buttons/Switches

Reset

Press this button to reset the unit. This will set the baud rate to 9600 and the SECS DeviceID to match the TargetID (default is 0003).

Code Upgrade

It will be necessary to put the AdvanTag in Upgrade mode in order to download new software through the serial port.

To set the AdvanTag 9100 in Upgrade mode, press the Reset and Code Upgrade buttons simultaneously, then release the Reset button, then wait approximately 2-3 seconds, then release the Code Upgrade button.

To exit Upgrade mode, press the Reset button.

Long Range (9100 Reader only)

Located on the side of the unit (see [Figure 8 on page 29](#)), this dip switch controls the read/write range of the antenna. When the switch is in the On position, the unit is in Standard Range mode. When the switch is in the Off Position, the unit is in Long Range mode (see [“Antenna Performance” on page 32](#)).

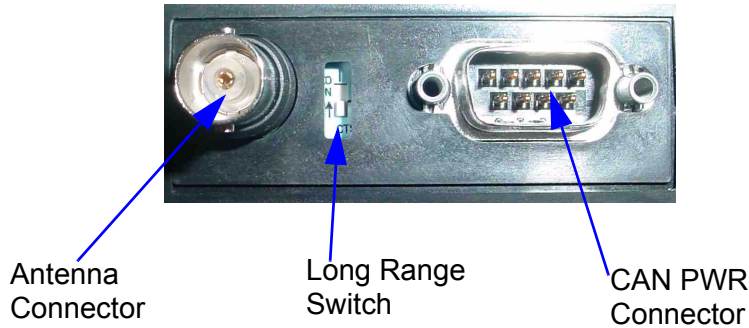


FIGURE 8 Long Range Switch, AdvanTag 9100 Reader, Side View

Node Address (9100 Reader only)



CAUTION

THE NODE ADDRESS PANEL (SEE [Figure 9 on page 30](#)) SHOULD ONLY BE ACCESSED BY QUALIFIED PERSONNEL. FAILURE TO COMPLY MAY RESULT IN MALFUNCTION OR DAMAGE TO THE UNIT.

Used to specify the unit's address or TargetID. The switches represent powers of binary digits:

Switch #	Binary Digit
1	1
2	2
3	4
4	8
5	16
6	32

The ON setting represents 1 and the OFF setting represents 0. For example, to set the address to “15,” set switches 1, 2, 3, 4 ON and 5, 6 OFF. See [Figure 9 on page 30](#).



FIGURE 9 Node Address Switches (9100 Reader only)

Communications

To Host

The AdvanTag reader communicates to the host via RS-232, CAN, or LAN ports.

Read Range

Typical read range of the AdvanTag reader is 1 to 4 inches (1 to 7 inches in Long Range mode). Read range is dependent on the antenna design and the operational environment in which the antenna is installed. See [“Antenna Performance” on page 32](#) for further details.

SECS/ASCII

Refer to the specific protocol documentation concerning either Stream 18 SECS messages or Asyst ASCII messages for details. The basic functions available are to read and write attributes, read and write material IDs (MIDs), read and write data, and various subsystem commands such as turning an LED on or off. Note that the single-page transponders hold an 8 byte MID only and the multi-page transponders hold a 16-byte MID and 120 bytes of data.

The TargetID (as described in the SEMI E99 and E5 standards) can be set with the NODE ADDRESS switches; default value is 3. The SECS I DeviceID can be set through an attribute or the Reset button. When Reset, the DeviceID is automatically changed to match the TargetID; the baud rate will be changed to the default 9600 as well. The baud rate can also be set through an attribute setting. Byte format is 8 data bits, 1 stop bit and no parity. The SECS I timeouts and retries can be set through attribute settings; defaults are T1 = 0.5 secs, T2 = 10 secs, T3 = 45 secs, T4 = 45 secs, Retries = 3.

When connected on CANbus, no two AdvanTag 9100s should have the same Target ID.

Serial Communications Interface

The AdvanTag has one port for serial-computer-communications interface. It is an RJ45 RS232 interface. It has a transmit (TX) and a receive (RX) line and ground. See [Table 5 on page 31](#).

CAN Communications


The ATR 9100 has one port for CAN communications. It is a DB-9 male connector; see pinout in [Table 4 on page 26](#).

Ethernet Communications

The ATR 9100 has an Ethernet port, which is an RJ45 socket. Communication protocol is HSMS.

TABLE 5 Serial Port Pin Usage

Pin Number	Name	Serial Comm (SECS/ASCII) RJ45
1	(N/C)	not used
2	(N/C)	not used
3	(N/C)	not used
4	Ground	X
5	TX	X
6	RX	X
7	(N/C)	not used
8	(N/C)	not used

 **NOTE...**

1. SERIAL CABLES MUST BE WIRED AS NULL-MODEM CABLES.
2. CABLES CANNOT BE DAISY-CHAINED.

Software

For more software information, please refer to the Asyst CIDRW Messages SECS protocol Manual (Asyst part number 2000-1442-01 and the Asyst CIDRW Messages ASCII protocol Manual (Asyst part number 2000-1455-01).

Antenna Performance

The AdvanTag antennas work in conjunction with the AdvanTag Reader ATR9100 to read and write the MicroTag. Communications occur between the antenna and the MicroTag using very low radio frequency (134.2khz). Performance of these antennas (read and write distance as well as speed) is affected by the presence of metal and RF generators, such as color monitors in the antenna communication field.

Read/Write Performance Factors

Factors that influence tag read and write performance:

- Proximity of the tag and antenna
- Length of cable between the AdvanTag Reader and the antenna (including extension cables)
- Orientation of the tag to the antenna
- Amount of metal adjacent to either the tag or the antenna
- Amount of background EMF in the environment

 **NOTE . . .**

IF AN ANTENNA IS POSITIONED AGAINST A MICROTAG, THE ANTENNA WILL NOT READ IN MOST CASES. ALL OF THE RESULTS LISTED WERE TESTED IN AN OFFICE ENVIRONMENT.

RF Field Diagrams (9100 Reader only)

The diagrams accompanying the types of antenna for reference only. Note the following conditions for each diagram:

- The coil of micro-tag must be completely contained in write area.
- The shaded area in center is a non-write area (null).
- Write ranges are approximately 50% of read ranges.
- The read and write distances cited are for reference only. Ranges are dependent upon actual installed environment.
- It may not be possible to replicate the same results outside of lab environments due to a variety of environmental conditions.

Stick Antennas

The stick antenna 9700-9097-01 is designed to be attached to the external antenna connector of the ATR 9100 and optimized for use in metallic environments such as a 300mm Front-Load (PN 9700-6224-02). The average read range is 2.0" (50.8mm). These stick antenna diagrams refer to a stick antenna as being flat on the YZ axis, centered at 0,0,0.

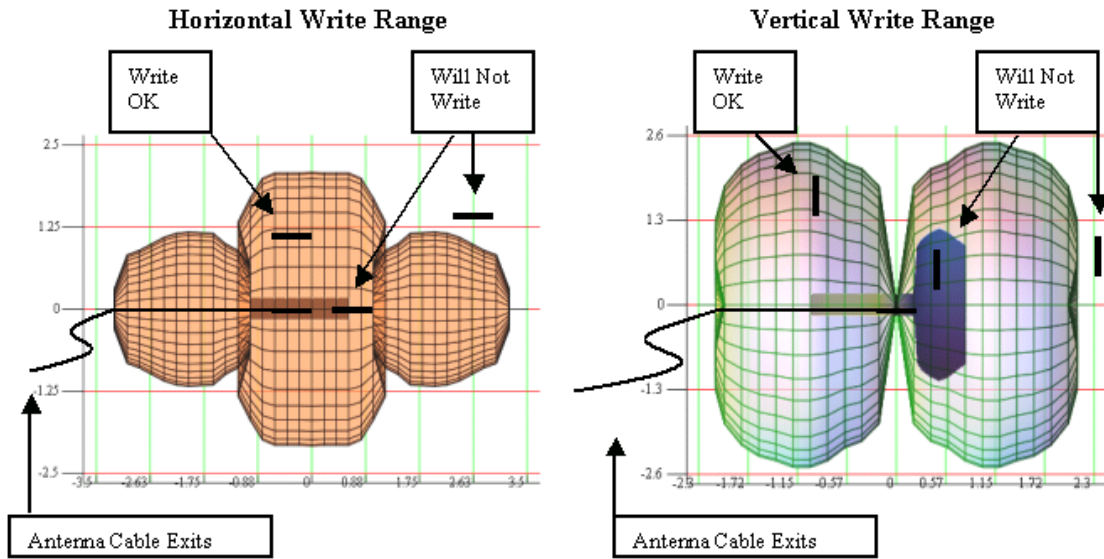


FIGURE 10 *Stick Antenna 9700-9097-01 (Standard Range only)*



Chapter 3: Troubleshooting

This chapter presents the common problems that may occur when using the AdvanTag unit.

Troubleshooting Chart

If there are any other problems, or if none of the above corrective actions clears the problem, replace the AdvanTag.

TABLE 6 *ATR Errors and Solutions*

Error or Symptom	Likely Cause(s)	Corrective Action
Unit not functioning properly.	Power failure.	Check connection for power cables. Is the power LED on? It must be green. Note: Host Comm, Read/Write LEDs—each to blink for approximately 2 seconds total at green, orange, then red before they turn off.
	Communication cables loose or disconnected.	Check serial cables for loose connector. Check connector for bent pin(s).
During read and write programs, the READ/WRITE LED turns red.	MicroTag or antenna is not installed correctly.	Install MicroTag correctly. The READ/WRITE LED should turn green only. Refer to ATR magnetic field pattern diagram.
During read and write programs, the READ/WRITE LED turns orange instead of green.	MicroTag is not present or out of range. The antenna cable is loose. The antenna is bad.	Install MicroTag or antenna properly. The READ/WRITE LED should turn green. Tighten the antenna cable. Replace the antenna. Adjust the location of the antenna.
During read and write programs, the READ/WRITE LED does not blink.	The RS232 cable is loose. The RS232 cable is bad. The ATR is bad. Host command is wrong.	Tighten the RS232 cable. Replace the RS232 cable. Replace the ATR. Check Host command and target ID.

If there are any other problems, or if none of the above corrective actions clears the problem, replace the AdvanTag. Other considerations to assure proper ATR functioning:

- The baud rate is to be the same between Host and ATR.
- The target ID is to be correct in the SECS and ASCII message that gets sent to the ATR.
- The MicroTag is to be in the proper range and relative location to the antenna.

A

antennas
 stick 32
 tubular 32
 audience 1

B

baud rates 16
 binary digits 29

C

comments, reader ii
 conventions 1

D

default settings 16, 28
 deviceID 30
 disclaimers i

E

equipment modification i

H

Host Comm LED 25

I

installation kit, 300mm Front-Load 17

L

languages i

M

MicroTag 32

N

node address 29

O

operating program 11
 outline drawing 5

P

power indicator 25

R

ranges
 read
 typical 30
 read/write performance factors 32
 references 1
 reset 28

S

SEMI safety standards 11
 specifications 5

T

targetID 30
 theory of operation 11
 trademarks i
 training i