

Labeling

TABLE 2 Labels





No.	Label	Description/Location
1	<p>AdvanTag 9100 Reader label</p> 	<p>The AdvanTag 9100 Reader Label identifies the various components of the unit. It is located on the top of the reader. See Figure 3 on page 10.</p>
2	<p>AdvanTag Gateway label</p> 	<p>The AdvanTag Gateway Label identifies the various components of the unit. It is located on the top of the reader. See Figure 3 on page 10.</p>
3	<p>Serial Number Label (9100 Reader)</p> 	<p>The model and serial number label for the AdvanTag 9100 Reader is located on the bottom of the unit. See Figure 2 on page 10.</p> <p>These numbers are required when contacting Asyst Technologies for any matter concerning the equipment.</p>
4	<p>Serial Number Label (Gateway)</p> 	<p>The model and serial number label for the AdvanTag Gateway is located on the bottom of the unit. See Figure 3 on page 10.</p> <p>These numbers are required when contacting Asyst Technologies for any matter concerning the equipment.</p>

TABLE 2 Labels

No.	Label	Description/Location
5	FCC Label	The FCC label for the AdvanTag 9100 Reader is located on the bottom of the unit. See Figure 2 on page 10.

Location of Labels used on the AdvanTag

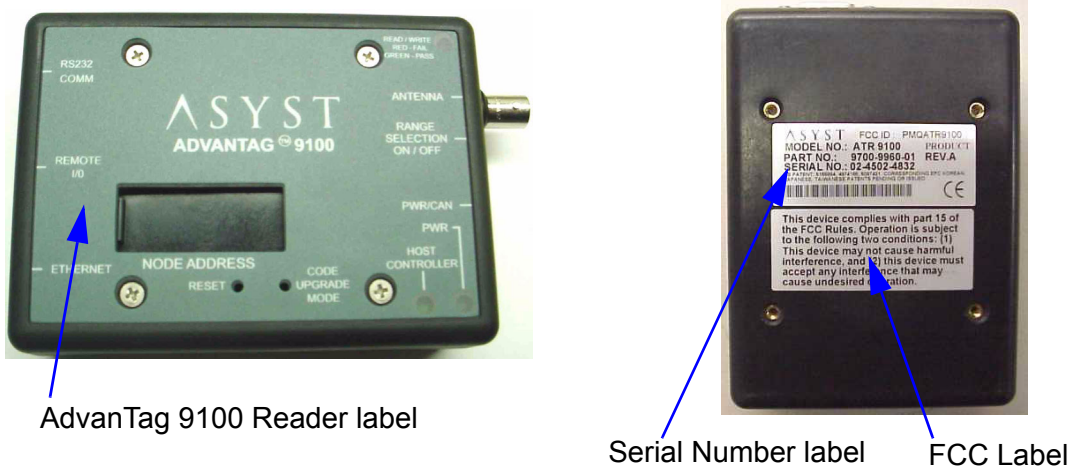


FIGURE 2 Label Locations, AdvanTag 9100 Reader

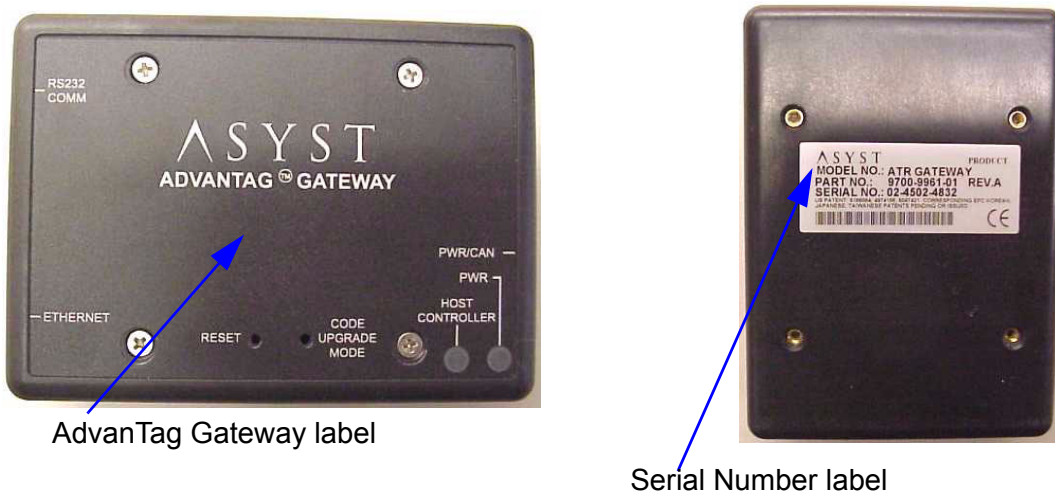


FIGURE 3 Label Locations, AdvanTag Gateway