

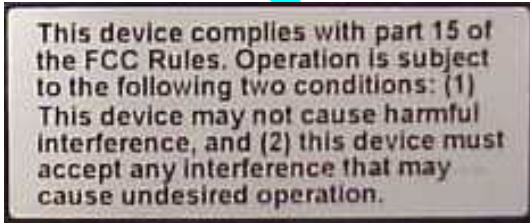



Labeling

TABLE 2 Labels

No.	Label	Description/Location
1	<p>AdvanTag 9880 Reader label</p> 	<p>The AdvanTag 9880 Reader Label identifies the various components of the unit. It is located on the top of the reader. See Figure 2 on page 10.</p>
2	<p>Serial Number Label (9880 Reader)</p> 	<p>The model and serial number label for the AdvanTag 9880 Reader is located on the bottom of the unit. See Figure 2 on page 10.</p> <p>These numbers are required when contacting Asyst Technologies for any matter concerning the equipment.</p>
3	<p>FCC Label</p> 	<p>The FCC label for the AdvanTag 9880 Reader is located on the bottom of the unit. See Figure 2 on page 10.</p>
4	<p>RoHS</p> 	<p>The presence of this label indicates compliance with regulations regarding Restriction of Hazardous Substances (RoHS).</p>

Location of Labels used on the AdvanTag



FIGURE 2 Label Locations, AdvanTag 9880 Reader