



KODAK Mini 2

INSTANT PHOTO PRINTER

User Guide

www.kodakphotoprinter.com



English

Smartphone App Installation

1. Android
 - 1) Go to Google Play Store in your smartphone.
 - 2) Search "Kodak Mini Shot"
 - 3) Install "Kodak Mini Shot". Into your smartphone

2. Apple Device

- 1) Go to Appstore in your iPhone, iPod touch or iPad.
- 2) Search "Kodak Mini Shot"
- 3) Install "Kodak Mini Shot". Application into your device.



iPhone



Android


NFC Connect *NFC Support Android device only.

- 1) Turn NFC on in your smart phone.
- 2) Turn Printer on by pressing power button 2-3 seconds.
- 3) Tap the phone on the top of printer. Google Play Store app installation page will show up.
- 4) Install the app into your smartphone from the store.

*NFC TAG is passive only.

Bluetooth Connection

- 1) Turn on Bluetooth in your smartphone
- 2) Turn on printer.
- 3) Go to Bluetooth setting in your smartphone and you can find "KODAK Mini-XXXX" ("XXXX" are 4 digits combination of numbers and letters.)
- 4) Select it for connection.

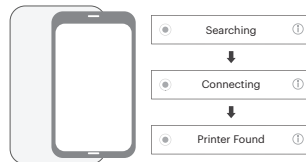

Before Start

- 1) This Printer has built-in battery. Charge the printer before using it.
- 2) How to Change Cartridge



Printing in the App

1. Mini Shot app launch -> 2. "Gallery" to load your device's photos.
 - > 3. Choose Photo -> 4. Select Print Number -> 5. Select Printer Icon
- *Select SNS if you want to print the photo from it.

Note

- * Photo Paper will go in and out 4 times(YMCO, Yellow, Magenta, Cyan, Overcoating). Do not touch the paper during printing process for best image quality
- * Do not pull paper out by force during printing.
- * Do not place an object in front of the paper exit slot.
- * Use the latest application for best print quality. Check the latest app version from Google Play Store and Apple Appstore.
- * Printer has built-in battery. Charge the printer before using.
- * Handle with care during charging to prevent electric shock.
- * Do not disassemble or deform.
- * Avoid too high or low temperature or humidity.
- * If NFC tag is not read, check its position on the printer and smartphone. Then try again.
- * The higher resolution the image has, the higher quality the printed photo has. Recommended image size is 1280*2448 pixel.
- * Operating Temperature : 0-40℃

Troubleshooting

Symptom	Cause / Solution
Paper Jam	Power off and Power On again. Paper will be automatically ejected if not, please contact customer service.
Image quality is not good.	Print quality could be less if your photo source has low resolution.
	Over 1280 x 2448 pixel is recommended for best image quality.
Printer is not responding	Press Reset button with sharp tool like pin.

Power and Active Status

- ⓘ Power ON : White / Power OFF(2Sec) : Off / Printing : White Flickering
FW Upgrade : Pink Flickering / No Cartridge, Error : Red Flickering
Waiting,Cooling : White
- **Charge** Charging : Red / Charging Complete : Green
- ⓘ Connecting : Green Blink / Bluetooth Complete : Green

Spec

Dimension	132.4(W)x78.2(H)x25.4(D) mm
Connectivity	Bluetooth
Color	2 Color; Black, White
Cartridge	All-in-One Type 4Pass Cartridge
Paper Size	54 x 86 mm(Credit Card Size)
Print Technology	4Pass
Battery	Li-polymer rechargeable built-in battery 650mAh
Recharging	Micro 5pin port for battery charging
Paper Capacity	20, 30, 50 Sheet

FCC (Federal Communications Commission)



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

This appliance and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter. A minimum separation distance of 20cm must be maintained between the antenna and the person for this appliance to satisfy the RF exposure requirements.

The Kodak trademark, logo and trade dress are used under license from Kodak.

www.kodakphotoprinter.com
Copyright © 2017 Prinics., Ltd

