

AIREWAVE PRO OPEN EARBUDS

USER MANUAL

Quick Start


1. Remove film and place earpieces into case
2. Charge for 2 hours before usage
3. Open lid to automatically enter pairing mode
4. Go to device's Bluetooth menu and select "AIREWAVE PRO"



For more details on AIREWAVE PRO, please refer to <https://www.iinvictor.sg/airewavepro> or scan the QR Code.

How to Wear

STEP 1

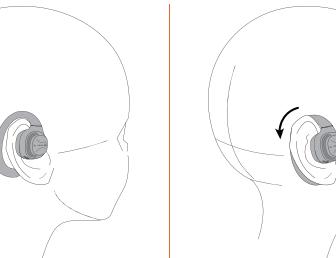


STEP 2



Replacing the Earhooks

Mold Print Marking		
Size of Ear Hook	Left	Right
Large Ear Hook	LL	RL
Small Ear Hook	LS	RS
X Small Ear Hook	LX	RX

1. Remove the original earhooks as shown

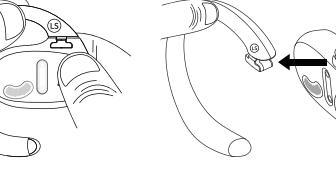

Functionality & Controls

Intuitive Touch Controls

	LEFT	RIGHT
Open Lid	Turn on	
Close Lid	Turn off	
Press and hold	Volume up	Volume down
Tap 1x	Play/ pause / answer phone call / hang up	
Press both sides for 3 secs	Activate Siri® / Google Assistant®	
Tap 3x	Previous track	Next track
	Decline incoming call	

The lights on the front of the case will flash in order until the case reaches 100% charge.

Call Waiting:

1. Press and hold the left or right earpiece for 2 seconds to reject a second incoming call.
2. Tap 1x on the left or right earpiece to hold the current call and answer the second incoming call. In the hold state, press and hold for 2 seconds to switch between calls.
3. Double tap on the left or right earpiece to hang up the current one and answer the second call.

Charging the Earpieces

Place the earpieces into the case to initiate charging. The charging indicator light for each earpiece is displayed on the front of the case. The first light represents the left earpiece, and the fourth light represents the right earpiece.

1. When the battery is less than 10%, alarm every 5 minutes, remaining about 30 minutes until turn off.

2. When the battery is less than 5%, the low-battery earpiece is turned off, and the other earpiece can be used independently. If it is a secondary earpiece, it will automatically switch to the host.

Left earpiece charging Right earpiece charging

Charging the Case

The case can be charged using the provided USB-C cable, or wirelessly using a wireless charging pad (not included).

1 solid light Case battery ≤ 25%

2 solid light Case battery ≤ 50%

3 solid light Case battery ≤ 75%

4 solid light Case battery ≤ 100%

Case Battery Indicator Lights (While Charging)

Lights flashing in order	Case charging
○ ○ ○ ○	Case charged

Case Battery Indicator Light

Pairing

The AIREWAVE PRO will automatically enter pairing mode when using them for the first time. You can also initiate pairing mode by pressing and holding the sync button on the case until the case lights flash (approximately 10s).

1. In TWS mode, the right earpiece is the host by default, and the one taken out first is switched to the host. If the host is put into the case and the lid is not closed, the other earpiece that's on switches to the host.

2. When both the left and right earpieces are placed in the charging case, the sound pickup will automatically switch to the phone.

Subsequent Use

The AIREWAVE PRO will automatically reconnect to the last paired Bluetooth device upon opening the case lid.

*If your AIREWAVE PRO do not auto-reconnect, you can initiate reconnection by performing the following steps:

1. Place the earpieces back into the case and close the lid
2. Wait 5 seconds
3. Reopen the lid and select "AIREWAVE PRO" from the list of your paired devices in your Bluetooth menu.

Pairing Another Device

To pair the AIREWAVE PRO to a new Bluetooth device, first unpair the AIREWAVE PRO from your original device using its Bluetooth menu or turn off the Bluetooth functionality on the original device altogether.

The AIREWAVE PRO will automatically enter pairing mode if a previously paired device is not found.

Select "AIREWAVE PRO" in the Bluetooth menu of the new device you wish to pair to complete the pairing process.

Factory Reset

A factory reset can be used to restore all features to their factory settings and delete all previous Bluetooth pairings from memory.

1. Place the earpieces into the case
2. Press and hold the sync button on the case until the earpieces flash red two times (approximately 10s). Once the reset is complete, the earpieces will go directly into pairing mode.

Warranty

This product is covered by a 1-year manufacturer warranty. For more information, visit <https://www.iinvictor.sg>

INVICTOR and its logo are registered trademarks of IntriCon Corporation. All rights reserved. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by INVICTOR is under license. Other trademarks and trade names are those of their respective owners. Siri® is a registered trademark of Apple Inc. Google Assistant is a trademark of Google Inc.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.