2.4GHz Wireless 3 key Mouse

<u>Federal Communications Commission (FCC)</u> <u>Notice</u>

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Installation

- 1. Plug the Micro receiver into a USB port of your computer.
- Insert battery into your mouse. Your mouse support 1 battery operation
- 3. Move the mouse to get connected with the Receiver.

ON/OFF the mouse

 You can switch On or shut off the mouse by use the On/OFF switch on the bottom of the mouse

Caution: before your mouse is connected with the receiver.
You need to keep the mouse at a distance of less
than 2 meter to the receiver to finish the initial
connection

Trouble Shooting

- Check Micro receiver connection; try to inserting Micro Receiver to another USB port on your computer.
- No Connection between the mouse and the Micro Receiver. Re-insert the Micro Receiver. Take out the battery from the mouse and reinstall it.

P/N: 266-81611-0000