

TOCH 
MOBILE

 


 
Angel  **Phone**

 
1.1	EXTERNAL VIEW.....	3
2	ICONS ON THE SCREEN.....	5
2.1.1	Basic Operation	7
2.2	TURN ON AND TURN OFF.....	7
2.3	MAKE AND RECEIVE CALLS.....	7
2.3.1	Make a call whit numeric keyboard	7
2.3.2	Receive calls.....	7
2.4	ACTIVATE SOS FUNCTION.....	8
2.5	FM RADIO	8
2.6	ENABLE/DISABLE MUSIC PLAYER.....	9
2.7	KEYBOARD LOCK AND UNLOCK.....	10
2.8	WRITING TEXT MESSAGE (SMS)	10
2.9	SEE TEXT MESSAGES AND MULTIMEDIA MESSAGES.....	11
2.10	DELETE TEXT MESSAGE.....	12
2.11	SETTING SOS OPTIONS	12
2.12	DISABLE/ ENABLE PRONUNCIATION NUMBERS 13	
2.13	TAKE PHOTOS.....	14
2.14	SEE PHOTOS.....	14
2.15	RECORD VIDEOS.....	15
2.16	WATCH VIDEOS.....	16
2.17	SETTING DATE AND TIME.....	18
2.18	CHANGE SIM CARD PIN	19
2.19	CALCULATOR	19
2.20	SETTING ALARM	20
2.21	WRITE MULTIMEDIA MESSAGE	20
2.22	SET SEND AND RECEIVE MULTIMEDIA MESSAGES (MMS)	22

1.1 External View



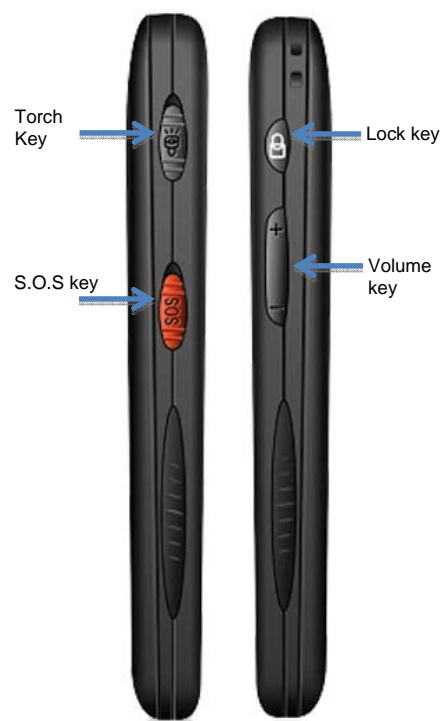

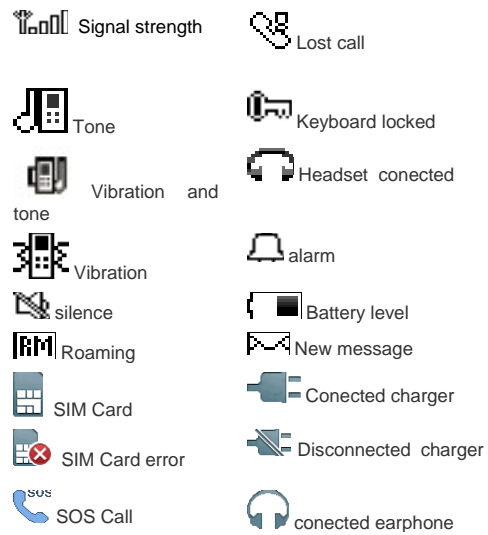

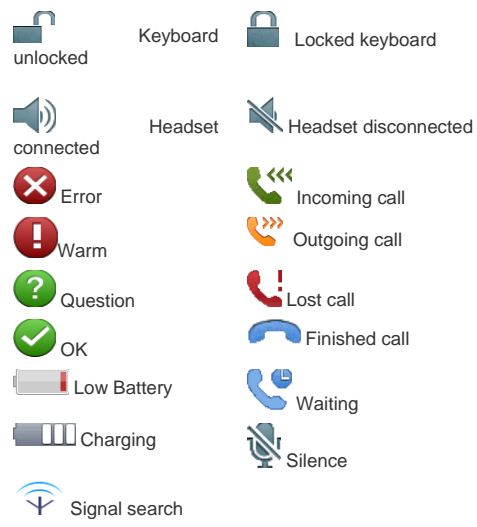

2.1.1 Basic Operation


2.2 Turn on and turn off

Turn on: Press  by 3 seconds

Turn off: Press  by 3 seconds or more until the unit turns off.



2.3 Make and receive calls


2.3.1 Make a call whit numeric keyboard

When the phone is in standby, enter the desired number using the numeric keypad and press .

To end the call press  twice

2.3.2 Receive calls

1. When you receive a call, the screen displays the caller's number and name if it has been included in the phone book. press  to answer, or press "Mute" to turn off the ringer, then press "Reject" to reject the call (busy signal). You can press  to

reject de call directly.
2. Press  to fend the call.

2.4 Activate SOS function



To activate **SOS** function press **SOS** button up.

NOTICE: To turn off SOS function press **SOS**



button down.


.

2.5 FM Radio



1. While in standby mode, press the "+" button on the Volume key for 5 seconds.



2. With the Menu key, tune up or down the desired station.,

3. Using the "+" and "-" button on the Volume key, volume up and down respectively
4. To exit the FM radio function, press .

2.6 Enable/disable music player

1. While in standby mode, press the "-" button on the Volume key for 5 seconds.
2. With the menu key , up and can select the desire song
3. With the "0" key pauses or actively playing music again.
4. Using the "+" and "-" on the Volume key, volume up and down respectively.
5. To exit the music player function., Press .

2.7 Keyboard Lock and Unlock



1. To lock the keypad, press the button once, the phone will show up on the screen this:



2. To unlock the keypad press the button for 3



seconds

2.8 Writing text message (SMS)

1 While in standby mode, press the action Key



, "SMS".

2. Select "Write Message" and press "OK".

3. Select "SMS" and press "OK".

4. Write your message using the keypad. For a list of



special character then press the star key, Select the desired character with the menu button and click "OK".

5. Once you finish the message, press the left soft key "Options".

6. Choose the option "Send to" and press "Select".

7. With the Menu key, choose "Enter Number" and enter the number you want to send the message or, choose "Phone Book" and select the contact you want to send the message. Then press the "OK" button. To add more recipients, repeat this 7step again.

8. Press the "Options" button.

9. With the Menu key, choose "Send" and press "Select". Then the phone sends your message.

2.9 See text messages and multimedia messages.

1While in standby mode, press the Left action Key



, "SMS".

2. Select "Inbox" and click "OK".



3. With the Menu Key, up and down you can see the list of received messages.

4. o see the detailed content of a message, press "Options" and then "View".

5. To return to Standby mode press the red button.




2.10 Delete text message

1. While in standby mode, press the Left action Key




, "SMS".



2. With the menu key , up and down, choose "Inbox" or "Drafts" or "Outbox" or "Sent messages" as the folder from which you want to delete the message.




Then press "OK".

3. With the menu key , up and down, choose the message you want to delete and press "Options".



4. With the menu key , up and down, choose "Delete". And with the Left action Key , press select.



5. Press the left action key  "Yes".



2.11 Setting SOS options

1. While in standby mode, press the Menu Key



, up or down and select "Settings", then press



the Left action Key, "OK." With the menu key, choose "Options SOS" and press "OK"

2. In Option 1) SOS On / Off SOS, enable or disable the SOS pressing Left action Key "OK"

3 To record or erase the numbers that will be sended the SOS message and they will be called, press the Left action Key on the "Number of SOS", then press the same button on the options "Number 1" to "Number 5" , type the number or delete it, then press "OK".

4. With the Right action Key "Back" returns to the "SOS Message", enter with the Left Soft Key "OK", type the SOS message you want and press "Save" and then Yes

2.12 Disable/ enable pronunciation numbers

1. While in standby mode, press the Menu Key



, up or down and select "Settings", then press



the Left action Key, "OK".

2. With the menu key, choose "Speak Numbers" and with Left action Key press "On" or "Off" as desired.

2.13 Take Photos

1. While in standby mode, press the Menu Key



, up or down and select "Camera then press



the left action key, "OK". Then you can display the camera and take photos.



2. With the active camera Press "0", to take the photo.

3. With the menu key, you can zoom in or out the view..



5. With the red key can closet he camera aplication

2.14 See photos

1. While in standby mode, press the Menu Key



, up or down and select "Multimedia", then



press the left action key, "OK".

2. With the menu key, select "Image Viewer", and then press the Left action Key "OK", then just press "Options" and then "View".



3. With the volumen key "+" y "-" can be able to see the photos taken.

4. With the Right action Key can exit the photo viewer.

2.15 Record Videos

1. While in standby mode, press the Menu Key



, up or down and select "Multimedia then



press the left action key , "OK".

With the menu key choose "Record videos" Then the camera will be displayed and you can record videos.



2. With the active camera Press "0", to start recording a video. With the same key "0" can pause recording.

3. With the Right action Key will completely stop the recording and the phone will ask you if you want to save the video. Press "Yes" or "No" as desired.

4. With the menu key, you can zoom in or out the view.

5. With the red key  can exit the camera application.

2.16 Watch Videos

1 While in standby mode, press the Menu Key




, up or down and select "Multimedia" then

press the Left action Key , "OK".



2. With the menu key , up or down and select "Video Player", then press the left action key



, "OK".

3. Pressing the "+" and "-" volume key , can be able to see the list of recorded videos.

4. To play a video, on the video you want press the Left Soft Key "Options", then press the same button "Select" on the "Play".


5. With the key  "0", can play or pause the video.
4. With the red key  can exit the video player.

2.17 Setting date and time

1. While in standby mode, press the Menu Key



up or down and select "Settings Multimedia

then press the Left action Key , "OK".

With the menu key, choose "Phone" and press "OK".


2. Choose the option "Time and date" and press "OK".

3. Choose the option "Setting time and date" and press OK.

4 Enter the time in 24-hour format and the date format Day / Month / Year, then press "OK"

5 Once the time and date are established, you can choose whether to display the time in either 12 or 24 hours, for this choose "Set Format" and press the "OK" button, enter an option with the bullet "Time", for choose the desired format, press the "+" and "-"



volume key , then press the "OK" button.

6. With the red key  can exit from date and time setting.

2.18 Change SIM card PIN

1. While in standby mode, press the Menu Key



, up or down and select "settings then press

the Left action Key , "OK".

With the menu key choose "Security" and press OK.

2. Choose the option "SIM Security" and press OK.

3. Select the "Change PIN" and press "OK", the phone will ask to enter the current PIN first, then the new PIN twice.

2.19 Calculator

1. While in standby mode, press the Menu Key



, up or down and select "Calculator", then

press the Left action Key , "OK".

2. Using the numeric keypad type the desired number and choose the menu operator key "+", "-", "x" and "÷", then press "OK".

3. With the Right action Key can erase numbers and leave the calculator.

2.20 Setting alarm

1 While in standby mode, press the Menu Key



, up or down and select "Alarm", then press



the Left action Key, "OK".

2. You can set up to 5 different alarms, with the menu key will move up and down between alarms.

3. Press the Left action Key "Edit" on the desired alarm.

4. With the menu key can move between the main options of the alarm and the volume key "+" and "-" can choose the sub-options of each main option

2.21 Write multimedia message

1. While in standby mode, press the Left action Key



, "SMS".

2. Choose "Write message" and press "OK".

3. Choose "MMS" and press OK".

4. Press "Options"

5. Choose "Add image "or" Add sound "or" Add Video ", then press" OK "

6. Press "Select"



7. With the menu key, up or down and select "Phone" or "Memory card" and press Open".



8. With the menu key, up or down and select "My Music" or "Videos" or "Photos" and press open



9. With the menu key, up or down and select the file you want to send and press"OK"

10. Press "Options".

11. Choose the option "Send to" and press "Select".

12. With the Menu key, choose "Enter recipient" and enter the number you want to send the message or, choose "Phone Book" and select the contact you want to send the message. Then press the "OK" button. To add more recipients, repeat this 12 step again .

13. Press "Options".

9. With the Menu key, choose "Send" and press "Select". Then the phone sends your message.


2.22 Set send and receive multimedia messages (MMS)

This configuration must be performed by the technical staff of the telephone service provider, please refer to this manual to a branch of your provider or ask for help from your provider.

- a. Besides, to send and receive multimedia messages, it is essential that: Your telephone service provider has enabled this feature for your telephone line.
- b. You have installed a MicroSD memory card in the phone.

Ensure the above before continuing with the setup.

Configuration steps for technical staff of the service provider.:


1. With the menu key , up or down, get into main menu of the phone, Choose: Settings ->


Connectivity. -> Data account-> Options -> Add PS Account :

 
NOTICE By pressing "#" you can switch to TAP predictive keyboard

There you can configure the following options:

1. Account name
2. NPA (APN)
3. User name
4. Password
5. Authorization Type (Normal, Safe). Choose using the "+" and "-".
6. Advanced Settings
 1. Main page.
 2. Connection type (HTTP,WAP)
 3. Use Proxy (yes, No)
 4. Proxy adress
 5. Proxy port
 6. User name
 7. Password
 8. Primary DNS
 9. Secondary DNS
 10. IP adress
 11. Subnet Mask

Press button "Done" , then press "ok". Then exit from the menu with the red key 

2. With the menu key , up or down,iget into phone main menu, Choose: Messages -> Messages settings -> MMS -> Data account:

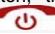There select the data account you just created and press the "OK" button, then exit the menu by pressing the red key .

Federal Communication Commission Interference

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This equipment should be installed and operated with minimum distance 1.0cm between the radiator & your body.

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories those do not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.