

Thank you for purchasing this mobile. For the best performance, we recommend that you read the manual carefully.

Menu

Phonebook

You have 2 phonebooks in this mobile phone: SIM card and the mobile.

View: View the information of current record

Send text message: send text messages to the current record

Call: Make a call of current number.

Edit: Edit the items of current number.

Delete: Delete the current record

Copy: Provide two ways of copying: from SIM card to mobile, and from mobile to SIM card.

Add to Blacklist: Add the contact to blacklist

Phonebook settings

[Memory status]: Check the storage capacity of the SIM card and phonebook.

Messaging

1. Enter Messaging-Write message.
2. Input/Select the destination number (you can input/Select the multi-number) and then Press LSK/Options-Send to send the message.
3. Select **Inbox** to view message received
Select **Drafts** to view the draft you saved
Select **Outbox** to view the unsent message
Select **Sent messages** to view the sent message
Select **Message settings** to set the message configuration

Call center

Call history

Missed calls: Display the missed calls about the latest time and date, caller's number and calling times.

[Dialled calls] Display the dialed calls about the latest time and date, caller's number and calling times.

[Received Calls] Display the answered calls about the latest time and date, caller's number and calling times.

Press the right soft key to enter the options menu can be more than the number of call records in the following:

View: See the current record

Call: Call the current number.

Send text message: send text messages to the current record

Save to Phonebook: Save the record to phonebook

Add to Blacklist: Add the contact to blacklist

Delete: choose to delete the current record

[Delete call logs] Delete the call log

Call settings

Call waiting: Select the functions of open, close or inquire call waiting.

Call divert: Choose to open, close or enquire the call forwarding function.

Call barring: Select to restrict some talking function. Note: network support is required.

Line switching: Select line 1 or line 2. Note: If the line 1 is selected it may lead to failure to dial out and the menu will decide the display because the different categories of the SIM card used.

Advance settings

Blacklist: Edit the blacklist

Auto redial: Choose whether automatic redial will be implemented when the called party is in the busy or have no response.

Call time reminder: Choose display the call time or not when calling

Answer mode: Choose answer mode.

Settings

Phone settings

[Time and date]:

◆ Set home city: Choose the home city.

◆ Set time/date: Set the display date and time.

◆ Set format: Choose the time and date format.

[Language]: Display Language for your mobile.

[Pref. input method]Can the Pref. input method.

[Display]

- ◆ Wallpaper: Set the stand-by wallpaper.
- ◆ Power On display: Set switch-on animation.
- ◆ Power Off display: Set switch-off animation.
- ◆ Show date and time: Activate or deactivate displaying time and date in the stand-by screen.

[Flight mode]: Set the flight mode or normal mode.

[Misc.settings]: Set the time limit for the back light of main screen to be off when there is no operation.

Network settings: Choose setup SIM card network

[GPRS transfer pref]: Set the priority network.

Security settings:

[SIM Security]

- ◆ PIN Lock: Activate or deactivate the PIN lock.
- ◆ Change PIN/PIN 2: Change the PIN.

Note: Please remember your password firmly in time after changing.

[Phone Security]: Activate or deactivate the phone lock and Change password.

[Screen auto lock]: choose the keypad lock for 5 sec.,30 sec.,1 min.,5 min. and choose "Off".

[Phone settings]

- ◆ Phone Lock: Activate or deactivate the Phone lock.
- ◆ Change password: Change mobile phone password.

[Screen auto lock]

Set auto lock screen time.

Connectivity:

[Bluetooth]

- ◆ Power: Active the Bluetooth function.
- ◆ Visibility: Activity /Deactivate this function.
- ◆ My device: Display the connected Bluetooth.
- ◆ My name: View the Bluetooth name and can be edit the Bluetooth name.

[Data accounts]

Can be view or edit the Date account.

Restore factory settings: Restore the default setting of the phone. You need to enter the phone lock password, and the default password is '1122'.

Multimedia

Camera: Take the picture via press CSK

Switch to video recorder: you can be Switch to video recorder

Photos: View the photos that you saved.

Camera setting: Set related parameters of the camera.

Image settings: Set the size and quality of the photos.

White balance: Choose the mode to keep white balance.

Scene mode: Choose the Auto or Night mode .

Restore default: Restore the camera settings to default.

Image viewer: View or modify photos saved in the album.

View: View the selected images.

Send: you can send the image by Bluetooth.

Use as: use the phone as wallpaper, Power on/off display.

Rename: Rename the current picture.

Delete: Delete the picture

Image information: view the image information.

Video Recorder

On the video interface, press up and down navigation keys to tune the focal length; press left and right navigation keys to tune exposure compensation.

Note: Because the mobile memory capacity is limited, a T-flash card has to be inserted before you can save the video.

Switch to camera: Can be switch to camera.

Camcorder settings: Set the related parameters for the video camera.

Video settings: Set related parameters for the video clip.

Video player: Lets you open different types of video file (As MP4)

Sound Recorder

New record: Start recording.

Play: Play a selected record.

Rename: Rename a selected record. Note: Renaming a record which has been set as incoming ring will make the settings back to defaults.

Delete: Delete a selected record.

Use as: Use the record in a situation mode.

Send: send the record by Bluetooth

Note: The recording time depends on the memory capacity of the mobile.

Audio player

The audio player can be play mp3 file, let's you listen to audio files through headset or loudspeaker.

[Play]: play the music.

[Details]: View the file information

[Refresh list]: Update the items of songs (updating shall be implemented after the name/names of song(s) are changed or some of the songs are deleted)

[Settings]: Set up relevant information of music player.

Pre.playlist: Play music from handset or T-Flash card

List auto gen.: Display as "Refresh Play List" when set to "ON", or "Add" when set to "OFF"

Repeat: Can be set to "OFF", single song repeat, or all songs repeat.

Shuffle: Songs will be played random when this option set to "ON", otherwise, songs will be played by order they displayed in the list.

Background play: As this option set to "ON", Songs will be played in background when idle screen is displayed, otherwise, the music is stopped when display idle screen.

Lyrics display: The Audio player interface will show the Lyrics if active this function (**The phone only support.lrc**)

FM radio

This phone support the FM radio function

[Channel list]: Set up the channel list and frequency

[Manual input]: In put the frequency by manual

[Auto search]: choose the "yes" then auto searching the channels

Profiles

Your mobile provides several situation modes: General, Meeting, Silent, and Outdoor

Alert type: Set alert type

Ring type: Set ring type

Ringtone: Set ring for incoming calls

Ring tone volume: Set the ring volume
Message: Set up the alert style of new message
Message volume: Set the Message volume
Keypad: Set up the keypad tone
Key tone volume: Set the volume for pressing the keys.
System alert: Open and close the alarm system or.

File manager

Memory card: Need the T-flash card support

Organizer

Ebook reader

Reading. Txt format of the text of the document. May be a text document format through the USB data lines in mobile phone functionality to copy read.

Calendar

To access the Calendar, press the left soft key. The first row displays year and month; the second row displays week; the middle part displays dates for a specific month; and the last row displays the two soft keys. In the calendar mode, view the previous week by pressing the up navigation key and the next week by pressing the down navigation key; View the previous day by pressing the left navigation key and the next day by pressing the right navigation key. The selected date is displayed in deep color.

◆Jump to date: Jump to the appointed date quickly when you input a date to search.

◆Go to weekly view: View the date according to weeks

Alarm

You can set 5 alarm times with this mobile. For each of them, you can set the alarm status to be open or not, set the alarm time and alarm frequency (once, daily or on several self-defined dates).

SOS

This machine provides SOS function, related settings, the standby interface long OK key to call when the call number, no answer will help transmit information to set the corresponding number.

Extras

Calculator

The cell phone support continuous four mixed arithmetic operation and the operation is simple, practical and convenient.

Services

Some operators of value-added services for users to use this menu. Note: please consult local operators.

For your safety

- In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical transfer or storage facilities, obey all signs and instructions.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference,
and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: ANGEL II (FCC ID: **PPATOCHANGEL2**) has also been tested against this SAR limit.

The highest SAR value reported under this standard during product certification for use at the ear is 0.212W/kg and when properly worn on the body is 0.579W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance

between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided