


1. Photograph of the EUT

EUT: WLAN module (Atheros / AR5B95)

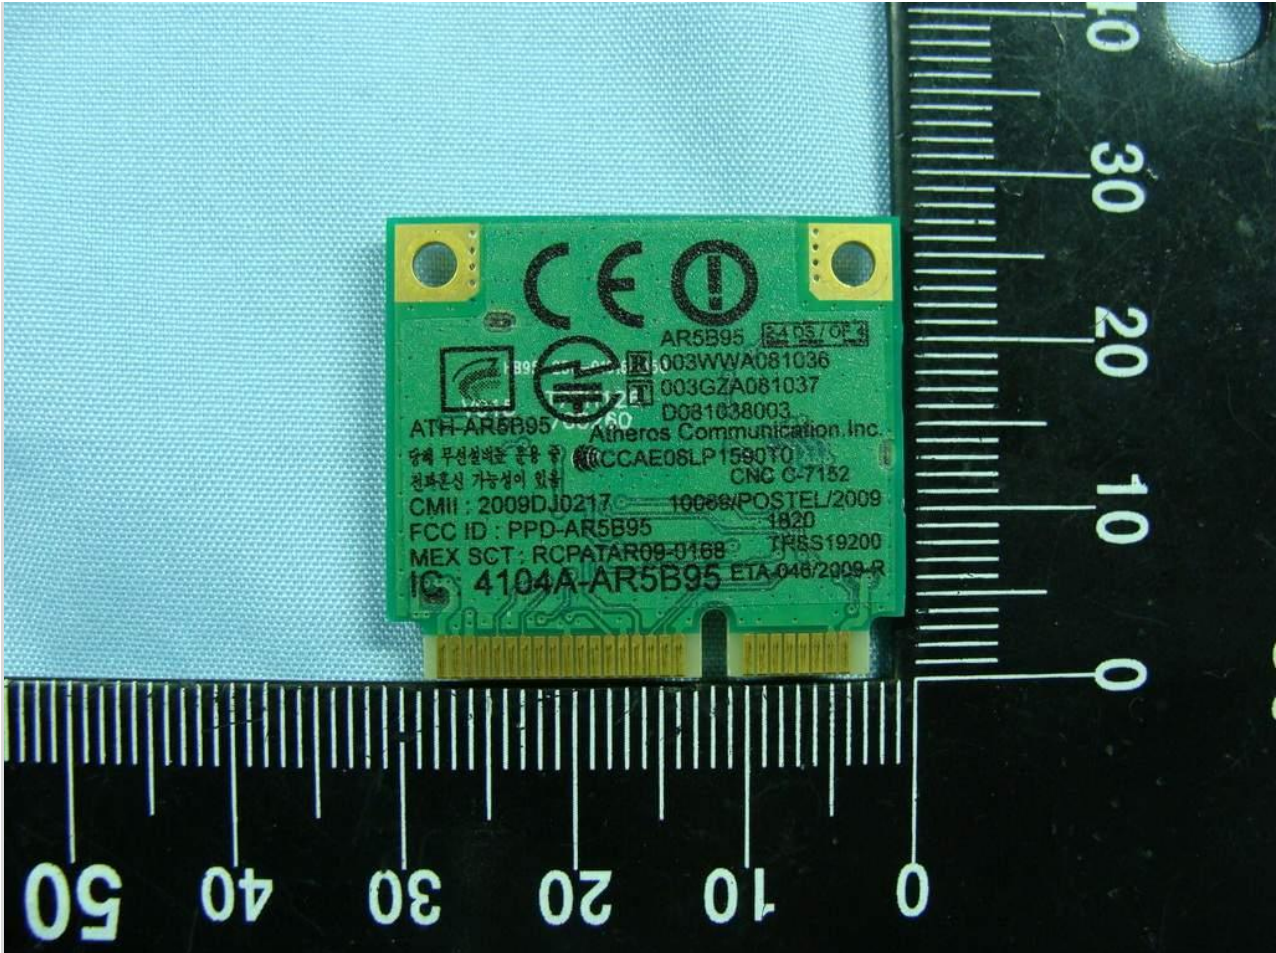

EUT: WLAN module (Atheros / AR5B95)



## 2. External Photograph of the Host

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Blue



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Blue



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Blue



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Blue



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Blue



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))


Color: Blue





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Blue

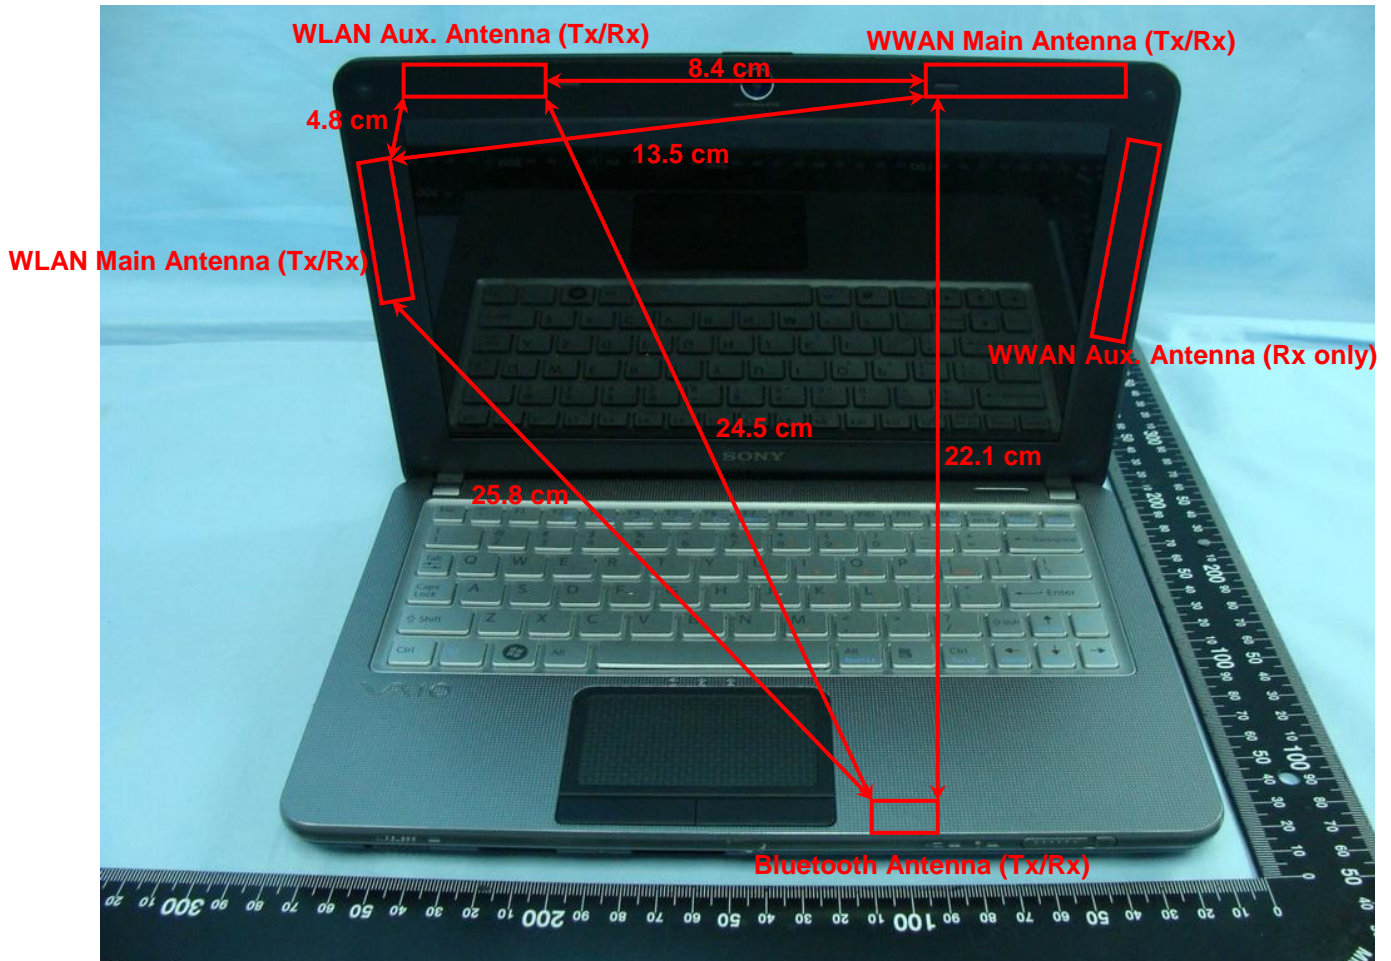

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Blue





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Deep Brown





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Deep Brown



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Deep Brown



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Deep Brown



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A-Z or blank))

Color: Deep Brown





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Deep Brown





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A-Z or blank))

Color: Deep Brown





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Deep Brown




Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: White



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: White

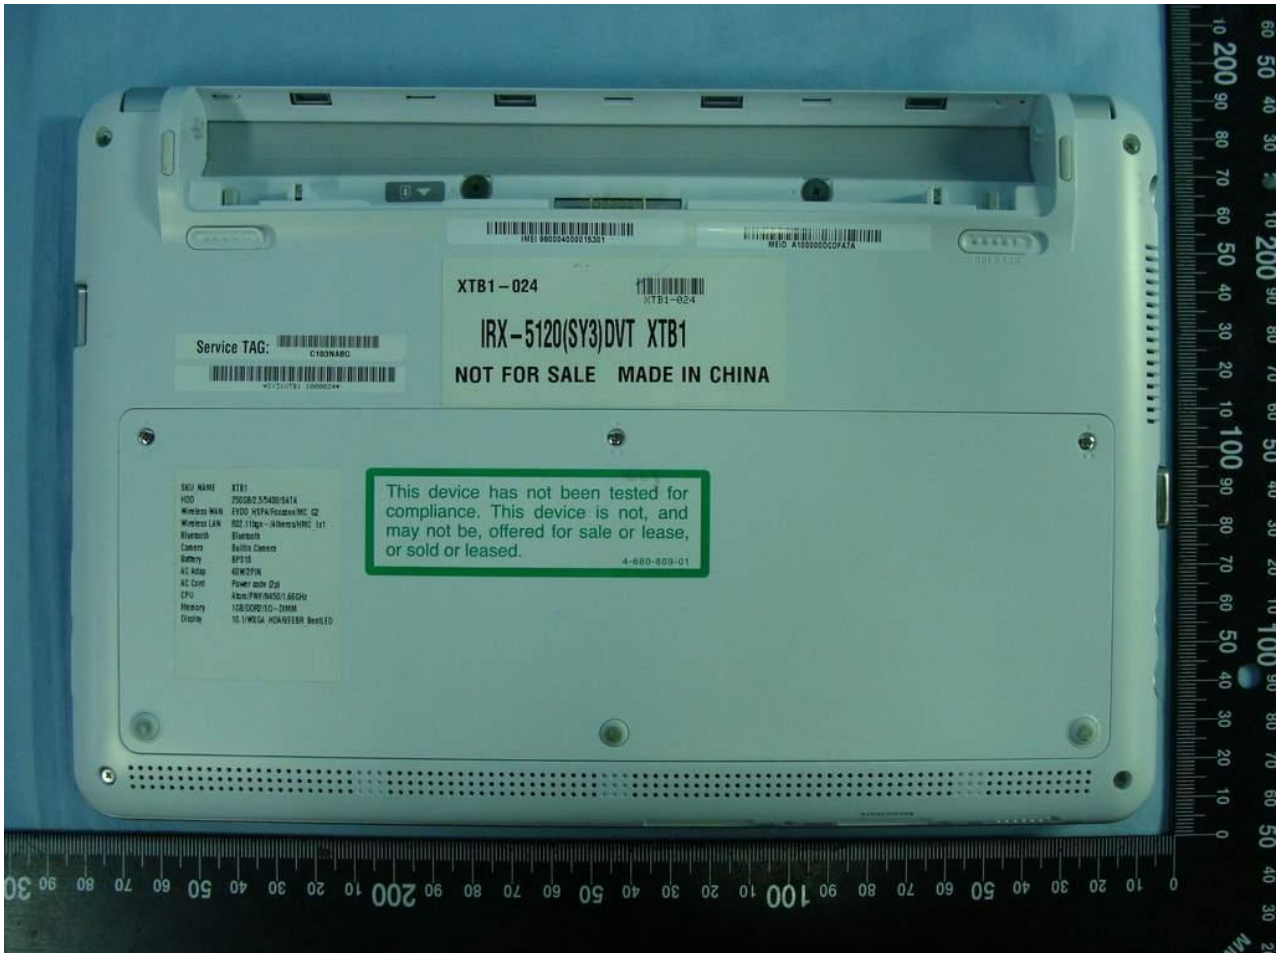

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: White



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: White



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: White



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: White





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: White





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: White





Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Pink



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Pink



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Pink



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Pink



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Pink



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Pink







**Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))**

**Color: Pink**



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

Color: Pink



### 3. Photograph of Accessory for the Host

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))



Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))



Battery 1

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))



Battery 1

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))





Battery 1

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))



**Battery 2**

**Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))**





**Battery 2**

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))




Battery 2

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))




#### 4. Internal Photograph of the Host


Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

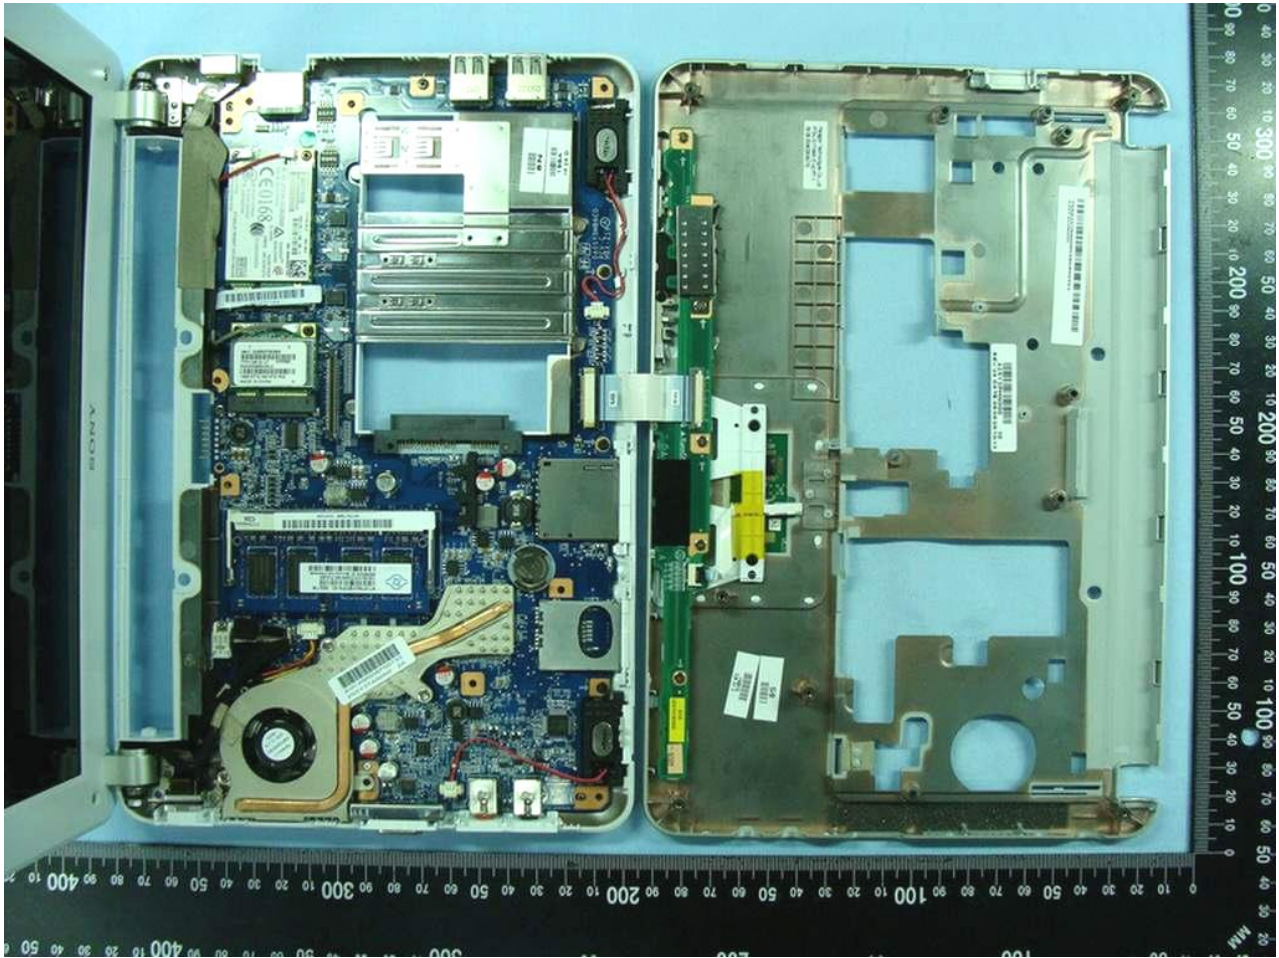

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

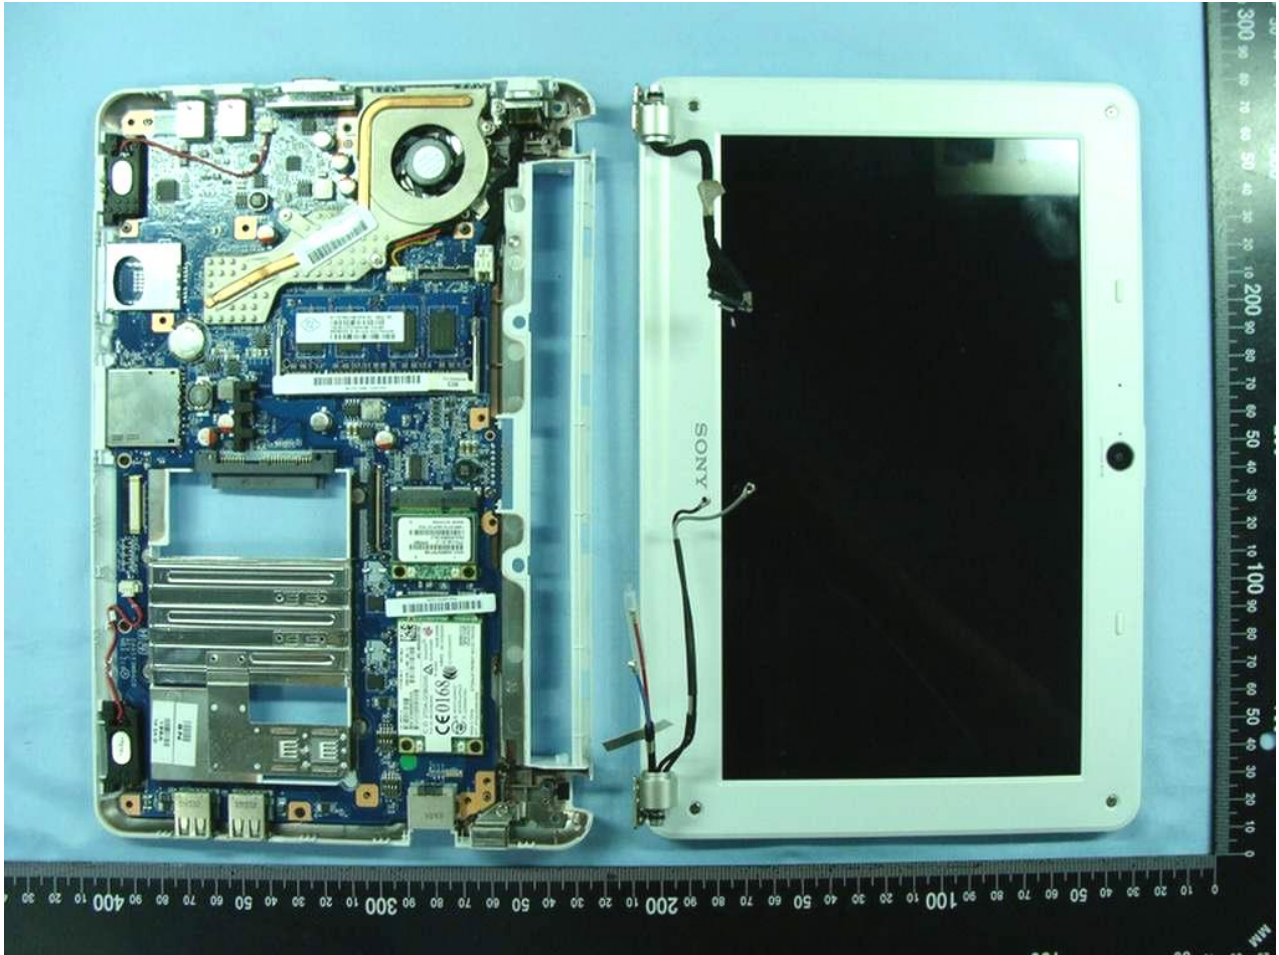


Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

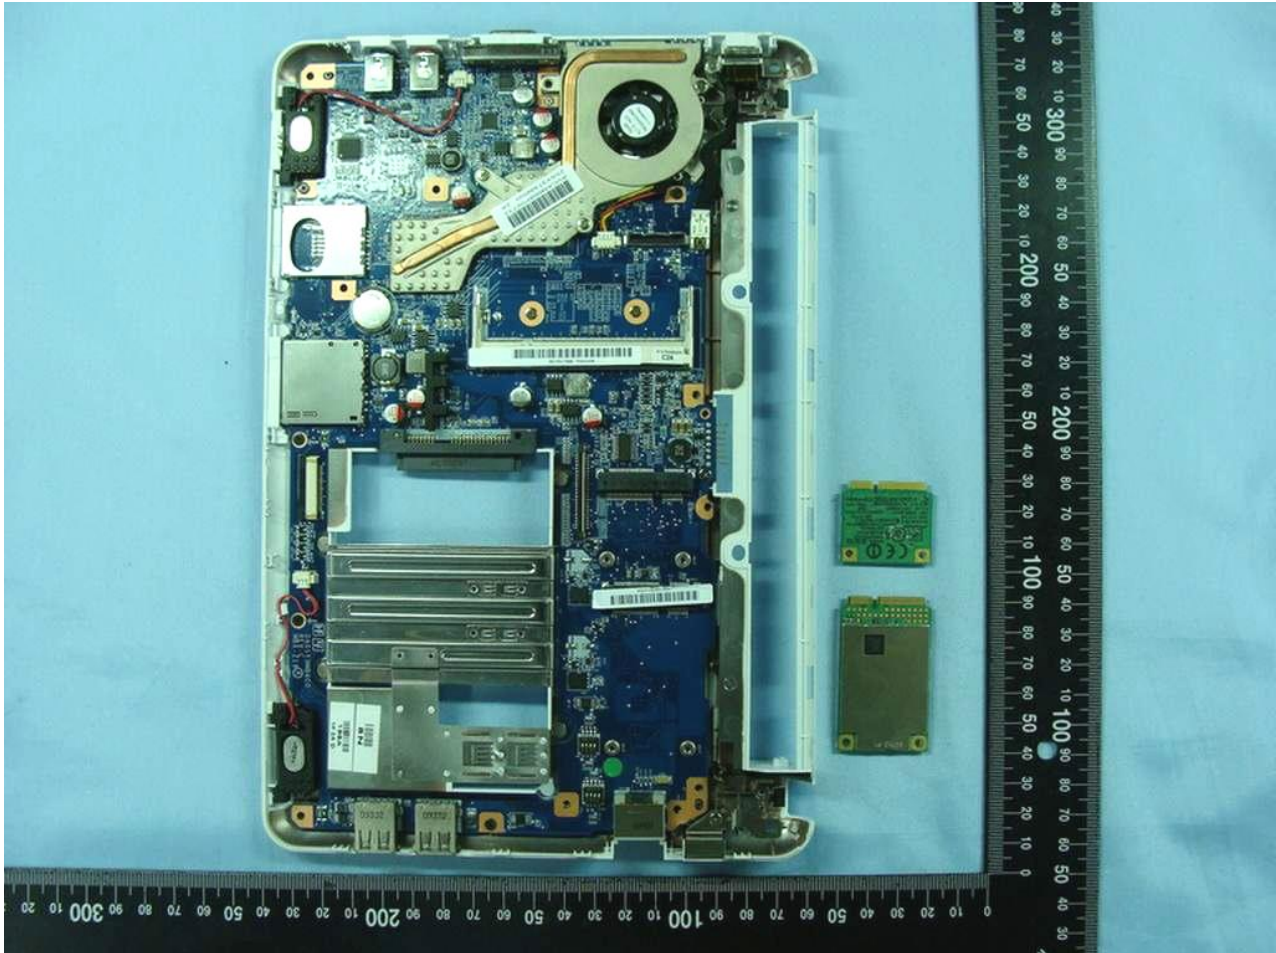

Bluetooth Module


Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

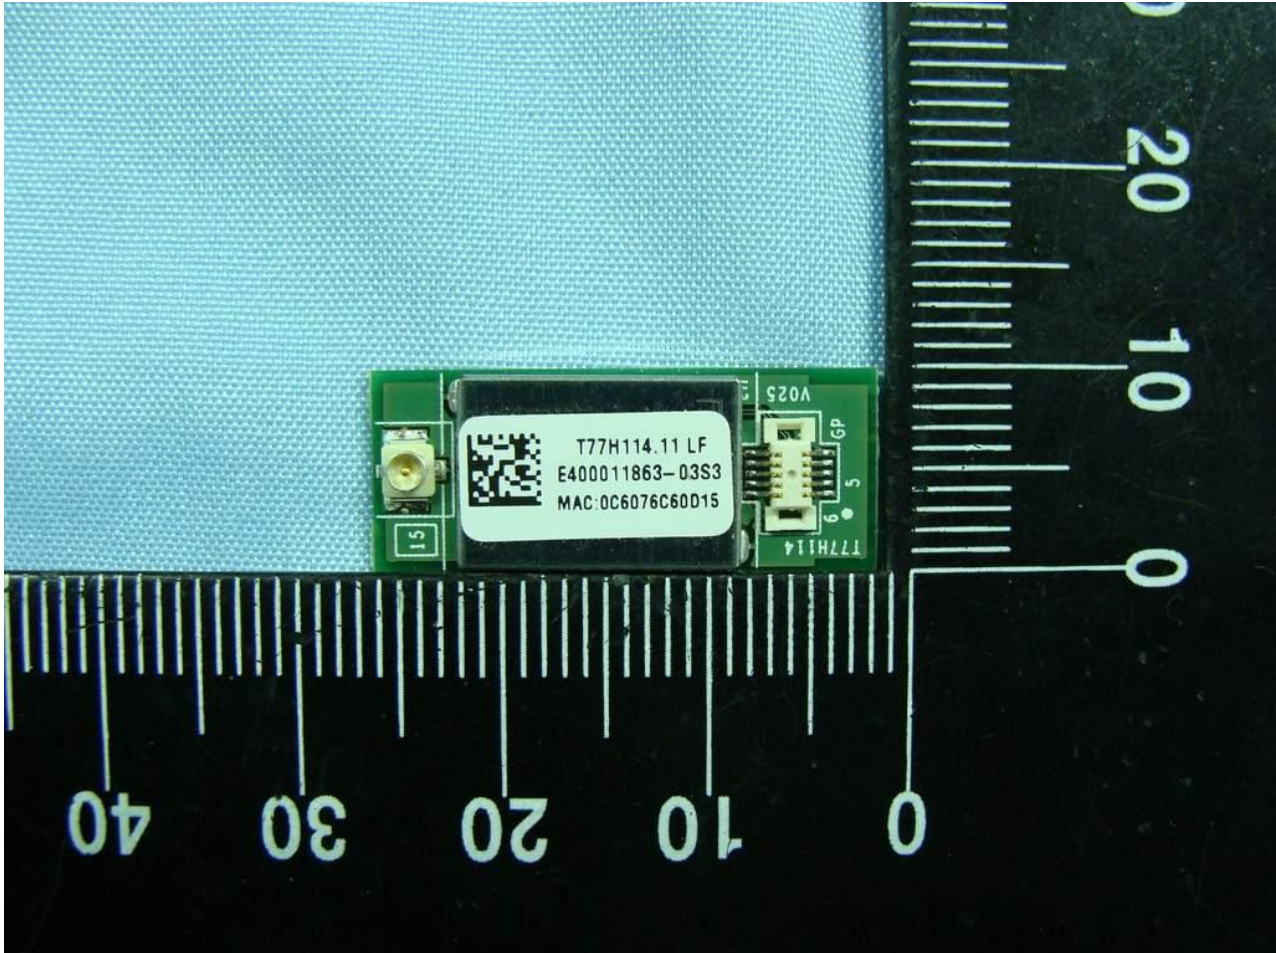



Bluetooth Module

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

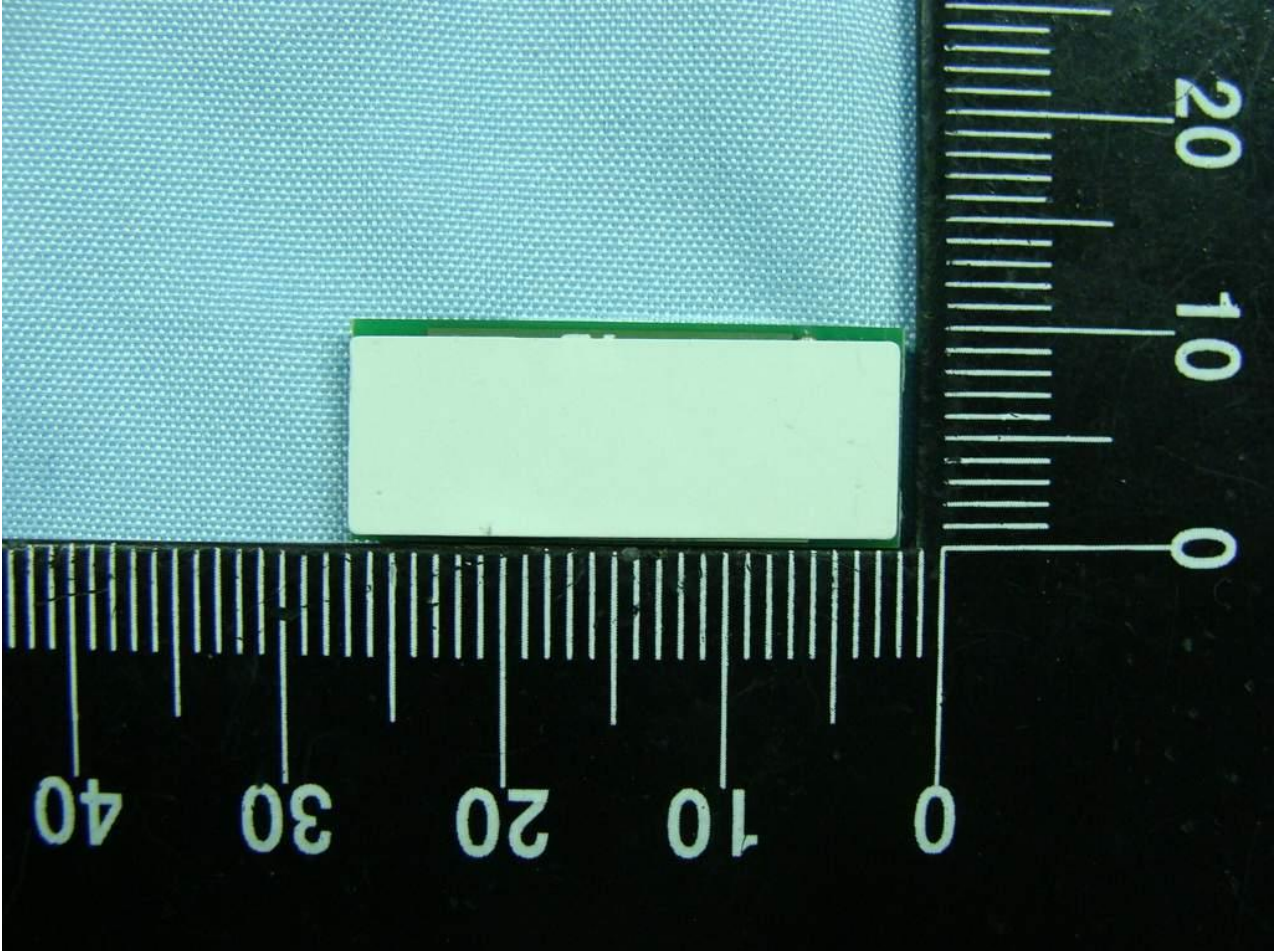


WLAN Module

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))




WLAN Module

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

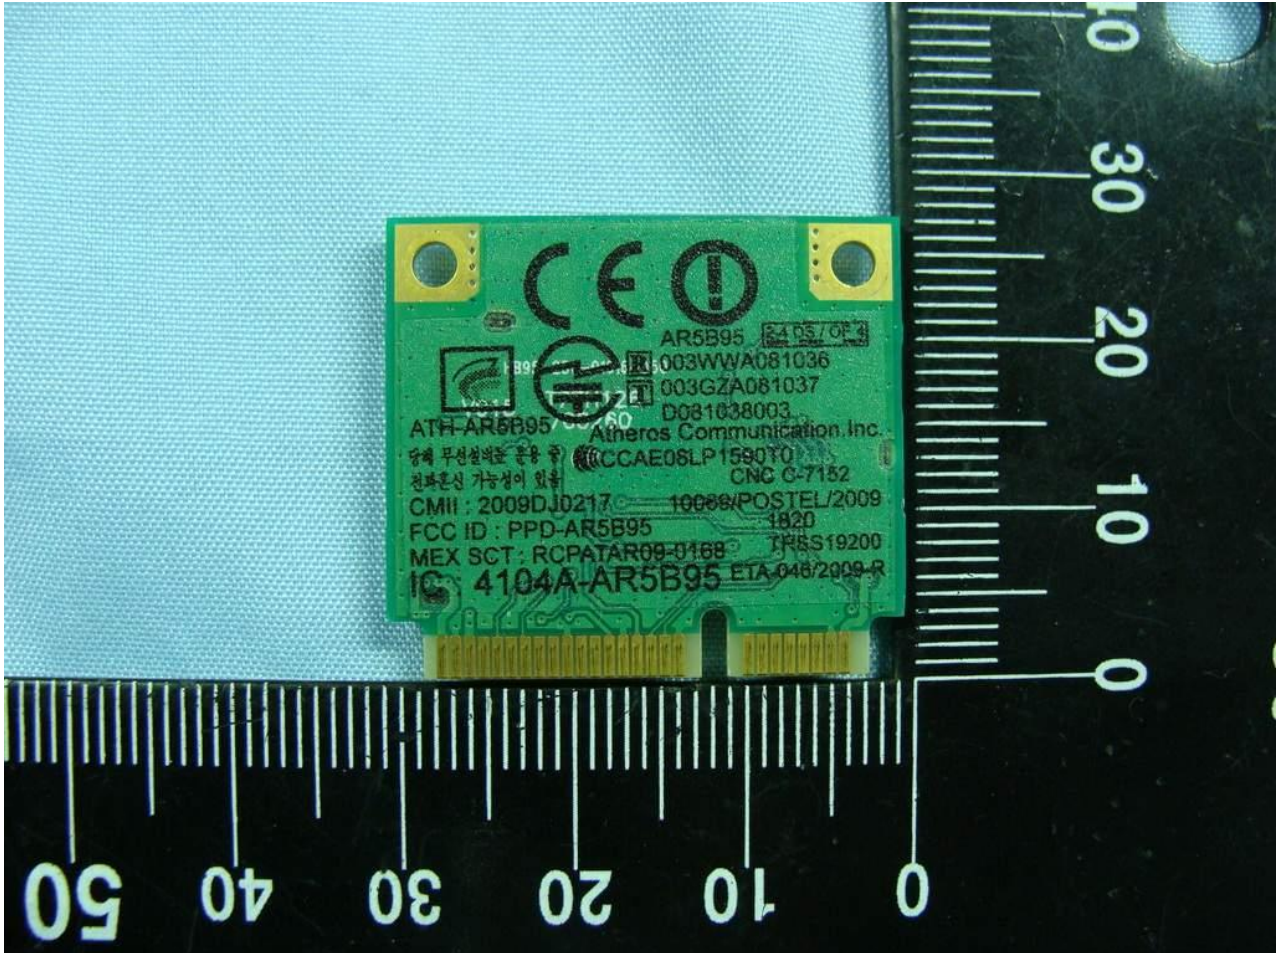


WWAN Module

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

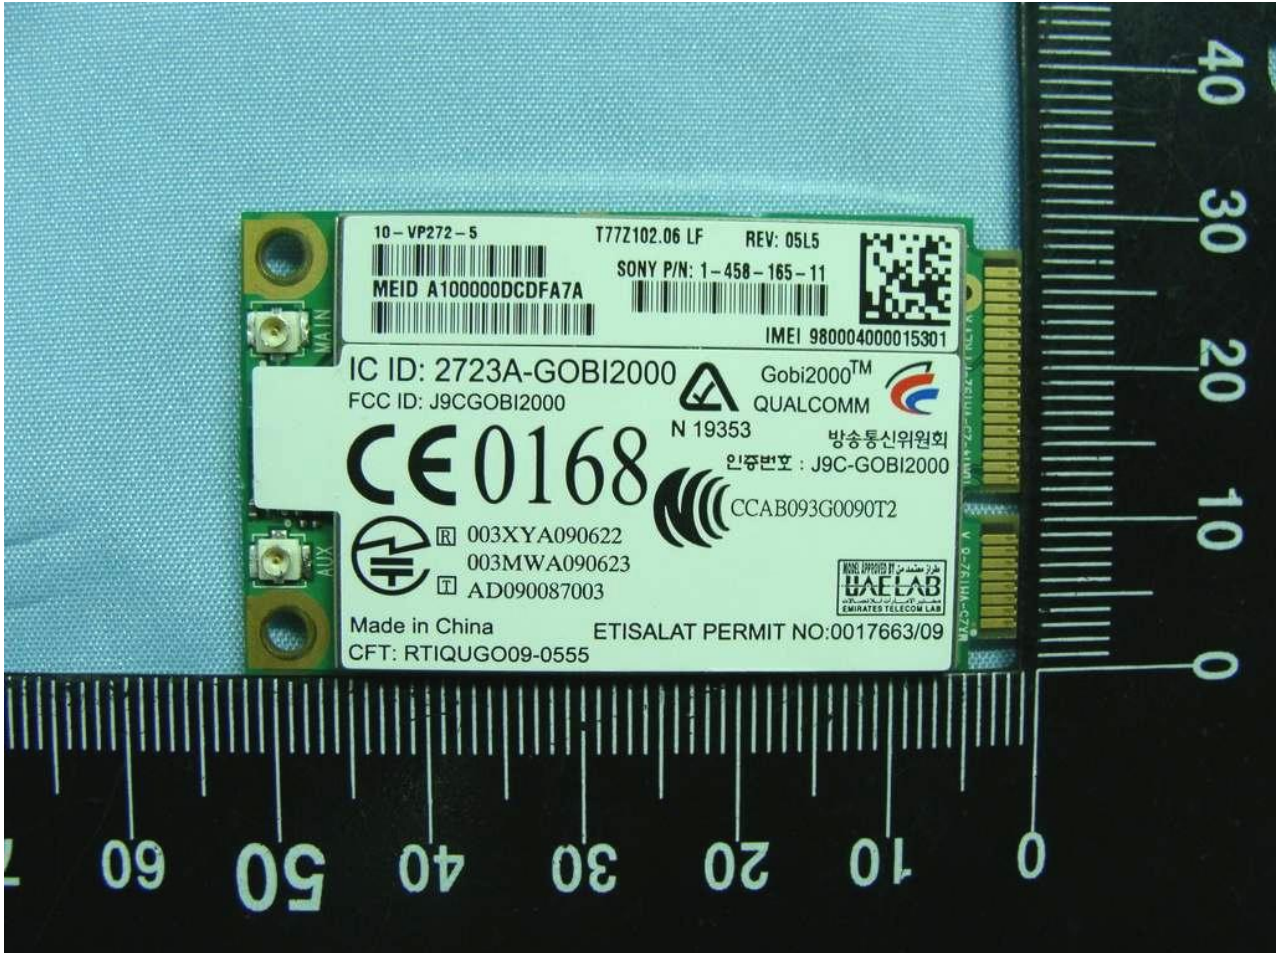

WWAN Module

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

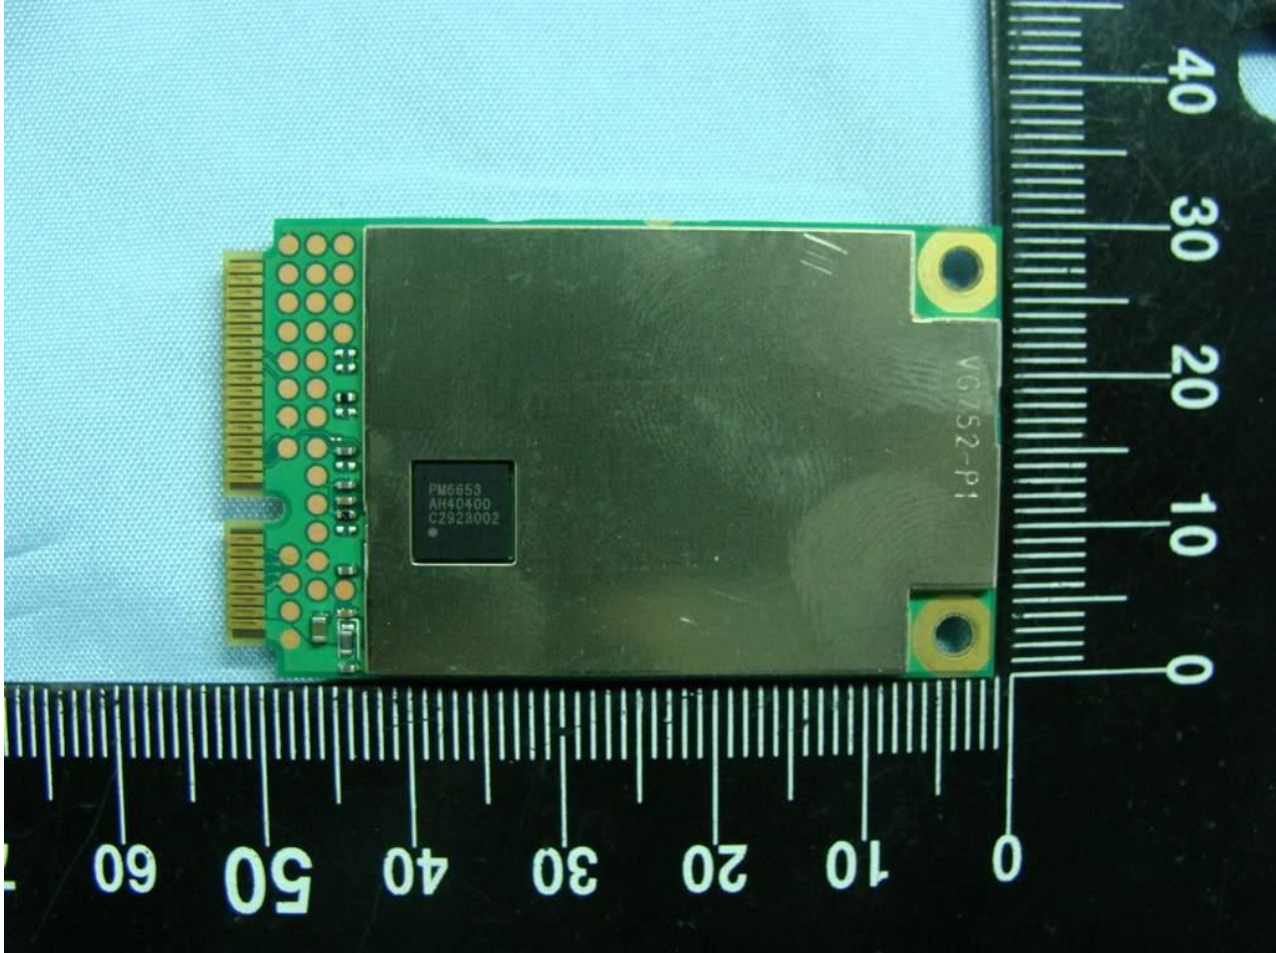


**Bluetooth Antenna****Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))**


**WLAN Main Antenna****Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))**

WLAN Aux. Antenna

Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))

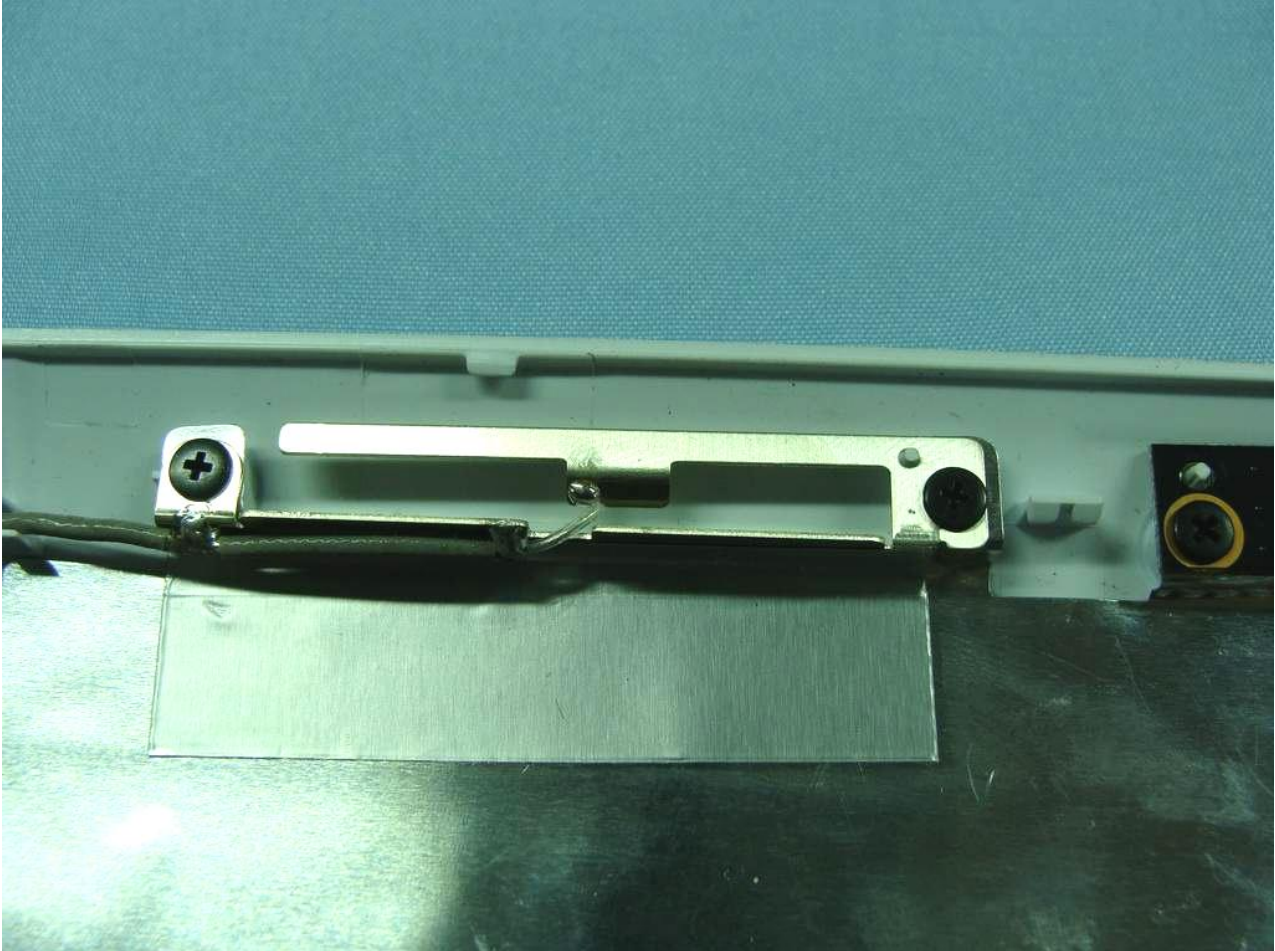

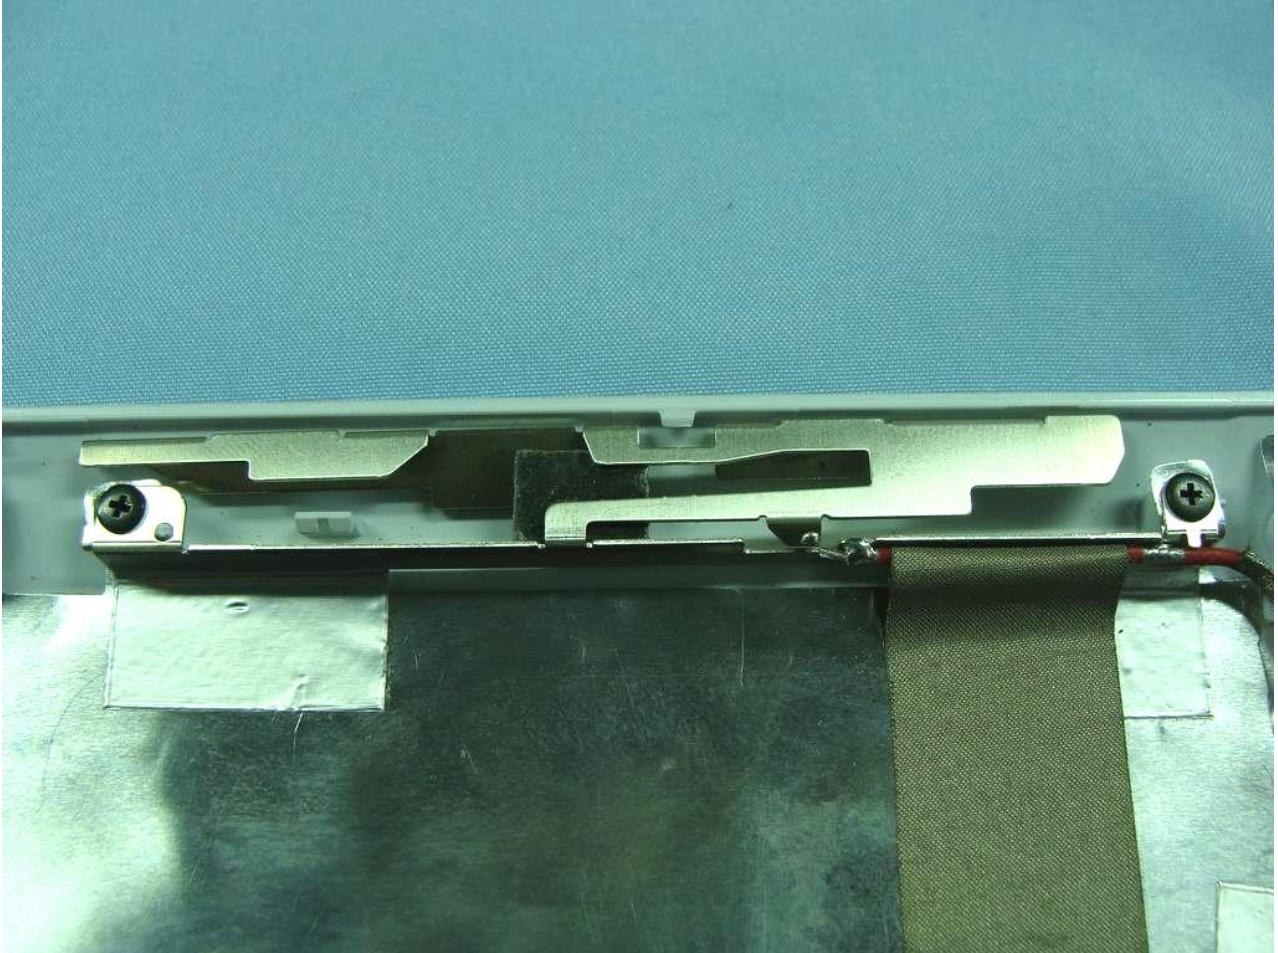

**WWAN Main Antenna****Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))**

**WWAN Aux. Antenna****Host: Notebook Computer (SONY / PCG-2121\*\* (\*=0~9, A~Z or blank))**