

Figure 7  
CD-RW DRIVE, M/N: LXR-40122A  
Frame of Internal (Removed CD-Tray Device)

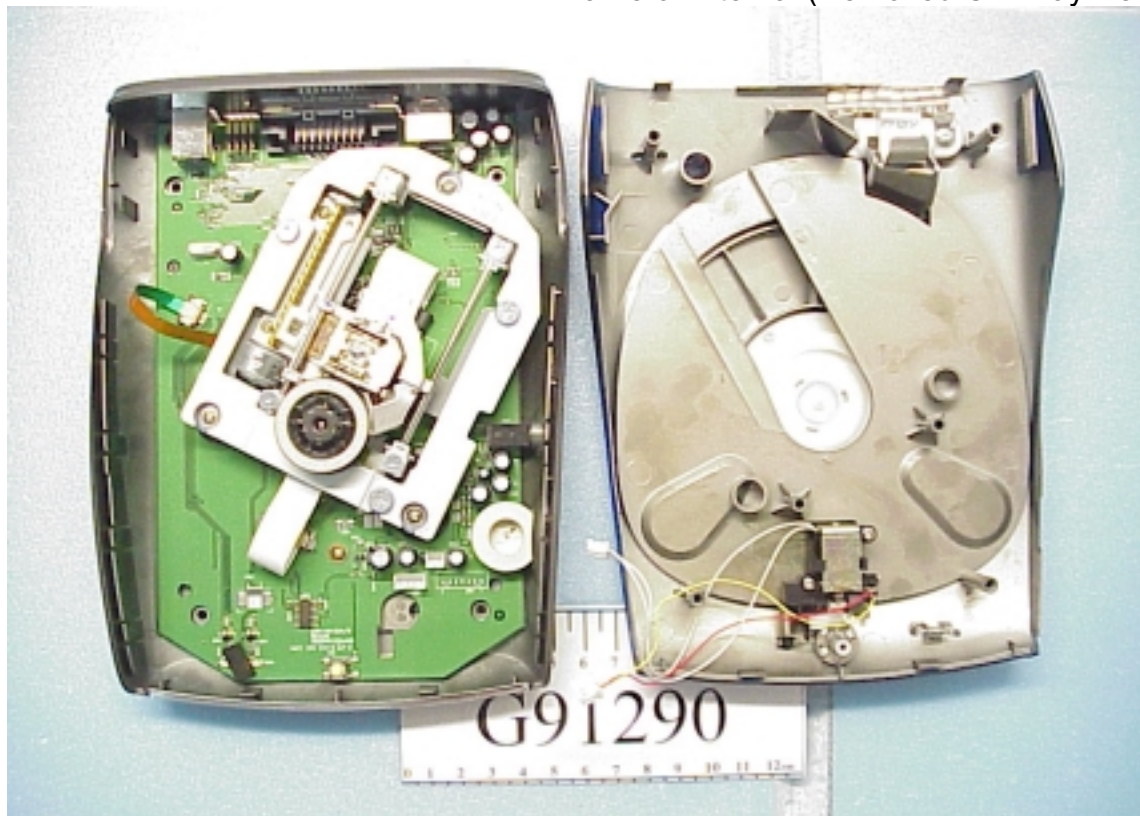


Figure 8  
CD-RW DRIVE, M/N: LXR-40122A  
Frame of Internal (Removed CD-Driver & Main Board)



Figure 9  
CD-RW DRIVE, M/N: LXR-40122A  
Internal View (Removed CD-Driver Device)

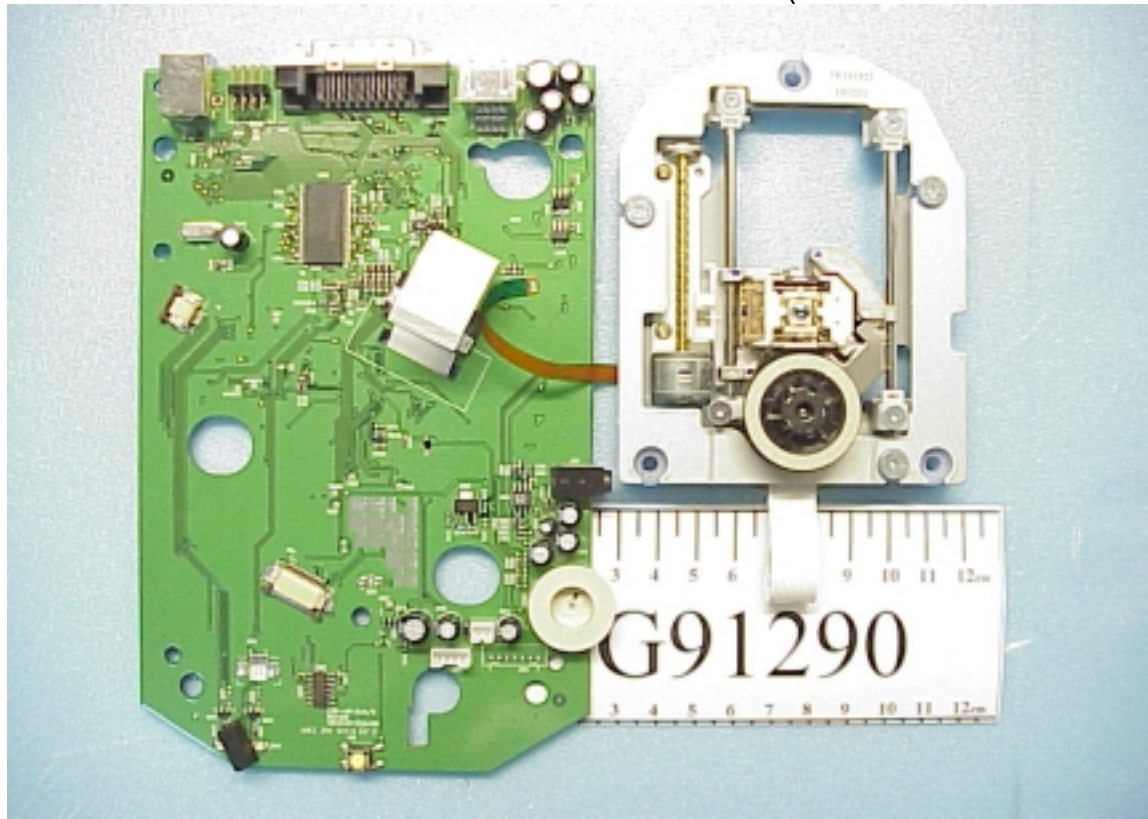


Figure 10  
CD-RW DRIVE, M/N: LXR-40122A  
Internal View (CD-Driver Device, Front Side)

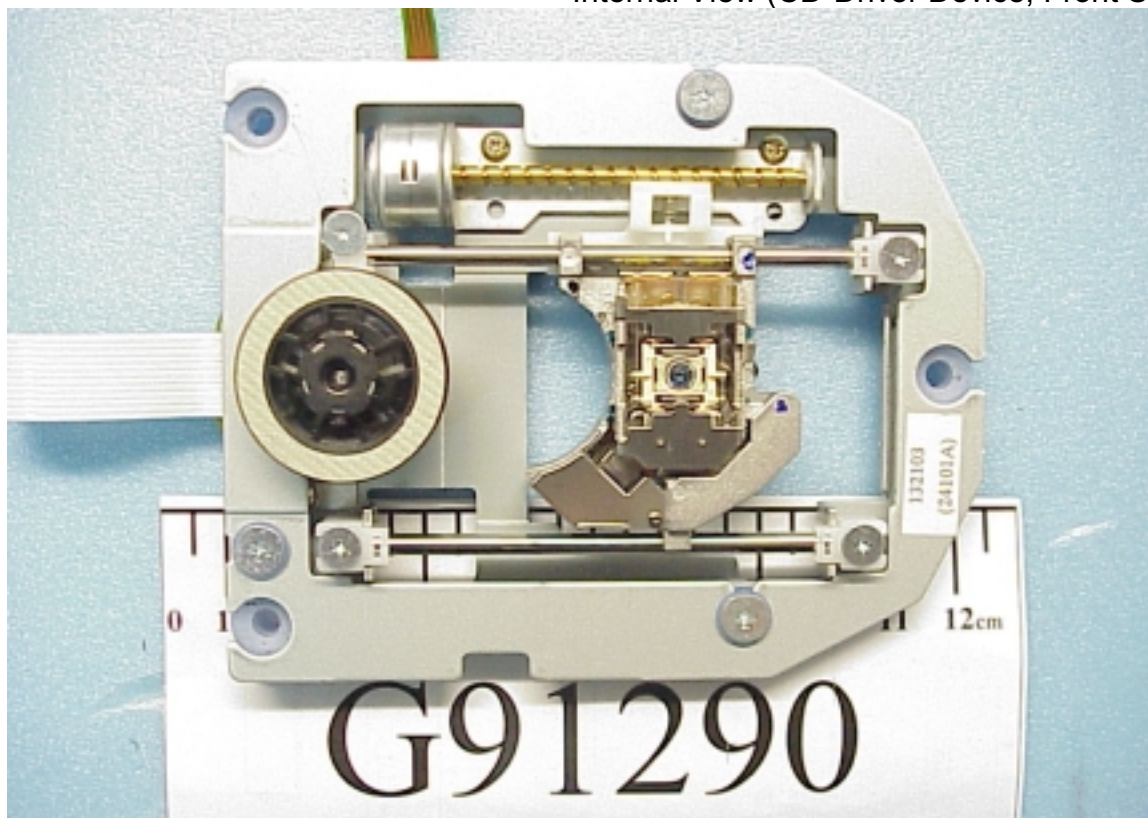




Figure 11  
CD-RW DRIVE, M/N: LXR-40122A  
Internal View (CD-Driver Device, Motor and Optic-Head)

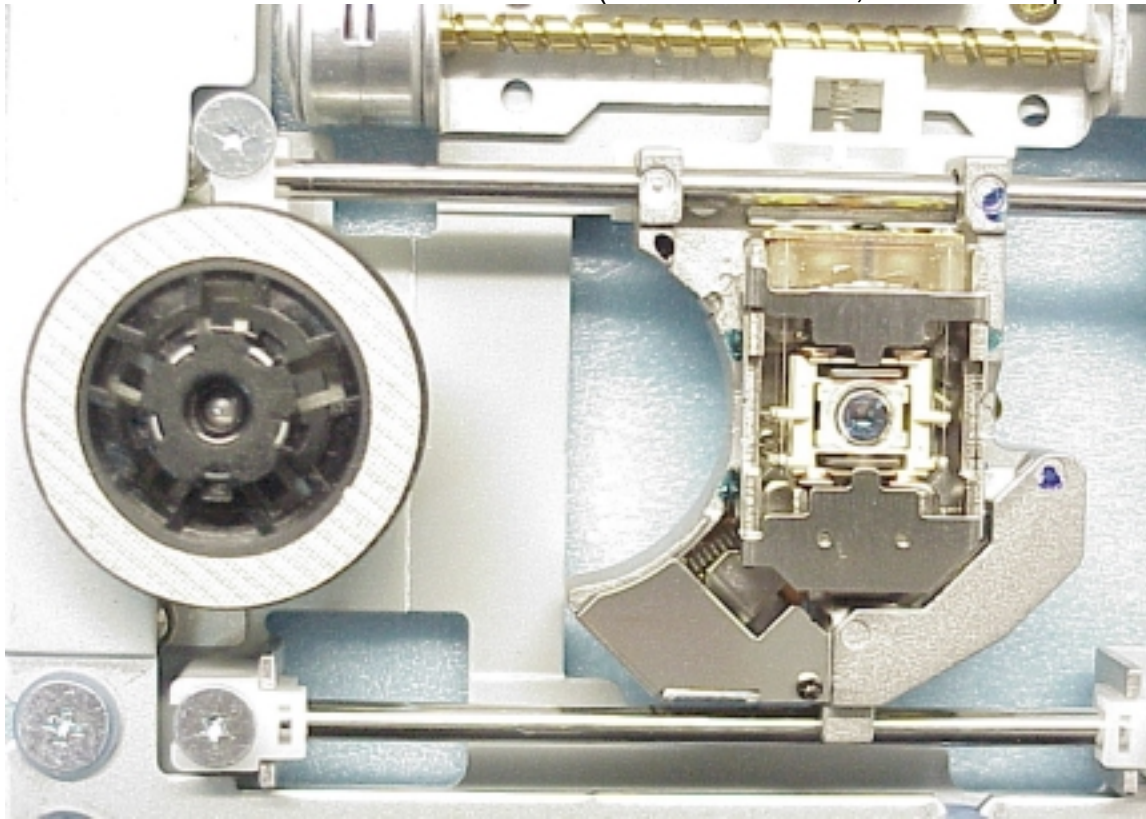


Figure 12  
CD-RW DRIVE, M/N: LXR-40122A  
Internal View (CD-Driver Device, Back Side)

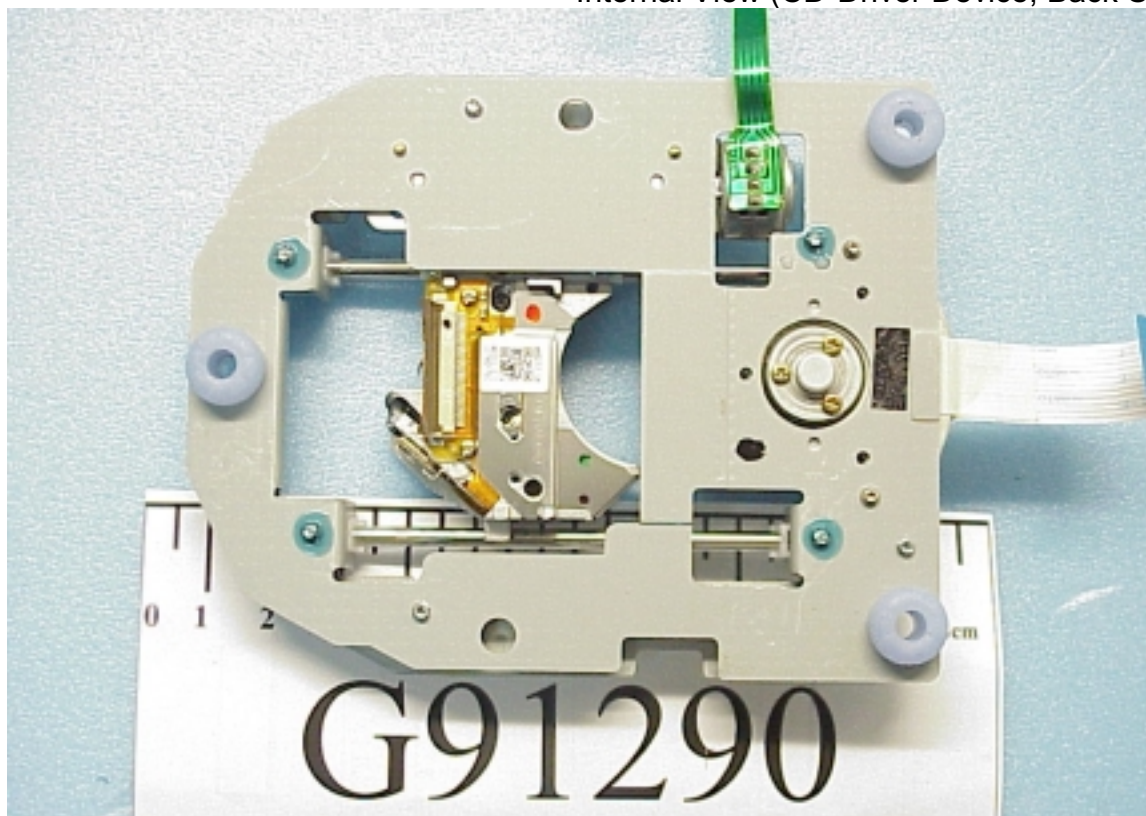




Figure 13  
CD-RW DRIVE, M/N: LXR-40122A  
Internal View (CD-Driver Device, Optic-Head/Back Side)

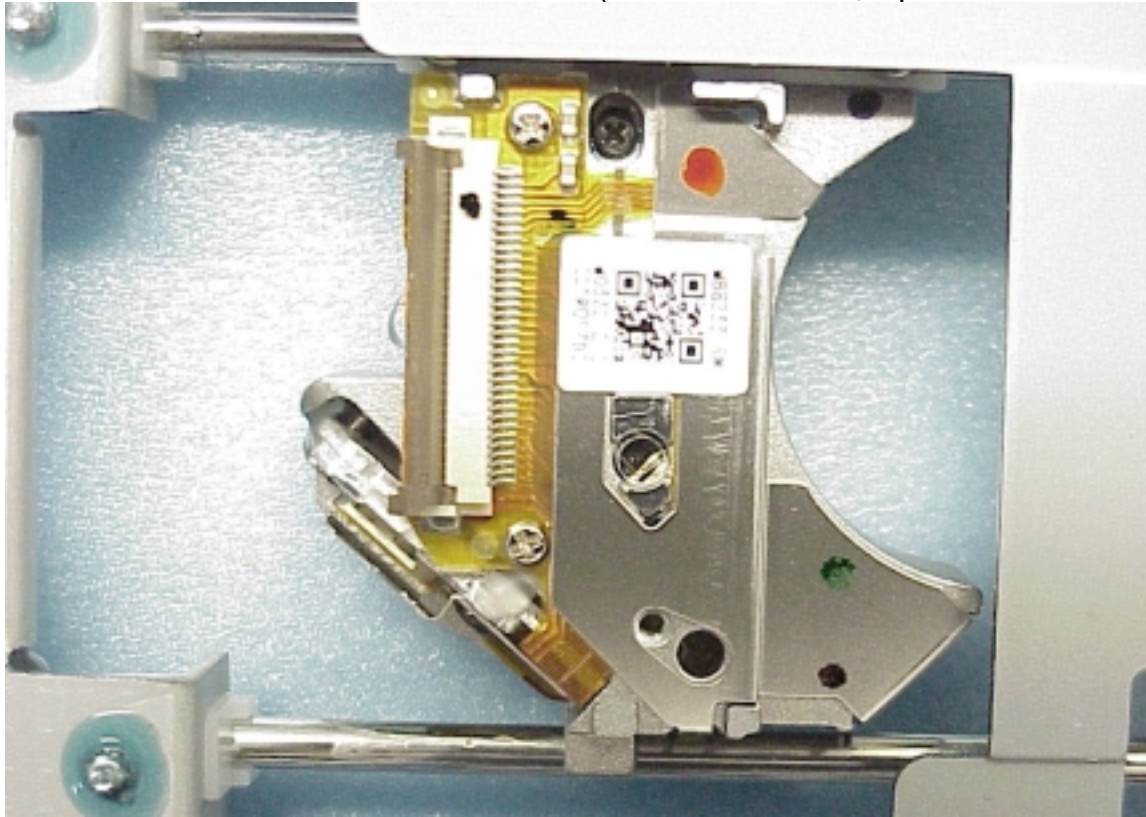


Figure 14  
CD-RW DRIVE, M/N: LXR-40122A  
Internal View (Main Board, Front Side)



Figure 15  
CD-RW DRIVE, M/N: LXR-40122A  
Internal View (Main Board, Back Side)



Figure 16  
CD-RW DRIVE, M/N: LXR-40122B  
General Appearance (CD-RW DRIVE 、Power Adapter\*3EA 、Power Cord)

