

Instructions

<p>Regenerator Mini.</p>	
<p>Problems? Before taking Crash Force™ Regenerator™ Mini RC back to the retailer, call our friendly _ RC technicians at: 1-800-622-8339</p>	
<p>Battery installation:</p> <p>Crash Force™ Regenerator™ Mini requires 4 AA batteries and one 9V battery to run. (Sold separately.)</p> <p>Vehicle:</p> <ol style="list-style-type: none">1- Locate the battery door on the bottom of the vehicle.2- Rotate the lock to release the battery door as shown.3- Place the batteries in the tray according to the polarity markings as shown.4- Replace the battery door and slide the lock back into place. <p>Controller:</p> <ol style="list-style-type: none">1 - Using a Phillips screwdriver, undo the _ hold down screw and remove the battery _ compartment door.2 - Place the 9-Volt battery in the battery _ compartment, making sure to follow the _ correct + and – polarity markings.3 - Replace the battery compartment door_ and refasten the hold down screw.	
<p>Operating the vehicle.</p> <p>When driving Regenerator™ Mini, the most dramatic crashes are caused by head on collisions at full speed. It can take as many as 5 hits to fully crumple Regenerator™ Mini or as few as one, if the speed is fast enough. You can drive Regenerator™ Mini in the crashed state, full function. When you press the Regeneration button, the car will return to its original state.</p> <p>Regenerator™ Mini can reform from a standing or moving position.</p> <p>GETTING STARTED</p> <ol style="list-style-type: none">1. Turn the "ON-OFF" switch to the _ "ON" position.2. Use Controller to move vehicle _ forwards or backwards, right or left.	

<p>Be sure to turn the "ON-OFF" switch to the "OFF" position when finished playing with the vehicle.</p> <p>BREAK-AWAY PARTS</p> <p>Regenerator™ is designed with break away doors and rear window section. If you crash Regenerator™ Mini on certain angles, you can dislodge these parts. To replace, simply snap them back in as shown. Each break-away part has a snap attached that fits securely into a corresponding hole on the vehicle.</p>	
<p>SAFETY INFORMATION</p> <p>Always turn Regenerator™ off before attempting to pick it up. Never touch the vehicle while it is regenerating or moving. Do not place the Controller on the ground with the button facing down. This could cause accidental starts or erroneous responses.</p>	
<p>BATTERIES</p> <p>Crash Force™ Regenerator™ Mini requires with one 9-Volt battery for the Controller and 4 AA batteries not included.</p>	
<p>IMPORTANT BATTERY INFORMATION</p> <p>Battery installation should be performed by an adult. Use only batteries recommended on this package and the instruction sheet. Be careful to install batteries with the correct polarity as indicated.</p> <ul style="list-style-type: none"> • Do not mix new and old batteries. • Do not mix alkaline, standard, rechargeable or different types of batteries. • Non-rechargeable batteries are not to be recharged. • Rechargeable batteries are to be removed from the toy before being charged. • Rechargeable batteries are only to be charged under adult supervision. • Only batteries of the same or equivalent type as recommended are to be used. • Exhausted batteries are to be removed from the toy. • The supply terminals are not to be short circuited. <p>Please retain this information for future reference</p>	
<p>Trouble Shooting.</p> <p>PROBLEM</p> <p>Car will not Start. Car does not respond to controls. Car does not drive straight.</p> <p>SOLUTION</p> <p>1. Power switch is off. Turn on. 2. Batteries are</p>	

<p>installed with incorrect polarities. Check the + and - markings make sure the batteries are properly aligned. 3. Batteries are drained. Install new batteries. 1. Controller battery is drained. Replace the 9V controller battery. 2. Vehicle is out of Range. Bring controller to the vehicle. 3. Interference from surrounding electrical machinery. Bring to a wide open space. 4. Car is in sleep mode. Turn the power off for 10 seconds, then turn it back on to reset. NOTE: With electrostatic discharge in the environment, the vehicle may malfunction. Reset the vehicle in by turning the vehicle OFF and restart again to resume normal operation. 1. Adjust the steering dial underneath the front axle, left or right, until the wheels point straight forward.</p>	
<p>FCC Requirement. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference that may cause undesired operation. Do not attempt to repair or modify this equipment. _ WARNING: Changes or modifications not expressly approved by the party responsible for its compliance could void the users authority to operate the equipment.</p>	
<p>Spin Master Ltd. _ 450 Front Street West, Toronto, ON M5V 1B6 Canada_ Phone: 1-800-622-8339 Fax: 416-364-8005_ Web: www.spinmaster.com Email: toys@spinmster.com ©2004 Spin Master Ltd. TM Crash Force and _ TM Regenerator are trademarks of Spin Master Ltd. _ All Rights Reserved.</p>	
<p>Assortment # 14103 UPC 7 78988 14103 8 Item # 14105</p>	