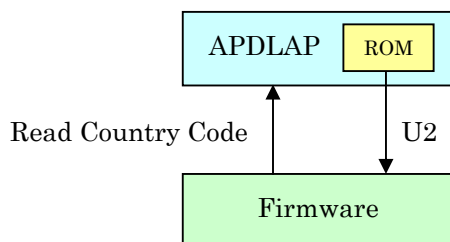


## About channel setting

### Channel of FX-DS540-APDLAP

At first a firmware of FX-DS540-APDLAP reads a value of a country code written in a FlashROM of the FX-DS540-APDLAP inside.



**Figure 1 : Read Country Code**

The channel which can use a value of a country code for the cause is decided.

There is the following meaning in value “U2” (US ver2) of a country code of FX-DS540-APDLAP.

**Table 1 : Supported Channel**

Supported Channel	<b>IEEE802.11b/g :</b>
	1-11ch (2412-2462MHz)
	<b>IEEE802.11a :</b>
	36-48ch (5180-5240MHz)
	149-161ch (5745-5805MHz)

A user cannot change a value of a country code so that it is written in an FlashROM.