

Programming Instructions:

******READ INSTRUCTIONS ALL THE WAY THROUGH BEFORE ATTEMPTING PROGRAM.**

******HIGHLY RECOMMEND WATCHING THE STEP BY STEP VIDEO PRIOR TO PROGRAMMING******

TO WATCH THE VIDEO VISIT WWW.DORMANKEYLESSREMOTES.COM AND CLICK THE "PROGRAMMING INSTRUCTIONS BY MAKE" LINK FOR A STEP BY STEP VIDEO

To program a new transmitter, it is necessary to program the transmitter's 8 digit code into the vehicle. A label with an eight- digit number located on the outside of the Dorman remote. (Original remotes will have this code on the circuit board)

1. Sit in the driver's seat; close all doors and the rear gate or trunk
2. Open and close the driver's door one time.

Within 45 seconds

3. Open and close the driver's door once
4. Turn the ignition key from LOCK to ON 10 times within 15 seconds.
5. A chime will sound once, a buzzer will continue to sound and the interior light will continue to flash until the transmitter codes are completely registered.

****If you do not perform the steps above within 45 seconds an error will occur and neither a chime nor the buzzer will sound and the interior lamp will not flash. In this event, start all over again.

Within 45 seconds

6. Open and close the driver's door once within 15 seconds and an electronic tone will sound for 30 seconds. If you do not perform the operations within 15 seconds an error will occur and the electronic tone will not sound. In this event, perform the registration steps again beginning with # 3 above.

7. Before the chime stops, press the power door lock button to LOCK the same number of times as the leftmost digit of the transmitter code. **For example, press the LOCK button 8 times if the leftmost digit of the code is 8.**

8. When you have finished entering the number, push to UNLOCK side within five seconds

9. Repeat steps 7 through 8 for all digits of the transmitter code going from left to right.

10. When you are finished, within 5 seconds push that LOCK button to UNLOCK one time and then repeat steps 7 through 9 a second time with the same transmitter code

When you have entered the eighth digit the second time an electronic tone will sound for 30 seconds or locks will cycle, after the tone or cycle ends start the vehicle then turn off vehicle, remove key, open and close door and test remote.

FCC WARNING

Statement 15.19(a)(3): This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by Dorman Products Inc. could void the user's authority to operate the equipment.

IC WARNING

The term IC before the Certification/Registration number only signifies that the Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.