


Appendix 6. User Manual

User ' s Manual

**PLASMA
DISPLAY**



 TV

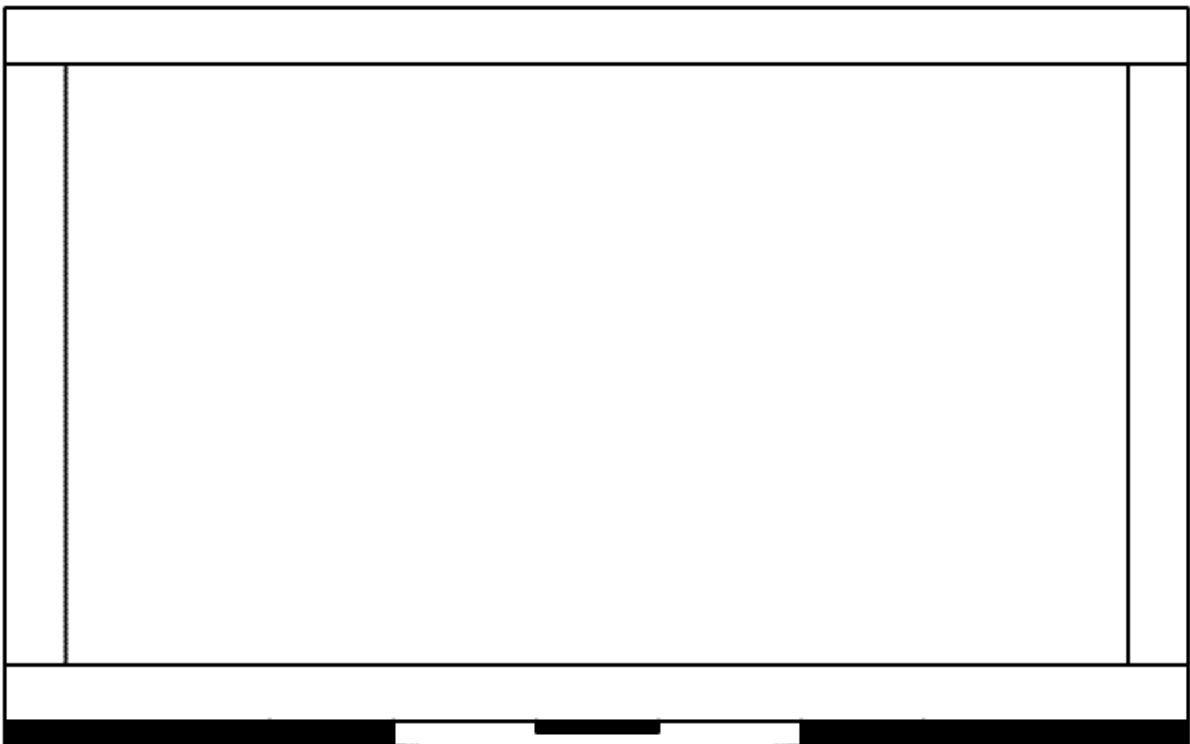MODEL : DPD-6000



It's the creative world of plasma display

Digital Device Inc.
60" PLASMA DISPLAY MONITOR DPD-6000

	<table border="1"><tr><td>WARNING</td></tr><tr><td>RISK OF ELECTRICAL SHOCK, DO NOT OPEN</td></tr></table>	WARNING	RISK OF ELECTRICAL SHOCK, DO NOT OPEN	
WARNING				
RISK OF ELECTRICAL SHOCK, DO NOT OPEN				
<p>CAUTION : TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER(OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>				



The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notices to User

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

One or more of the following statements may be applicable:

FCC Warning

CAUTION : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Manual Contents

Manual Contents		3
Features and Package Contents	- Features	4
	- Packages Contents	4
I/O Definitions		5
Front and Rear Controls	- Front	6
	- Rear Controls	6
Remote Control	- Remote Control Basic	7
	- Remote Control Details	8
Basic Operation	- AV Input/Output Terminal	10
	- TV	10
	- Video	10
	- S-VHS	11
	- SCART	11
	- Monitor Out Connection	12
	- Component Video	12
	- PC	13
	- External Speaker & Headphone Connection	13
TV Channel Memory	- Auto Channel Memory	14
	- Manual Channel Memory	15
Picture	- Picture Adjustment	16
	- Picture Size Adjustment	17
	- Picture Adjustment in PC Mode	18
	- Picture Size Adjustment in PC Mode	19
Audio	- Audio Mode Setting	20
	- Audio Adjustment	21
Picture in Picture	- Picture in Picture Mode Setting	22
	- Watching Picture in Picture	23
Video Signal Format	- Video Signal Format Setting	24
Color Temperature	- Color Temperature Setting	25
Specifications		26
Troubleshooting		27

Features and Package

Features

- 42" Diagonal Viewing Area
- Menu driven On Screen Display (OSD) for Brightness and Contrast, Sharpness, Hue and Saturation , NTSC/PAL, Channel, PIP(Picture in Picture), Aspect Ratio, Input Source, Audio, Audio Adjust, Language, Color Temperature
- Cable TV ready
- IR Remote control for all functions
- Built-in Television Tuner
- Zoom Feature (up to 500%)
- Freeze Picture Feature
- Rotate Picture Feature
- Headphone output (only sub sound)
- Speaker output : Left, Right, Center, Surround-L, Surround-R, Sub-Woofer
- Selectable Aspect Ratio (16:9, 4:3, User Adjusting Mode)
- PIP (Picture in Picture) Function
- Multiple Mounting Options : Wallmount or Stand
- Monitor Composite Video Output
- Large Viewing Angle (160 °)
- Seven (7) Possible Video Sources :
 - 1 PC
 - 2 External RCA A/V Inputs
 - 1 S-VHS Input
 - 1 SCART Input
 - 1 Component Video Input
 - 1 TV

Package Contents

- 42" Plasma TV
- User's Manual
- Full function Remote Control
- A set of three AAA Batteries for Remote Control
- AV Cord
- AC Power Cord

I/O Definitions

Front Panel Controls

- Main Power ON/OFF
- Power ON/OFF
- Channel UP
- Channel DOWN
- Volume UP
- Volume DOWN
- AV

 
Rear Unit I/O's

- AC Power Input
- F-Type (NTSC) or Din -Type (PAL) Connector for Antenna Input
- Monitor Composite Video Output
- Monitor Line Level Audio Output
- S-VHS Input
- Composite Video Input (2)
- Line Level Audio Input (2)
- SCART Input/Output
- DVD Component Video Input
- DVD Line Level Audio Input
- PC D-sub Connector Input
- PC Headphone Audio Input
- Headphone Audio Output
- Speaker Output : Left, Right, Center, Surround-L, Surround-R,


Sub-woofer

Front and Rear Controls

Front

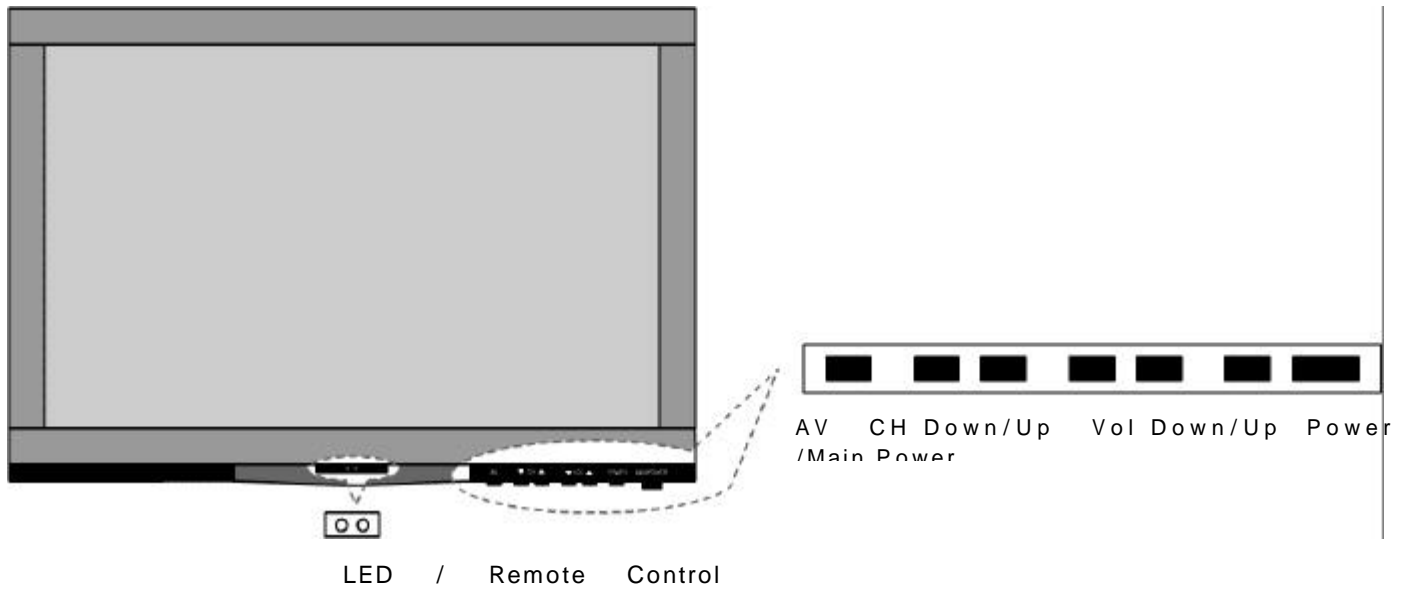

Rear Controls

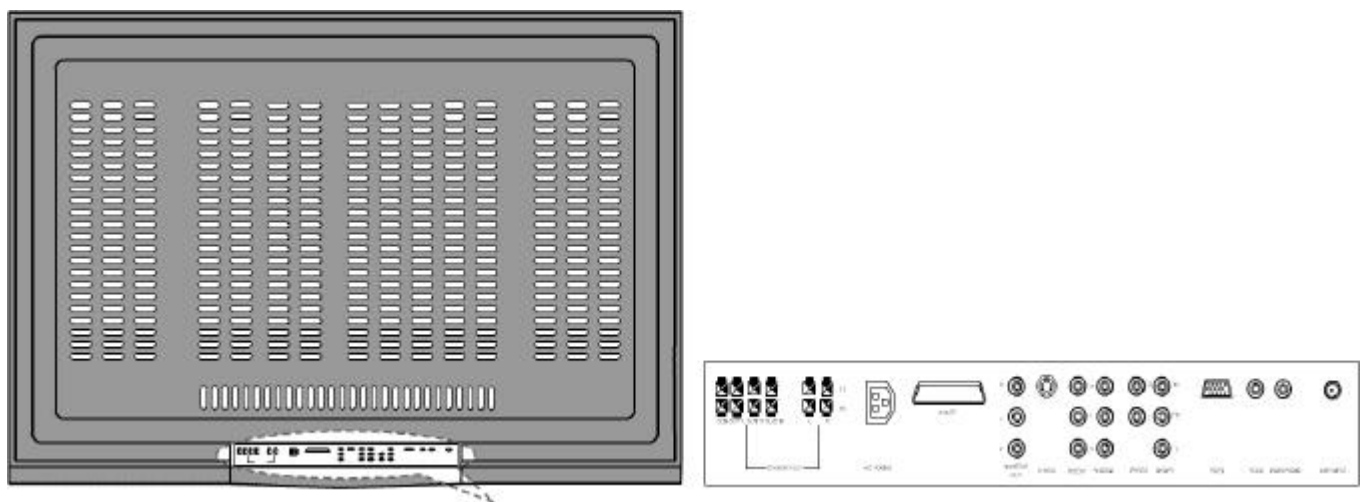 

AV Input/Output Terminal

The recessed AV input/output terminals allow the user to have the option of using the mounting stand or wall mounting the 42" Plasma Television. The television itself is only 95mm wide.

Remote Control

Remote Control Basic

AV Buttons

(PC / VIDEO1 / VIDEO2 / VIDEO3 / TV)

Use this button for signal

CH/VOL BUTTONS

These buttons are used to adjust the channel selected and the volume level.

Menu Button

 
The center button is used to pull up the menu screen. The surrounding buttons are used to make adjustments to the menu item selected. (ex. Picture, Sound and PIP adjustments)

POWER

Pressing this button turns the television ON and OFF.

Number Buttons

Used to enter channels selected.

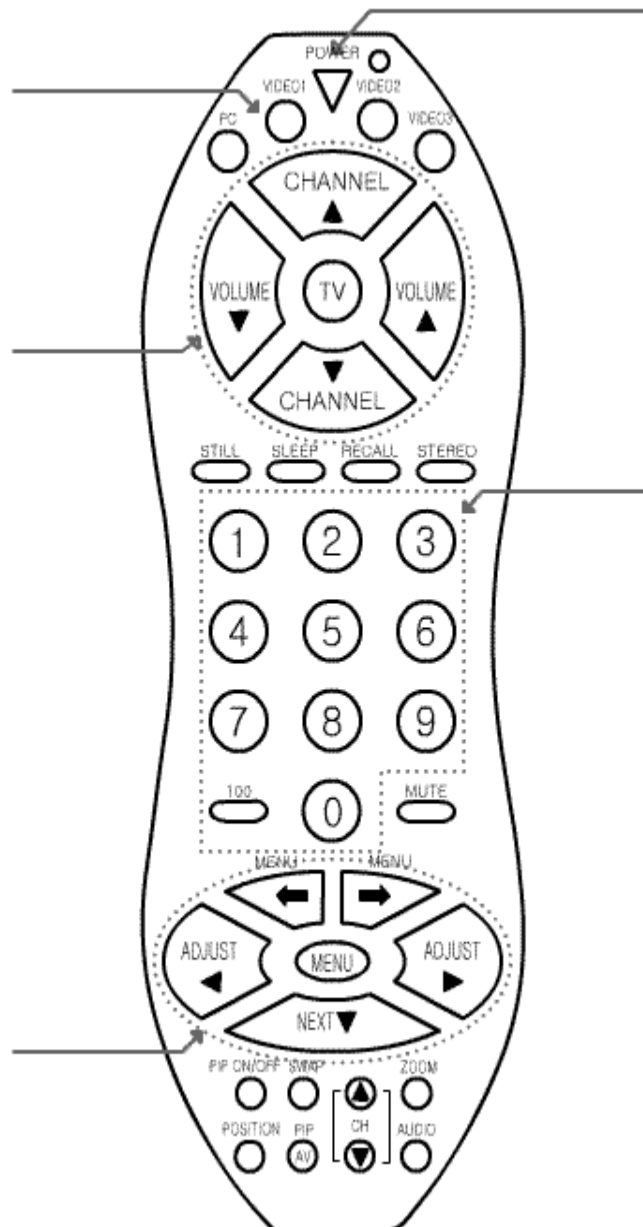

Remote Control Details

STILL

Pressing this button will stop/freeze the picture.

SLEEP

 
This button allows the user to set the sleep timer.

RECALL

This button will allow the user to view the setting status.

STEREO

Allows MONO, STEREO or SAP mode selection.

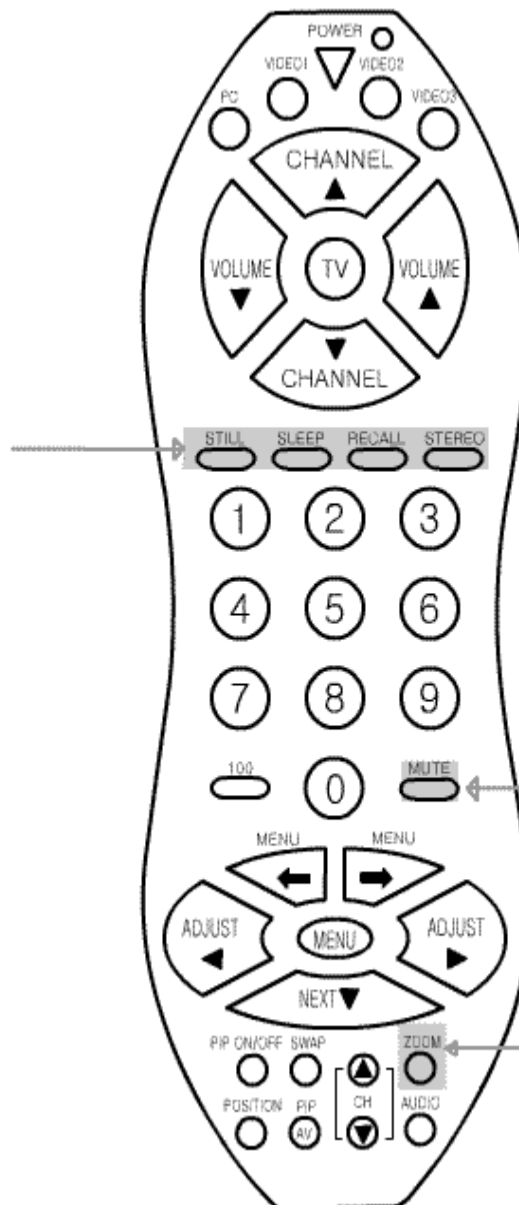


MUTE

This button mutes the televisions

ZOOM

Pressing the up and down buttons allows the user to zoom in or out the picture.

 Remote Control

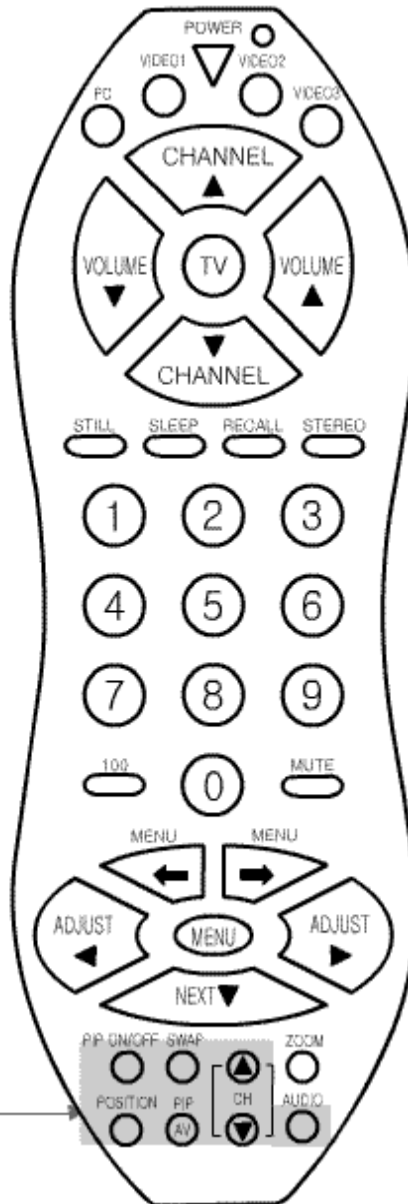

PIP ON/OFF

Pressing this button toggles picture in picture on and off.

SWAP

This button allows the user to swap the picture in picture for picture on the main screen.

POS

This button switches the screen location of the picture in picture viewing screen. There are four possible screen locations for the picture in picture.

CH /

Pressing this button up or down allows channel selection of the picture in picture.

PIP AV

 
This button switches the mode selection of the picture in picture viewing screen.

AUDIO



This button switches the Speaker Out of picture in picture Mode.

Basic Operation

1. AV Input/Output Terminal


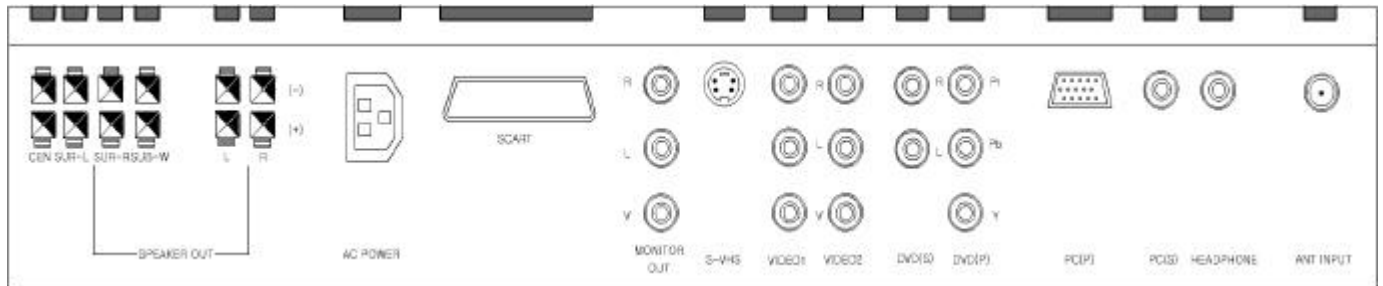


  2. TV

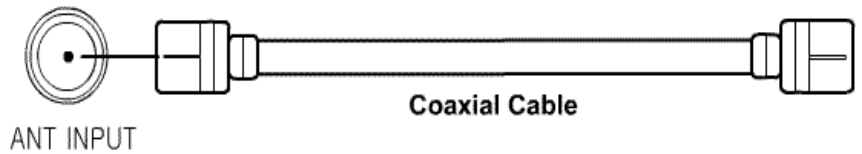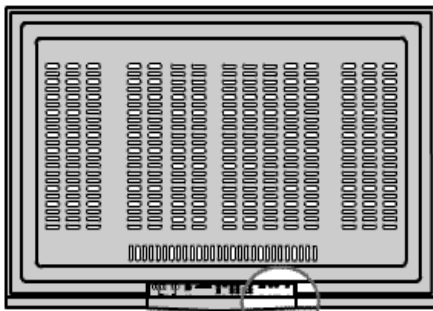

1. Connect as the shown drawing.
2. Power on.
3. Press the [TV] button.

  
3. VIDEO

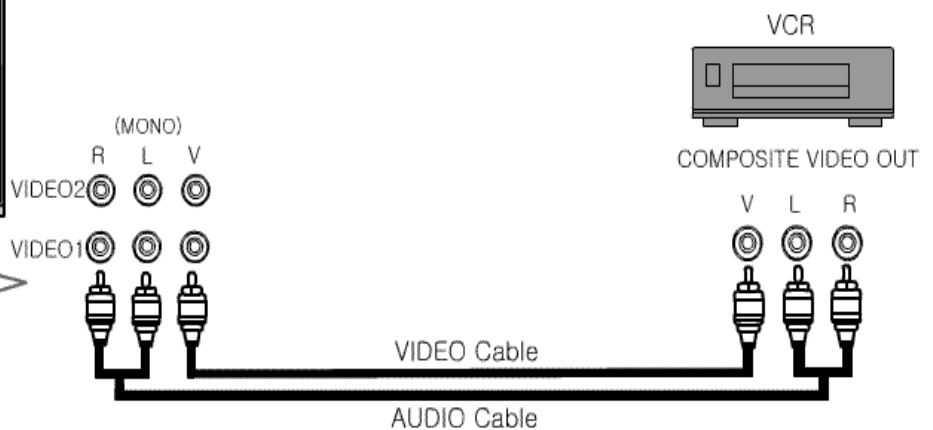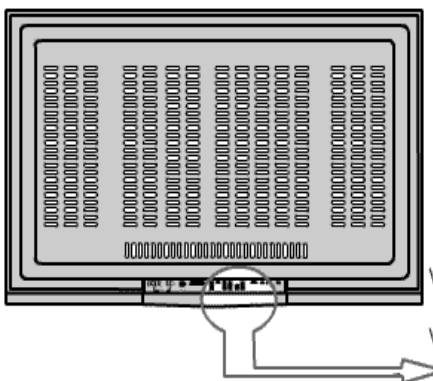

1. Connect as the shown drawing.
2. Power on.
3. Press the [VIDEO1] or [VIDEO2] button.

Basic Operation

 4. S-VHS

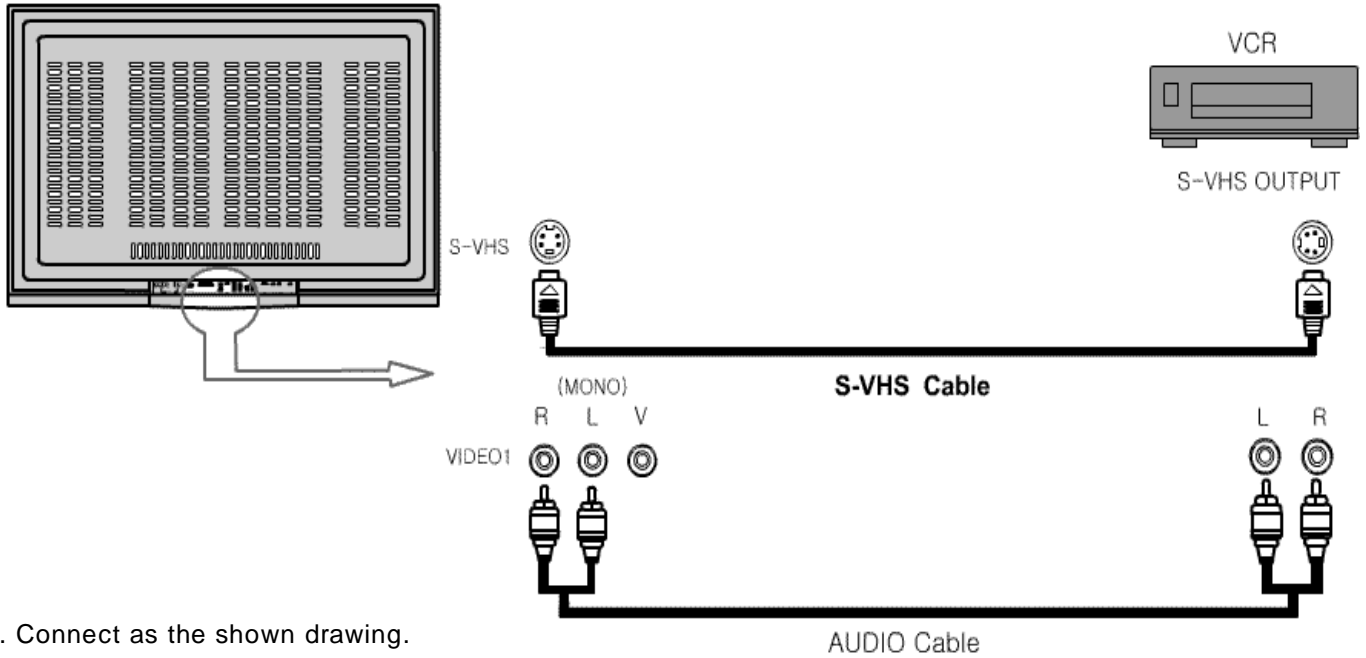


1. Connect as the shown drawing.
2. Power on.
3. Press the [VIDEO1] button.

<Caution> Audio input must be connected with [Video1].

In the case when all input sources of S-VHS and Video1 Port are occupied, S-VHS input Sources display preceding to Video1 Port.

 5. SCART Connection

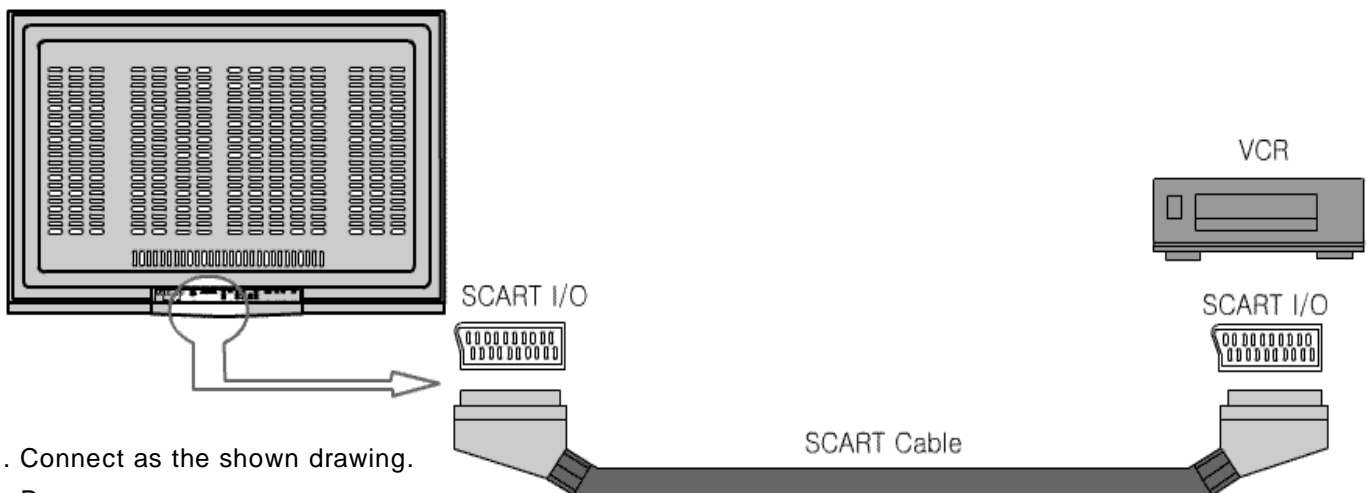


1. Connect as the shown drawing.
2. Power on.
3. Press the [VIDEO2] button.

<Caution> In the case when all input sources of SCART and Video2 Port are occupied, SCART input Sources display preceding to Video2 Port.


Basic Operation

 6. MONITOR OUT Connection

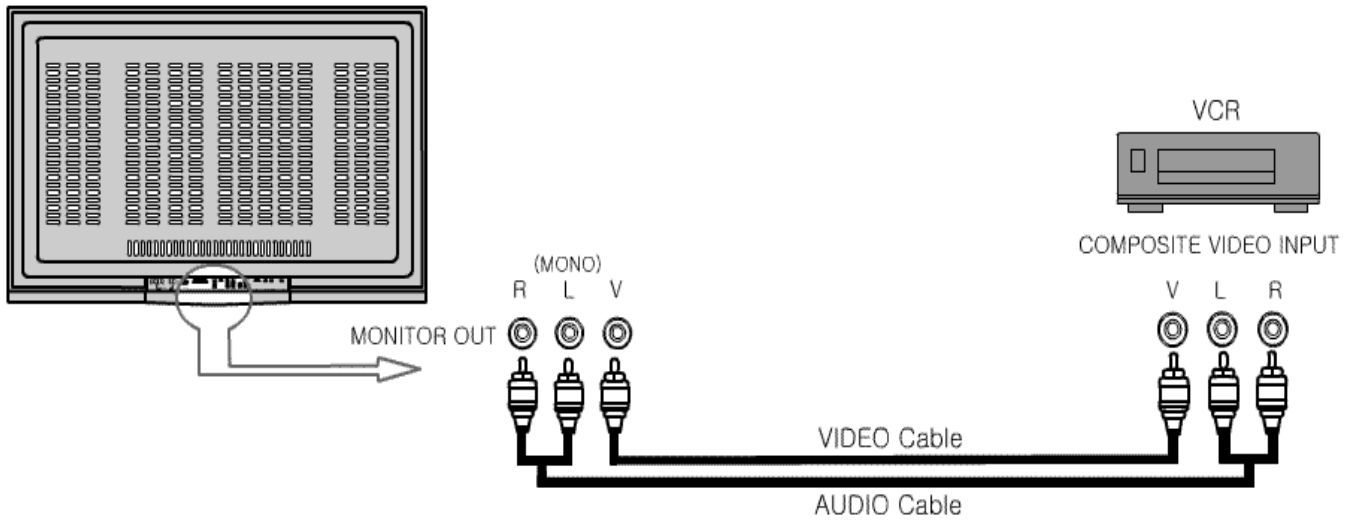

<Caution> Monitor out is only applied to [TV], [VIDEO1], [VIDEO2].

 
7. COMPONENT Video (ex. DVD, DTV Set-top Box)

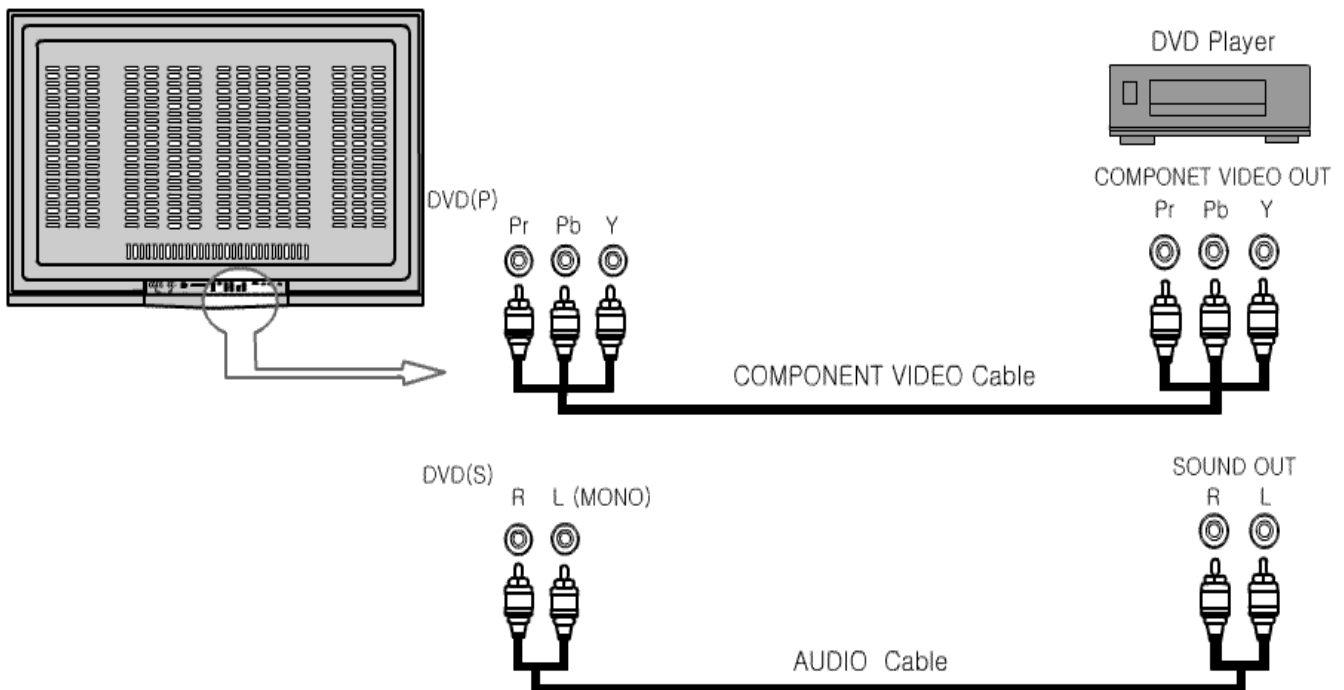

1. Connect as the shown drawing.
2. Power on.
3. Press the [VIDEO3] button.


Basic Operation

 8. PC

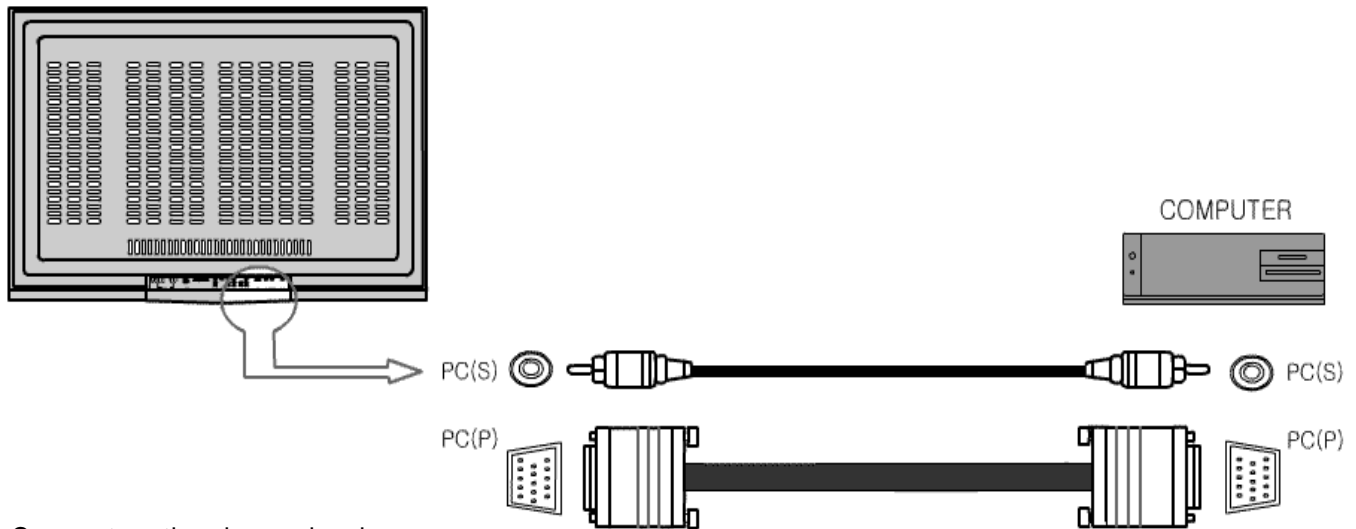

1. Connect as the shown drawing.
2. Power on.
3. Press the [PC] button.

 9. External Speaker & Headphone Connection

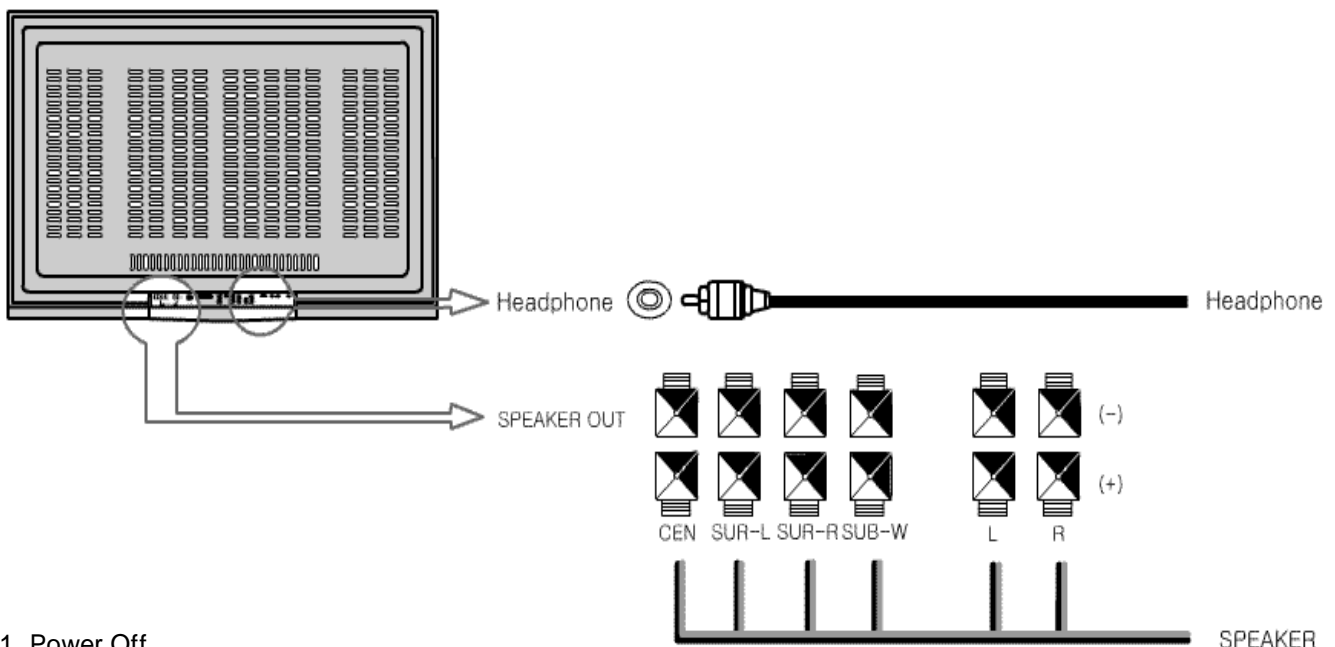


1. Power Off.
 2. Connect as the shown drawing.
 3. Power on.
 4. Adjusting Audio setting.
- <Caution> Headphone outputs Sub-Signal Sounds.

TV Channel Memory



Auto Channel Memory

Follow these steps for setting the Channel Memory automatically:

 - ① Press the [MENU] button.
- ② Select [Channel] by the [←]/[→] buttons.
- ③ Select [Status] by pressing the [NEXT] button.
- ④ Select TV signal input mode by pressing the [ADJUST] button.
- ⑤ Select [Auto Channel] by pressing the [NEXT] button.
- ⑥ Select [ON] by pressing the [ADJUST] buttons.
- ⑦ Press the [MENU] button to stop the auto channel memory.

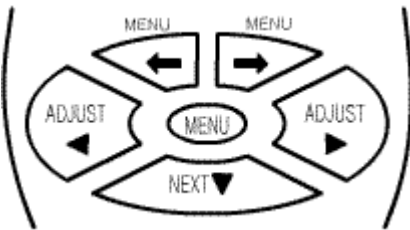

Highlighted choice will be in green.

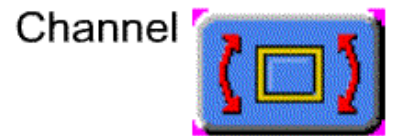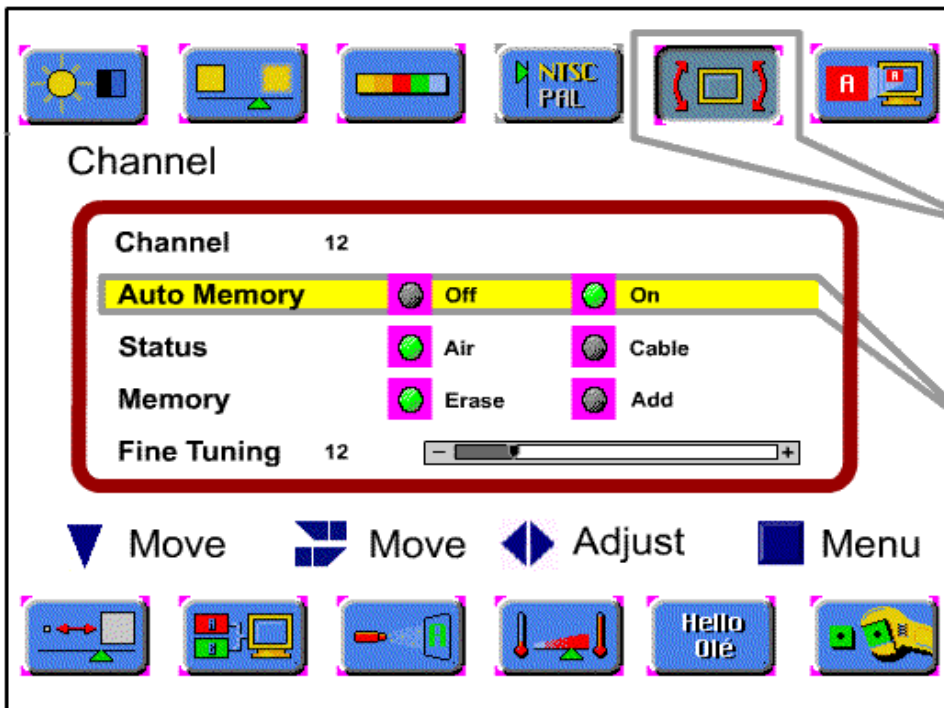  


Auto Memory

When Auto memory is on, it will scan CH 2 - 69 on the Air setting and CH 1 - 125 on the Cable setting.

TV Channel Memory


Manual Channel Memory

 Follow these steps to manually set the Channel Memory :

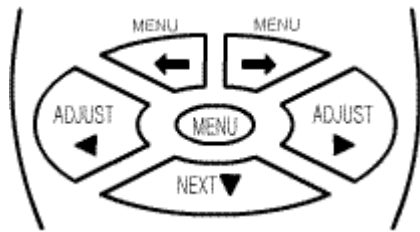

- ① Select the channel by pressing the number button(s).
- ② Press the [MENU] button.
- ③ Select [Channel] by the [←]/[→] buttons.
- ④ Select [Fine Tuning] mode by using the [NEXT] button.
- ⑤ Press the [ADJUST] button for the tuning adjustment.
- ⑥ Select [Memory] by using the [NEXT] button.
- ⑦ Select [Erase] or [Add] by pressing the [ADJUST] buttons.
- ⑧ Press the [MENU] button to exit the Channel Memory setting.

 Highlighted choice will be in green.

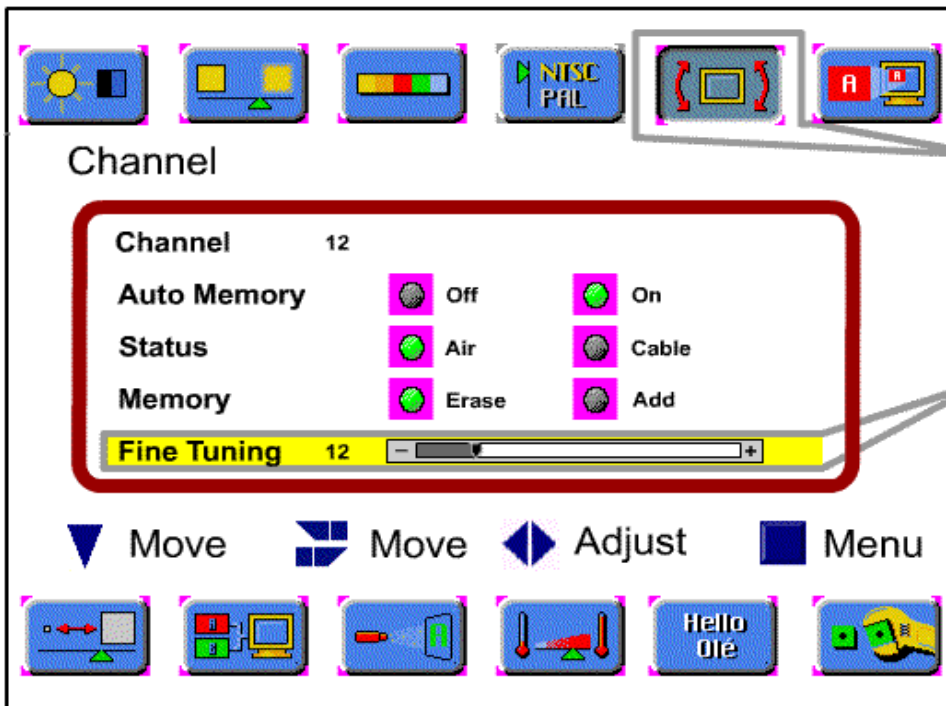


Fine Tuning
 The [ADJUST] button on the remote control will move the slide adjustment of the fine tuning bar positively or negatively.

Picture

Picture Adjustment

 
Follow these steps to adjust the picture :

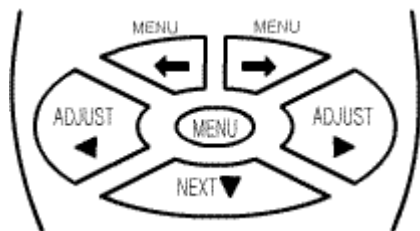


- ① Press the [MENU] button.
- ② Select the desired Mode by using the [←]/[→] buttons.
- ③ Move to the desired Mode by pressing the [NEXT] button.
- ④ Press the [ADJUST] button for adjusting the picture
- ⑤ Press the [MENU] button to exit the adjustment menu.

Highlighted choice will be in green.


 
Brightness and Contrast

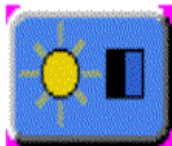

Sharpness

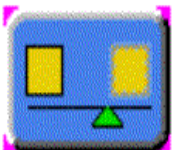 


Hue and Saturation

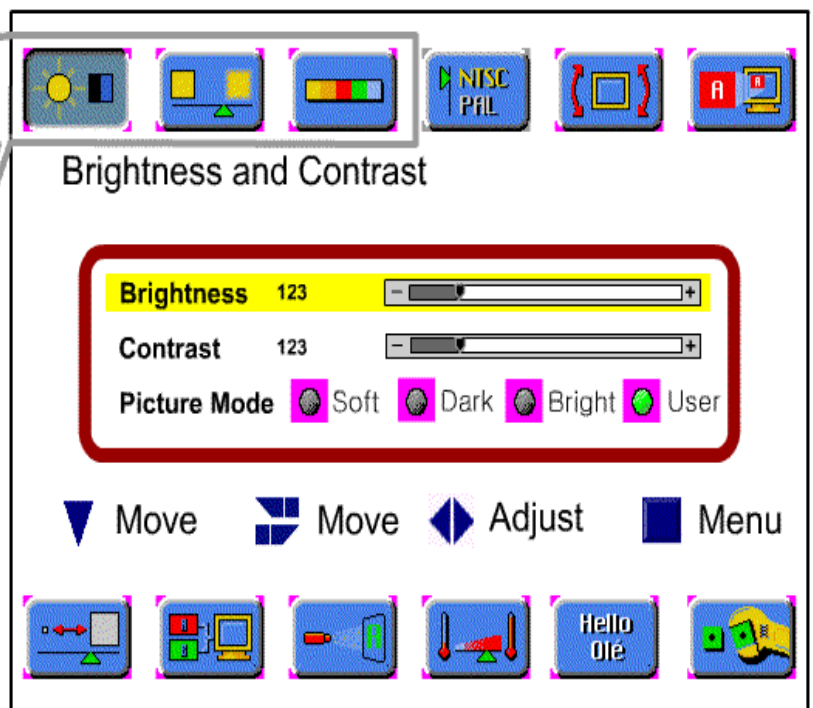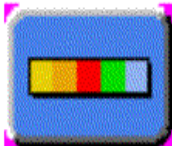  

Picture


Picture Size Adjustment

 Follow these steps to adjust the picture size :

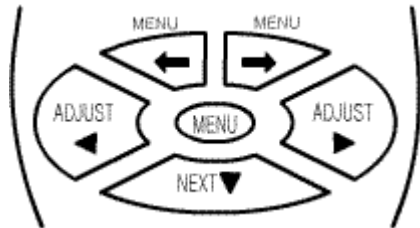


- ① Press the [MENU] button.
- ② Select the Aspect Ratio by using the [←]/[→] buttons.
- ③ Move to the desired Mode by pressing the [NEXT] button.
- ④ Press the [ADJUST] button to adjust the picture size ratio.
- ⑤ Press the [MENU] button to exit Picture Size Adjustment.

 
Highlighted choice will be in green.

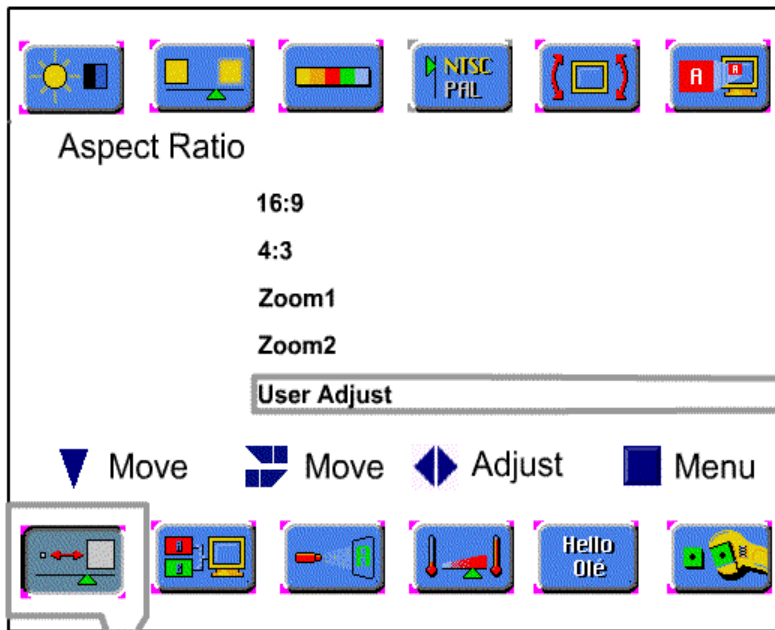

At User Adjusting Setting

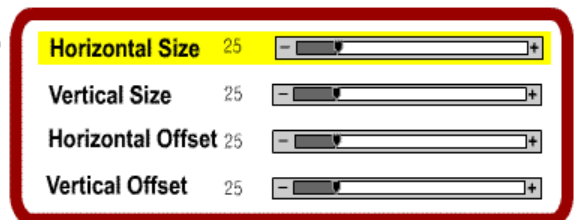 

Aspectio Ratio

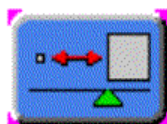 

[ZOOM +] / [ZOOM -] Button

 
: Using the [ZOOM] button on the remote controller, you can expand the picture size 0 up to 500%.

Picture

Picture Adjustment in PC Mode

Follow these steps to adjust the picture in PC Mode :

① Press the [MENU] button.

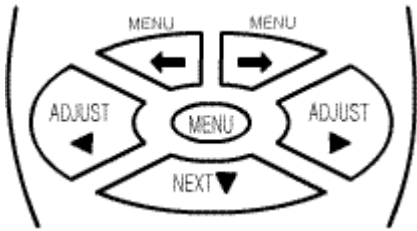

② Select the desired Mode by using the [←]/[→] buttons.

 
③ Move to the desired Mode by pressing the [NEXT] button.

④ Press the [ADJUST] button for adjusting the picture in PC M


⑤ Press the [MENU] button to exit the adjustment menu.

Highlighted choice will be in green.


Brightness and Contrast

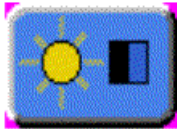

Sharpness

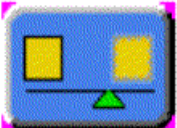 



Frequency and Phase

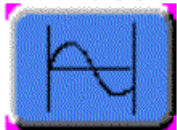 

Status



  Position

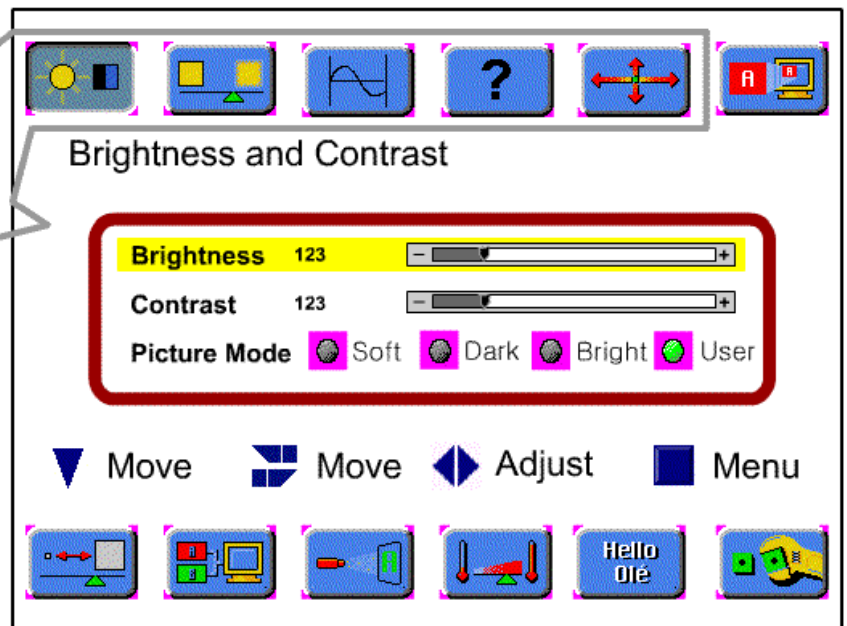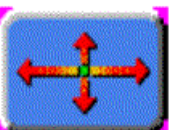


Picture


Picture Size Adjustment in PC Mode

Follow these steps for setting the Picture Size Adjustment of PC Mode.

 - ① Press the [MENU] button.
- ② Select the Normal Scaling Modes by using the [←]/[→] buttons.
- ③ Move to the desired mode by pressing the [NEXT] button.
- ④ Press the [ADJUST] button to select the proper mode.
- ⑤ Press the [MENU] button to exit the adjustment menu.

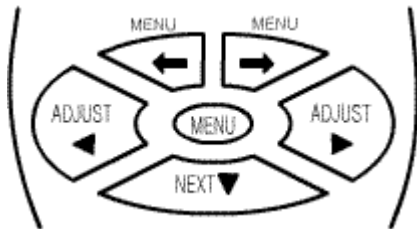

Highlighted choice will be in green.

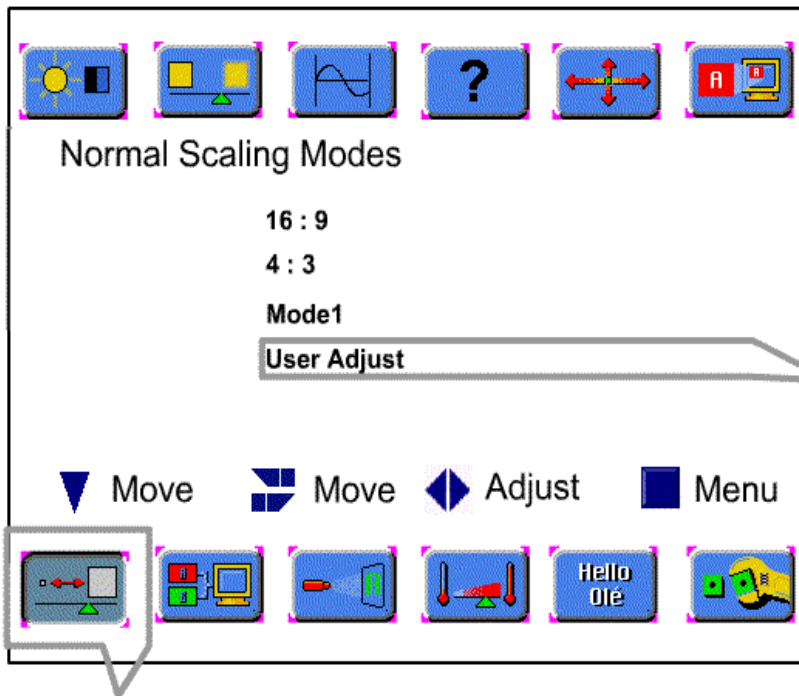


Normal Scaling Modes

16 : 9
 4 : 3
 Mode1
 User Adjust


▼ Move ▢ Move ◀ Adjust ■ Menu

At User Adjusting Setting

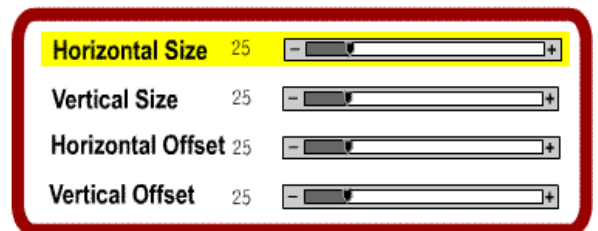

Horizontal Size	25	[-] [0] [100] [+]
Vertical Size	25	[-] [0] [100] [+]
Horizontal Offset	25	[-] [0] [100] [+]
Vertical Offset	25	[-] [0] [100] [+]

 Normal Scaling Modes

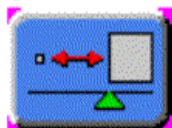


[ZOOM +] / [ZOOM -] Button

: Using the [ZOOM] button on the remote controller, you can expand the picture size 0 up to 500%.

Audio


Audio Mode Setting

 Follow these steps for setting Sound Mode :

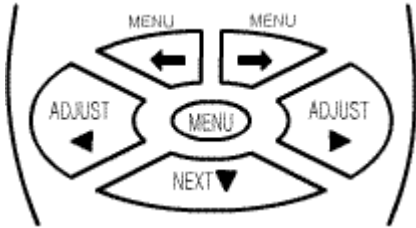


- ① Press the [MENU] button.
- ② Select the Audio by using the [←]/[→] buttons.
- ③ Move to the desired Mode by pressing the [NEXT] button.
- ④ Press the [ADJUST] button to make the adjustment for Sound
- ⑤ Press the [MENU] button to exit the adjustment menu.

 
Highlighted choice will be in green.

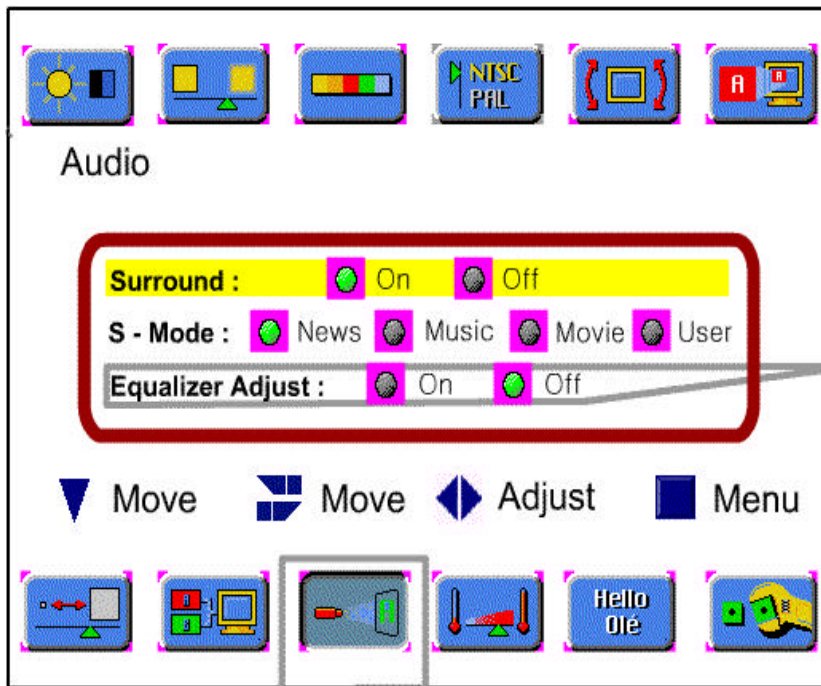

At Equalizer Adjust On
 Equalizer

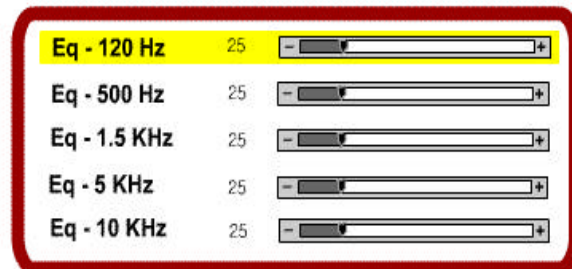 


Audio

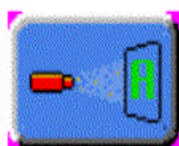 

Audio

Audio Adjustment


 
Follow these steps to adjust the Sound :

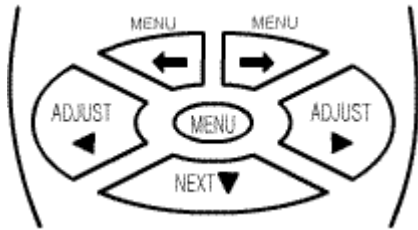

- ① Press the MENU button.
- ② Select the Audio Adjust by using the [←]/[→] buttons.
- ③ Move to the desired Mode by pressing the [NEXT] button.
- ④ Press the [ADJUST] button to make the adjustment for Sound
- ⑤ Press the [MENU] button to exit the adjustment menu.

Highlighted choice will be in green.

 Audio Adjust

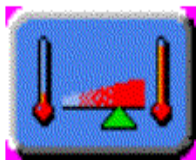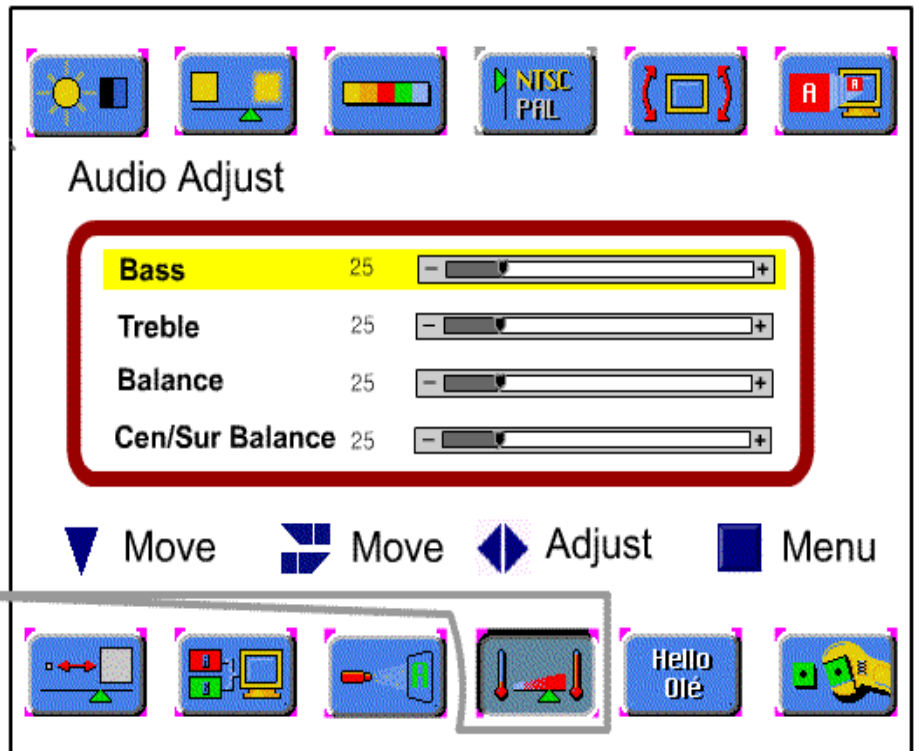
Option	Value	Slider
Bass	25	[Slider]
Treble	25	[Slider]
Balance	25	[Slider]
Cen/Sur Balance	25	[Slider]

▼ Move ▲ Move ◀ Adjust ■ Menu

- BASS : Changes the level of low frequency sound.
 TREBLE : Changes the level of high frequency sound
 BALANCE : Changes the balance of the left and right channels.
 Cen/Sur BALANCE : Changes the balance of the center and surround channels.

Picture in Picture

 Picture in Picture Mode Setting

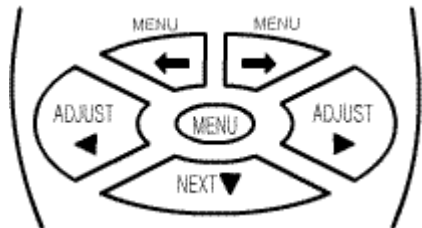


- ① Press the [MENU] button.
- ② Select Picture in Picture by using the [←]/[→] button.
- ③ Select PIP size mode by pressing the [NEXT] button.
- ④ Move to desired mode by pressing the [ADJUST] button.
- ⑤ Select PIP Source Mode by pressing the [NEXT] button.
- ⑥ Select PIP Source by pressing the ADJUST button.
- ⑦ Press the [MENU] button to exit the adjustment menu.

Follow these steps below to set Picture in Picture mode :

Picture in Picture

Highlighted choice will be in green.

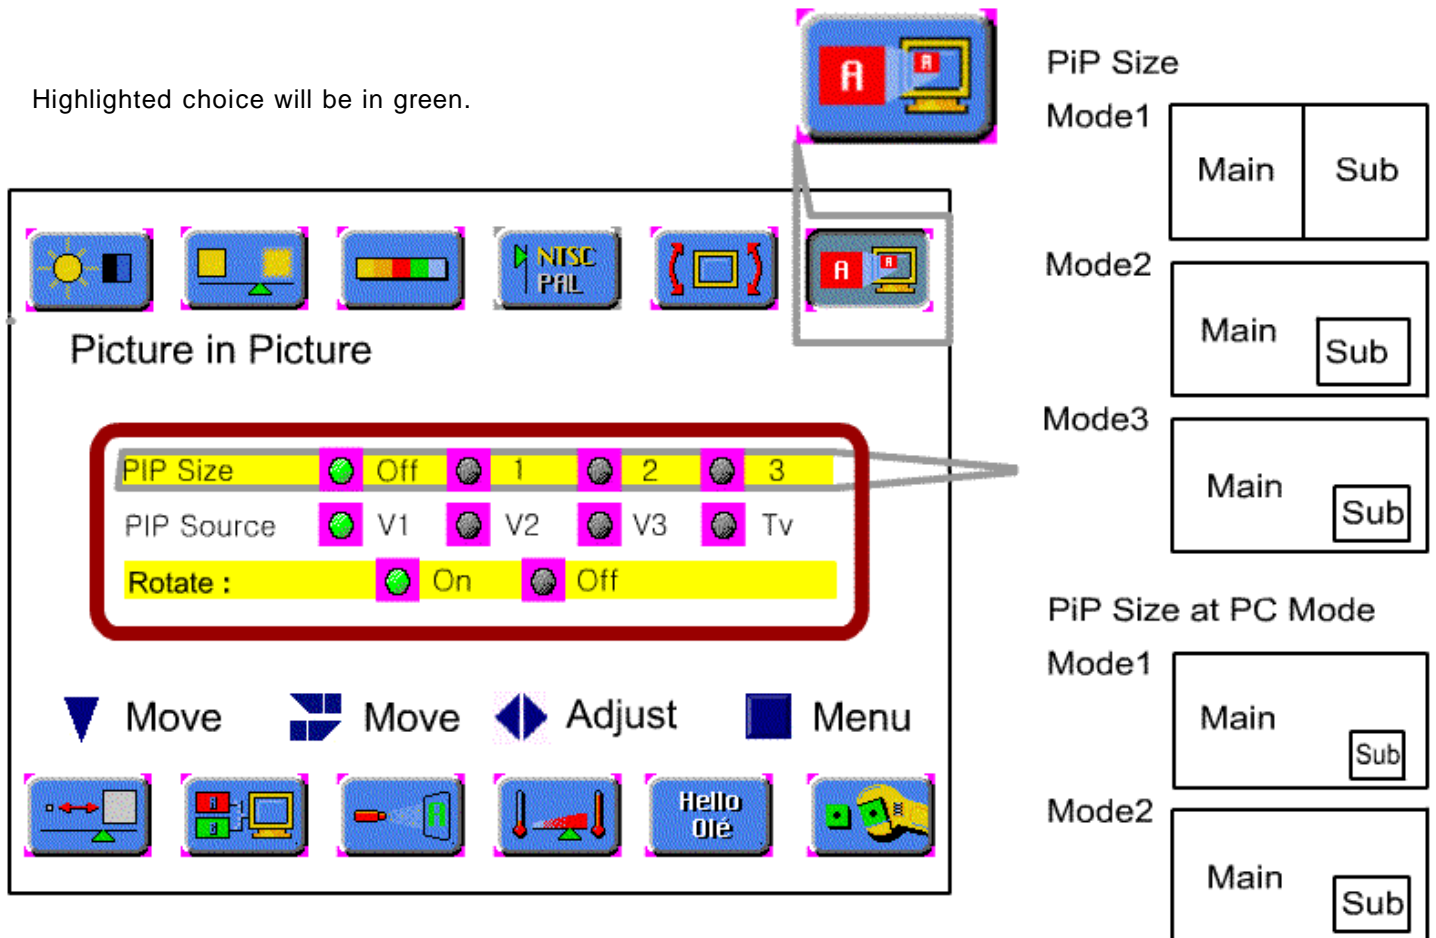

The screenshot shows the 'Picture in Picture' menu with the following settings:

- PIP Size: Off (radio buttons for 1, 2, 3)
- PIP Source: V1 (radio buttons for V2, V3, Tv)
- Rotate: On (radio button for Off)

Navigation options at the bottom include: Move (down arrow), Move (four-way arrow), Adjust (left arrow), and Menu (blue square).

On the right, three diagrams illustrate different PIP Size modes:

 
- Mode1:** Two separate boxes labeled 'Main' and 'Sub'.
- Mode2:** A large 'Main' box and a smaller 'Sub' box.
- Mode3:** A large 'Main' box and a very small 'Sub' box.






Below these, two more diagrams show 'PiP Size at PC Mode':

- Mode1:** A large 'Main' box and a small 'Sub' box.
- Mode2:** A large 'Main' box and a very small 'Sub' box.

Picture in Picture

Watching Picture in Picture

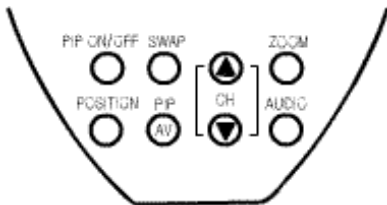

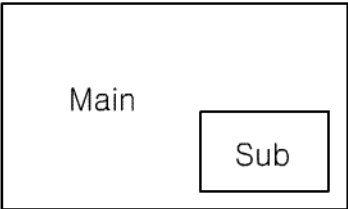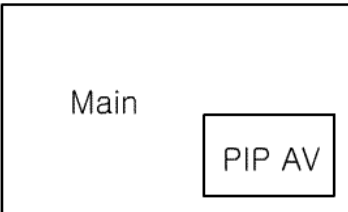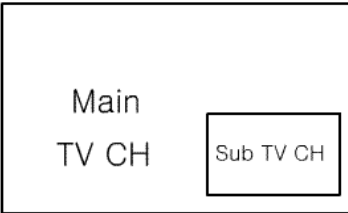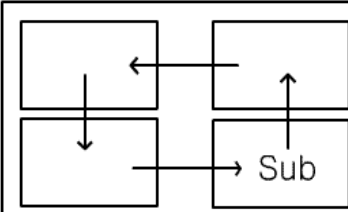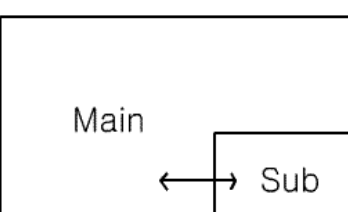Watching PIP	Press the [PIP ON/OFF] button.
	
Changing the Sub Picture to AV	Press the [PIP AV] button.
	
Changing the Sub Picture Channel	Press the [CH] button.
	
Changing the Sub Picture Position	Press the [POS] button.
	
Swapping Main for Sub picture	Press the [SWAP] button.
	

PIP at PC Mode

 
PC signal can be seen on the main picture but not on the sub picture. AT 800 × 600 mode, you can optimize PIP.

Video Signal Format

Video Signal Format Setting

Follow these steps for setting the Video Signal Format.

① Press the [MENU] button.

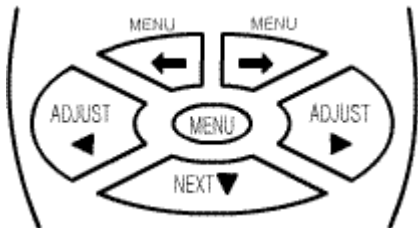


② Select the Video Mode by using the [←]/[→] buttons.

③ Move to the desired system by pressing the [NEXT] button.

④ Press the [ADJUST] button to select the desired system.

⑤ Press the [MENU] button to exit the adjustment menu.

 Highlighted choice will be in green.

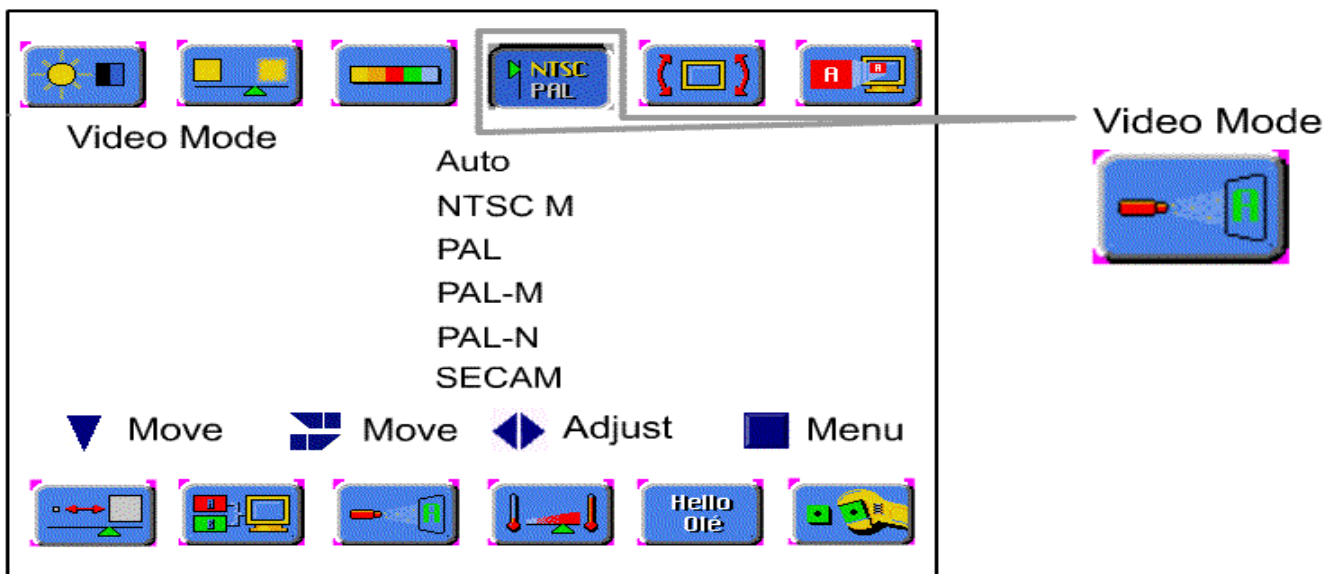

Auto : The video signals are automatically detected and the format is set accordingly.

NTSC M : This is the standard format used mainly in the United States and Korea.

PAL : This is the standard format used mainly in the United Kingdom and Germany.

PAL -M : This is the standard format used mainly in Brazil.

 
PAL -N : This is the standard format used mainly in Argentina.

SECAM : This is the standard format used mainly in France and Russia.

Color Temperature


Color Temperature Setting

Follow these steps for setting the Color Temperature.

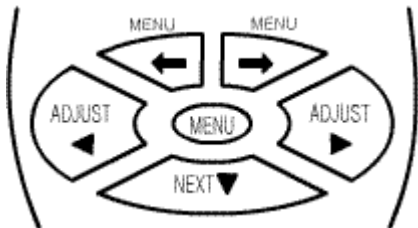

- ① Press the [MENU] button.
- ② Select the Color Temperature by using the [←]/[→] buttons.
- ③ Move to the desired mode by pressing the [NEXT] button.
- ④ Press the [ADJUST] button to select the desired mode.
- ⑤ Press the [MENU] button to exit the adjustment menu.

 Highlighted choice will be in green.

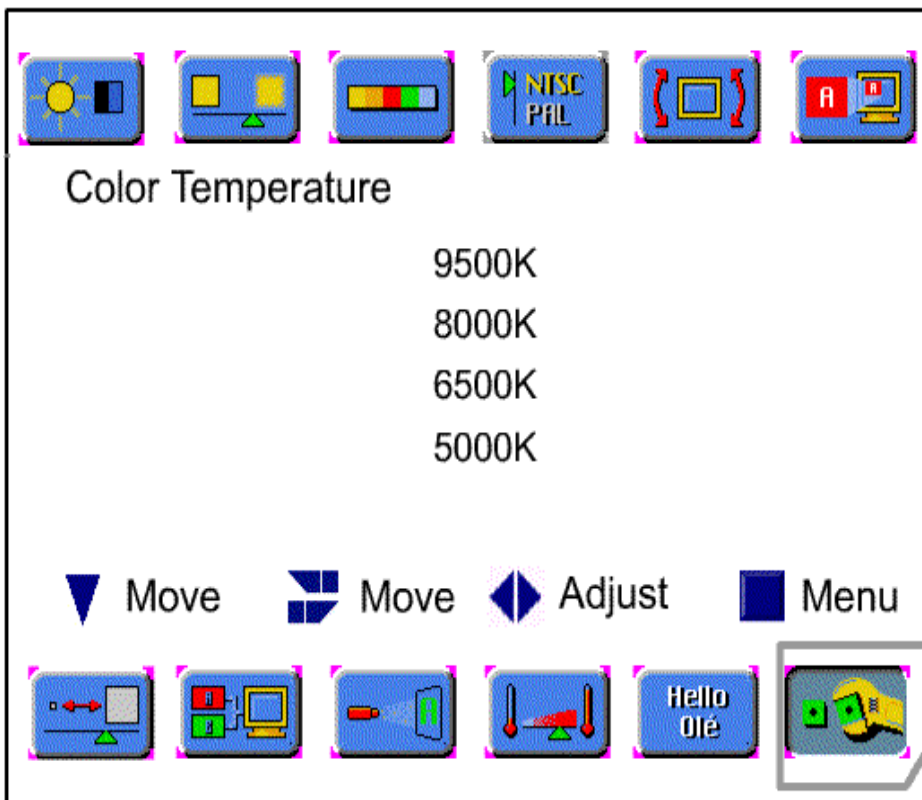

Color Temperature



Color Temperature : The higher temperature the coolest image looks like.
The lower temperature the warmest image looks like.

Specifications

Power Source	AC100V~240V, 50/60Hz	
Power Consumption	< 350W (Typical)	
Display Panel	Screen Size	1317.12(H) x 743.04(W)
	Number of Pixels	1280(H) x 720(V)
	Brightness	500 cd/m ²
	Contrast Ratio	500:1
	Displayable Colors	16,770,000 Colors
	Viewing Angle	Over 160 degrees
Display Mode	Input Signal	TV, Video, S-VHS, Component, PC
	RF Input System	NTSC(F-Type) or PAL(DIN-Type)
	Video Input System	NTSC, PAL, SECAM
Input/Output	Input	PC (P), PC(S) Video1(V, L, R)/S-VHS Video2 (V, L, R)/SCART Video3 [Component (Y, Pb, Pr), Sound (L, R)] RF IN (NTSC F-TYPE, PAL DIN-TYPE)
	Output	Monitor Out (V, L, R)/ SCART Speaker Out (L,R,Center,Surround L/R,Sub-W), Headphone
Weight	Without Stand	62 Kg
Dimensions	Without Stand	1490(W) x 919(H) x 100mm(D)
Operation Condition	Temperature	0 ° C 40 ° C
	Humidity	20% 80%
Storage Temperature	-25 ° C 60 ° C	

Troubleshooting

Symptom	Cause	Possible Solution
No Power	Power to the TV is not plugged in.	Check source of power to the TV.
Unit will not respond to remote control	Sensor is blocked. Batteries in remote control are weak.	Clear path for sensors. Clean sensor lens. Replace batteries.
No signal is displayed	Video source incorrect.	Check video source connection. Make sure TV is set to correct video source.
Picture scrolls or is fuzzy	Antenna type or location	Change antenna. Try antenna in different location.