
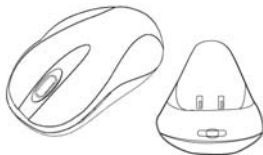


2.4GHz Wireless Mouse

USER'S GUIDE



Ver.:1.00

Model Name : MWL

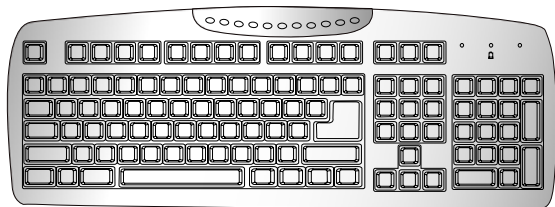


Mouse Buttons

1. Left button
2. Right button
3. Scrolling Wheel
4. Forward
5. Backward
6. Red LED Indicator
7. **Connect Button**
8. Green LED Indicator
9. Recharge Point

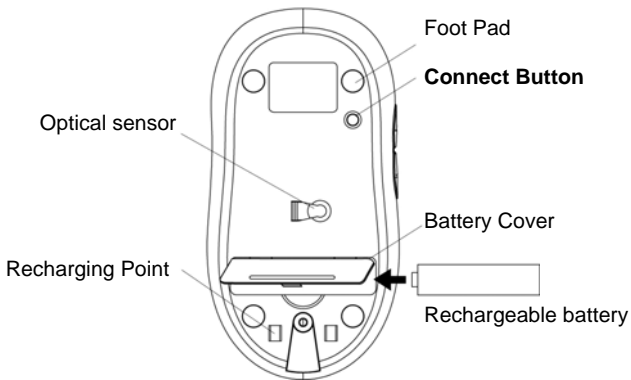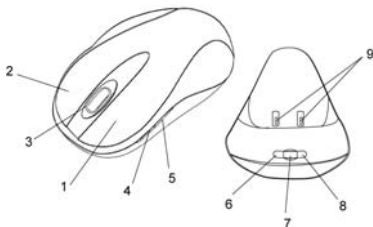

11 multi-media keys

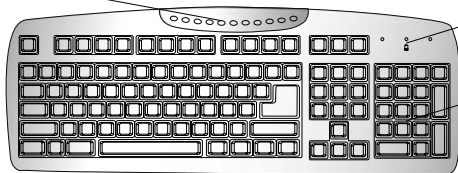


Low Battery Indicator

107 Standard-Keys


Connect Button

Battery Cover

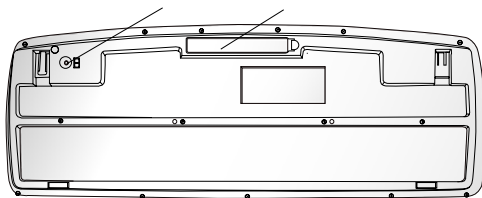


Setup the Connection between the Receiver and the Mouse, Keyboard.

1. Put the batteries into the keyboard, and put the rechargeable battery into the mouse.
2. Connect the receiver charger to your computer via a USB cable.

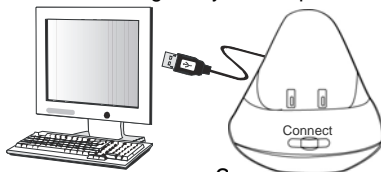




2

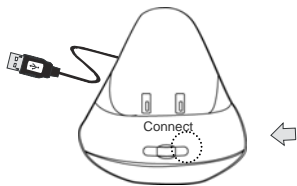
3. Move the mouse & push the key on keyboard, if **there is not action** from mouse or Keyboard, push the connect button under the receiver, Then push the connect button on the mouse & keyboard. If the cursor still doesn't move after 30 seconds, please try the steps again.





When connecting

-  GREEN LED FLASH (0.5 sec. Regularly)
Searching the channel
-  GREEN LED ON
Connected OK
-  GREEN LED FLASH (if any action)

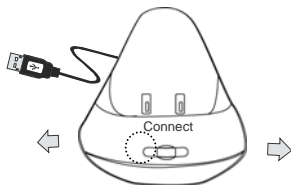Recharging



When charging

-  RED LED ON
Recharging
-  RED LED OFF
Finished charging

Federal Communication Commission

Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.