


**Ready,  
Set...  
GROW!**

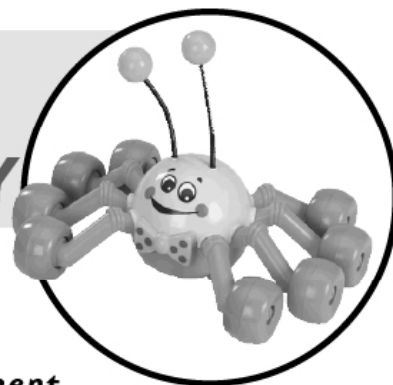

# WEBSTER RADIO CONTROLLED TOY

## Instructions for Use




### 1. On/Off Switch

There is an on/off switch at the back of the Webster unit. To save batteries, turn Webster off when finished playing.

### 2. Hand Controller

Webster will move and spin according to the buttons on the radio controller. One touch for spinning, and one touch for forward motion.

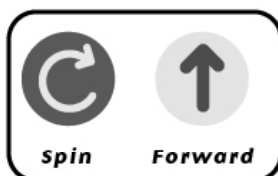

### 3. Battery Replacement for Hand Controller

To replace batteries, remove plate on back of controller with Phillips screwdriver. Requires one 9V battery (not included).

### 4. Battery Replacement for Webster

To replace batteries, remove bottom of Webster unit with Phillips screwdriver. Requires 3 "AA" batteries (not included).

Batteries are to be installed by an adult only.  
Do not mix old and new batteries  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries  
Do not use rechargeable batteries  
Non-rechargeable batteries are not to be recharged.  
Remove batteries when storing item for long periods of time.

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**