

**ProntoPro NG**  
**TSU7000**

**Home Theater Control**  
**Panel**  
**User Guide**

<b>FCC Compliance.....</b>	<b>4</b>
<b>FCC Information for User .....</b>	<b>4</b>
<b>@@@CE Compliance.....</b>	<b>4</b>
<b>Taking a First Look.....</b>	<b>5</b>
<b>ProntoPro NG: The Home Theater Control Panel.....</b>	<b>5</b>
The Device .....	5
The Touch Screen .....	6
The Docking Station .....	7
<b>What's New for ProntoPro Next Generation? .....</b>	<b>8</b>
<b>Before You Start.....</b>	<b>9</b>
<b>Placing the Battery Pack.....</b>	<b>9</b>
<b>Installing the Battery Pack .....</b>	<b>9</b>
<b>Charging the ProntoPro NG.....</b>	<b>10</b>
<b>Getting Started .....</b>	<b>11</b>
<b>Turning on ProntoPro NG.....</b>	<b>11</b>
<b>Setting Time and Date.....</b>	<b>11</b>
Changing the Time Format .....	11
Changing the Time.....	12
Changing the Date.....	12
Setting the Language.....	13
<b>Operating ProntoPro NG.....</b>	<b>14</b>
Device Overview.....	14
Page Overview .....	14
<b>Customizing ProntoPro NG .....</b>	<b>16</b>
<b>Using the Tools.....</b>	<b>16</b>
Defining the Brand for a Device .....	17
Learning Commands .....	19
Labeling Elements.....	20
Adding Devices.....	23
Deleting Elements .....	24
Moving Devices .....	24
<b>Adjusting the Settings .....</b>	<b>26</b>
Setting the Timeout of the LCD Screen.....	26
Setting the Brightness of the Backlight.....	27
Setting the Volume Level .....	27
Setting the Navigation for ProntoPro NG .....	27
Setting the Animation Mode .....	27
Calibrating the Touch Screen.....	28
<b>Using the Power Features .....</b>	<b>29</b>
<b>Creating and Editing Macros .....</b>	<b>29</b>
Creating a Macro.....	29
Editing a Macro.....	31
<b>Activating Timers .....</b>	<b>31</b>
<b>Creating and Editing Timers.....</b>	<b>32</b>
<b>Operating ProntoPro NG with the Cursor.....</b>	<b>37</b>
<b>Operating ProntoPro NG with RF.....</b>	<b>37</b>
Selecting RF to Operate your Devices .....	38
Selecting IR to Operate your Devices .....	39
<b>ProntoProEdit NG .....</b>	<b>40</b>

<b>FAQ</b> .....	<b>41</b>
<b>Troubleshooting</b> .....	<b>43</b>
General Problems .....	43
Customizing Problems .....	43
Memory Storage Problems .....	44
ProntoPro NG error messages.....	44
Connection to the PC.....	44
<b>Maintaining ProntoPro NG</b> .....	<b>45</b>
Important Notices.....	45
Cleaning ProntoPro NG.....	45
<b>List of Symbols</b> .....	<b>46</b>
<b>Specifications</b> .....	<b>48</b>
<b>Glossary</b> .....	<b>49</b>
<b>Index</b> .....	<b>52</b>
<b>Copyright</b> .....	<b>54</b>

---

# FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rule. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Information for User

### Caution

Changes or modifications made by the user not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## @@@CE Compliance

SBC RU980

Made in Belgium / Fabriqué en Belgique

CE0682 (!)

This device can be used in:							
AT	BE	DE	DK	GR	ES	FI	FR
IRE	IT	LU	NL	NO	PT	SE	UK

---

# Taking a First Look

## ProntoPro NG: The Home Theater Control Panel

ProntoPro NG is a Home Theater Control Panel that allows maximum flexibility and customization for even the most sophisticated home entertainment system. It can control almost any device that understands infrared (IR) remote control signals. Its intuitive interface makes it a perfect remote control for every user.

ProntoPro NG is easy to configure. It contains a huge universal database where IR codes are stored to control different brands for all kinds of video, audio devices and even home automation equipment. By default ProntoPro NG is set up to control Philips and Marantz devices. For other brands you simply choose the brands of your devices when you use ProntoPro NG for the first time.

Furthermore the ProntoPro NG is equipped with a color touch screen. This TFT-display supports 65536 colors so you can upload any color picture.

ProntoPro NG offers you some extra powerful features:

- You can create and edit macros, allowing you to send a series of commands with one single touch.
- You can set timers for certain actions to be carried out at predefined times, e.g switching on your lights or recording your favourite daily TV-show with your VCR.
- You can choose to have ProntoPro NG working with radio frequency (RF) signals to operate devices from a distance or from an adjacent room. To do this, you need an optional RF Extender that converts ProntoPro NG RF signals into IR signals.


With ProntoProEdit NG software you can create your own screens and define a personal look. ProntoProEdit NG's Online Help system (accessible via the 'Help' icon in ProntoProEdit NG) will guide you through the process. You can find ProntoProEdit NG on the included CD-ROM and on the Philips website [www.pronto.philips.com](http://www.pronto.philips.com). See "ProntoProEdit NG" on page 40 for more information.

## The Device


ProntoPro NG has several hard buttons. Most are freely programmable, some have a predefined function:

- The buttons on the left side of ProntoPro NG of the screen have predefined functions: Page up, Page down and Backlight
- The 4 firm keys below the touch screen are freely programmable. You can reprogram the function of these buttons and change the label on the touch screen.
- The cursor and the OK and Home buttons on the right side of the screen are programmed to operate devices (e.g. navigating through the on screen menu of your TV). With the Toggle button you can change the working of the cursor.  
The buttons on the right side of the screen are used to control the volume and channel: Channel up, Channel down, Mute, Volume up and Volume down.  
Although these buttons each have a predefined function, you can program them yourself. If you learn one of these buttons or assign a macro to it, its predefined function for that database will be permanently lost.

*Learning eye*

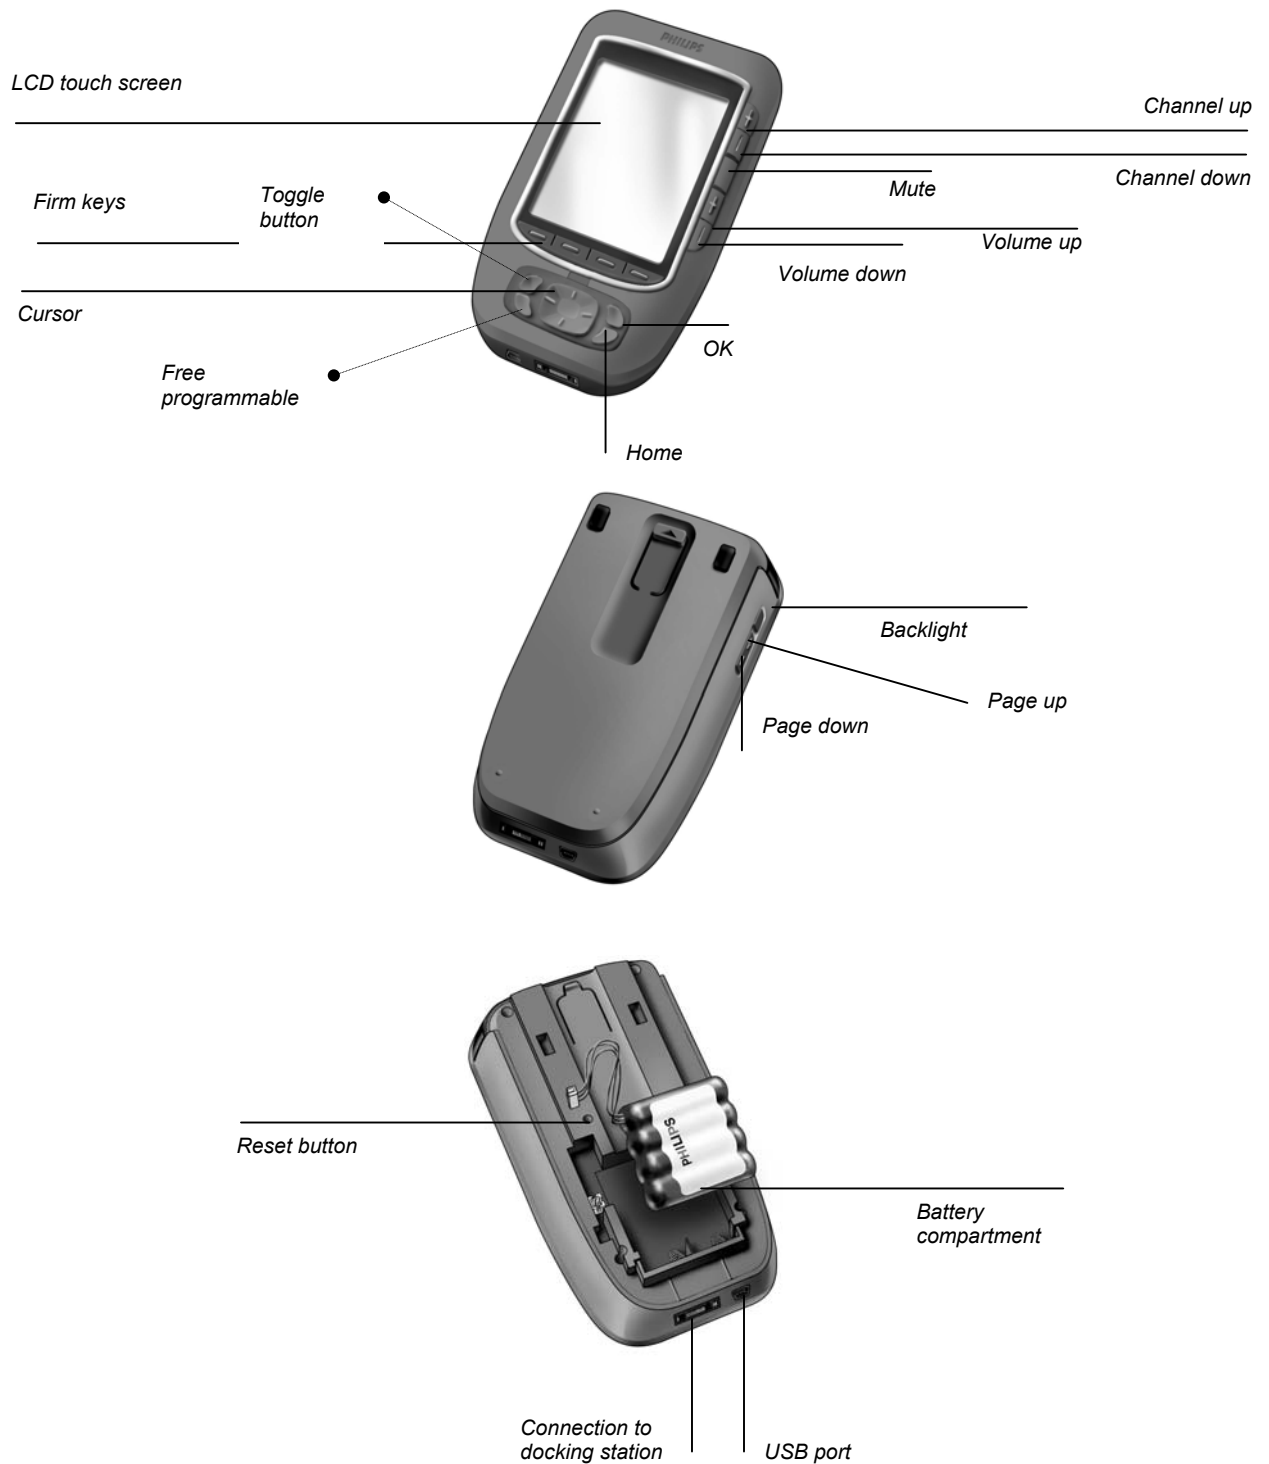


## The Touch Screen

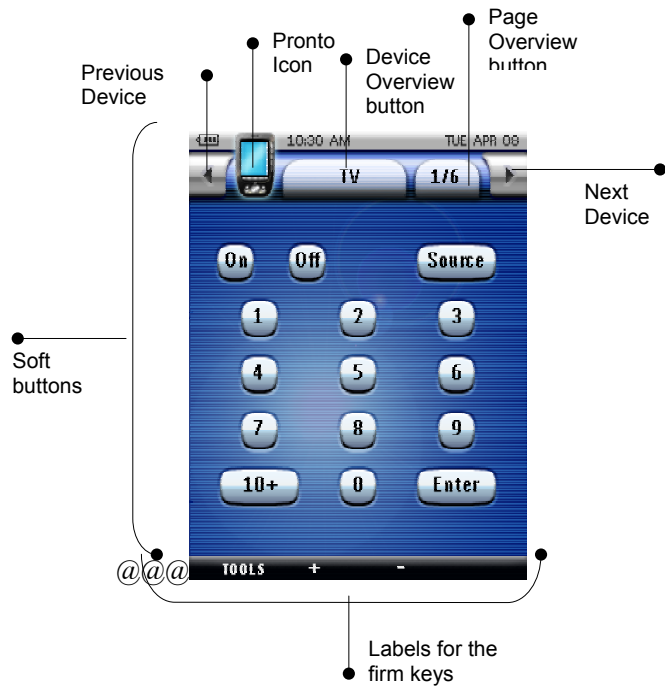

## The Docking Station

The docking station is used to charge the ProntoPro NG's battery pack. When your ProntoPro NG is placed in the docking station, you can connect ProntoPro NG to your computer via the USB port of the docking station, instead of the USB port of the ProntoPro NG.

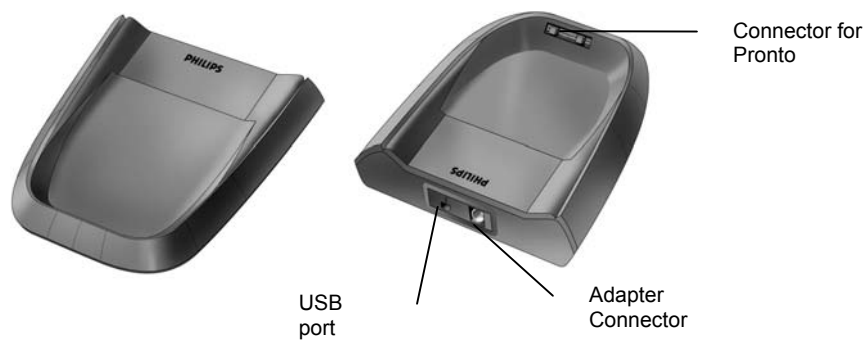

# What's New for ProntoPro Next Generation?

This new ProntoPro NG (TSU7000) offers several new features compared to the previous model of ProntoPro (TSU6000). The most important ones are:

- **Transparency**  
ProntoPro NG supports transparency in buttons and other objects. This makes it easier to create complex user interfaces. You can now place buttons with a transparent background on top of a background image, let transparent buttons overlap or create transparency effects within buttons.
- **65536 colors**  
The number of colors has increased from 256 to 65536 (64k). Therefore the buttons look much more natural.
- **Integrated Macros**  
Macros are now better integrated in the configuration file. Each button can be a macro, this means each button can contain more than one action.
- **More advanced Timers**  
Your ProntoPro NG is able to set timers for certain actions to be carried out at any time you choose. Timers are not an entirely new feature of ProntoPro, but they are easier to use and better integrated with the configuration file. You can activate and deactivate the timers you created and you can also set them to repeat daily or weekly. For instance, you can have the lights switched on every day at sundown. You can also create a timer to set your VCR to record your favourite TV-show on wednesday and saturday.
- **Page Overview**  
The Page Overview offers you a list of all the pages for one device. Every device comes with a Page Overview, making it easier and faster to browse through the device pages.
- **Cursor Navigation**  
By default the cursor is programmed to operate devices. The functions assigned to the cursor button depend on the device active on ProntoPro NG.  
ProntoPro NG also offer you the possibility to use the cursor for navigating through devices and pages on the screen. The Left and Right cursor buttons allow you to scroll through the devices, with the Up and Down cursor buttons you scroll through the different pages.
- **Animation Mode**  
ProntoPro NG provides navigation feedback through graphical animations of mode transitions and page transitions. You can enable and disable the animations of your ProntoPro NG in the Settings Pages.
- **USB**  
ProntoPro NG is provided with a USB port. The USB port makes downloading much easier.
- **16 MB of Memory**  
ProntoPro NG has 16 MegaByte of memory (extendable to 32 MB). This enables you to download larger configuration files to ProntoPro NG.



---

# Before You Start

## Placing the Battery Pack

When you use ProntoPro NG for the first time, you will have to:

- install the battery pack;
- place ProntoPro NG in the docking station and charge it.

### Attention

Use the docking station only with the Philips NiMH rechargeable battery pack.

Never plug other appliances (like mobile phones, PDA's, ...) into the docking station. This causes damage to the connector and the appliance.

## Installing the Battery Pack

- 1 Press the latch on the battery cover and remove the battery cover from the ProntoPro NG.



- 2 Place the battery pack in the battery compartment.



- 3 Plug the cable of the battery pack in the connector.



@@@ darken ProntoPro and integrate callout with plug

- 4 Slide the battery cover back on.  
Make sure the wires of the battery pack do not get stuck while sliding the cover on.  
After a few seconds, the ProntoPro NG starts up automatically and an Introduction screen appears. The ProntoPro NG beeps twice to indicate that it has finished starting up.

Because the battery pack is not fully pre-charged, you need to charge it as described below.

# Charging the ProntoPro NG

For charging the ProntoPro NG, you have to place in the docking station. When the battery pack is running low, the Low Battery icon will appear on the ProntoPro NG.

You can charge the ProntoPro NG at any time; the battery pack does not have to be entirely empty before recharging.

## Note

You can continue using the ProntoPro NG while it is being charged.

When the battery pack is empty, the ProntoPro NG's settings are retained. You only need to set the clock. However, you should recharge the ProntoPro NG as soon as possible to ensure perfect performance.

- 1 Plug the power adapter into a wall outlet and connect it to the docking station.
- 2 Slide the ProntoPro NG in the docking station until it clicks.  
Make sure you hold the ProntoPro NG at an angle of 30° to 45° when you place it in the docking station.



Charging starts immediately. The blue charging LEDs on the front of the docking station indicate that the battery pack is being charged.

When the ProntoPro NG is fully charged, the charging LEDs go off. Normal charging time is 2 to 3 hours, depending on the condition of the battery pack.

When the charging LEDs are flashing, an error occurs. Try one of the following:

- Make sure the battery pack is properly installed in your ProntoPro NG.
- Make sure the ProntoPro NG is placed properly in the docking station.
- Check if the connector in the docking station is clean and free of obstructions.
- Cool down the battery pack.

---

# Getting Started

## Turning on ProntoPro NG

ProntoPro NG can be turned on in four different ways:

- **Tap** the touch screen.

### Note


Only use your finger, a stylus or a blunt soft object like a pencil eraser to operate the touch screen.

- **Press** one of the 4 **firm keys** below the screen to activate the display.

### Note

When you press a hard button on ProntoPro NG, the according function will be executed immediately, while the 4 firm keys below the touch screen will activate the display.

- **Press** the **Backlight** button.
- **Tilt** ProntoPro NG more than 50 degrees.

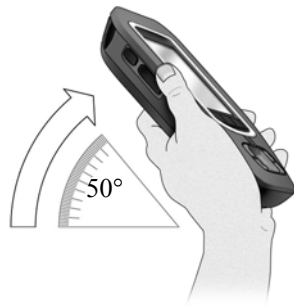



## Setting Time and Date

When you have installed the battery pack and turned on ProntoPro NG, you have to set the current time.


### Attention

Every time you reset your ProntoPro NG you will have to set the time again.



## Changing the Time Format

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  button in the Tools Menu.  
The first Settings Page appears.



- 3 Tap the **Time Format** button  in the first Settings Page. The **Time Format** button toggles between the three time formats:
  - 12 hour (AM/PM): This is the default format;
  - 24 hour;
  - No time.

## Changing the Time

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.
- 2 Tap  in the Tools Menu. The first Settings Page appears.
- 3 Tap the **Time** button in the first Settings Page. The Time button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 4 To increase the time, press (and hold) the firm key labeled '+'.  
-or-  
To decrease the time, press (and hold) the firm key labeled '-'.
- 5 Tap the **Time** button again. The new time is set.

## Changing the Date

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.
- 2 Tap  in the Tools Menu. The first Settings Page appears.

### To change the day

- 1 Tap the **Day** button in the first Settings Page. The Day button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the days, press (and hold) the firm key labeled '+'.  
-or-  
To decrease the days, press (and hold) the firm key labeled '-'.
- 3 Tap the **Day** button again. The new day is set.

## To change the month


- 1 Tap the **Month** button in the first Settings Page.  
The Month button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the months, press (and hold) the firm key labeled '+'.  
-or-  
To decrease the months, press (and hold) the firm key labeled '-'.  
3 Tap the **Month** button again.  
The new month is set.

## To change the year

- 1 Tap the **Year** button in the first Settings Page.  
The Year button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the years, press (and hold) the firm key labeled '+'.  
-or-  
To decrease the years, press (and hold) the firm key labeled '-'.  
3 Tap the **Year** button again.  
The new year is set.

# Setting the Language

You can change the language used on your ProntoPro NG.

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap **Settings** in the Tools Menu.  
The first Settings Page appears.
- 3 Press the Page down hard button.  
The second Settings Page appears.



@@@ new labels, 1 animation button

- 4 Tap **Language - English** in the second Settings Page.  
The **Language** button toggles between five languages:
  - English;
  - French;
  - German;
  - Spanish;
  - Dutch.

# Operating ProntoPro NG


ProntoPro NG contains a series of customizable devices, each consisting of several device pages. All active devices on your ProntoPro NG are listed in the Device Overview. All the available device pages are listed per device in the Page Overview.


## Device Overview


The Device Overview offers you a list of all the devices you can control with ProntoPro NG. To view the Device Overview, press the **Device Overview** button at the top of the touch screen.



You can navigate between the devices in two different ways:


- Tap the device you want to operate from the Device Overview.
- Tap the **Device Left** button  at the top of the touch screen to navigate to the previous device.

Tap the **Device Right** button  at the top of the touch screen to navigate to the next device.

By default you navigate through ProntoPro NG, using this touch screen navigation. When cursor navigation is enabled, the Device Left and Device Right button disappear and the **Cursor Navigation** icon  appears. You then navigate through the devices and pages using the cursor. For more information on changing the touch screen navigation to cursor navigation, see “Operating ProntoPro NG with the Cursor” on page 37.

## Page Overview

The Page Overview offers you a list of all the pages for one device. To view the Page Overview, tap the **Page Overview** button, that displays the page number in the upper area of touch screen.

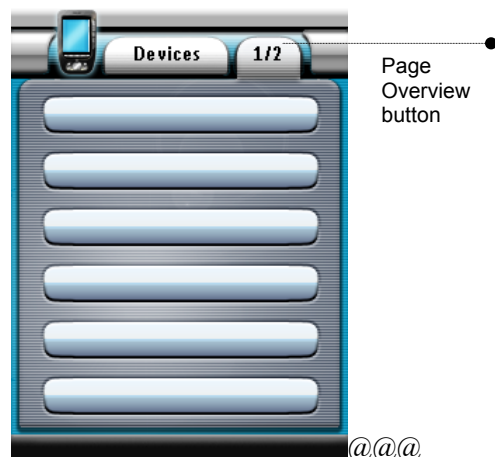

You can navigate between the different pages in two different ways:

- Tap the page you want to operate from the Page Overview.
- Press the **Page Up** or **Page Down** hard button on the left side of ProntoPro NG.











# Customizing ProntoPro NG

What makes ProntoPro NG so powerful, is the ability to extend its functionality in multiple ways, like programming additional functions, adding supplementary devices and changing the interface as it suits you best.


For full editing you can use ProntoProEdit NG software. See “ProntoProEdit NG” on page 40 for more information.






## Using the Tools

ProntoPro NG provides different tools. For customizing ProntoPro NG you have to switch to the appropriate tool. ProntoPro NG offers 10 different tools in the Tools Menu, each providing different functionalities:

 <b>Settings</b>	Settings Tool: Defining the settings of your ProntoPro NG (p. 26).	 <b>Timer</b>	Timer Tool: Defining timer actions to be carried out at predefined times (p 31).
 <b>Brand</b>	Brand Tool: Defining the brands of your audio/video equipment (page 17)	 <b>Learn</b>	Learn Tool: Learning IR codes from other remote controls (page 17)
 <b>Label</b>	Label Tool: Labeling buttons, devices and pages (page 20)	 <b>Add</b>	Add Tool: Adding new devices or copying existing devices (page 23)
 <b>Delete</b>	Delete Tool: Deleting button actions or devices (page 24)	 <b>Move</b>	Move Tool: Moving devices in the Device Overview (page 24)
 <b>Macro</b>	Macro Tool: Programming a sequence of commands for one single button (page 29)	 <b>RF IR</b>	RF IR Tool: Defining to operate ProntoPro NG with IR signals or RF signals (page 37)

To enter the Tools Menu, you have to tap the **ProntoPro NG** icon  in the top center of the touch

screen. You can exit all Tools by tapping the **ProntoPro NG** icon . Keep in mind that your latest changes to the current page will not be saved. In the Tools:

- Tap  to start using the Tool.
- Tap  to go back to the Tools Menu.
- Tap  to confirm an action and save the changes you made.
- Tap  to cancel an action without saving the changes.
- Press the firm key labeled  to end a series of actions and go back to the Tools Menu.







## Defining the Brand for a Device

ProntoPro NG contains a huge list of brands and their according IR codes in its database. ProntoPro NG uses these IR codes to control devices. Because there are several brands using specific IR codes, you have to define the brands and the corresponding code sets for each device. You can either have ProntoPro NG autosearch the brand or select it yourself. If a device's brand contains more than one IR code set, you also have to select it.

On the Device Overview you find buttons for the most common video and audio devices. ProntoPro NG is set by default to operate Philips and Marantz devices. For all devices other than Philips or Marantz, you first have to define the brand before you can operate them with ProntoPro NG.

### Selecting the Brand and Code Set for your Device



- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Brand Tool' screen appears.
- 3 Tap  in the 'Brand Tool' screen.  
The Device Overview appears.
- 4 In the Device Overview, tap the Device for which you want to define the brand.  
A message screen appears.
- 5 Tap .  
The 'Brands' screen appears.

#### Selecting the brand




- 1 Tap the **Scroll Down** button  or the **Scroll Up** button  next to the **Brands** list.  
The Brands list scrolls down/up.

#### Note

You can also select the brand via the virtual keyboard by tapping one or more of the brand's name characters.

- 2 Tap the **brand** for the selected Device in the **Brands** list.
- 3 Tap  in the 'Brands' screen.  
A message screen appears.  
If there is only one code set, the 'Installing the Brand' screen appears. Go to "Installing the brand" on page 17.  
-or-  
If there is more than one possible code set, a message screen appears.
- 4 Tap .  
The 'Code sets' screen appears.

#### Selecting the code set

- 1 Tap the **Scroll Down** button  or the **Scroll Up** button  next to the Code Sets list.  
The Code Sets list scrolls down/up.
- 2 Tap the **code set** for the selected Device in the **Code Sets** list.
- 3 Tap  in the 'Code Sets' screen.  
The 'Installing the Brand' screen appears.

#### Installing the brand

- 1 Tap  in the 'Installing the Brand' screen.


The first Page of the selected Device appears.

- 2 Tap different buttons to see if the device is responding to the IR codes for the selected brand and code set.
- 3 Press the left firm key labeled **Install**.  
The IR codes for the selected brand and code set are installed.  
-or-  
Press the right firm key labeled **Previous**.  
The 'Code Set' screen appears again without installing the code set.

## Selecting the Brand and searching the Code Set for your device

### Note


Make sure the device for which you are searching the brand is turned on.

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap **Brand** in the Tools Menu.  
The 'Brand Tool' screen appears.
- 3 Tap **Go** in the 'Brand Tool' screen.  
The Device Overview appears.
- 4 In the Device Overview, tap the Device for which you want to define the brand.  
A message screen appears.
- 5 Tap **OK**.  
The 'Brands' screen appears.
- 6 Select the brand of your device as described in "Selecting the brand" on page 17.

### Searching the code set

- 1 Tap **Search** in the 'Code Sets' screen.  
The 'Searching the Code Set' screen appears.
- 2 Tap **OK** and point ProntoPro NG at the device.  
The 'Searching' screen appears. ProntoPro NG searches through the list of code sets for the selected brand, by sending out an IR code for each code set.
- 3 When the device for which you are defining the brand, responds to the IR code, tap **OK** in the 'Searching' screen.  
The 'Installing the Brand' screen appears.
- 4 To install the brand and code set, follow the instructions described in "Installing the brand" on page 17.




## Searching the Brand and Code Set for your device

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap **Brand** in the Tools Menu.  
The 'Brand Tool' screen appears.
- 3 Tap **Go** in the 'Brand Tool' screen.  
The Device Overview appears.
- 4 In the Device Overview, tap the Device for which you want to define the brand.

A message screen appears.

- 5 Tap .  
The 'Brands' screen appears.

### Searching the brand

- 1 Tap  in the 'Brands' screen.  
The 'Searching the Brand' screen appears.
- 2 Tap  and point ProntoPro NG at the device.  
The 'Searching' screen appears. ProntoPro NG searches through the list of brands, by sending out an IR code for each brand.
- 3 When the device for which you are defining the brand, turns off, tap  in the 'Searching' screen.  
The 'Installing the Brand' screen appears.
- 4 To install the brand and code set, follow the instructions described in "Installing the brand" on page 17.


## Learning Commands

If an IR code is not in the database, you can program ProntoPro NG commands by transmitting IR signals from your existing remote control to ProntoPro NG's learning eye.

The Learn Tool allows you to learn a **button** or a **device action**. A device action is an action that is executed automatically when you select a device. E.g. when you select TV, you can learn your ProntoPro NG to switch on the TV at the same time. You can also use the Learn Tool to relearn commands that do not work properly.

### Note

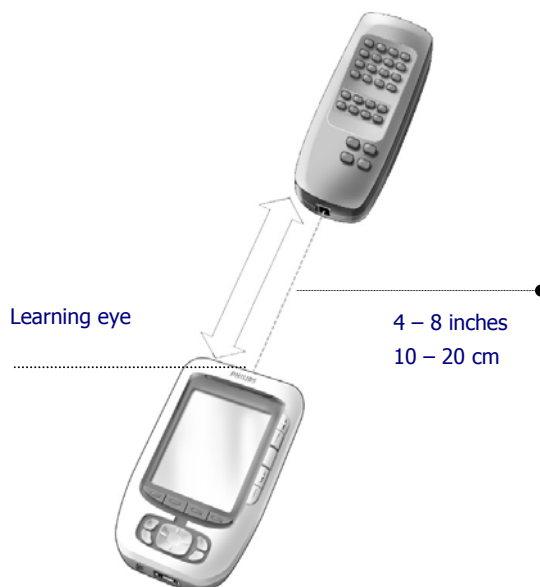

Once you have learned a button, the button will not be changed if you select another brand in Brand Mode.



@@@ distance in inch above the line, in cm below the line


### Learning a Button

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.




- 2 Tap  in the Tools Menu.  
The 'Learn Tool' screen appears.
- 3 Tap .  
The last page you have visited appears.
- 4 Navigate to the Device and the Page that contains the button you want to learn.
- 5 Position ProntoPro NG and the remote control as illustrated above.

#### Note

Make sure that you aim ProntoPro NG's **learning eye** at the remote control's IR window. The **distance** between ProntoPro NG and the remote control should be between 4 and 8 inches (10 and 20 cm).


- 6 Tap the button you want to learn.  
A *Learning* indication appears in the top center of the touch screen.
- 7 Press and hold the key on the other remote control for 1 second.  
Make sure you press the key within 5 seconds.  
If learning succeeded, you will get an OK message.  
If learning failed, you will get a Failure message.  
See "ProntoPro NG will not learn commands" on page 44 for more information.
- 8 Select other buttons on ProntoPro NG you want to learn.
- 9 Press the left firm key labeled  below the touch screen to stop learning.

### Learning a Device Action

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Learn Tool' screen appears.
- 3 Tap .  
The Device Overview appears.
- 4 Position ProntoPro NG and the remote control as illustrated above.


#### Note

Make sure that you aim ProntoPro NG's **learning eye** at the remote control's IR window. The **distance** between ProntoPro NG and the remote control should be between 4 and 8 inches (10 and 20 cm).


- 5 Tap the Device for which you want to learn a Device Action.  
A *Learning* indication appears in the top center of the touch screen.
- 6 Press the key on the other remote control.  
If learning succeeded, you will get an OK message.  
If learning failed, you will get a Failure message.
- 7 Select other Devices on the Device Overview you want to learn.
- 8 Press the left firm key labeled  below the touch screen to stop learning.

## Labeling Elements

The Label Tool allows you to label a **button**, a **device** or a **page**. In the Label Tool you can find a virtual keyboard. This keyboard zooms in when you tap a character.

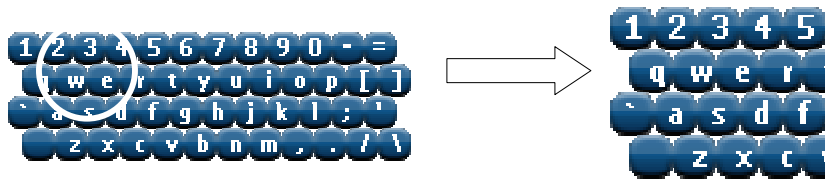


The keyboard contains four different character sets, including a series of symbols you can use for labeling. You use the **Shift** button to switch between the 5 character sets on the keyboard.

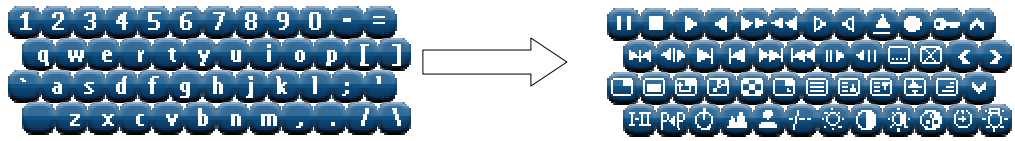







For a complete list of the symbols, see “List of Symbols” on page 45.







## Labeling a Button

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap **Label** in the Tools Menu.  
The ‘Label Tool’ screen appears.
- 3 Tap **Label Button**.  
The page you last visited appears.
- 4 Navigate to the Device and the Page that contains the button you want to label.
- 5 Tap the button you want to label.  
The ‘Labeling’ screen appears.
- 6 Tap the keyboard.  
The keyboard zooms in.
- 7 Tap the character you want to add to the label.  
The character is added to the label. The keyboard automatically zooms out again.
  - 1 To zoom out without adding a character to the label, tap **Unzoom**.  
The character is not added to the label. The keyboard is zoomed out.
  - 2 To use other characters and symbols, tap **Shift**.  
The character set on the keyboard switches.  
You can choose from four different character sets.
  - 3 To remove characters, press the firm key labeled **DELETE**.  
The character in front of the cursor is removed.
- 8 You can add other characters to the label.
- 9 Tap **Save**.  
The label of the selected button is changed. The last visited page appears again.  
-or-  
Tap **Cancel**.  
The last visited page appears again, without changing the label of the selected button.
- 10 You can select other buttons on ProntoPro NG to label.
- 11 Press the left firm key labeled **DONE** below the touch screen to exit the Label Tool.

## Labeling a Device

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Label Tool' screen appears.
- 3 Tap .  
The Device Overview appears.
- 4 Tap the Device you want to label.  
The 'Labeling' screen appears.
- 5 Follow the instructions 6 to 8 of "Labeling a Button" on page 21.
- 6 Tap .  
The label of the selected Device is changed. The Device Overview appears again.  
-or-  
Tap .  
The Device Overview appears again, without changing the label of the selected device.
- 7 You can select other Devices in the Device Overview to label.
- 8 Press the left firm key labeled  below the touch screen to exit the Label Tool.

## Labeling a Page

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Label Tool' screen appears.
- 3 Tap  in the 'Label Tool' screen.  
The Page Overview appears.
- 4 Tap the Page you want to label.  
The 'Labeling' screen appears.
- 5 Follow the instructions 6 to 8 of "Labeling a Button" on page 21.
- 6 Tap .  
The label of the selected Page is changed. The Page Overview appears again.  
-or-  
Tap .  
The Page Overview appears again, without changing the label of the selected page.
- 7 You can select another Page in the Page Overview to label.
- 8 Press the left firm key labeled  below the touch screen to exit the Label Tool.






## Adding Devices

The Add Tool allows you to **add a new device** or **copy an existing device**.

When you add a new device, a device template stored on your ProntoPro NG is used to create the device pages, buttons and functions. Philips IR codes are used when you add a new device. For your brand of device, you then have to program the new device using the Brand Tool (page 16) or the Learn Tool (page 17).

Copying an existing device saves time. The personal settings you defined for that device will also be copied. If you want to add e.g. a second CD player, you do not have to learn or create macros again, you just copy them from the existing CD player already programmed on your ProntoPro NG.






### Adding a New Device

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Add Tool' screen appears.
- 3 Tap  in the 'Add Tool' screen.  
The 'Adding' screen appears.
- 4 Tap the device template you want to add in the **Device Templates** list.  
The 'IR Code' screen appears.
- 5 Tap  in the 'IR Code' screen.  
The Device is added to ProntoPro NG with its actions like IR codes, beeps, delays, and so forth.  
-or-  
Tap  in the 'IR Code' screen.  
The Device is added to ProntoPro NG without its actions like IR codes, beeps, delays, and so forth. To operate this device, you have to learn every button of the device.

#### Note

Added devices are automatically positioned at the end of the Device Overview. You can move devices with the Move Tool. See "Moving Devices" on page 24 for more information.

### Copying an Existing Device

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Add Tool' screen appears.
- 3 Tap  in the 'Add Tool' screen.  
The 'Adding' screen appears.
- 4 Tap the Device you want to copy in the **Devices** list.  
The 'IR Code' screen appears.
- 5 Tap  in the 'IR Code' screen.  
The Device is copied to ProntoPro NG with its actions like IR codes, beeps, delays, and so forth.  
-or-  
Tap  in the 'IR Code' screen.  
The Device is copied to ProntoPro NG without its actions like IR codes, beeps, delays, and so forth.






## Note

Added devices are automatically positioned at the end of the Device Overview. You can move devices with the Move Tool. See “Moving Devices” on page 24 for more information.






# Deleting Elements

The Delete Tool allows you to delete a **button** or a **device**.

## Deleting a Button

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.
- 2 Tap  in the Tools Menu. The ‘Delete Tool’ screen appears.
- 3 Tap . The last visited page on the ProntoPro NG appears.
- 4 Navigate to the Device and the Page that contains the button you want to delete.
- 5 Tap the button you want to delete. A message screen appears.
- 6 Tap .
- 7 The button is deleted. You can select other buttons on ProntoPro NG to delete.
- 8 Press the left firm key labeled  below the touch screen to exit the Delete Tool.

## Deleting a Device





- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.
- 2 Tap  in the Tools Menu. The ‘Delete Tool’ screen appears.
- 3 Tap . The Device Overview appears.
- 4 Tap the Device you want to delete. A message screen appears.
- 5 Tap .
- 6 You can select other Devices on ProntoPro NG to delete.
- 7 Press the left firm key labeled  below the touch screen to exit the Delete Tool.

# Moving Devices

The Move Tool allows you to move a device up or down the Device Overview, enabling you to put your most used devices at the top of the list.

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.




- 2 Tap  in the Tools Menu.  
The 'Move Tool' screen appears.
- 3 Tap the Device you want to move in the **Devices** list.
- 4 Tap the **Move Up**  or **Move Down** button  in the 'Moving' screen.  
The selected Device moves up/down in the Device List.
- 5 Tap  in the 'Moving' screen.  
The Device is moved.

# Adjusting the Settings

In the **Settings Page** you can adjust several settings. You can:

- Set the time and date as described earlier, on page 11.
- Set the timeout of the LCD screen;
- Setting the Brightness of the Backlight;
- Set the timeout of the LCD backlight;
- Set the volume level;
- Set the animation mode;
- Set the language of the ProntoPro NG, as described earlier, on page 13.
- Set ProntoPro NG to operate with the Cursor;
- Calibrate the touch screen.



- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Select **Settings**.  
The first Settings Page appears.

## Setting the Timeout of the LCD Screen

The timeout of the LCD screen determines how long the LCD touch screen stays active before turning off. Shortening the active time will increase ProntoPro NG's battery life.



### Note

The LCD screen will only time out when you are not using ProntoPro NG.

- 1 Tap **LCD Timeout 40 sec** in the first Settings Page.  
The LCD Timeout button is selected. The '+' and '-' labels appear on the two middle firm keys below the touch screen.
- 2 To increase the timeout, press (and hold) the firm key labeled '+'.  
-or-  
To decrease the timeout, press (and hold) the firm key labeled '-'.
- 3 Tap **LCD Timeout 40 sec** again.  
The new LCD screen timeout is set.

## Setting the Brightness of the Backlight


You can adjust the intensity of the LCD backlight. There are 4 levels of backlight brightness.

- 1 Tap the  button in the first Settings Page.  
The Brightness button is selected. The '+' and '-' labels appear on the two middle firm keys below the touch screen.
- 2 To increase the timeout, press (and hold) the firm key labeled '+'.  
-or-  
To decrease the timeout, press (and hold) the firm key labeled '-'.
- 3 Tap the  button again.  
The new Backlight Brightness is set.

## Setting the Volume Level


You can set the volume level for the hard buttons as well as for the touch screen buttons. The volume of the button refers to the loudness of the beep you hear when you press or tap a button.

### Setting the Volume Level of the Hard Buttons

To adjust the volume of the hard buttons, tap  in the first Settings Page.

You can either select 1 of the 3 volume levels or choose to mute. Every time you press, the volume level increases with one step up to level 3.

### Setting the Volume Level of the Touch Screen

To adjust the volume level of the touch screen, tap  in the first Settings Page.

You can either select 1 of the 3 volume levels or choose to mute. Every time you tap, the volume level increases with one step up to level 3.

## Setting the Navigation for ProntoPro NG

The cursor is used by default to operate your devices. You then navigate the ProntoPro NG with the touch screen buttons. However, you can also set the cursor to browse through ProntoPro NG's devices and pages. For more information on operating the ProntoPro NG with the cursor, see 'Operating ProntoPro NG with the Cursor' on page 37.

To set the navigation for the ProntoPro NG, tap  in the second Settings Page:

- You can select **Touch Screen Navigation** to navigate the ProntoPro NG with the touch screen buttons.
- You can select **Cursor Navigation** to navigate the ProntoPro NG with the cursor.

## Setting the Animation Mode

ProntoPro NG provides navigation feedback through graphical animations. Switching pages is done with a page transition, switching from Use Mode to one of the Tools is accompanied with a mode transition. You can enable and disable the animations of your ProntoPro NG in the second Settings Page:


- You can disable the animations by choosing 'None' (no animations). By disabling all animations you use the absolute maximum of your ProntoPro NG's processing speed.
- When changing pages with the 'Page Only' animation, one page seems to slide out of the screen, while the second page slides in.
- The 'Mode Only' animation makes a page 'drop' out of the top of the touch screen.
- With the option 'Full' you can enable both animations at the same time.

## Calibrating the Touch Screen

When you first use your ProntoPro NG, the touch screen is already calibrated. However, if you notice that your ProntoPro NG does not send out the commands in accordance with what is indicated on the touch screen, it is advised to recalibrate the touch screen.

### Attention

Never use an actual pen, pencil or other sharp object on the touch screen. Use your finger or a pointy object like a plastic-tipped pen intended for use with touch screens.

- 1 Tap  in the second Settings Page.  
The 'Calibration' screen appears.
- 2 Tap the upper left corner on the touch screen.
- 3 Tap the lower right corner on the touch screen.  
The touch screen is calibrated.

# Using the Power Features

## Creating and Editing Macros

A macro allows you to send a sequence of commands when tapping **one single button**. You can for instance switch on your TV, turn on a movie channel and prepare your VCR for recording by rewinding the videotape. The macro contains an **action list**. The action list can be created and edited in the Macro Tool.

### Note


Once you have programmed a macro, the button will not be changed when you select another brand in the Brand Tool.

In the Macro Tool you first have to select the button, that will contain the macro, also called the **target button**. Then, one by one, you create an action list by adding actions to this target button. You can do this by:

- Selecting another button and **adding its actions** to the action list of your target button.
- Adding a **delay** to the action list.
- Adding a **beep** to the action list.

After creating the macro, all actions you added to the action list are executed when you tap the button.

## Creating a Macro

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.
- 2 Tap **Macro** in the Tools Menu. The 'Macro Tool' screen appears.
- 3 Tap **Go** in the 'Macro Tool' screen. The last visited page appears.
- 4 Navigate to the Device and the Page that contains the target button you want to use for a macro.
- 5 Tap the button you want to select as a target button. If you can use the button to program a macro, the 'Macro' screen appears.




-OR-

If you cannot use the button to program a macro, you hear a *Failure beep*.

### Note


You can assign a macro to most buttons of your ProntoPro NG. Only the hard buttons on the left side of ProntoPro NG (Backlight, Page Up and Page Down) cannot be programmed.

### To add an action to the action list

- 1 Tap  in the 'Macro' screen.  
The last visited page appears again.
- 2 Navigate to the Device and the Page that contains the button you want to add to the macro.
- 3 Tap the button with the action(s) you want to add to the macro.  
The 'Macro' screen appears.  
The actions of the selected button are added at the bottom of the Action List.
- 4 You can select other buttons to add to the macro.


### To add a delay to the action list

You can add a delay to the action list e.g. to insert a short pause between turning on a device and sending commands to it, allowing the device to warm up.

- 1 Tap  in the 'Macro' screen.  
The '+' button and '-' button appear on the two middle firm keys below the touch screen.
- 2 To increase the delay, tap (and hold) the firm key labeled '+'.  
-or-  
To decrease the delay, tap (and hold) the '-' firm key labeled '-'.


### To add a beep to the action list

To determine when the macro execution is finished, it is useful to add a beep as final command in the action list.

- 1 Select the action in the action list, where you want to add a beep.  
The action is selected.
- 2 Tap  in the 'Macro' screen.  
A default beep is added to the action list, after the selected action.

### To test the Macro



You do not have to exit the Macro Tool to try out the macro you created or edited. From within the Macro Tool you can test the macro. ProntoPro NG executes all actions as you defined them in the action list.

- In the 'Macro' screen, press the left firm key labeled .  
ProntoPro NG executes the actions in the action list.

### Note



Make sure that you keep ProntoPro NG aimed at your Home Theater equipment during the macro execution.

### To finish the macro


- Tap  in the 'Macro' screen.  
The macro is created and assigned to the button you selected as a target.  
-or-
- Tap  in the 'Macro' screen.  
The Tools Menu appears again without creating the macro.

# Editing a Macro

## Moving an action in the action list

- 1 To display the 'Macro' screen with the action list assigned to the button, follow the instructions 1 to 5 as described in "Creating a Macro" on page 29.
- 2 Tap the action in the action list you want to move in the 'Macro' screen.  
The selected action is highlighted.
- 3 Tap the **Move Up** button  or the **Move Down** button  in the 'Macro' screen.  
The selected action moves up/down in the action list.
- 4 You can select other actions to move.

## Deleting an action from the action list

- 1 To display the 'Macro' screen with the action list assigned to the button, follow the instructions 1 to 5 as described in "Creating a Macro" on page 29.
- 2 Tap the action in the action list you want to delete in the 'Macro' screen.  
The selected action is highlighted.
- 3 In the 'Macro' screen, press the right firm key labeled .  
The selected action is deleted from the action list.
- 4 You can select other actions to delete.




# Activating Timers

With the Timer Tool you can define actions to be carried out at predefined times. For instance, you can switch on the lights or program your VCR to record your favourite daily TV-show.

### Note



When a timer is executed, you will hear a double beep and a Timer message appears on screen.

If ProntoPro NG is performing another task (sending out IR codes, testing a macro, ...) when a timer is due to be executed, ProntoPro NG first continues performing the current task.

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Timer Tool' information screen appears.
- 3 Tap  in the 'Timer Tool' information screen.  
The 'Timer' screen appears.











@@@ Page 0/6

- 4 Tap the check box in front of the timer that you want to activate.  
The Timer is activated.
- 5 In the 'Timer' screen, tap .  
The 'Timer' screen closes and the Tools Menu appears again. The Timer icon @@ appears next to the time indication.  
-or-  
In the 'Timer' screen, tap .  
The Timer screen closes without activating the Timer.

## Creating and Editing Timers

### Adding a Timer



- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Timer Tool' information screen appears.
- 3 Tap .  
The 'Timer' screen appears.
- 4 In the 'Timer' screen, tap  to add a new timer to the list.  
A new timer is added to the Timers list.  
By default a new timer is labeled Timer and a number. It has no start and stop actions defined.
- 5 To label the timer, tap , as described in Labeling a Timer on page 33
- 6 To define the start and stop actions for the timer, tap , as described in Editing a Timer on page 34.
- 7 In the 'Timer' screen, tap .  
The 'Timer' screen closes and the Tools Menu appears again. The Timer icon @@ appears next to the time indication.  
-or-  
In the 'Timer' screen, tap .  
The Timer screen closes without activating the Timer.


### Deleting a Timer




- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.



The Tools Menu appears.

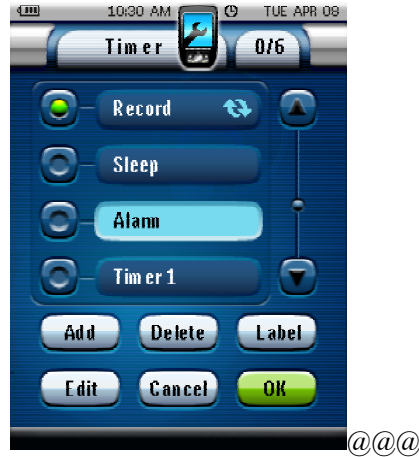




- 2 Tap  in the Tools Menu.  
The 'Timer Tool' information screen appears.
- 3 Tap .  
The 'Timer' screen appears.
- 4 Tap the label of the timer you want to delete.  
The timer is highlighted.




- 5 In the 'Timer' screen, tap .  
A message screen appears.
- 6 In the message screen, tap **Delete**.  
The timer is deleted from the list.
- 7 In the 'Timer' screen, tap .  
The 'Timer' screen closes and the Tools Menu appears again. The Timer icon @@ appears next to the time indication.  
-or-  
In the 'Timer' screen, tap .  
The Timer screen closes without activating the Timer.





## Labeling a Timer


The default name for a timer is 'Timer' followed by a number, for example Timer 5.



- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Timer Tool' information screen appears.
- 3 Tap .  
The 'Timer' screen appears.
- 4 Tap the label of the timer you want to label.  
The timer is highlighted.
- 5 In the 'Timer' screen, tap .  
The 'Labeling' screen appears.
- 6 Label the timer as described in Labeling Elements on page 20.
- 7 In the 'Labeling' screen, tap .  
The 'Timer' screen appears again and the timer is relabeled.

- 8 In the 'Timer' screen, tap  .  
The Tools Menu appears again.

### Editing a Timer

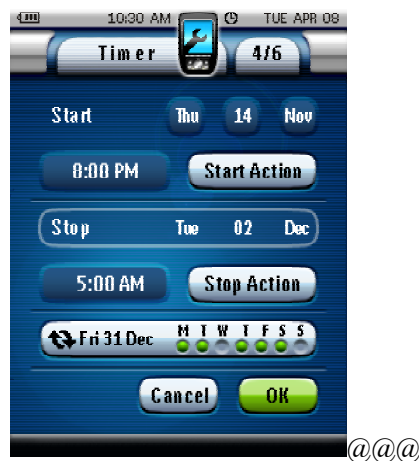- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'Timer Tool' information screen appears.
- 3 Tap  .  
The 'Timer' screen appears.
- 4 Tap the label of the timer you want to edit.  
The timer is highlighted.
- 5 In the 'Timer' screen, tap  .  
The 'Editing Timer' screen appears.



- 6 To edit the timer, execute the following steps:
  - 1 Set the Start Date.  
See Setting the Start Date on page 34 for more information.
  - 2 Set the Start Time.  
See Setting the Start Time or Stop Time on page 35 for more information.
  - 3 Define the Start Action.  
See Defining the Start Action or Stop Action on page 35 for more details.
  - 4 Set the Stop Time.  
See Setting the Start Time or Stop Time on page 35 for more information.
  - 5 Define the Stop Action.  
See Defining the Start Action or Stop Action on page 35 for more details.
  - 6 Define the Repeat Settings.  
See Defining the Repeat Settings on page 36 for more information.
- 7 In the 'Editing Timer' screen, tap  .  
The timer settings are defined. The 'Timer' screen appears again.
- 8 In the 'Timer' screen, tap  .  
The Tools Menu appears again.

### Setting the Start Date

When you add a new timer the Start Date is the current date by default. The Stop Date is calculated automatically based on the Start Date, the Start Time and the Stop Time.

To change the Start Date:

- 1 In the 'Editing Timer' screen, tap the **Day** button.  
The Day button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the value, press (and hold) the firm key labeled '+'.  
-or-  
To decrease the value, press (and hold) the firm key labeled '-'.  
3 Tap **Day** button again.  
The Month is set.
- 4 Repeat step 1 to 3 for **Month** button.  
The Start Date is set.

### Setting the Start Time or Stop Time

- 1 In the 'Editing Timer' screen, tap the **Start Time** button or **Stop Time** button.  
The **Start Time** button or **Stop Time** button is selected. The labels '+' and '-' appear for the two middle firm keys.
- 2 To increase the time, press (and hold) the firm key labeled '+'.  
-or-  
To decrease the time, press (and hold) the firm key labeled '-'.  
3 Tap the **Time** button again.  
The new Start Time or Stop Time is set.

### Note

If the Stop Time lies before the Start Time, the Stop Date automatically jumps to the next day.

### Defining the Start Action or Stop Action

ProntoPro NG uses a similar procedure to define the Action List for the Start Action or the Stop Action of the selected timer as in the Macro Tool. See Creating and Editing Macros on page 29 for more information.


### Example

Some examples of timer actions are: switching on your lights at a specific time or recording your favourite daily TV-show with your VCR.

- 1 In the 'Editing Timer' screen, tap the **Start Action** or **Stop Action** button.  
The 'Macro' screen appears.




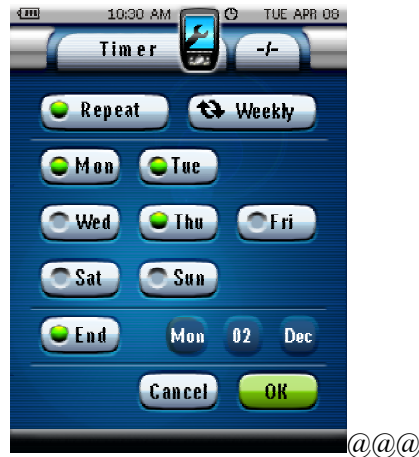
- 2 In the 'Macro' screen, tap **Add**.  
The last visited page appears again.
- 3 Navigate to the Device and the Page that contains the button you want to add to the macro.
- 4 Tap the button you want to add to the action list of the timer.  
The 'Macro' screen appears.  
The action of the selected button is added at the bottom of the Action List.




- In the 'Macro' screen, tap .  
The Start Action or Stop Action is defined. The 'Editing Timer' screen appears again.

### Defining the Repeat Settings

If you want the timer to repeat itself on more than one occasion, you can use the repeat settings.


- Tap the  button.  
The 'Repeat Settings' screen appears.




- Tap the  toggle button.  
By default 'No' is selected.  
The **Repeat** button toggles between the three settings:
  - No: This is the default setting;
  - Daily;
  - Weekly.
  - To change the setting to 'Daily', tap the button again.  
Every day of the week is automatically selected.
  - If you want to set an end date for the repeating timer, select the End Date check box.  
The End Date is enabled.
  - Define the End Date, as described in Setting the Start Date on page 34.  
The End Date is defined.  
-or-
    - To change the setting to 'Weekly', tap the button again.  
The current day is selected.
    - Select or deselect the different days of the week on which the timer has to be executed.
    - If you want to set an end date for the repeating timer, select the End Date check box.  
The End Date is enabled.
    - Define the End Date, as described in Setting the Start Date on page 34.  
The End Date is defined.  
-or-
      - To change the setting to 'No', tap the button again.  
The timer will not be repeated.
- In the 'Repeat Settings' screen, tap .  
The 'Editing Timer' screen appears again. Feedback about the repeat settings is provided below the  button.

# Operating ProntoPro NG with the Cursor

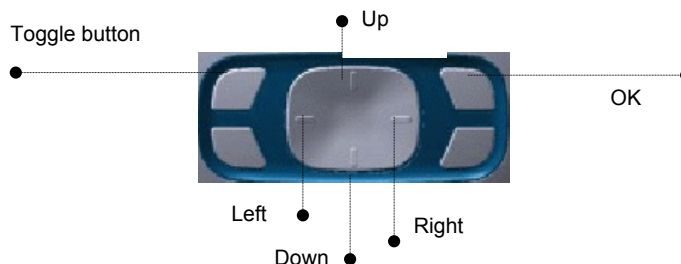

The cursor is set by default to operate the devices, e.g. to navigate through an on-screen TV menu. The cursor contains 4 cursor keys: Right, Left, Up and Down. Each cursor key contains an action list. This list depends on the device that is being operated.



The cursor can also be used to navigate through devices and pages on ProntoPro NG's touch screen.

When you enable the **cursor navigation** in the Settings Pages, the **touch screen navigation** with the Left Device and Right Device buttons at the top area of the touch screen disappears and the **cursor navigation** icon  appears in the top left corner. You use the cursor for navigating, and not for operating your devices, until you disable the cursor navigation again.

To set the cursor navigation:


- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.
- 2 Select the **Settings** button.
- 3 Press the Page Down hard button at the left side of the ProntoPro NG. The second Settings Page appears.
- 4 Tap the **Touch Screen Navigation** button.
- 5 The cursor navigation is enabled. The Toggle hard button is activated.
- 6 Tap the **ProntoPro NG** icon  in the top center of the touch screen to exit the Settings Tool.

To use the cursor for navigating the ProntoPro NG:

- 7 Press the **Left** and **Right** buttons of the cursor. ProntoPro NG navigates through the devices.
- 8 Press the **Up** and **Down** buttons of the cursor. ProntoPro NG navigates through the pages.
- 9 Press the **Toggle** button to easily switch from navigating on ProntoPro NG to controlling audio/video equipment. The **Device Left** and **Device Right** buttons appear in the top area of the touch screen and the cursor is used for controlling audio/video equipment.
- 10 Press the **Toggle** hard button again to switch back to cursor navigation.


# Operating ProntoPro NG with RF

By default, ProntoPro NG uses **infrared** (IR) signals to operate devices. IR signals have an operating distance of approximately 33 ft (10 m).

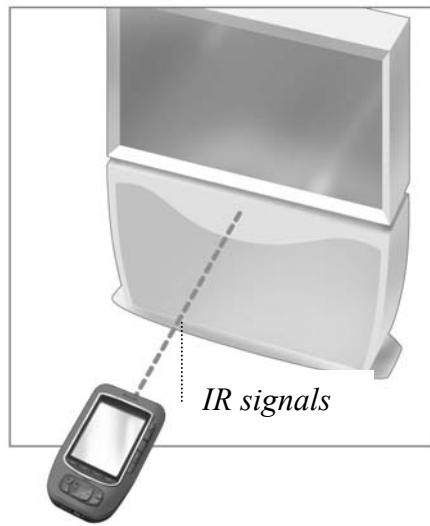


However, you can choose to have ProntoPro NG working with radio frequency (RF) signals to operate devices from a distance or from an adjacent room. An RF Extender (not included) is therefore required.

The RFX6000 is an RF Extender that can be used in combination with ProntoPro NG. The RF Extender receives RF signals from ProntoPro NG and converts them into IR signals, sent out to the device. Therefore, the RF Extender has to be placed near the device you are operating with the RF Extender's sending eye pointed towards the device.

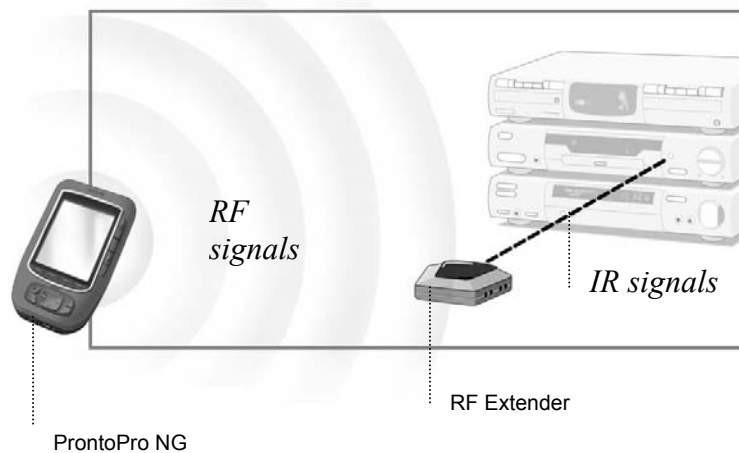

## Selecting RF to Operate your Devices



- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.
- 2 Tap **RF IR** in the Tools Menu. The 'RF IR Tool' screen appears.
- 3 Tap **Go**. The Device Overview appears.
- 4 Tap the Device for which you want to select RF. The 'Select IR or RF' screen appears. By default IR is selected in the Sending Signals list. The Define RF button is disabled.
- 5 Choose **RF** in the Sending Signals list. The **Define RF** button is enabled.
- 6 Tap **Define RF**. The 'RF Settings' screen appears.

- 7 Select the **RF Channel** in the RF Channel list you use for the RF Extender.  
The RF Channel on the RFX6000 has to be the same as the RF Channel on ProntoPro NG.
- 8 Select the **Extender ID** in the Extender ID list you use for the RF Extender.  
The Extender ID on the RFX6000 has to be the same as the Extender ID on ProntoPro NG.

#### Note

You can use several RF Extenders with your ProntoPro NG. For each RF Extender you use for your devices, you need to set the RF Channel and the Extender ID.





The RF Channel is identical for all RF Extenders. The Extender ID on the RFX6000 is unique for each RF Extender.

- 9 Tap  in the 'RF Settings' screen.  
The RF settings are saved.
- 10 Tap  in the 'Select IR or RF' screen.  
ProntoPro NG will send out RF signals for the selected device.

#### Note

Try to keep ProntoPro NG and the RF Extender away from metal objects, as this will have a negative impact on the range.

## Selecting IR to Operate your Devices

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen.  
The Tools Menu appears.
- 2 Tap  in the Tools Menu.  
The 'RF IR Tool' screen appears.
- 3 Tap .
- 4 Tap the Device for which you want to select IR.  
The 'Select IR or RF' screen appears. RF is selected in the Sending Signals list.
- 5 Choose **IR** in the Sending Signals list.  
The 'Define RF' button is disabled.
- 6 Tap  in the 'Select IR or RF' screen.  
ProntoPro NG will send out IR signals for the selected device.

# ProntoProEdit NG


If you want to personalize your ProntoPro NG even more beyond its standard programming features, ProntoProEdit NG is the tool for you to use. ProntoProEdit NG is ProntoPro NG's companion software that you find on the included CD-ROM. Please check the website to make sure that you have the latest version. You can find more information on <http://www.pronto.philips.com>.

With ProntoProEdit NG you can:

- **Upload** and **download** new configurations to and from your ProntoPro NG. You do this with the PC cable included with your ProntoPro NG:
  - 1 Plug one end of the cable in the USB port on your computer.
  - 2 Plug the other end of the cable in the USB port on ProntoPro NG.



- **Add, delete, modify** and **move** control panels, devices and commands anywhere on the touch screen;
- **Save, duplicate** and **share** configuration files, codes or devices with other ProntoPro NG;
- **Import** new graphics to create new buttons and designs;
- Use .PNG graphic files that support **transparency**. You can now place buttons with a transparent background on top of a background image, let transparent buttons overlap or create transparency effects within buttons. You can use the color in the upper left corner as transparency color or you can select a transparency color from a drop-down list.
- **Personalize** configuration files to optimize the use of your ProntoPro NG;
- **Copy, Paste** and **Edit** plain IR codes that you can exchange with other ProntoPro NG users;
- **Preview** new configuration files on ProntoProEdit NG Simulator, to check what ProntoPro NG's interface will look like.

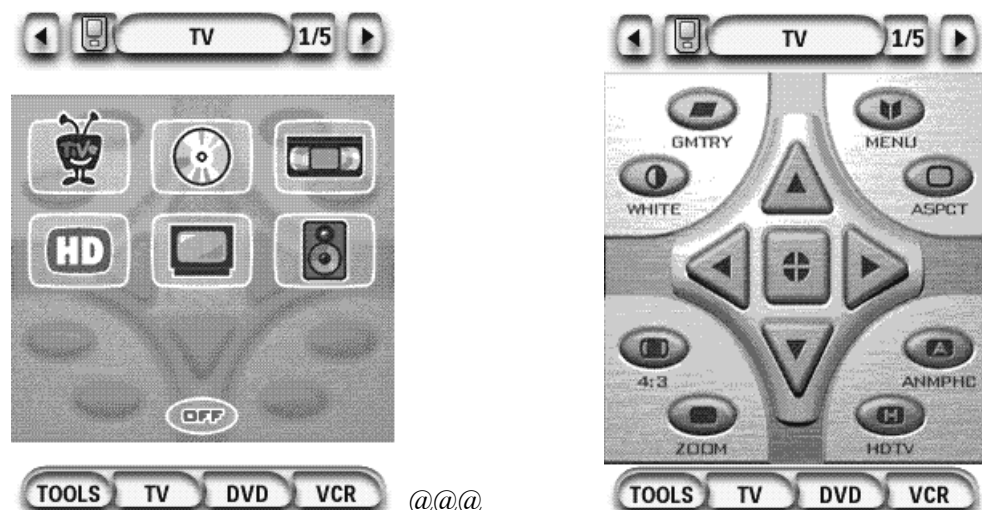



# FAQ





## Why don't my buttons work properly?

When you find that your ProntoPro NG does not send out the commands in accordance with what is indicated on the touch screen, it is advised to recalibrate the touch screen. Calibration enables ProntoPro NG to place the icons on the touch screen in line with their predefined functions.

### Attention

Never use an actual pen, pencil or other sharp object on the touch screen. Use your finger or a pointy object like a plastic-tipped pen intended for use with touch screens.


## How do I calibrate the touch screen?

- 1 Tap the **ProntoPro NG** icon  in the top center of the touch screen. The Tools Menu appears.
- 2 Select  . The first Settings Page appears.
- 3 Press the Page Down hard button at the left side of the ProntoPro NG. The second Settings Page appears.
- 4 Tap  in the second Settings Page. The 'Calibration' screen appears.
- 5 Tap the upper left corner on the touch screen.
- 6 Tap the lower right corner on the touch screen. The touch screen is calibrated.
- 7 Tap the **ProntoPro NG** icon  again to exit the Settings Tool.

## How do I reset ProntoPro NG?

Normally, resetting ProntoPro NG is not necessary. However, if ProntoPro NG's touch screen freezes or if you notice unusual behaviour, you need to perform a reset to get ProntoPro NG running again.

- 1 Slide the battery cover off the back of ProntoPro NG. You can find the **Reset** button in the battery compartment.

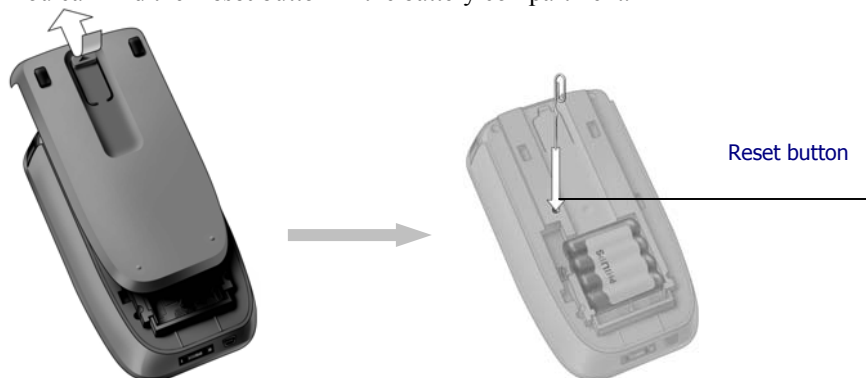

- 2 Use an unfolded paperclip or a sharp pencil to carefully press the **Reset** button. ProntoPro NG restarts. ProntoPro NG beeps twice to indicate it is ready for use.

**Note**

If you reset ProntoPro NG, all personal changes like saved and programmed commands, IR codes, timers and macros are retained. Only the time will be reset to 12.00 am.

**Why does a device respond to some RF signals and not to others?**

Not all commands for all devices work properly with RF signals.

If a device does not respond properly to RF signals sent out by ProntoPro NG, you have to reconfigure ProntoPro NG to operate the device with IR signals.

---

# Troubleshooting

## General Problems

### ProntoPro NG shuts off automatically

This is a timeout feature of ProntoPro NG to save power. You can change the time ProntoPro NG stays active in the Settings Tool.

See “Setting the Timeout of the LCD Screen” on page 26 for more information.

### The touch screen buttons on the ProntoPro NG do not respond properly

If the touch screen buttons on the ProntoPro NG do not respond properly, calibrate the touch screen. See “Calibrating the Touch Screen” on page 28 for more information.

### Devices do not respond to commands from ProntoPro NG

- Make sure the ProntoPro NG’s sending eye is pointed towards the device you are operating.
- Check if the Low Battery icon has appeared on screen. If so, place the ProntoPro NG in the docking station and recharge the battery pack.
- Check if your device understands Philips-Marantz RC codes. Normally you can find this in the documentation of your device.
- Check if you have defined the correct brands for your devices. (p.16)
- Check if you have defined the correct code set for your devices. (p17)
- Check if the button you are trying to use is assigned properly via Brand Tool or via Learn Tool. (p.19)
- Check if your device is in RF mode. Switch your device back to IR mode (p. @@@).
- If you have set up your ProntoPro NG to operate devices with RF signals:
  - Check in the RF IR Tool if the devices you want to operate are set up properly (p.38).
  - Check if the Extender ID and the Channel on your ProntoPro NG match the ID and the Channel on the RF Extender.
  - Make sure the RF Extender is placed near the devices you want to use with RF signals.
  - Make sure that the RF Extender’s sending eye is pointed towards the device.
  - Change the Channel if you notice interferences from other RF channels.
- If you want to use RF signals for devices on different locations, you need more than one RF Extender. See the User Guide of the RF Extender for more information.

## Customizing Problems

### Buttons are not sending the correct commands

- Check if you have defined the correct brands for your devices. (p.16)
- Check if you have defined the correct code set for your devices. (p17.)
- Check if you should calibrate your screen. (p.28)
- Check whether the button of the device is learned properly. (p.19)
- Check whether the macro recorded properly. (p.29)

### Macros do not work

- Make sure ProntoPro NG’s sending eye is pointed towards the device the entire time the macro is being executed.

The sending eye is located at the top of ProntoPro NG.

- Insert delays to allow devices to start up properly.
- Check for inactive buttons in your macro.
- Check if you did not reprogram the buttons. Macros do not store *commands*, they store *buttons*. If you reprogram a button, the macro executes the new command assigned to the button.

### **ProntoPro NG will not learn commands**

- Make sure your ProntoPro NG and the remote control are positioned correctly.
  - When the sending eye of your existing remote control is not pointed towards the learning eye of the ProntoPro NG, ProntoPro NG might not receive the signals properly. Align the remote controls as correctly as possible.
  - When the distance between your existing remote control and the ProntoPro NG is too short or too long, ProntoPro NG might not receive the signals properly. Try out several distances between 10 and 20 centimeters (4 and 8 inches) to learn the commands.
- Avoid programming ProntoPro NG under bright fluorescent light: it might affect the infrared signals.
- Make sure the battery pack in the ProntoPro NG is not empty.

### **The configuration file is corrupted**

When the configuration file is corrupted, you can use ProntoProEdit NG to download a new configuration file. Taken into account that all your customized commands, devices and macros will be lost and you will have to reprogram your ProntoPro NG. Therefore it is recommended to save the configuration by uploading it to the PC with ProntoProEdit NG.

### **Timers do not work**

- Check if the timer has been activated (p. 31).
- Make sure a Start Action for the timer has been defined properly (p. 35).
- Check whether the date and time of your ProntoPro NG are set properly (p. 11).

## **Memory Storage Problems**

Memory storage problems can be the cause of ProntoPro NG not saving a macro. Storage problems can be caused by a full memory or by a low battery pack.

## **ProntoPro NG error messages**

If one of the following error messages occurs, please contact your dealer or the Philips customer service:

- Invalid CF version or corrupt flash;
- Incorrect software version.

When your ProntoPro NG does not respond and the screen stays blank:

- 1 Download the configuration file again.
- 2 When downloading the configuration file again does not work, download the firmware from <http://www.pronto.philips.com>.

## **Connection to the PC**

- Make sure the ProntoPro NG battery pack is sufficiently charged while using ProntoProEdit NG to download or upload.
- Do not pull out the USB cable while uploading or downloading a configuration file.

---

# Maintaining ProntoPro NG

## Important Notices

### **Take care not to scratch the touch screen**

Use your finger to tap the touch screen or use plastic-tipped pens intended for use with touch screen. Never use an actual pen, pencil or other sharp object on the touch screen.

### **Protect ProntoPro NG from temperature extremes**

Keep ProntoPro NG away from heaters and other heat sources.

### **ProntoPro NG is not waterproof**

ProntoPro NG should not be exposed to rain or moisture. Do not store or use ProntoPro NG in any location that is extremely damp or wet.

When you have spilled water on ProntoPro NG, you have to take out the battery pack and let ProntoPro NG dry for 48 hours before you replace the battery pack.


























 













### **The touch screen of ProntoPro NG contains a glass element**



  




 

 

 


















Do not drop ProntoPro NG or subject it to any strong impact.

## Cleaning ProntoPro NG

 - Use a soft, damp cloth to clean ProntoPro NG.
- If the touch screen of ProntoPro NG is spoiled, clean it with a soft cloth moistened with a diluted window-cleaning solution.
- Do not use a corrosive detergent or an abrasive sponge.
- Avoid the use of abundant water.

# List of Symbols

	Pause
	Stop
	Normal run; normal speed
	Normal run; normal speed
	Fast run; fast speed
	Fast run; fast speed
	Slow run; slow speed
	Slow run; slow speed
	Eject
	Recording, general
	Key
	Navigate
	Still mode
	Tape running direction
	Next track
	Previous track
	Fast forward to index
	Rewind to index
	Frame by frame, general
	Frame by frame, general
	Subtitle
	Cancel picture
	Picture-in-picture mode
	Menu
	Picture-in-picture shift
	Picture-in-picture swap
	Multi-picture display
	Picture-in-picture select
	Teletext mode
	Page number up
	Page number down
	Page enlargement
	TV and text mixed
	1 <sup>st</sup> or 2 <sup>nd</sup> language
	Last view; previous program
	Stand-by
	Zone focus: long distance
	Zone focus: very short distance
	Single or multi-digit selection
	Brightness; brilliance

	Contrast
	Brightness/contrast
	Color saturation
	Lamp; lighting; illumination
	Split screen freeze / double screen freeze
	Split screen swap / double screen swap
	Split screen / double screen
	Movie expand
	Personal preference
	Picture-in-picture freeze
	Main index page
	Picture freeze
	Programmable timer; general
	Enter
	Application assistance
	Actual time on screen
	EPG / Electronic Program Guide
	Video output
	Read data from store
	Write data into store
	Page hold
	Sound muting
	Additional information on screen
	Spatial sound effect
	Television; video
	Sound; audio
	Surround sound
	Dolby Digital
	Digital Theater Systems
	Active control

# Specifications

The specifications and design of this product are subject to change without notice.

Display	64k color TFT 3.8" touch screen LCD 320x240 pixels (QVGA) resolution White LED-backlight for LCD and buttons
Interface	USB 1.1-port connector
Software	Database with IR codes to operate more than 800 brands Built-in Philips IR codes Total number of devices only limited by memory
Infrared (IR)	4 high performance IR-sending LEDs, 1 receiver LED Operating distance of approximately 33 ft (10m) Learning frequency up to 78 KHz and 455 KHz
Radio frequency (RF)	Band: 418 MHz 16 Extender ID's and 4 Channels
Memory	16 Mbyte (extendable to 32 Mbyte)
Power management	Power on by tapping the touch screen, by tilting the ProntoPro NG or by pressing a button Power off automatically
Dimensions (HxWxD)	6.07 inch x 3.64 inch x 1.10 inch (154,2mm x 92,4mm x 27,8mm)
Operating temperature	41°-113° F (5° – 45° C)
Accessories	<b>Included:</b> USB cable for PC connection CD-ROM with ProntoProEdit NG software AAA rechargeable battery pack (4x1.2 V) Docking station <b>Not included:</b> RF Extender (RFX6000)
ProntoProEdit NG	<b>PC requirements:</b> Windows 98SE, ME, 2000, XP 64 MB of RAM 75 MB of free hard disk space Free USB Port CD-ROM player

IR-database information:

Redesigned by UEI Technology  
Licensed under U.S. Patent 5,689,353  
Portions © UEI 1999



# Glossary

<b>Action</b>	An action is a command that will be executed by ProntoPro NG. An action can be an IR code, a link, a delay or a beep. You can assign one or more actions to a button or a hard button. It is the same as a macro.
<b>Action list</b>	An action list is a list of actions assigned to a button or a hard button. An action list can contain up to 255 actions.
<b>Animation mode</b>	ProntoPro NG provides navigation feedback through graphical animations. These animations can be found in the Animation mode. You can enable and disable the animations of your ProntoPro NG in the Settings Pages.
<b>Branding</b>	ProntoPro NG contains a list of brands and their according IR codes in its database. ProntoPro NG uses IR codes to control devices. Because there are several brands using specific IR codes, you have to define the brand and code set for each device.
<b>Button alias</b>	See <i>Link</i> .
<b>Button backlight</b>	The Button backlight is a special light source that is placed behind the hard buttons on your ProntoPro NG, enhancing the visibility of these buttons.
<b>Calibration</b>	Calibrating the touch screen enables ProntoPro NG to exactly match the icons on the touch screen with their predefined functions.
<b>Code set</b>	A code set is a list of IR codes. Audio and video devices of different brands use different code sets. A device can only receive and execute functions from the correct code set.
<b>Cursor navigation</b>	There are two ways of navigating through ProntoPro NG: using the touch screen or using the cursor for navigation. When you select cursor navigation, the cursor can only be used for navigating through devices and pages on ProntoPro NG touch screen, not for controlling audio/video equipment.
<b>Delay</b>	A delay is a pause between two actions. A delay gives the device enough time to execute the first action before it receives an impulse to execute a second action.
<b>Device</b>	Every device in the configuration file appears on the Device Overview Page of ProntoPro NG and in the tree view in ProntoProEdit NG. A device represents the equipment you want to control with ProntoPro NG. The device contains a number of pages with buttons.
<b>Device action</b>	A device action is an action that is executed automatically when you select a device. E.g. when you select TV, you can learn your ProntoPro NG to switch on the TV at the same time.
<b>Device Overview</b>	You use the Device Overview on ProntoPro NG to access the different devices. The Device Overview contains buttons for each device in the configuration. By pressing these buttons you navigate to the first page of the selected device.
<b>Device settings</b>	The device settings are the type of device, the brand, the IR code set and the functions. In order to control a device with your ProntoPro NG, you first have to set the device settings.
<b>Device template</b>	You can create a template from a device in ProntoProEdit NG Advanced Mode. When you add a new device on ProntoPro NG, this template will be used.
<b>Firm keys</b>	ProntoPro NG has 4 firm keys located below the touch screen. The label of a firm key is displayed at the bottom of the touch screen. You can configure the functions of the firm keys, just like most hard buttons and the buttons on the touch screen. The strength of the firm keys is that you can also configure their label, so they can always indicate the function assigned to them.
<b>Hard button</b>	A hard button is a button that can be pressed and generates an event. Hard buttons can be found on ProntoPro NG. Their layout and visual aspects cannot be changed. You can configure the functions of the hard buttons, just like the firm keys and the buttons on the touch screen.
<b>IR</b>	Short for infrared.

<b>IR code</b>	ProntoPro NG sends out infrared (IR) signals to operate devices. IR codes for all kinds of video and audio device brands are stored in ProntoPro NG's universal database. By selecting IR codes and assigning them to buttons and hard buttons, you can program your ProntoPro NG to operate your equipment. When IR codes are not present in the database, you can always learn them from the conventional remote control of your equipment.
<b>Label</b>	A label is the text you want to put on a soft button or a firm key.
<b>LCD</b>	Short for liquid crystal display.
<b>LCD backlight</b>	LCD backlight is a special light source that is placed behind the LCD screen, enhancing the visibility of this screen.
<b>Light sensor</b>	The light sensor on your ProntoPro NG causes the backlight to switch on automatically according to the ambient light of your home theater environment.
<b>Link</b>	A link, also called a <i>button alias</i> , is a shortcut from the action list of one button to the action list of another button. Instead of adding the same actions to several buttons or hard buttons, you can create a link and reuse the action list. When your ProntoPro NG is executing an action list and comes across a link, the action list referred to by that link is executed.
<b>Macro</b>	A macro is a sequence of actions executed when pressing a single button on ProntoPro NG. Every button or hard button can act as a macro and perform a list of commands. It is the same as an action list.
<b>Mode animation</b>	When you switch from using the ProntoPro NG to the Tools Menu, the ProntoPro NG icon slides to the top middle of the screen. This is called a 'mode animation'.
<b>Page</b>	A page of a device is the area of 320 by 240 pixels on ProntoPro NG's touch screen containing buttons or other objects.
<b>Page animation</b>	When you switch from one page to another, the first page slides out of the screen and the second page slides in the screen. This is called a 'page animation'.
<b>ProntoPro NG</b>	ProntoPro NG is a universal remote control with a touch screen. You can customize and fully configure ProntoPro NG to your personal needs: the devices you want to operate, the functions you want to perform and the layout on ProntoPro NG.
<b>ProntoProEdit NG</b>	ProntoProEdit is the visual editor for creating and configuring ProntoPro Configuration Files.
<b>RF</b>	Short for Radio Frequency.
<b>RF code</b>	You can choose to operate your devices with RF signals instead of IR signals. To use RF signals, you need an RF Extender. The advantage of RF is that it spreads in all directions and that it pervades walls. In other words, you can operate your devices from an adjacent room.
<b>RF Extender</b>	An RF Extender is a converter box that receives RF signals and turns them into IR signals to operate devices. When your ProntoPro NG sends out RF codes, the RF Extender receives them and sends out IR codes to your devices.
<b>RFX6000</b>	The RFX6000 is an RF Extender that can be used in combination with ProntoPro NG.
<b>Settings Tool</b>	The Settings Tool allow you to consult and adjust several settings, for instance consulting the battery level, setting the date and time, calibrating the touch screen, ...
<b>Simulator</b>	ProntoPro NG simulator is a separate application in ProntoProEdit NG package, which simulates every aspect of your ProntoPro NG. You use ProntoPro NG simulator to test your PCF without the need to download it to your ProntoPro NG. When you make changes in ProntoPro NG simulator, they will not be saved in the configuration file.
<b>Soft button</b>	A soft button is a button that can be found on the touch screen. The layout and the visual aspects of a soft button can be changed. You can also configure the functions of the soft buttons.
<b>Timer</b>	A timer allows you to define actions to be carried out at predefined times. For instance, you can set an alarm or program your VCR to record your favorite daily TV-show.
<b>Touch screen</b>	The touch screen of your ProntoPro NG is the centered area that contains soft buttons you can use to operate the remote control.
<b>USB</b>	USB (Universal Serial Bus) is a "plug and play" interface between a computer and add-

on devices (such as audio players, joysticks, keyboards, telephones, scanners, and printers).

# Index

## A

action	30
action list	
action	30
beep	30
delay	30
Add Tool	23
adding	
action	30
beep	30
delay	30
new device	23
adjusting	
brightness	27
LCD screen timeout	26
volume level	27
animation mode	8
full	28
mode	28
none	28
page	28

## B

battery compartment	6
beep	30
brand	
installing	18
searching	18
selecting	17, 18
Brand Tool	17
button	5
backlight	6
cursor	5, 37
hard buttons	5
labeling	21
learning	20
Page down	6
Page up	6
reset	6
Toggle	37
button action deleting	24

## C

calibrating the touch screen	28
changing	
date	12
time	12
time format	11
channel	
channel down	5
channel up	5
clock settings	<i>See time</i>
code set	
searching	18
selecting	17
connection to docking station	6
copying existing device	23
creating macro	29
cursor	5, 37
navigating	27
cursor navigation	8

## D

date	12
delay	30
Delete Tool	24
deleting	
action in a macro	31
button action	24
device	24
device	
adding	23
copying	23
deleting	24
labeling	22
moving	24
device action learning	20
Device Overview	14
docking station	7
download	40

## E

error message	45
---------------	----

## H

Home Theater Control Panel	5
----------------------------	---

## I

infrared	38
installing brand	18
IR signals	38

## K

keyboard	21
symbols	21
zoom	21

## L

Label Tool	21
labeling	
button	21
device	22
page	22
symbols	21
LCD screen	5
LCD screen timeout	26
Learn Tool	19
learning	
button	20
device action	20

## M

macro	
action	30
beep	30
creating	29
delay	30
deleting action	31
move	31
testing	30

troubleshooting .....	45
Macro Tool .....	29
mode animation .....	28
move action in a macro .....	31
Move Tool .....	24
Moving a Device .....	24

## N

navigation	
cursor .....	27
cursor navigation .....	8, 37
touch screen .....	27
touch screen navigation .....	37

## O

operating the ProntoPro NG	
cursor navigation .....	37
RF signals .....	38
touch screen navigation .....	37
troubleshooting .....	44
Overview	
Device .....	14
Page .....	14

## P

page animation .....	28
page labeling .....	22
Page Overview .....	8, 14
ProntoPro NG	5
adjusting the settings .....	26
appliance .....	5
customizing .....	16
Device Overview .....	14
docking station .....	7
maintaining .....	47
operating .....	14
Page Overview .....	14
resetting .....	42
specifications .....	50
touch screen .....	7
turning on .....	11
USB cable .....	40
USB port .....	40
ProntoProEdit NG .....	40
ProntoProEdit Simulator .....	40

## R

radio frequency .....	38
remote control	
learning .....	19
Remote Control .....	5
resetting the ProntoPro NG .....	42
RF Extender .....	38
RF IR Tool .....	38
RF signals .....	38, 43

## S

screen .....	5, 7
calibrating .....	28
timeout .....	26
searching	
brand .....	18
code set .....	18
selecting	
brand .....	17, 18
code set .....	17
settings .....	26
animation mode .....	28
brightness .....	27
calibrating the touch screen .....	28
date .....	11, 12
LCD screen timeout .....	26
time .....	11, 12
time format .....	11
volume level .....	27
setup .....	26
Simulator .....	40
specifications .....	50
storage problems .....	45
symbols .....	21, 48

## T

testing the macro .....	30
time .....	12
time format .....	11
Toggle button .....	37
Tool .....	16
Add .....	23
Brand .....	17
Delete .....	24
Label .....	21
Learn .....	19
Macro .....	29
Moving .....	24
RF IR .....	38
touch screen .....	5, 7
calibrating .....	28, 42
transparency .....	8
turning on ProntoPro NG .....	11

## U

upload .....	40
USB cable .....	40
USB port .....	6, 40

## V

volume	
mute .....	5
volume down .....	5
volume level .....	27
volume up .....	5
volume level	
hard buttons .....	27
touch screen buttons .....	27

---

# Copyright

© 2003 Royal Philips Electronics NV

*All rights are reserved. Reproduction in whole or in part is prohibited without prior consent of the copyright owner.*