

# TransPhone

## Quick Start Guide

Start Here

Welcome to TransPhone. This Quick Start guide tells you how to set up your TransPhone and use its key features. Once you're up and calling, you can learn even more about TransPhone at <http://www.transphone.cn>.

### TransPhone Overview





## Basics

### On/Off Button

To turn the TransPhone on, press and hold the On/Off Button for 3 seconds.

To turn the TransPhone off, press and hold the On/Off Button for 3 seconds until the popup menu appears. Select "Power off." Then select "OK."

To lock the TransPhone, press the On/Off Button.




### Go to the home screen

You can tap the Home Button to go to the home screen when using apps.

## Using apps

Tap the Home Button to go to the home screen to see your apps, then tap an app icon.

Or, open the Applications List by tapping  at the bottom of home screen. Swipe up and down to scroll in Smartphone Mode, or swipe left and right to scroll in Tablet Mode. Search for your desired app, then tap the app icon to open it.



Applications List  
in Tablet Mode




Applications List  
in Smartphone Mode

## Add app icons to the home screen

Customize each mode's home screen to your liking.

In Smartphone Mode, tap  at the bottom of the home screen to open the Applications List. Press and hold the app icon for 2 seconds until the home screen appears, then drag the app icon to the desired location.

In Tablet Mode, tap  at the bottom of the home screen to open the applications list. Press and hold the app icon and drag it to the "Move to Screen" bar, then drag the app icon to the desired location.

## Add app icons in Tablet Mode



Before dragging



Dragging



After dragging

## Multitasking

While calling, you can access email, documents or other applications, and even surf the web (Wifi or mobile data network connection needed.) To switch apps, go to the home screen, then tap the app you want to open. Or press and hold the Home Button for 2 seconds and switch to recently used apps.



## Notifications

The Notification Center displays all of your notifications, including unread messages, missed phone calls, and notifications from other applications. To open the Notification Center, drag down from the top of the home screen. Swipe the list to see all of your notifications.





Notification Center  
in Tablet Mode



Notification of unread messages  
in Smartphone Mode


## Making a call

Tap phone . Manually dial the number to make a call. You may also tap a contact name or number in your contacts or search, then tap  to call that contact. Tap “End” to end the call.


To receive a call in Tablet Mode, you can use the speakerphone, earphones or a Bluetooth headset. Or, undock the TransPhone from the tablet to answer the call directly. Note: When the TransPhone is in Tablet Mode, you can undock the phone to continue your previous task at any time. Or press the On/Off Button to hang up and transform to Smartphone Mode.




## Send messages

Tap the Messaging  >New message. Type a name or phone number in the “To” field or select someone from your contacts and write your message, then tap “Send”. Or tap Back Button to save as a draft. To send photos, tap the Menu Button and select “Attach” in the popup menu. To delete or forward a message, press and hold your finger on the text, then tap “Delete message” or “Forward.”


## Input method

To change the input method, press and hold the text box on the screen, then tap “Input method” to show all possible input methods. (To enable an installed input method, go to  Settings>Language & keyboard, then tap the input method you wish to select.)

Dock the TransPhone into the tablet. This mode makes the text and images larger. The onscreen keyboard is also larger. Swipe, rotate, type, and touch the tablet’s larger screen with greater accuracy!

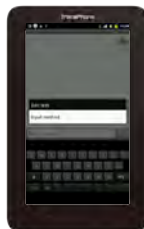

Input method menu  
in Tablet Mode

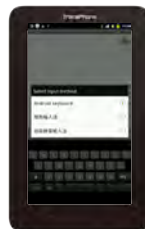

To select the input method  
in Tablet Mode

## Select text

To select text, press and hold the text in the text box, and a menu will pop up. Tap “Select word” to select part of the text or tap “Select all” to select the entire text.



## Cut, copy and paste

Press and hold the selected text, and a menu will pop up. Tap Cut or Copy, the selected text is copied to the clipboard.

Press and hold the insertion point and tap Paste. The last text that you cut or copied is inserted. Or select text and tap Paste to replace the text.



## Setting up email

To set up an email account directly on your TransPhone, use “Email”. In the initial setup, just follow the system instructions to add email account. Note: If you are unable to setup your email properly, please try changing your email port settings.



## Connecting to Wi-Fi WLAN (Wireless Local Area Network)

Go to “Settings” > Wireless & networks> WLAN settings. The available wireless hotspots will be listed. Tap the wireless hotspot you wish to connect to and tap “Connect.” If the wireless hotspot requires a password, please follow the system instructions to enter the password.




## Enable or disable the data connection

You might want to disable the data connection to conserve battery life or restrict data access. When turning off your data connection, you might not receive emails and other messages that require data.

Go to “Settings” > Wireless & networks > Mobile networks. Tap “Data enabled” to enable data access over Mobile network.



## Surfing the web






To surf the web, tap . Enter a web address in the title bar, then tap “>” to start surfing the web. When viewing photos, webpages, email, or maps, you can zoom in and out by pinching your fingers together or apart. Rotate the TransPhone and the display rotates to match your orientation. Your screen will also automatically adjust to fit the new orientation.

Dock the TransPhone into the tablet to instantly quadruple your TransPhone’s screen size and surf the web with amazing clarity!




## Taking photos

Tap  to take a photo and capture the beauty in your life!

-  Set Focus mode, Exposure, Picture size, Picture quality, Color effect, etc.
-  Store Location On/Off
-  Set Flash mode
-  Set Zoom
-  Select camera


Dock the TransPhone into the tablet. In Tablet Mode everything is larger and clearer !

## Viewing photos and videos

Tap  to view your photos and videos. When viewing photos, webpages, email, or maps, you can zoom in and out by pinching your fingers together or apart. You can also set a photo as wallpaper or a portrait of certain contact. If you want to play a video file (not in mp4 format,) please use the ES File Explorer application to setup MoboPlayer, which is stored in the SD card.



## App Store

Tap  to browse, download or setup over 100,000 applications, including games, e-books, videos, traffic navigation, and more.



## Recommended apps

In order to use the TransPhone easily, we recommend the following apps and store them in the SD card. You can use ES File Explorer application to search for the installation file (.apk) and setup the program.

## Themes

Bigger screen, more interesting! In Tablet Mode, tap “Theme setting” on the home screen menu, and you can switch between different themes. You can also tap “More” (data connection needed) to download thousands of themes.

Theme setting  
in Tablet Mode



Theme setting  
in Tablet Mode



## Settings

Tap  to quickly setup your TransPhone.

Wireless and networks	
Airplane Mode	Enable/Disable Airplane Mode
WLAN settings	Set up & manage wireless access points
Bluetooth settings	Manage connections, set device name & discoverability
Portable Hotspot	Share your phone's mobile connection as a portable WLAN hotspot
Mobile networks	Set options for roaming, networks, APNs
Call settings	
Set call forwarding & other call settings	
Sound	Set scene mode, phone ringtone, notification ringtone, etc.
Display	Set Brightness, auto-rotate screen, Screen timeout, etc.
Location and Security	On/Off Use GPS satellites and Set up screen lock, etc
Applications	Manage and remove installed applications, Running services, Storage use, etc.
Accounts & sync	Background data, Auto-sync.
Privacy	Factory data reset
Storage	View the available space or device storage, format SD card, etc.
Language & keyboard	Select language and Keyboard settings
Accessibility	Set Power Button ends call
Date & time	Set time, date and time zone
About Phone	View Status, Battery use or Legal information

## Transforming between modes

When transforming from Smartphone Mode to Tablet Mode, push out the Phone Sliding Dock, then put the phone into it to dock the TransPhone. Note: insert the male data connector of the tablet into the female data connector of the TransPhone with a slight push. Do not undock the TransPhone while transforming.

When transforming from Tablet Mode to Smartphone Mode, pull out the Phone Sliding Dock and undock the TransPhone. The TransPhone will automatically transform to Smartphone Mode. Do not dock the TransPhone again while transforming.

**Note:** if your tablet battery is low, the TransPhone will vibrate when docked into the tablet and will not transform into Tablet Mode. Please charge the tablet beforehand.



## Charging your TransPhone

The TransPhone and the tablet can be connected to a power outlet and charged using the Dock Connector to USB Cable and USB power adapter. You may also dock the TransPhone into the tablet and turn on the charge phone battery switch. The tablet will then charge the phone. At the same time, the tablet can also be connected and charged to a power outlet.

To charge the Phone battery: connect the Phone to your computer using the Dock Connector to USB Cable. The tablet cannot be charged by USB through the computer. Note: Switch the Charge Phone Battery switch logo off when unused for battery saving.

The following times is needed to be fully charged.

	USB power adapter via power outlet	USB dock connector cable via computer
Phone	3.5hours	4hours
Tablet	7hours	-----
Turn on Charge phone battery switch while TransPhone is docked into the tablet	7hours	-----

You can learn more about TransPhone at <http://www.transphone.cn>.

Contact your wireless carrier for technical support on network-related services and billing services.

Visit [www.transphone.cn](http://www.transphone.cn) for technical support on the TransPhone.

Model: TP703

©2012 China Mobile Internet Technologies Inc. All rights reserved.

For the following equipment:

**CE 0700**

Is in compliance with the essential requirements and other relevant provisions of

Directive 1999/5/EC,

The equipment was passed. The test was performed according to the following

European standards:

EN 301 489-1 V1.9.2: 2011-09/ETSI EN 301 489-17 V2.1.1:2009-02

ETSI EN 301 489-7 V1.3.1: 2005-11/ETSI EN 300 328 V1.7.1:2006-10

ETSI EN 301 511 V9.0.2: 2003-03/EN50371:2002

EN62209-1:2006, EN62209-2:2010/ETSI EN 301 489-24 V1.5.1:2010-10

EN62311:2008/ETSI EN 301 489-19 V1.2.1:2002-11

EN50360:2001/ETSI EN 300 440-1 V1.6.1 (2010-08)

ETSI EN 300 440-2 V1.4.1 (2010-08)

ETSI EN 301 908-1 V5.2.1 (2011-05)

ETSI EN 301 908-2 V5.2.1 (2011-07)

EN 60950-1:2006+A11:2009+A1:2010+A12:2011

**CAUTION**

**RISK OF EXPLOSION IF BATTERY IS REPLACED**

**BY AN INCORRECT TYPE.**

**DISPOSE OF USED BATTERIES ACCORDING**

**TO THE INSTRUCTIONS**

Note:

1. Use the mobile phone in the environment with the temperature between -20°C and 45°C, otherwise, it may damage your phone. It can be operating less than 2000m.
2. The product shall only be connected to a USB interface of version USB2.0 or higher and that the connection to a power USB is prohibited.
3. Use careful with the earphone maybe possible Excessive sound pressure level that can harm your hearing.
4. Adapter shall be installed near the equipment and shall be easily accessible.
5. Never shine LED- flashlight or torch into the eyes of humans or animals!
6. The phone should be used at a separation distance of 15mm at least to the body.

## **FCC Ucvgv gpv**

### **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types: TP703(FCC ID:PT8T703) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.712W/kg and when properly worn on the body is 0.667W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.