

A300 RF Keyboard bom List

序號	用量	代號	規格	料號
<i>PCBBE001</i>				
1	1	PCB	1.0T	M66BE003
2	1	BT1	03802-02	M45ZZ008
3	1	C1	47u	ECP0476E00
4	3	C2,C4,C7	0.1u	ECD0104C10
5	1	C3	100p	ECD0103C00
6	3	L4,C5,C17	*	
7	1	C6	7p	ECD0070C70
8	1	C8	1p	ECD0010C70
9	1	C9	6p	ECD0060C60
10	2	C10,C11	*	
11	1	R12	0	ERD0000C20
12	1	C12	*	
13	1	C15	8p	ECD0080C60
14	1	C16	12p	ECD0120C30
15	1	J1	06906-08	M45ZZ007
16	1	J2	6905-26	M45ZZ006
17	2	L1,L3	0.33uH(0805)	ELD0331B00
18	1	L2	12nH	ELD0120C00
19	1	R11	27nH	ELD0270C00
20	4	R1,R2,R3,R6	100K	ERD0104C20
21	1	R4	5.6	ERD05R6C20
22	1	R5	470	ERD0471C20
23	2	R7,R9	10k	ERD0103C20
24	2	R10,R8	47k	ERD0473C20
25	1	S1	DTSF-61N-T/R	ESD0004A
26	1	U1	EM78P451	EID0027A-2
27	1	U3	RTS9169-33CX	EID0050A
28	1	U3	TDA5100	EID0033A
29	1	Y1	4MHZ	EYD0005A
30	1	Y2	13.56MHz	EYP0011B
31	1	TouchPad	TM41P-357	EZX0002A
<i>PCBBE101</i>				
32	1	PCB	1.0T	M66BE102
	2	S2,S3	DTSF-61N-T/R	ESD0004A
	2	J3,J4	6906_08	M45ZZ007