


Conducted Test Setup Placement – User mode



Front View of the Test Configuration

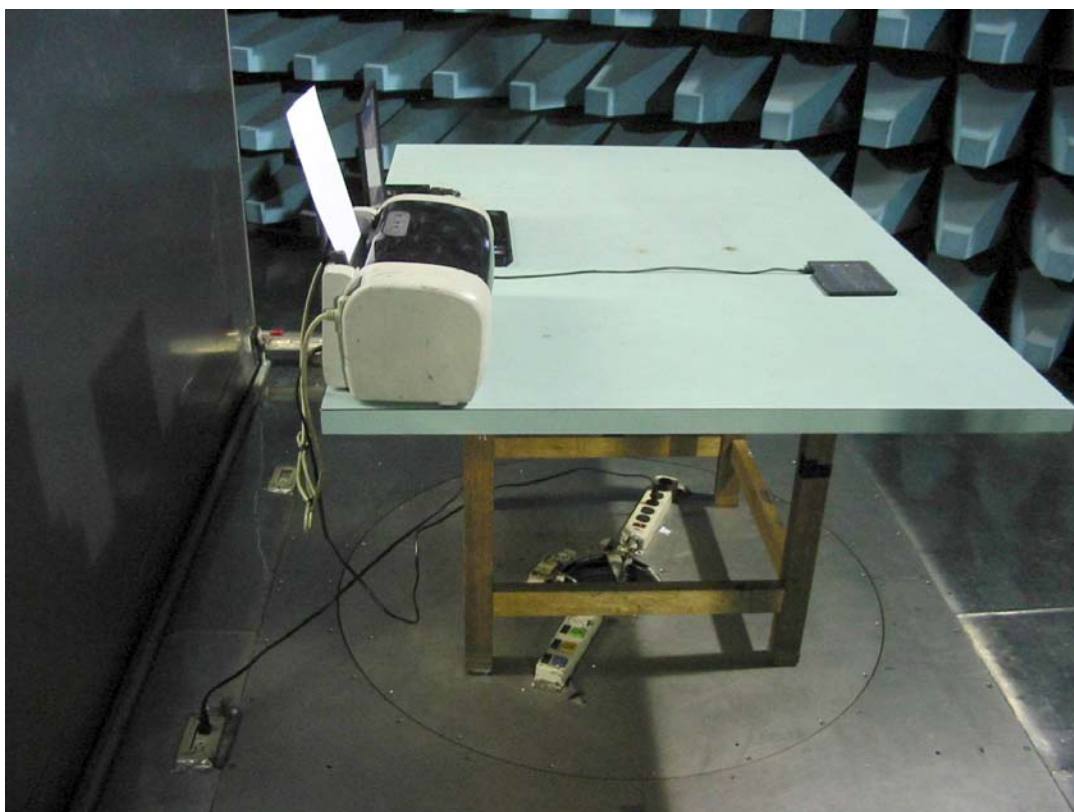


Side View of the Test Configuration

Conducted Test Setup Placement – Test mode




Front View of the Test Configuration

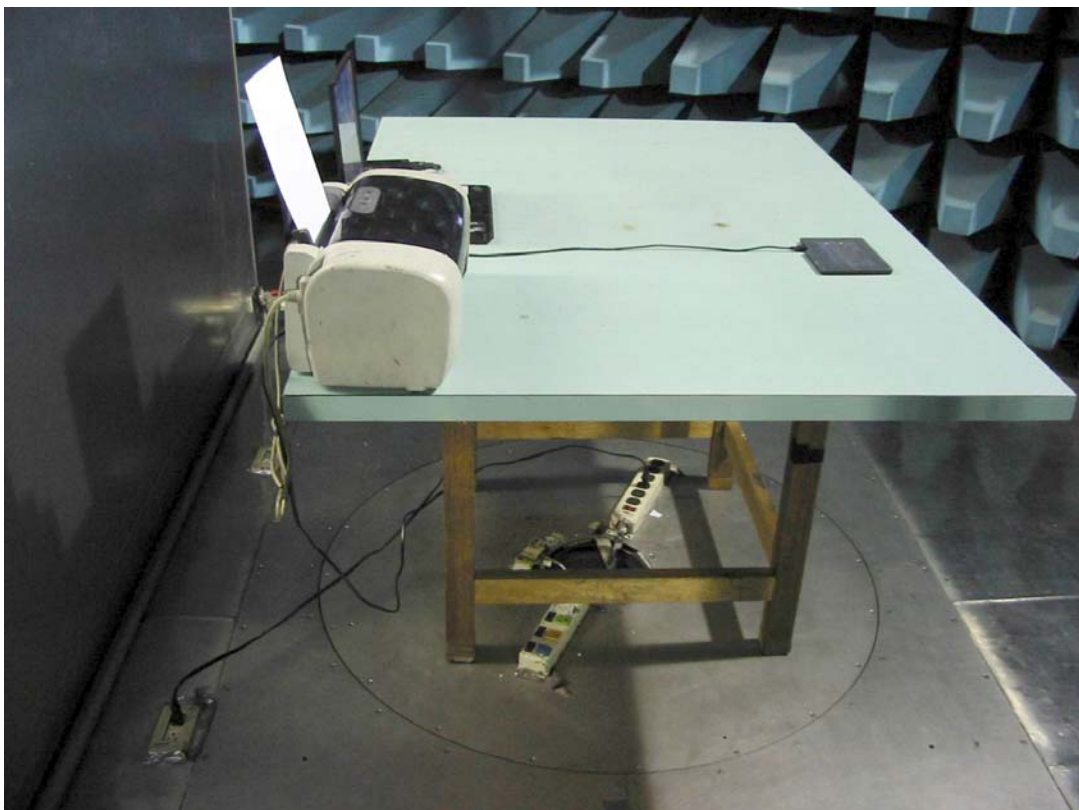

Side View of the Test Configuration

Radiated Test Setup Placement – User mode

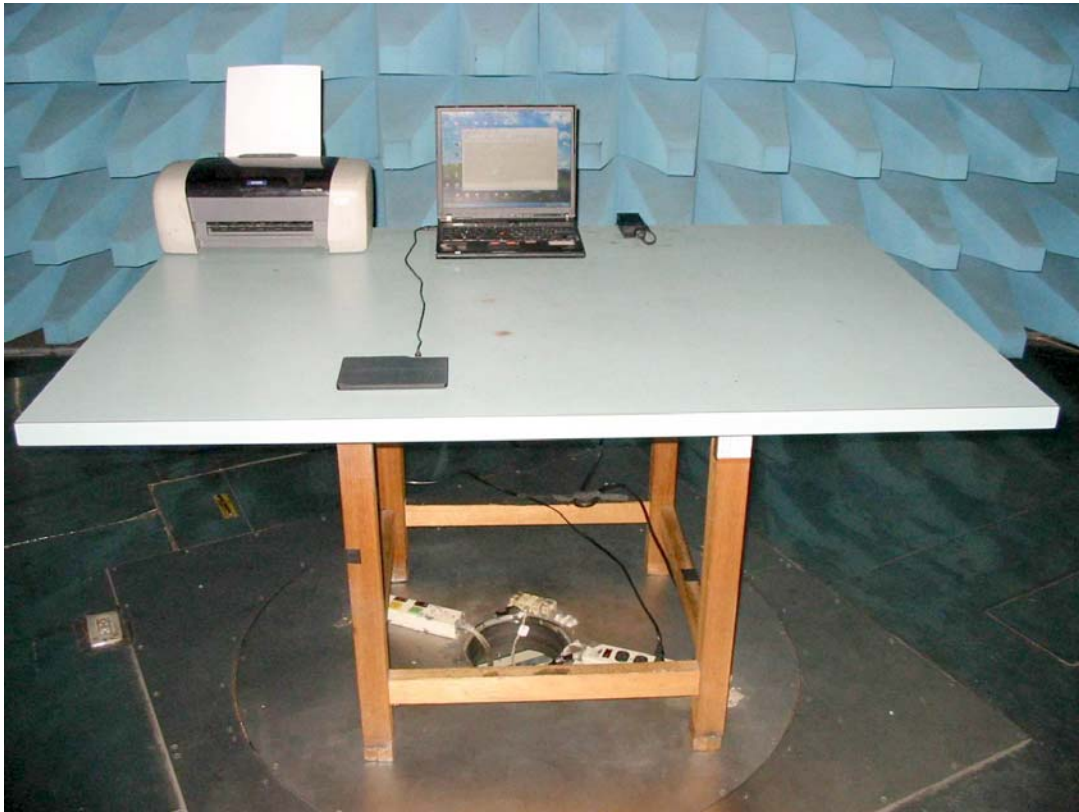


Front View of the Test Configuration




Rear View of the Test Configuration

Radiated Test Setup Placement – Test mode

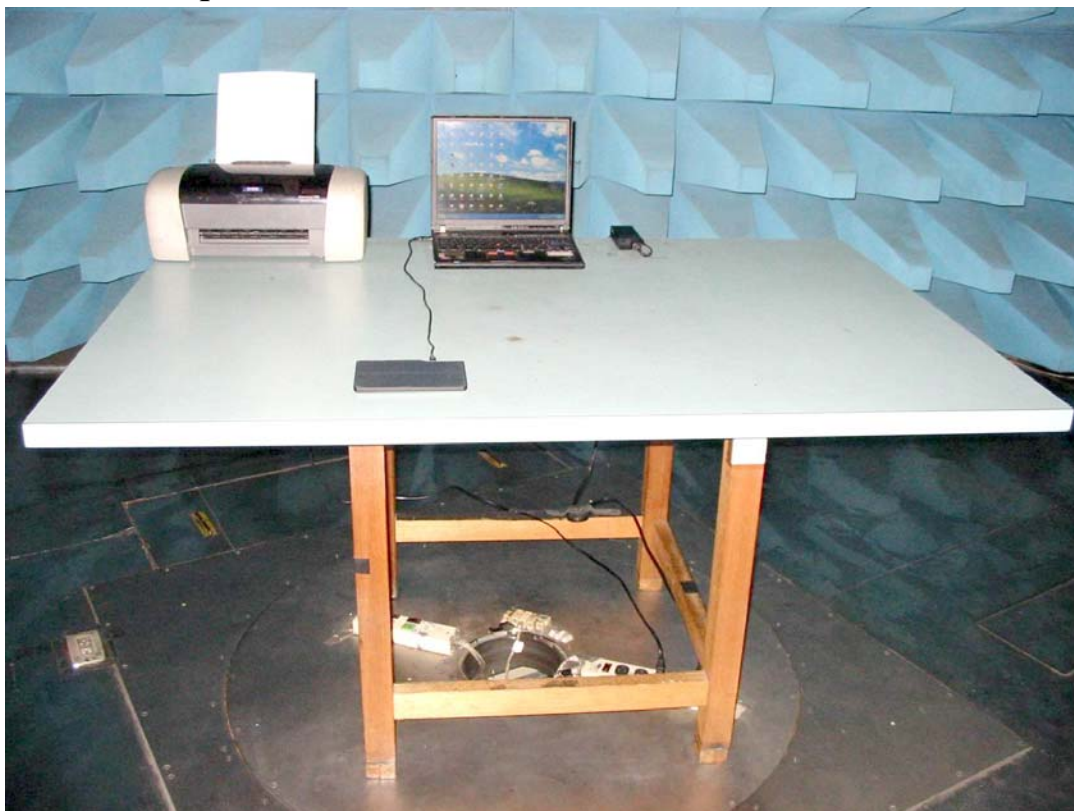

Front View of the Test Configuration

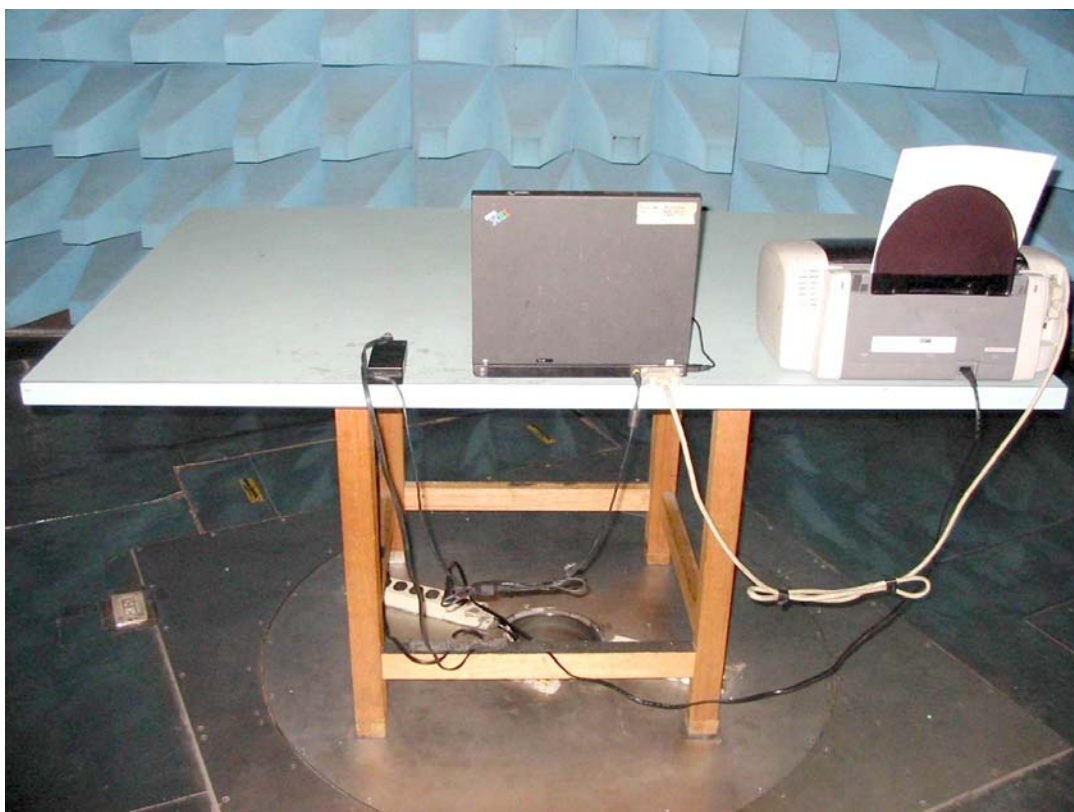

Rear View of the Test Configuration

EUT, Test Antennas and Test site: Test & User Mode



Radiated Test Setup Placement – Only EUT



Front View of the Test Configuration (X-plane)



Rear View of the Test Configuration (X-plane)




Front View of the Test Configuration (Y-plane)



Rear View of the Test Configuration (Y-plane)



Front View of the Test Configuration (Z-plane)

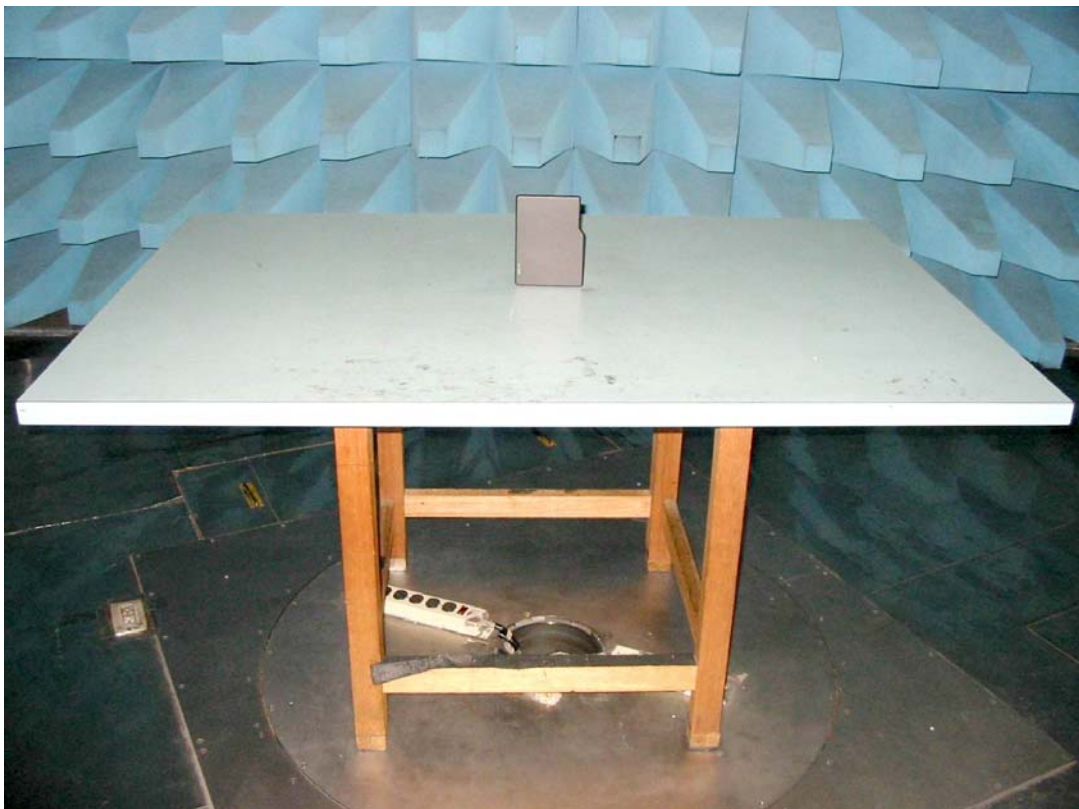

Rear View of the Test Configuration (Z-plane)

EUT, Test Antennas and Test site: Only EUT

