



† THE HF4800 MUST BE SUPPLIED WITH A SEPARATE 48MHz CLOCK WHEN USB IS USED.