


DTXPRO-10U DIGITAL TRANSMITTER


10/29/10 JHC

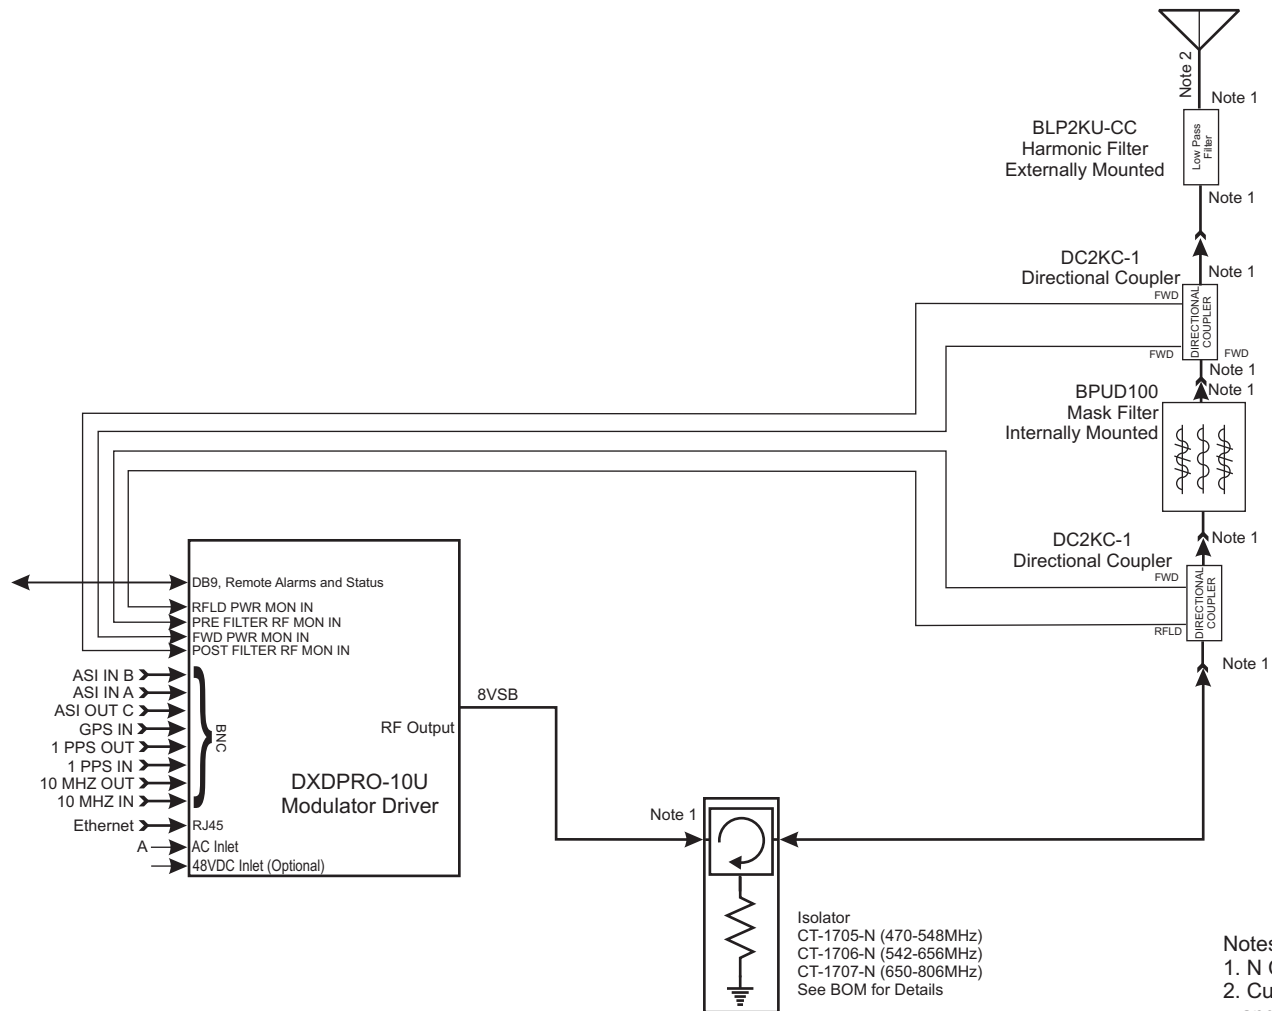

REMOTE ALARM

RJ6	
P1	EXT ALARM 1
P2	EXT ALARM 2
P3	EXT ALARM 3
P4	EXT ALARM 4
P5	EXT ALARM 5
P6	EXT ALARM 6
P7	EXT ALARM 7
P8	EXT ALARM 8
P9	EXT ALARM 9
P10	EXT ALARM 10
P11	EXT ALARM 11
P12	EXT ALARM 12
P13	EXT ALARM 13
P14	EXT ALARM 14
P15	DIGITAL GND

Note:
External Alarms
are TTL type levels.
0= fault
1= clear

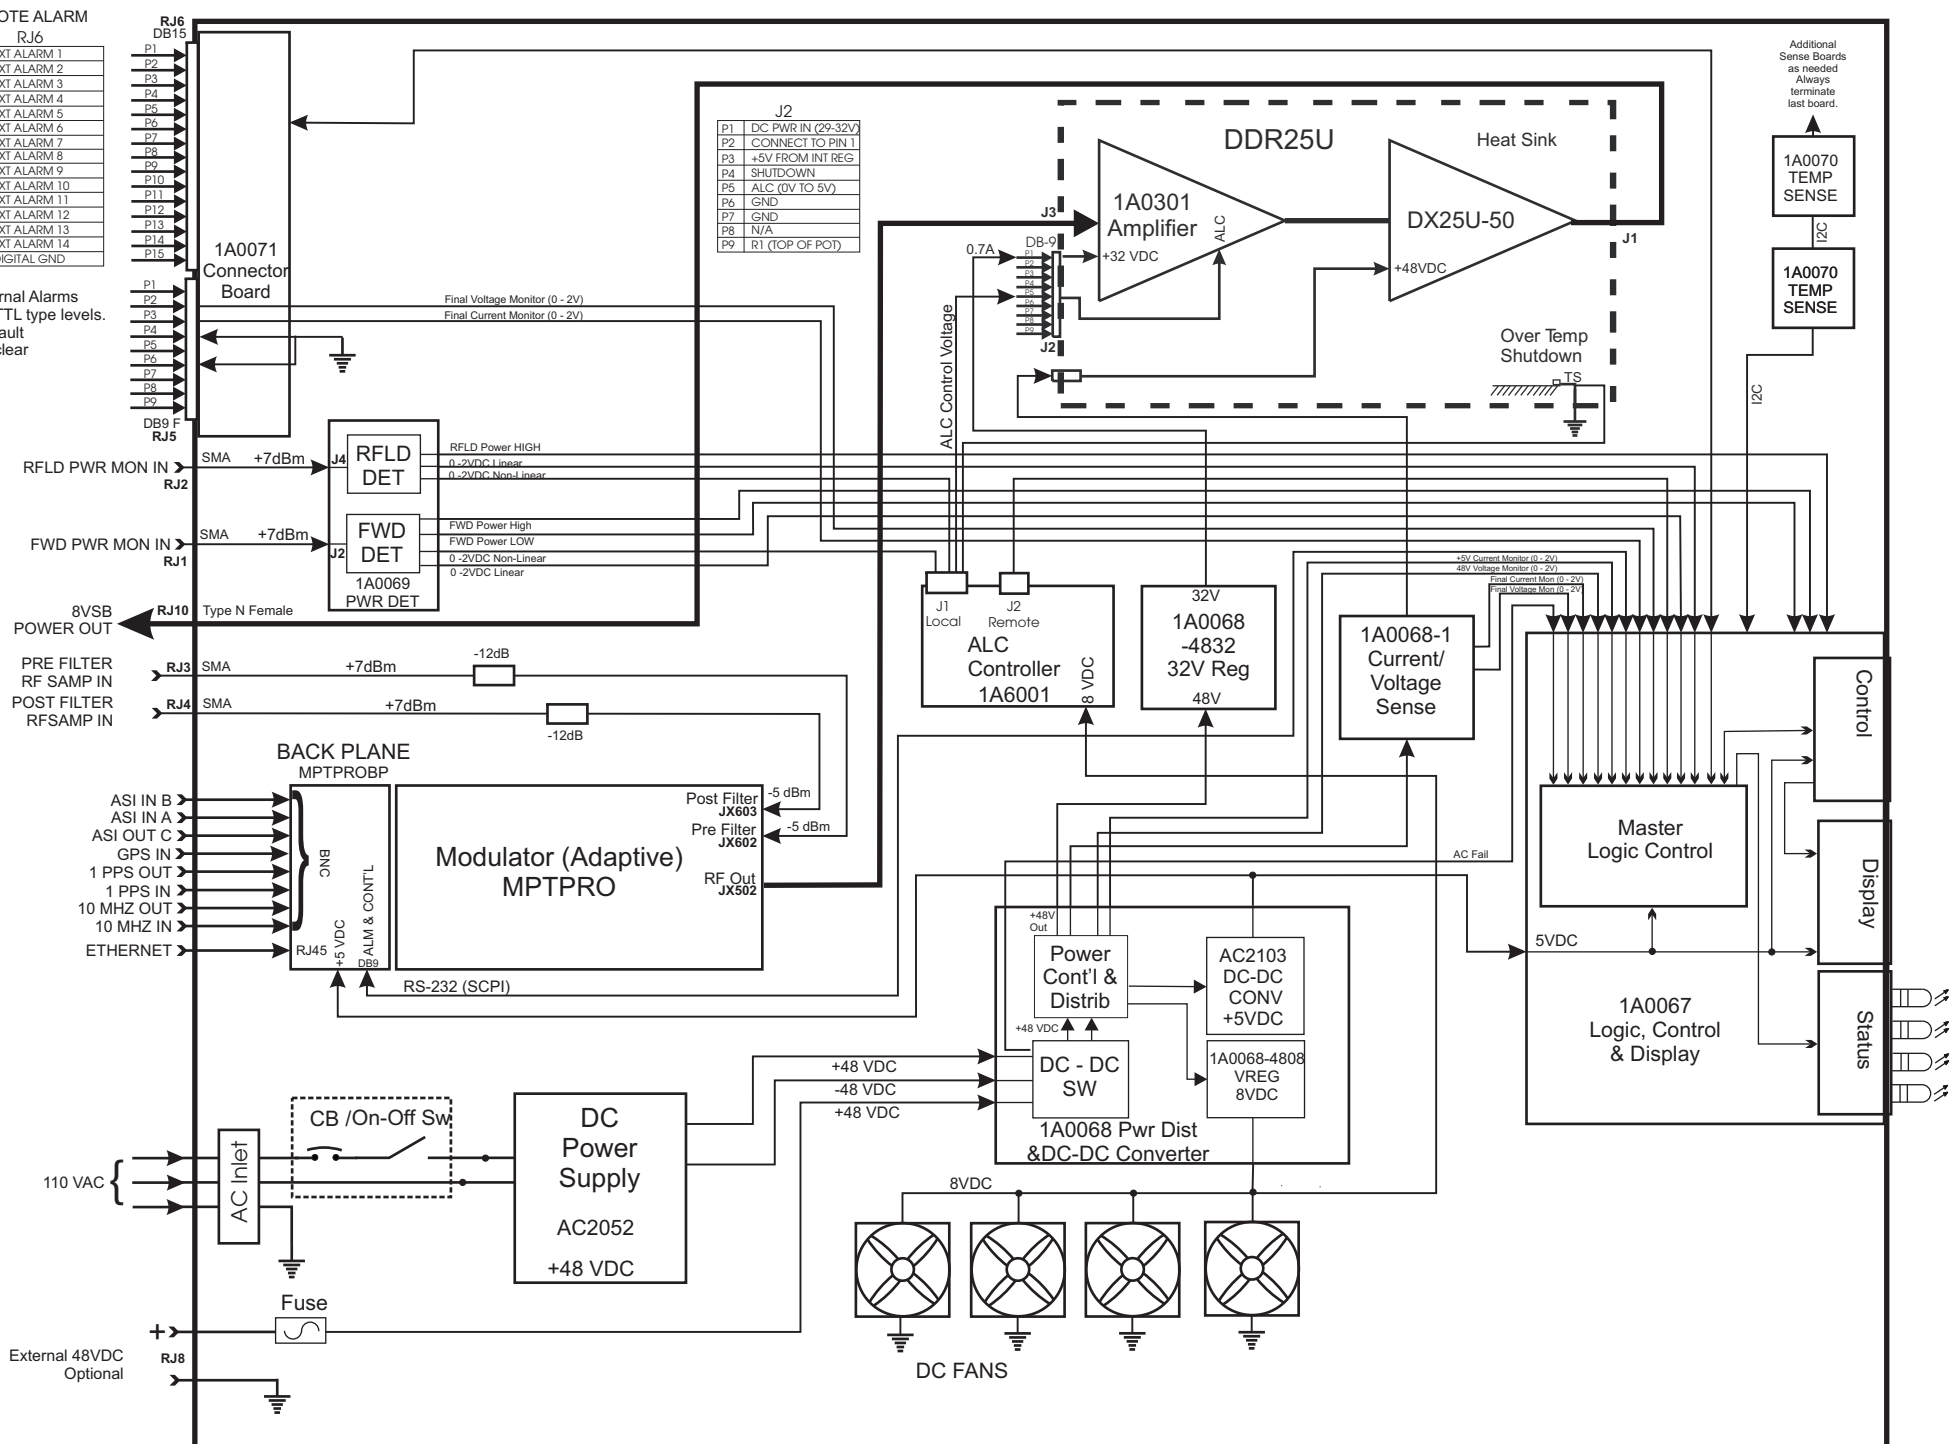

DXDPRO-10U DIGITAL MODULATOR
(Used in DTXPRO-10U and DTXPRO-400U AND HIGHER TRANSMITTERS)