


SENTRY - PUSH TO OPERATE TRANSMITTER - Type : 050510

Front internal views

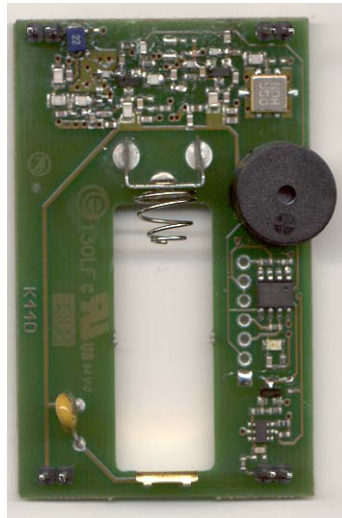

Back internal view



Full circuit

