Quick Start Guide



Follow the easy steps shown inside to get your Trio Media Player up and running.

trio :) mini

Follow the esay steps shown inside to get your Trio Media Player up and running.

STEP 1: CHECK OUT THE CONTROLS

Before you do anything else, take a good look around your trio media player and find out where all the contaol buttons and other items of interest are.




Step 2: CHARGE THE BATTERY

You need to charge up the battery before you use your trio media player for the first time.

Connect the charger to your TRIO, using the USB/Charger cable. The cable plugs in to the USB/Charger Port at the bottom of your Tablet.

	-
USB/Charger Port	t

The connection should look like this:

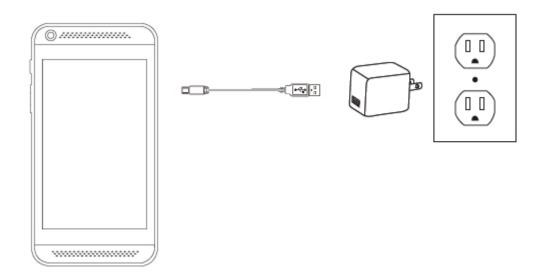

Connect USB cable into a charger (not supplied) or into a USB port on a computer. The screen will display a flashing battery symbol for a few seconds to show that the battery is charging. Keep the battery on charge for 6 to 8 hours to make sure that it is fully charged.

STEP 3: POWER UP

When the battery is fully charged, switch on your TRIO media player. To do this, press and hold the power on/off button until the Trio:) logo appears:



The logo remains until the startup step is finished; the startup screen then appears:



Touch the screen at the lock symbol and swipe sideways. This will unlock your tablet and display the desktop screen. At the bottom of the desktop screen you will see the following symbol:



Touch this symbol and the Apps screen appears. Touch any icon on the Apps screen and it will open the application that you have chosen. You are now up and running!

STEP 4: Installing micro SD card

- 1. Turn the media player on its back and locate the notch at the bottom.
- 2. Use the notch to gently pry open the back cover and reveal the microSD slot.
- 3. Slide the metal lid of the microSD slot away from the edge of the media player and then lift up.
- 4. Place the microSD card into the slot face up.
- 5. Close the metal lid and slide it towards the edge of the media player to lock it.
- 6. Replace the back cover of the tablet.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules.
 Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without RF striction.

More Information

To find out more about your TRIO Tablet and its cool features, check out the user manual on the Trio website:

> www.triotablet.com/manuals Click on:

> > Trio



Limited one year warranty To contact our techical support team call: 844.400.8746

