

Table of Contents 1

Legal notices	3	Set Default Book	36
Safety precautions	5	Address Book	37
Antenna care	7	New Entry	37
Phone operation	7	Change entry	39
Electronic devices	8	Call entry	39
Overview of phone		Show Groups	40
(schematic)	11	SmartChip	41
Display symbols	13	New Entry	41
Getting started	15	Call (search for an entry)	42
Insert SIM card/battery	15	Change entry	42
Charge battery	16	<Other Books>	43
Changing covers	18	Recent Calls	44
Switch on/off, PIN entry	19	Camera	45
Entering the PIN	19	Main Inbox	47
Emergency number (SOS)	19	Start menu	48
General instructions	20	Login	49
Signal strength	20	Contact lists	49
Digital Rights Mgmt. (DRM)	20	Start chat	51
Standby mode	20	Msg. History	52
Main menu	20	Setting	52
Standard functions	22	Text Message	55
Menu speed dialling	23	Write/send	55
Security	24	Read	57
Codes	24	Setting	59
Preventing accidental		Multimedia Msg	61
activation	25	Create	61
Text entry	26	Templates	63
My phone	30	Send	64
Calling	31	Receive	65
Swap between two calls	33	Read	66
		Setting	67

See also Index at the end of this User Guide

2 Table of Contents

Voice message/mailbox	69	Phone Settings	102
Games	71	Set Date/Time	103
Games	71	Connectivity	104
MEdia Mall	73	Security	106
Media Player	74	Network Settings	107
MEdia Net	75	Accessories	109
Internet	75	Mobile Phone Manager	110
Bookmarks	77	Questions & Answers	113
My Account	78	Customer Care	116
My MEdia	79	Care and maintenance	118
Favorites	80	Limited Warranty	119
Organizer	81	Product data	121
Extras	87	Accessories	122
Fast access	92	Quality	124
Settings	94	U.S. FDA	125
Set Ringtones	94	FCC/Industry Canada Notice ...	131
Set Wallpaper	94	Ten driving safety tips	132
Set Screensaver	94	Intellectual property	134
Set Themes	96	SAR (CT66)	135
Audio Settings	96	End user license agreement ...	137
Display Settings	98	Menu tree	142
Call Settings	99	Index	147
Profile Settings	100		

See also Index at the end of this User Guide

Legal notices

The mobile phone described in this guide is approved for use on the GSM and GPRS networks operating on the GSM 900, 1800 (DCS/PCN) and 1900 (PCS) bands. It is approved for use in the country where it was originally sold and may be approved for use in other countries.

© 2004 Siemens Information and Communication Mobile, LLC.
All rights reserved.

Siemens and the CT66 model phone are trademarks or registered trademarks of Siemens AG and/or its affiliates in the United States and/or other countries.

T9® is a registered trademark of America Online, Inc. in the United States. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S and other countries. The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Disclaimer

THE INFORMATION CONTAINED IN THE USER GUIDE IS WRITTEN FOR THE CT66 PHONE. SIEMENS RESERVES THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS TO THE PRODUCTS AND ANY OF THE FEATURES OF THE PRODUCTS DESCRIBED IN THIS DOCUMENT WITHOUT PRIOR NOTICE. THE CONTENTS OF THE USER GUIDE ARE PRO-

VIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. SIEMENS RESERVES THE RIGHT TO REVISE THE USER GUIDE OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE. UNDER NO CIRCUMSTANCES SHALL SIEMENS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

Export Information

The mobile phone may be subject to export regulation of the United States and other countries. Diversion contrary to law is prohibited. You must comply with all applicable export laws, restrictions and regula-

4 Legal notices

tions of the United States foreign agencies or authorities, and may not export, or transfer for the purpose of re-export, the mobile phone or any part of the phone in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.

Network Services

A number of features included in this guide are called Network Services. They are special services provided by wireless service providers. In order to use any of these Network Services, you must subscribe to these service(s) from your service provider and obtain instructions for their use. Some of these Network Services may not be available when roaming on a network other than your home network.

Standby and Talk Time Information

The mobile phone incorporates features that are new to the mobile phone world. These may include color displays and lighting, graphic games, music reproduction and browsing the Internet. The way you use the display and the features will affect the performance of the battery and how long it lasts between charge cycles. The quoted standby times and talk times show the minimum and maximum performance that can be expected from the battery under normal network condi-

tions and with the default settings as set by the factory. However, playing games (particularly with the backlight continuously switched on) and listening to music will shorten the time available for standby and to make and receive telephone calls. Operation times also vary depending on network conditions, SIM settings, charging and battery condition, how you use your phone and other factors.

Memory

The mobile phone contains an internal memory device that stores the software required to operate the mobile phone, communicate with the GSM/GPRS network and provide the user interface. Some features in the internal memory run additional devices and some additional games and utilities. The amount of memory available in the mobile phone is finite and may be insufficient to store large numbers of applications and files.

Warning!

Remember to back up your data and to do so frequently. Always back up all data and programs before sending the mobile phone in for repair.

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in airplanes, gas stations, hospitals or while driving.



Use only original Siemens batteries (100% mercury-free) and charging devices. Otherwise you risk serious damage to health and property: The battery may explode, for instance.



Cellular phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 8 inches (21 cm) between phone and pacemaker. When using the cell phone hold it to the ear which is farthest from the pacemaker. For more information consult your doctor.



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



The ringtone (p. 94), info tones (p. 97) and speakerphone talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the speakerphone function (p. 33). Otherwise you risk serious, permanent damage to your hearing.



Do not open the phone. Only the battery (100% mercury-free) or SIM card may be replaced. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited, as they will invalidate the type approval required for operation of the unit.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].

6 Safety precautions

Important



Please dispose of unwanted batteries and phones as specified by the laws in your country.



The phone may cause interference close to TVs, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the warranty!
These safety instructions also apply to Siemens original accessories.

Product attributes are subject to changes in technology, design and availability.
Siemens reserves the right to modify products without prior notice.

Important

Read this information before using your wireless handheld phone.

As this mobile phone is equipped with a fixed (non-retractable) antenna, some paragraphs in the text below may not be applicable.

Antenna care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone operation

Normal position

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on efficient operation

For your phone to operate most efficiently:

- Extend your antenna fully (if applicable).
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Laws pertaining to the use of mobile phones while driving vary significantly from state to state and sometimes even from locality to locality within states. For example, some areas may allow persons to use their mobile phones only if they employ a hands-free device, and some areas may prohibit the use of cell phones entirely. Accordingly, Siemens recommends that persons check the laws for the areas in which they drive or will be driving. For areas where the use of mobile phones while driving is permitted, Siemens encourages persons to use their phones responsibly and to employ hands-free devices. Also, if using your phone while driving, please:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call, if driving conditions so require.

For vehicles equipped with air bags

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment

is improperly installed and the air bag inflates, serious injury could result.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers' Association recommends that a minimum separation of six inches (6") be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers

- should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- should not carry the phone in a breast pocket;
- should use the ear opposite the pacemaker to minimize the potential for interference;

- should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider or your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturers of your devices to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Turn your phone OFF in any facility where posted notices so require.

Airplanes

FCC and Airline Regulations prohibit using your phone while in the air. Turn your phone OFF when requested by the airline.

Check and comply with the policy of your airline regarding the use of your phone while the airplane is on the ground.

Blasting areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.


Potentially explosive atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include: fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such

as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls (SOS)

Your wireless phone can be used to make emergency calls. You can make an emergency call from the main display screen. Enter the local emergency number such as 911 and then press the  key

This phone, like any wireless phone, operates using radio signals, wireless and landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely on any wireless phone for essential communications (for example, medical emergencies). Remember – to make or receive any calls, the phone must be switched on and be used in a service area that has adequate signal strength. Emergency calls might not be possible on all wireless phone networks or when certain network services or phone features are in use. Check with local service providers regarding their network features.

Always make certain that your phone is properly charged before attempting any emergency calls. If you allow your battery to discharge, you will be unable to receive or make

calls, including emergency calls. You must then wait a few minutes after the charging begins to place any emergency calls.

When making an emergency call, remember to give all of the necessary information as accurately as possible. Remember that your wireless phone might be the only means of communication at the scene of an accident, therefore you should not terminate the call until given permission to do so.

Batteries and Chargers

Only use original Siemens batteries (100% mercury-free) and charging devices. Use of non-Siemens batteries and/or charging devices may cause explosion resulting in serious injury and/or property damage. Use original Siemens accessories in order to avoid possible injury and property damage and to ensure compliance with applicable laws and regulations. Improper use invalidates the warranty.

Battery safety precautions

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions. CONTAINS LITHIUM-ION OR NICKEL-METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this mobile phone.
2. Do not use batteries of different sizes or from different manufacturers in this mobile phone.
3. Do not dispose of the battery in a fire; it may explode. Dispose of used batteries and phones in accordance with applicable laws and safety regulations. Do not expose battery to water. Check with local codes for special disposal instructions.
4. Do not open or mutilate the battery. Doing so may cause damage to the eyes or skin.
5. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conducting material may overheat and cause burns or fire.
6. Charge the battery provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the User's Guide. Do not attempt to charge the battery by any means other than those specified in the User's Guide.

Overview of phone (schematic)


① Call key

Dial displayed/highlighted phone numbers/names, take calls. Show last phone numbers dialed in standby mode.






② On/Off/End key.

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to end.
- In menus: press **briefly** to go back a level.
Press and **hold** to go back to standby mode.
- In standby mode: press and **hold** to switch off phone.




③ Joystick

-  Press the joystick down vertically to start an application or function.



In standby mode:

-  Open Cingular homepage.
-  Open text message editor.
-  Open SmartChip/Addressbook.
-  Open IM.
-  Open My MEdia.

In lists, messages and menus:

-  Scroll up and down.
-  Back a level.
-  Has the same function as the right soft key.

During a call:

-  Set volume.
-  Call options.



④ Soft keys

The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g. X).

- ⑤ Additional symbol to display which function pressing the joystick has in different situations (see p. 14).

12 Overview of phone (schematic)

① Integrated antenna

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

② Loudspeaker

③ Display

④ Infrared interface (IrDA)

⑤ Camera

⑥ Input keys

⑦ Ringtone

- Press and **hold** in standby mode: Switch all audible signals on/off (except alarm).
- Press and **hold on** incoming call: Switch off ringtone for this call only.

⑧ Key lock

Press and **hold** in standby mode: Switch key lock on/off.

⑨ Connection socket

For charger, headset, flash etc.

⑩ Connection for external antenna




 

















⑪ Camera lens







⑫ Mirror (depending on phone model)









Display symbols

Display symbols (selection)










	Signal strength
	Charging
	Battery charge level, e.g. 50 %
	Address Book
	Recent Calls
	Messaging
	Camera
	Settings
	All calls are diverted
	MEdia Mail
	MEdia Net
	My Account
	Ringer off
	Short ring (beep) only
	Ringer only if the caller is stored in the SmartChip.
	Alarm set
	Keypad locked
	Auto answer feature on
T9 Abc	Text input with T9.
	Activated and available
	Registered
	Temporarily interrupted

	Browser offline
	Browser online
	Browser via GPRS online
	Browser no network
	IrDA activated
	IrDA transmission

Events (selection)

	SMS memory full
	MMS memory full
	Phone memory full
	No network access
	Missed call
	Delete assistant

Message symbols (selection)


	Unread
	Read
	Draft
	Delivered
	MMS not sent
	MMS received
	MMS read
	MMS with DRM contents (p. 20)
	Voice mail received


14 Display symbols

Camera symbols


 Brightness

 Zoom factor


 White balance

 Flash connected


Joystick symbols

 Camera

 Delete

 Make call/accept call

 Menu

 Zoom

 
 OK

Getting started


Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.


Press the grooved area ①, then push the battery cover towards the front in the direction indicated by the arrow ②.

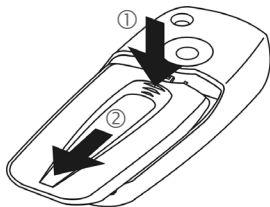

 
- Place the SIM card flat in front of the slot with the contact surface facing **downwards**. Then push the SIM card in using gentle pressure ③ (ensure that the chamfered corner is in the correct position).

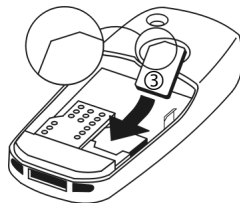

 - Insert the battery sideways into the phone ④, then press it downwards ⑤ until it clicks into position.

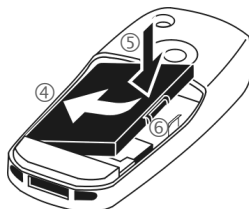

 - To remove, press the hook on the right side ⑥ outwards, turn the phone over, and then shake out the battery.
- Push the battery cover onto the side hooks ⑦, until it clicks into position.

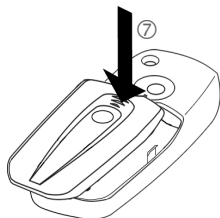

Additional information

Please switch off your phone before removing the battery!

 
Only 3 V SIM cards are supported. Please contact your service provider if you have an older card.

SIM card problemsp. 113

Charge battery

Charging procedure

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.

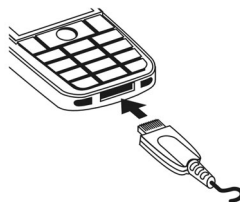

Display during charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C (41 °F to 110 °F). If the temperature rises/falls 5 °C (41 °F) above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 300 minutes

Standby time: 60 to 250 hours

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit supplied!

Display while in service

Charge level display during operation (empty – full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily and where possible not finish the charging procedure early.**

Additional information

 
The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Changing covers


Dismantle the phone

To remove the upper faceplate remove the battery cover (see p.10). Use your fingers to press the side hooks ① and insert your finger nail into the division between the upper and lower faceplates ② to release the hooks in the lower part.

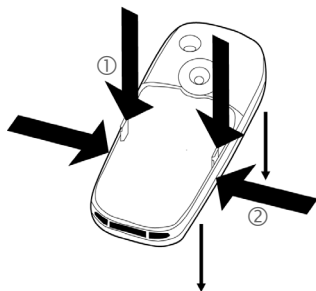


Assemble the phone

 First insert the keypad mat ③ into the upper faceplate. Ensure that it is sitting exactly in place.

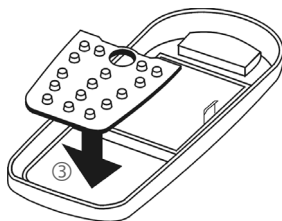

 Insert the phone into the bottom of the upper faceplate ④ and then push it in carefully until it clicks into position ⑤. Finally, replace battery cover (see p. 15).

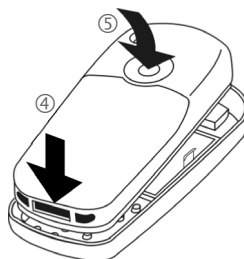

Please switch the phone off before changing the keypad mat or faceplate.

The new keypad has an additional key beneath the joystick to permit direct access to the Internet information from the service provider.

Switch on/off, PIN entry

Switching phone on/off



Press and **hold** the On/Off/End key.

Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct with **C**.



Confirm by pressing the joystick. Logging on to the network will take a few seconds.

Additional information

Change PIN.....p. 24

Clear SIM card barringp. 25

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the **SOS** soft key you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Switching on your phone for the first time

Set Date/Time

Set the clock correctly on a one-off basis when getting started.



Press this key, then select **Change**.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Press. The time and date are updated.

Set Time Zones

Set the time zone for your area.



Select the city in the desired time zone from the list ...

Set

... and set it.

Copy SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time **do not accept incoming calls**. Follow instructions in the display.

You can also copy data from the SIM card at a later time (p. 42).

General instructions

Signal strength



Strong receiving signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your phone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc. (see also p. 71).

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Press and **hold** the On/Off/End key to return to standby mode from any situation.

In standby mode, the left soft key opens the main menu (p. 20) and the right soft key opens the standby mode options menu.

Standby mode options

Press **Menu**, then press **Options**.

Different functions are available depending on the context.

Voice Mail, Messaging, Games, IM, Speed Dial List, Recent Calls, My MEdia, Address Book, Settings

Main menu

The main menu is displayed graphically with symbols.

Menu

Call up from standby mode:



Select the application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context.

Ring Tones	Takes you to Ringtones folder where you can select specific ringtones for calls.
Wallpaper	Takes you to Wallpaper folder where you can select different Wallpaper for the phone.
Screen Saver	Allows you to select your Screensaver.
Games	Games Folder will open.
Applications	Applications folder will open.
Illumination	Set display illumination to brighter/darker.
Large Font	Select between two font sizes.

Operating instructions


Menu controls

The steps needed to reach a function are shown in a **condensed form** in this user guide, e. g., to display record of missed calls in condensed form:

Menu →  → Missed Calls

This comprises the following steps:

Menu Open main menu.

→ Select (highlight)  by moving the joystick upwards, then press vertically down on the joystick before using the joystick to highlight **Messaging**.



Confirm. The record is opened.

Symbols

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key



Call key



Soft keys



Displays a soft-key function.

The joystick can be moved in 5 directions.



Press the joystick vertically, e.g., to call up the menu.



Press the joystick in the direction indicated.




Function dependent on service provider, may require special registration.


Standard functions

Option menus

Functions which appear repeatedly in the options menu are listed here.

Options Open menu.

Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete All	Delete entry / delete all entries after confirmation.
Add New Name	Create new entry.
Send...	Select transmission service and medium for sending.
Reply/ Re- ply to All	The sender becomes the recipient. The received text is transferred into the new message.
Save	Store entry.
Save to 	Save recipients in the current address directory.
Sort	Set sort criteria (according to alphabetical order, type, time).
T9 Input (p. 26)	T9 Preferred: Activate/deactivate T9 input. Input Language: Select language for text.
Rename	Rename selected entry.
Check Memory	Display memory capacity.
Help	Display help text.

Settings	Open Settings menu.
MEdia Mall	Open MEdia Mall menu.
Set To Group	Set to a specific group in the Addressbook.
Start IM	Open the chat room.
Copy To  Copy To SmartChip	Copies name and number to the Addressbook or SIM card (SmartChip).
Go to...	see p. 75
Bookmarks	see p. 75
Reload	see p. 75
Show URL	see p. 75
History	see p. 75
New Folder	Create and name new folder.
Master Reset	see p. 102
Profile Settings	see p. 100
Call Settings	see p. 69
More Settings	see p. 104

Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence. These numbers are shown in the top right of the display.

E.g., write new SMS
(from standby mode):



Press to display the main menu. Then press



for **Messaging**, then



for **Create New Msg**, then



for **Text Message**.

Security

The phone and SIM card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

Codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

Menu →  → **More Settings**
→ **Security**
→ Select function.



PIN Control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone together with your SIM card. Some service providers do not permit deactivating the control.

OK Press.
 Enter PIN.
 Confirm input.
Change Press.
 Confirm.

Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.

 Enter **current** PIN.
 Press.
 Enter **new** PIN.
 Repeat **new** PIN.

Menu →  → More Settings
 → Security
 → Select function.

Change PIN2

(Display only if PIN2 is available).
 Proceed as for **Change PIN**.

Chg.Phonecode

(Change phone code)

You define the phone code (4 to 8 digits) when you call up a phone-code protected function for the first time. It is then valid for all phone code-protected functions. Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service (p. 116).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN control is deactivated (p. 24) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press and **hold**.



Press. The phone switches on.

Cancel

Press this key or take no action. The phone does not switch on.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance.

Example:



Press **once briefly** to write the letter **a**, twice to write **b** etc.

Press and **hold** to write the number.

Ä, ä, 1-9

Umlauts and numbers are displayed after the relevant letters.



Press **briefly** to delete the letter before the cursor; press and **hold** to erase the whole word.



Move the cursor (forwards/back).



Press **briefly**: Swap between abc, Abc, T9abc, T9Abc, T9ABC, 123. Status shown in top line of display.

Press and **hold**: All input-variants are displayed.



Press **briefly**: Special characters are shown.

Press and **hold**: Open input menu.



Press **once/repeatedly**:

., ? ! ' " 0 + - () @ / : _

Press and **hold**: Writes 0.



Writes blank.

Press **twice** = line break.

Special characters



Press **briefly**. The symbols chart is displayed

1)	¿	¡	_	;	!	?	,	.
+	-	"	'	:	()	/	*
¤	¥	\$	£	€	&	#	\	@
[]	{	}	%	~	<	=	>
	^	§	Γ	Δ	Θ	Λ	≡	Π
Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.



Confirm.

Input menu

With text input:



Press and **hold**. The input menu is displayed:

Set Text Format (SMS only)
Input Language
Mark
Copy/Insert

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

T9 Input Select.

T9 Preferred
 Select.

Change Activate T9.

Select input language

Select the language in which you want to compose your message.

Options Open text menu.

T9 Input Select.

Input Language
 Select.

OK Confirm. The new lang is set. Languages with T9 support are marked with the T9 symbol.

Writing with T9

The display changes as you proceed.

It is therefore best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:



Press briefly for T9 **Abc** then



A blank space or moving to the right ends the word.

Do not use special characters such as Ä. Use the standard characters instead, e.g. A; T9 will do the rest for you.

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;
 Canadian Pat. No. 1,331,057;
 United Kingdom Pat. No. 2238414B;
 Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383;
 Euro.Pat. No. 0 842 463 (96927260.8)
 DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;
 and additional patents are pending worldwide.

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be shown **highlighted**. Then press



The displayed word is replaced with a different word. If this word is also incorrect, press



Press until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

To add a word to the dictionary:

Learn Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

Correct a word



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.



Deletes the last character in a word **and** displays a new possible word.

Additional information

Within a "T9 word", individual letters may not be edited without first removing the T9 status. In most cases it is better to rewrite the complete word.



Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **Provider.s** = provider's.



Moving the cursor to the right ends the word.



Press **briefly**: Swap between **abc**, **Abc**, **T9abc**, **T9Abc**, **123**. Status shown in top line of display.

Press and **hold**: All input modes are displayed.



Press **briefly**: Select special characters (p. 26).

Press and **hold**: Opens input menu (p. 27).


Text Templates


Text Templates can be stored in the phone for adding to your messages (SMS, MMS).

Write Text Templates


Menu →  → Text Templates

Options Select New Text.

 Write Text Templates.

Options Open menu and select **Save**. Accept the specified name or allocate a new one.
 Save.


Use Text Templates

 Write message (SMS, MMS).


Options Open text menu.

Insert Select.

 Select **Text Templates**.

 Select text module from the list.

OK Confirm. The text module is displayed.

 Confirm. The text module is inserted in the message to the right of the cursor.

My phone

Adjust your phone according to your own wishes in the following ways to give it a personal touch:

Ring Tones (p. 94)

Assign individual ringtones to caller groups or special dates.

Pictures (p. 79)

Assign individual pictures or photos to your Addressbook entries.

Animations (p. 98)

Choose a start-up and closing animation as well as a personal greeting.

Screensaver (p. 94)

Choose an analogue or digital clock, or a personal picture.

(Operator) Logo (p. 98)

Choose an individual picture (to be displayed in standby mode).

Wallpaper (p. 94)

Choose your own permanent background image.

Colour scheme (p. 98)

Select a colour scheme for the user interface.

Applications (p. 71)

Download your own applications from the Internet.

Where do I get what?

You can purchase additional ringtones, logos, animations and Java applications from your service provider or directly from Siemens.

Service provider portal

Depending on your service provider, you will find direct access to his portal on your telephone via menu items or bookmarks. Please contact your service provider for more information on these services.

Siemens Mobile Portal

You will find additional ringtones, logos, animations and screensavers as well as more application, games and services on the Internet at this address:

www.siemens-mobile.com

Or you can download them directly via Browser:

wap.siemens-mobile.com

You will also find a service for saving data here as well as a list of the countries in which these services are available.

My menu

Create your own menu (p. 80) with frequently used functions, phone numbers or Browser pages.


Calling

Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with dialling code/inter-national dialling code).

 A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key.
The displayed phone number is dialled.

End call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

Set volume



Regulate the volume (only possible during a call).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the phone number from the list, then to dial press the ...



... key.

If the number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto. redial

Auto Dial The phone number is dialled automatically up to ten times at increasing time intervals. End with:



End key.

Or

Callback**Callback**

Your phone rings when the busy number is free. Press the Call key to dial the number.

Reminder**Prompt**

A beep reminds you to redial the displayed phone number after 15 minutes.

Additional information

Store phone number in the Addressbook/SmartChip.

Speaker

Switch on Speakerphone (playback through loud-speaker).

Always switch off "handsfree talking" before holding the phone to your ear. This will avoid damage to your hearing.



Press and **hold** to switch microphone off.

International dialling codes

Press and **hold** until a "+" is displayed.

Country

Press and select country.

Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

Accept call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press.

Or



Press.

A phone number transmitted by the network is displayed, along with the associated name (where applicable with picture) if this is stored in the SmartChip/Addressbook (p. 38).

Reject call**Reject**

Press.

Or



Press **briefly**.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Additional information

Press and **hold** to switch off the ringing tone and vibration.



Missed call display.

Speakerphone

You can put the phone down during a call. You can then use the loud-speaker to hear the caller.

Speaker Activate handsfree talking.



Switch on.



Use the joystick to adjust the volume.

Speaker Deactivate.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

Swap between two calls



Establish a second connection

You can call another number during a call.

Options Open call menu.

Hold The current call is put on hold.



Now dial the new phone number or select

Options, SmartChip/Addressbook, and select phone number.

When the new connection is established:

Toggle Swapping between calls.

Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 99). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

- **Accept the waiting call in addition to the first.**

Toggle Accept the waiting call, putting the current call on hold to do so.

Always proceed as above to swap between the two calls.

- **Reject the waiting call**

Reject Press.

Or

Forward The waiting call is diverted, for example, to the mailbox.

- **Accept the waiting call and end the current call**



End the current call.



Accept new call.

End call(s)



Press the End key.

After the **Return to held call?** display, you have the following selection:

Yes You accept the call on hold.

No You end the second call.

Conference



Call up to 5 parties one by one and link them together in a multiparty call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established:

Options Open menu and select **Hold**. The current connection is maintained.



Now dial a new number. When the new connection is established ...

Options ... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End


 


All calls in the multiparty conversation are ended when the End key is pressed.

Call options

The following functions are only available during a call:

Options Open menu.

Hold	Hold current call.
Microphone On	If switched off, the person on the other end of the line cannot hear you (muting). Also:  Press and hold .
Speakerphone	Call via the loudspeaker.
Volume	Adjust handset volume.
Set Default Book	Display SmartChip/Addressbook.
Conference	(See p. 34)
Time/Charges	Display talktime that has elapsed so far and (if set) cost incurred during the call.
Send DTMF	Enter control codes (numbers) for remote inquiries to an answering machine.
Call Transfer 	Connect the original call with a second call. For you, both calls are now ended.
Main Menu	Access to the main menu.
Call Status	List all held and active calls (e.g. participants in a conference).

Control codes (DTMF)

You can, for example, enter control codes (numbers) for remote access to an automatic answering machine **while another connection exists**. These entries are transmitted directly as DTMF codes (control codes).

Options Open menu.

Send DTMF

Select.

Using the SmartChip/Addressbook

Store phone numbers **and** control codes (DTMF codes) in the Smart-Chip/Addressbook in the same way as a normal entry, see p. 36.



Enter phone number.



Press and **hold** until a "+" appears in the display (wait for the connection to be established).



Enter DTMF codes (numbers).



If necessary, wait again for three seconds at a time for the receiver to process the entries safely.




Enter a name.

Save

Store entry.

You may also store just the DTMF codes (numbers) and then send them during the call.

Set Default Book

Menu →  → Select function.

Show Entries

The entries in the default book (Addressbook or SmartChip) are shown.



Select a name with the first letter and/or scroll.

New Entry

Create new entry.

Address Book (see also p. 37)

SmartChip (see also p. 41)

Set Default Book

You can set which directory you prefer to use.

The selected default book is opened in standby mode with the joystick.



Open SmartChip or Addressbook

Address Book

A lot of data can be recorded in the Addressbook for each entry, and additional functions (e.g., pictures, birthdays) can be used.

SmartChip

The SmartChip is located on the SIM card. Only one phone number can be entered per entry. The SmartChip on the SIM card can easily be transferred into a different phone.

Show Biz Card

Create your own business card to send to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.

Save

Press.

Additional information

The content of the business card and the Addressbook entries correspond to international standards (vCard).



Copy numbers from Addressbook/SmartChip.

Show Groups

See p. 40.

<Info Numbers>

See p. 43.

Address Book

The Addressbook can store up to 1000 entries, each with a variety of phone numbers and additional address details. These entries are managed separately from those in the SmartChip in the phone memory. However, you can exchange data between the Addressbook and the SmartChip on the SIM card.

New Entry

The Addressbook is set as standard:



Open Addressbook
(in standby mode).



Display input fields.



Select required input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name must be entered. Always enter phone number with dialling code.

Possible input fields

Last name:	URL:
First name:	IM >>
Phone number:	Group:
Phone/Office:	Company:
Phone/Mobile:	Address: >>
Fax:	Birthday: >>
Fax 2:	Picture:
E-Mail address:	
E-Mail 2:	All Fields

Additional information

Group: Assignment to a group (p. 40).

Address: Extension to enter the complete address:

Street:, Zip Code:, City, State:, Country:

IM Information if the entry is being used as a chat room contact (p. 48):

Nickname:, WV user ID:, ICQ number:, AIM screen name:

38 Address Book

Birthday: After activation, the date of birth is entered.

Reminder: The phone reminds you at the time entered one day before the birthday.

Picture: Assign a picture to the entry. It is displayed if you are called by one of the corresponding phone numbers.

All Fields/Reduced Fields

Displays the required input fields.

Save

Save the entry.

Additional information



Temporary switch to SmartChip.

Synchronisation

You can use the mobile phone manager (p. 110) to synchronise your Addressbook with Outlook® and other Siemens telephones.

Using **Remote Sync.** you can synchronise your mobile with an organiser stored on the Internet (see also p. 90).

Completing phone numbers

see p. 43

Display/find entry



Open Addressbook (in standby mode).



Select required entry.



Display.

Display options

Options

The options menu only offers the functions for the currently selected input field.

Move To ...	Assign current entry or highlighted entries to a group.
View	Display an assigned picture.
Copy To SmartChip	Copies name and one phone number to the SIM card (SmartChip).
New Text Msg, New Multimedia	Create a message with the selected entry.
Browser	Start Browser and visit URL.
Com. Services	Begin dialogue, p. 48.
(For standard functions see p. 22)	

Change entry



Open Addressbook
(in standby mode).



Select required entry.



Press.



Select input field.



Open entry if necessary.



Make changes.



Save.

Call entry



Open Addressbook
(in standby mode).



Select a name with the
first letter and/or scroll.



The number is dialed.

If there are several numbers in the
address book entry, these are of-
fered for selection.



Select phone number.



The number is dialed.

Addressbook options

Depending on the actual situation,
different functions will be offered.
These functions can be applied to
the entry currently selected as well as
to multiple selected entries:

Options Open menu.

Move To ...	Copy current entry or high- lighted entries to a group.
--------------------	--

Copy To SmartChip	Copies name and number to the SIM card (SmartChip).
------------------------------	--

Filter	Only those entries which match the filter criteria are displayed.
---------------	---

Import	Set up readiness to receive for a SmartChip entry via Ir- DA (p. 104) or SMS (p. 55).
---------------	---


Sort	Specify sorting criteria for output of the Addressbook entries.
-------------	---

Search	Enter search term.
---------------	--------------------


(For standard functions, see p. 22)

Show Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.

 Open Addressbook (in standby mode).

<Groups> Select (the number of entries is listed behind the group name).

 Select group.

Groups menu

Options Open menu.

Rename Group	Change name of group.
Group Symbol	Assign a symbol to a group. The symbol must then appear in the display when one of the group members calls.

Additional information

No Group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).


Received: Contains Addressbook entries received by IrDA (p. 104) or SMS (p. 55) (name cannot be changed).


Ringtone for group


Assign a ringtone to a group that plays when one of its members calls you.

Menu →  → **Set Ringtones**
→ **Group Calls**

 Select group.

 Confirm. If a ringtone has already been set, it will be played. Otherwise, the ringtone list will be displayed and you can select one.

 If necessary, select a ringtone.






 Confirm.

SmartChip

Entries in the SmartChip (on the SIM card) are managed separately from the Addressbook. You can, however, exchange data between the SmartChip and the Addressbook.

New Entry

If the SmartChip has been selected as standard:

-  Open SmartChip (in standby mode).
-  Select <New Entry>.
-  Display input fields.
-  Select input field.
-  Fill in input fields.
The maximum number of characters available is shown at the top of the display.

Phone number:

Always enter phone number with dialling code. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default **No Group**

Important phone numbers may be combined in a group (VIP).

Location:

Default **SmartChip**

Special SIM cards can save phone numbers in a protected area (**Protected SmartChip**) (PIN2 required).

Record #:

Each entry is automatically assigned a record number. You can also dial using the record number.

Save

Press to store the new entry.

Additional information



Temporary switch to Addressbook.

Country

International dialling codep. 32

Functions related to Text entryp. 26

Call (search for an entry)



Open SmartChip.



Select a name with the first letter and/or scroll.



Phone number is dialed.

Call using record no.

A record number is automatically assigned to every new entry in the SmartChip.



Enter record number.



Press.



Press.

Change entry



Select entry in SmartChip.



Press.



Select input field required.



Make changes.



Press.

SmartChip options

The following functions are available, depending on the current situation.

Options Open menu.

Copy To	Copy all highlighted entries to the Addressbook.
Copy All to	Copy all entries to the Addressbook.
Delete All	The whole SmartChip is deleted. PIN-protected.
Import	Set up readiness to receive for a SmartChip entry via IrDA (p. 104) or SMS (p. 55).
(For standard functions, see p. 22)	

<Other Books>



Open Addressbook
(in standby mode).

<Other Books>

Select.

<Own Numbers>

Enter "own" phone numbers in SmartChip (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

<VIP Numbers>

Display the phone numbers saved in the VIP group.

<Show SmartChip>

Entries stored in the SmartChip on the SIM card can also be used on other GSM phones.

<Protected Chip>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service No.>/<Info Numbers>

There might be phone numbers saved in your SmartChip that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Completing phone numbers in the SmartChip

Digits may be replaced by a "?" when phone numbers are entered in the SmartChip:



Press and **hold**.

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the SmartChip/Addressbook.



Press.



Replace "?" with numbers.



Number is dialled.

Recent Calls

The phone number of a caller is displayed if

- the caller has switched off the **In-cognito** function and
- the network supports the "Caller Identity" function.

Alternatively, a caller's name is displayed if it is stored in the Smart-Chip/Addressbook.

Your phone stores the phone numbers of calls for convenient redialling.



Select record.



Open record.



Select phone number.



Dial phone number.

Or

View

Display information on the phone number.

Up to 500 entries are stored in the records:

Missed Calls



The phone numbers of calls that you have received but not answered are stored for callback purposes.



Icon for missed call (in standby mode).

Press the display key beneath the symbol to call up the **Main Inbox** (p. 47).

Calls Received

Accepted calls are listed.

Calls Made

Access to the last numbers dialled by you.



Fast access in standby mode.

Delete Calls

The records are deleted.

Call list menu

The records menu can be called up if an entry is highlighted.

Options Open menu.

Copy To / **Copy To SmartChip**

Copy the currently selected phone number into the preferred directory.

(For standard functions see p. 22)

Camera





You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a switch on/off animation or a screensaver.
- send the photo via MMS.


Switch on

Menu → My MEdia → Applications
→ Extras → Camera

The current (preview) image is displayed. You will see the following in the first line from left to right:

-  Brightness
-  Zoom factor
-  White balance
-  Flash connected.

The number of photos that can still be taken in the selected resolution is displayed in the top right-hand corner of the preview image. As the memory requirement depends essentially on the subject photographed and the resolution, the number of photos that are still possible can sometimes change unexpectedly. Information about the selected resolution is located under the preview image.

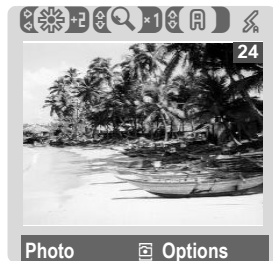 

Record



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name see **Settings** in the options menu.

Settings prior to taking a photo:



Sets the brightness.



Sets the zoom factor.

Image resolution

It is possible to set the quality of the image regardless of the preview image resolution, e.g.:

Premium

Medium

Wallpaper

The resolution may decrease depending on the selected digital zoom.

Flash (accessories)

If the flash is active, this is shown by a symbol in the display. The flash is charged constantly while it is connected to the phone and the camera is activated. This reduces the stand-by time.



This symbol appears when the flash is being charged.

For settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options Open menu.

Settings	<ul style="list-style-type: none"> Name for recordings Image resolution
Graphics	The last picture taken is displayed.
Use Flash	Choose between: Automatic, Off, Red-Eye
Auto-Timer	The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a beep each second.
White Balance	Choose between: Automatic, Indoor, Outdoor

(For standard functions see p. 22)

Additional information



Insufficient memory available. Start the delete assistant to delete data (p. 102).

A mirror can be attached to the back of the phone depending on the phone variant. This makes it easier to take self portraits.

Main Inbox

The inbox folder offers immediate access to the messages just received. This means that you no longer have to look through all inbox folders for the various message types. The entries are marked with a symbol to indicate their type and status. You will find a list of the symbols on p. 13.

To call up the inbox folder, e.g. if a new SMS has been received:



Press the soft key beneath the symbol.

You will find the following message types in the inbox folder:

Text Message, Multimedia Msg

System messages

Message about **Multimedia Msg**,
Missed Alarm, Missed Appts., Missed Calls, WAP Push, Voice Mail

Data objects

Ring Tones, Graphics, Calendar entries, Notes and Show Biz Card



When you open an entry, the relevant application also starts.

After a set period of time, entries which have already been read and opened are only displayed in the message-related inbox lists (see **Settings** in the options menu).

Main Inbox options

Options Open menu.

Settings	<p>If entries have been read, remove them from the Main Inbox:</p> <p>Daily, Never, Immediately</p> <p>If Daily has been selected, specify the time.</p>
-----------------	---

(For standard functions see p. 22)

IM



With this function you can transfer text, audio clips, pictures and files straight to and from one or more terminals (mobile phone, PC). This function is not offered by all service providers. Please ask your service provider about this.

Your dialogue partners are entered in contact lists. When a connection has been established, these lists show who is available, whether they want to be disturbed and what mood they are in.

GPRS must be switched on.



Start menu

Login Select the access via which the dialogue runs
or
Account: select (p. 52).

Msg. History Read the messages from the last meeting.

Settings Settings for your representation, the applications and servers.

Exit End application.

Rapid access ...

Select the access (p. 52)

Menu → → IM → Login

The current contact list or the list is displayed (if necessary, set access first, p. 52).

Specify your own status (p. 53)

Options Open menu.

My Settings

Select and make entries.



Return to contact list.

Enter new contact (p. 49)

Options Open menu.

Set Press, then:

Add Contact

select and enter the user ID at least.



Return to contact list.

Inst. Message with new contact (p. 51)



Select the contact.



Start Inst. Message.



Open editor.



Write text.



Send text.

... etc.

Login

Menu →  → IM → Login

Select the last access to be used (see also **Automatic login**: p. 54).

Contact lists

When the connection has been established, the contact list or the list of the contact lists is shown for selection.

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an "empty" contact list will be generated by the server if necessary.

Displays in the list:

-Conversation

Displays of the online contacts for the messages are available.

-Online

Online contacts with whom no conversation is being held at the moment.

-Group



Groups for Inst. Message with several contacts.

-Offline

Contacts who are not online at present.

Managing the contacts



Select a contact.

Options

Open menu.

Set

Select.

Contacts

Different functions are offered depending on the selection:

Add Contact	User ID: Enter a non-ambiguous user (login) name. Nickname: Enter your own nickname for the contact. Friend: The contact receives the status Friend : and access to personal information (p. 53).
Find Contact	Search for contact.
Delete Contact	Delete contact from the list.
Block Contact	No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Managing the groups



Select one of the groups you set up yourself.

Options

Open menu.

Set

Select.

Group Settings

Different functions are offered depending on the selection:

Add Member	Add a new group member, see also Add Contact .
Find Member	Search for group member.
Invite	Invitation to the contacts in your own group to Inst. Message.
Delete Member	Delete contact from the group member list.
Add Group	Add new group.
Find Group	Search for group on the server (no longer in the "administered groups" list).

Create Group

Group ID:

Enter a non-ambiguous group name.

Name:

Name of group.

Topic:

Topic of group.

Searchable:

Other people can look for the group.

Welcome msg.:

Enter welcome text.

Create Group

Delete group.

Creating a new contact list

The current contact list is displayed.

Options

Open menu.

Contact List

Available contact lists are displayed.

Options

Open menu.

Create

Select.

Contact list ID:

Give the contact list its own, specific name.

Name:


Allocate self-explanatory names.



Confirm.

Contact list options

Options Open menu.

Details 	Additional information about the contact or the group.
My Settings	Information on your current personal status (p. 53).
Set	Functions for managing a contact or a group.
Contact List	Display contact lists for selection.
Block List	Display all blocked contacts. Can be unblocked.
App. Settings	Set the application (p. 54).
Exclude	Terminate the application, the server remains connected.
Logout	Log off from the server and return to start menu.
Help	Display help text.

Start chat

A contact list must be displayed.



Select a contact or a group.



Start communication with the contact.

The page is displayed. During Inst. Message with a group, the name of the sender is placed in front of each contribution.



Open editor.



Write text






Send text. The text appears in the chat soon afterwards.

Naturally, you can also receive messages from contacts whom you do not know. This will be pointed out to you in the display, and you can either switch to Inst. Message or ignore/block the contact.

Options (individual contact)

Options Open menu.

Send Sound 	Select and send a melody/ tone from the list (DRM p. 20).
Send Picture 	Select and send a picture from the list (DRM p. 20).
Send Other 	Send any file.
Details	Information about the contact (if this is authorised by him).
Clear All	Delete all texts in the current Inst. Message.
Block Contact	No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Options (group contact)

Options Open menu.

Leave Group	Exit group.
Details	Information about the group: Group ID:, Name:, Topic:, Owner:
Clear All	Delete all texts in the current Inst. Message.

Receiving objects

You will be informed in the display if sounds or pictures are sent to you during a dialogue.

Accept Accept object.

or

Reject Reject object.

Msg. History

Menu →  → IM → Msg. History

The messages from the last meeting are displayed. You can read and delete the contributions.


Requirement: The server must be disconnected, see **Exclude** (p. 51) and **Automatic login:** (p. 54).

Setting

Menu →  → IM → Settings
→ Select function.

Account

The list of available accesses is displayed.

 Select an access to establish a connection.

Or

<New Entry>/Account Sett.



Set up an access or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

Name:	Name of the access.
URL:	Enter URL, e.g. www.abc.com
User ID:	Enter a non-ambiguous user (login) name.
Password:	Enter password (shown as a series of asterisks).

My Settings

Information on your current personal status:

Alias:	Your own alias by which you can be found on the server.
AIM screen name:	Name to be displayed in the group.

Mood:	Information about your own mood, e.g. Happy, Sad, Tired, etc.
Status text:	Random text information, e.g. "Am at home".
Availability:	Availability: Available, Not Available, Discreet
Cellphone:	Enter the phone number with internal extension code.

Options

For **each** setting, specify who is allowed to view your personal information:

Public

All contacts.

Private

Contacts designated as Friend: (p. 49).

Hide

Nobody.

App. Settings

Settings for the application used:

Automatic login:	Auto-reconnect to the last access to be used.
Timeout:	Time without action after which the application is terminated. However, the server remains connected.
Message info:/ Online info:	<p>Signal the receipt of messages: Yes/No</p> <p>Signal given as:</p> <ul style="list-style-type: none">• Sound• Vibrating Alert• Pop-up <p>Popup windows authorised: Yes/No</p>

Text Message

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

You can also insert simple pictures and sounds in an SMS.

Write/send

Menu →  → Create New
Msg → Text Message

or



Open Text Message
(in standby mode).



Input text.

You will find information on writing texts with and without T9 in the chapter "Text entry" (p. 26).

The following is displayed in the top display line:
Text entry status, number of SMS messages required, number of characters still available.



Start sending procedure.



Select phone number from the SmartChip/Addressbook or enter it.

Group If necessary, select a group.



Confirm. The SMS is transmitted to the service centre to be sent and saved in the **Sent Items** list.

Text options

Options Open menu.

Save Save composed text in draft list.

Picture&Sound Add pictures, animations and sounds into message (see following text).

Text Templates Insert Text Templates (p. 29).

Format Font Size: Small font, Medium font, Large font
Underline
Alignment: Default Alignm., Left, Center, Right
Mark (highlight text with the joystick)

Delete Text Delete the whole text.

Send With... Select SMS profile so the SMS can be sent.

(For standard functions see p. 22)

Picture&Sound

Send simple pictures and tones with or without accompanying text.

Remember that these may be protected (DRM, p. 20).

With the text input field open:

Options

Open menu.



Select **Picture&Sound**.

The menu contains:

Fix Animations

Fix Sounds

Own Animation

Own Graphics

Own Sounds



Select list.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For Fix Animations/Fix Sounds:



The selection is added to the SMS.

For Own Animation/Own Graphics/ Own Sounds:



The selection is displayed/played back.



The selection is added to the SMS.

The pictures which have been added are displayed. Sounds are displayed in the form of "wildcards".

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options

Open menu.

Send

Select.

Group

The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Transmission is started after a security prompt.

Read



 
Arrival of a new SMS announced in the display. Open **Main Inbox** (p. 47) using the soft key positioned beneath it.



Reading the SMS.



Scroll through message line by line.

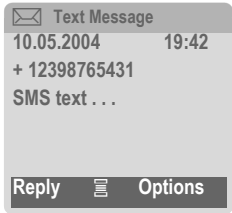

Reply

You can answer the currently open SMS immediately. The newly added text is placed above the received text.

Reply options

Reply Open reply menu.

Create New Msg	Create a new reply text.
Edit	Edit received SMS or add new text.
Answer is YES	Add Answer is YES to the SMS.
Answer is NO	Add Answer is NO to the SMS.
Callback, Delay, Thanks	Add a standard text as a reply to an SMS.

Read options

Options Open options menu.

Reply	See "Reply options" above.
Picture&Sound	Save picture/sound contained in the SMS.
Text Zoom	Enlarge or reduce text display.
Archive	Move SMS message to archive.

(For standard functions see p. 22).

Lists

All SMS messages are archived in different lists, according to their status. (For overview of message symbols, see p. 13):

Inbox

Menu →  → Inbox → Text Message

The list of received SMS messages is displayed.

Saved Messages

Menu →  → Saved Messages
→ Text Message

The list of not yet transmitted SMS messages is displayed.

Outbox

Menu →  → Outbox
→ Text Message

The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted.

Sent Messages

Menu →  → Sent Messages
→ Text Message

The list of sent SMS messages is displayed.

Text Msg Archive

Menu →  → Text Msg Archive

The list of SMS messages stored in the phone is displayed.

List options

Different functions are offered depending on the list.

Options Open menu.

Send	Send or forward entry.
Send With...	Select an SMS profile for transmission.
Archive	Move SMS message to archive.
(For standard functions, see p. 22)	

Setting

Text Signature

- Menu** →  → Options
 → Msg Settings
 → Text Message Settings
 → Text Signature



You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

Text Profiles


- Menu** →  → Options
 → Msg Settings
 → Text Message Settings
 → Text Profiles

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The pre-setting depends on the SIM card inserted.



Activate profile

-  Select profile.
 Activate.

Set profile

-  Select profile.
Edit Open to edit the profile.

Service Center Enter the phone numbers for the service centre as provided by the service provider.

Recipient	Enter a standard recipient for the profile.
Message Type	<ul style="list-style-type: none"> • Manual: Inquiry for all messages. • Standard Text: Normal SMS message. • Fax: Transmission via SMS. • E-Mail: Transmission via SMS. • New: You may need to obtain the required code number from your service provider.
Validity Period	Period within which the service centre is to try to deliver the message: Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
Status Report 	Receive confirmation of successful/failed transmission of a message. This service may be subject to a charge.
Direct Reply 	If activated, the reply to your SMS message is handled via your service centre (for information, please contact your service provider).
Save Aft. Send	Sent SMS messages are saved in the Sent Items list.


More information on SMS

SMS status report


If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The **Message sent.** message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

See also **Validity Period** (p. 59).

Phone number in SMS

Phone numbers displayed in **highlighted** text can be dialled  or saved in the SmartChip/Address-book.

Downloading ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications with an SMS. Please highlight this link and, by pressing the Call key , start the download. Please check that the dial-in access (p. 104) is configured.

Remember that these may be protected (DRM, p. 20).

SIM memory full

If the message icon flashes the SIM memory is full. **No** more SMS messages can be received. Messages must be deleted or archived.

Multimedia Msg

The **Multimedia Messaging Service** enables you to send texts, pictures and sounds in a combined message to another mobile phone. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Create

Menu →  → **Create New Msg**
→ **Multimedia Msg**

An MMS consists of the address header and the content.

An MMS may consists of a series of pages. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected (DRM, p. 20).

Write **texts** with the help of T9 (p. 26).

Pictures may be taken using the integrated camera and/or loaded from **My MEdia** (p. 79).

Sounds may be recorded using the **Record Audio** and/or loaded from **My MEdia** (p. 79).

First select an object for processing to be added to the first page of the MMS:

Pictures

Limits on picture size can be set in the user settings.

<Graphics> Select.



Display picture functions:

Insert Image

Open list to select a picture.

Camera

Activate the camera to take a photo for the MMS (p. 45).



Also possible.

Open

Display picture.

Delete

Delete inserted picture.

Save

Store picture for use later on.

Properties

Display properties, incl. any user right restrictions (p. 20).

Sounds**<Sound>** Select.

Display sound functions:

Insert Sound

Open list to select a sound.

Record

Activate sound recording to record sounds (p. 87).



Also possible.

Open

Play back the sound.

Delete

Delete inserted sound.

Save

Save sound for use later on.

Properties

Display properties, incl. any user right restrictions (p. 20).

Text**<Text>** Select and write the text.

The text functions are displayed (see also p. 26):

Insert FromChoose any of the following for insertion: **Text Templates**, **Bookmark**, **Insert From** **Delete Text**

Delete text on current page.

Save

Save text on the page as a text module.

T9 Input

T9 settings:

T9 Preferred, **Input Language****Mark**Text processing together with **Copy** and **Insert**.

Generation options

Options	Open menu.
Send	Send MMS.
Play	Play back entire MMS on the display.
Picture...	See p. 61.
Sound...	See p. 62.
Text...	See p. 62.
Page	<p>Add Page: Insert new page behind current one.</p> <p>Delete Page: Delete current page.</p> <p>Page List: Display available pages.</p> <p>Timing: Set the time sequence for the MMS presentation:</p> <ul style="list-style-type: none"> • Page duration: Automatic or Manual • Show page: Only if Manual is set in front of it. Enter the lifespan of a page.
Properties	Enter sending parameters (see next chapter).

Save As Templ	Save created MMS as a template. See also below.
Layout	<p>Select one of four possible layouts:</p> <p>Text above, beneath, beside (on left or right of) picture.</p>
Colors	<p>Select the colours for:</p> <ul style="list-style-type: none"> • Message • Page • Bitmap • Text Backgrd. • Text Color
(For standard functions see p. 22)	

Templates

Menu →  → Options
→ MMS Templates

MMS templates are saved MMS messages with no address. They can be sent as new MMS messages or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.

 
Options Open menu and select **Save As Templ**.

Send

The page(s) of the new MMS is (are) already created and the MMS is displayed.




Open address entry.

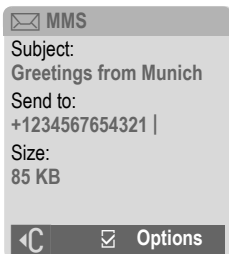

Subject: Enter a brief description.

Send to: Enter one or more phone number(s).

 Insert from Addressbook.

Size: Display the size of the current MMS.



Start sending procedure.



The MMS is sent after confirmation.

Expanded address fields



Scroll downwards.

More: Provide additional address fields.

Cc: Address(es) of copy recipient(s).

Bcc: Address(es) of copy recipient(s) who are not visible to the other recipients.

Attachments: Insert attachments.

Date: Creation date.

Use delivery time: Use specified send time. If **Yes**:

Delivery date: Send date.

Delivery time: Send time.

Icons for status information



Priority



Send report



Contains protected contents (DRM, p. 20).

Sending options

Options	Open menu.
Send	Send MMS.
Play	Play back entire MMS on the display.
Edit	Display object selection to change an object.
Page List	Display MMS pages for viewing and/or changing.
Delete MM Msg	Delete MMS.
Save MM Msg	Save composed text in draft list.
Add Recipient	Add recipient from the current address directory.
Save As Templ	Save created MMS as a template.
Add Atttchmnt.	Add attachment: <ul style="list-style-type: none"> • File • Show Biz Card • Appointment
Help	
(For standard functions see p. 22)	

Receive

Depending on the setting (p. 67) an MMS can be received in two ways:

Complete transmission

The complete MMS is sent to your phone. This can take quite a while if the MMS is large.



Shown in the display.



Start reception. The MMS is sent.

Prior notification

You are notified that an MMS is awaiting reception.



Shown in the display.



Read the notification. Display the size of the MMS in KB.

Accept

The complete MMS is sent.

OK

Display in Main Inbox

Read

An MMS has been received in full.



Select the MMS.



Start automatic playing of the MMS.

Key functions for playback:



To the next page.



Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



End.

The message details are displayed when the MMS is complete.

Subject: Description of the MMS.

From: Information about the sender.

Size: Size of the MMS in KB.

Expanded address fields



Scroll down.

More: Additional input fields

Cc: Copy recipient

Attachments:
Save attachments

Date: Date received

Symbols for status information
(see p. 64)

Lists

All MMS messages are saved in four different lists (for list of message icons, see p. 13).

Inbox

Menu → → Inbox
→ Multimedia Msg

The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press **Accept**.

Saved Messages

Menu → → Saved Messages
→ Multimedia Msg

The list of stored drafts is displayed.

Outbox

Menu → → Outbox
→ Multimedia Msg

The list of the MMS messages not yet completely transmitted is displayed.

Sent Messages

Menu → → Sent Messages
→ Multimedia Msg

The list of sent MMS messages is displayed.

List options

Different functions are offered depending on the list/situation.

Options Open menu.

Play	Play MMS on the display.
Edit	Display MMS for processing.
View	Display MMS for viewing only (write-protected).
Snd Multi-media Msg	Send MMS.
Reply MMS	Reply to MMS immediately.
Forward MM Msg	Enter recipient(s) for forwarding.
Properties	Display message parameters.
Receive All MM Msg	Send all new MMS messages immediately.
(For standard functions see p. 22)	

Setting

Menu →  → **Create New Msg**
→ **Options**
→ **Msg Settings**
→ **MMS Settings**
→ **Select function.**

MM Msg profile:

Six MMS profiles can be set (5 in the telephone memory, one on the SIM card). The send properties can be specified in them. In most cases, the setting has already been made. If necessary, check with your service provider for details.

Activate profile



Select profile.

Options

Open menu and select **Activate**.

Set profile



Select profile.



Options

Open menu and select **Change Sett.**

User Settings

Set the MMS dispatch to suit your requirements:

Delivery report:	Request delivery confirmation for sent messages.
Read reply:	Request confirmation that the MMS has been read.
Default priority:	Send priority: Normal, High, Low
Validity:	Select the period in which the service centre is to try to deliver the message: Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
Earliest delivery time:	Transmission from the service centre to the recipient: Immediate, Tomorrow

Default duration:	Length of display for an MMS page (standard requirement).
Retrieval:	Receive complete MMS or only notification of arrival. Immediate Receive complete MMS immediately. Auto.Homenet Receive complete MMS immediately in home network. Manual Only receive the notification.
Spam filter:	Settings for receipt of promotional MMS.
Size indication:  	Set max. message size and message handling.

Voice message/mailbox

In idle mode, press

Options → **Voice Mail**

Most service providers provide a mailbox in which a caller can leave a voice mail for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if **Call Waiting** (p. 99) is not activated).

If the voice mail service is not part of your service provider's standard package, you will need to register for it, and possibly set it manually. The following sequence may vary from service provider to service provider.

Settings



The service provider supplies you with two phone numbers:

Save mailbox number

You call this phone number to listen to the voice mails left for you.

In idle mode, press

Options → **Voice Mail**



Select number from SmartChip/Addressbook or enter/change it.

OK

Confirm.

Save call divert number

Calls are diverted to this phone number.

Menu



→ **Call Settings**

→ **Call Forward**

→ e.g. **Unanswered** → **Set**



Enter phone number.

OK

Registration with the network is confirmed a few seconds later.

Listen to message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once). Confirm with **OK** and **Mailbox** depending on your service provider.

CB Messages



Menu →  → **Inbox** → **CB Messages**

Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, you will receive messages on the activated topics in your **Topic List**.

CB messages are displayed in standby mode; longer messages are scrolled automatically.

Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

Topic List

You can add any topics to this personal list from the topic index. You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

New Topic Select.

- If no topic index is available, enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and activate it with **Options**.

Topic

Select

Options

Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

CB Languages

Receive Cell Broadcast messages in one specific language only or in all languages.

Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

Games

Games

Games and applications are offered on the Internet. Once downloaded these are available to you on your phone. Most applications include instructions. Some applications and games are already pre-installed on your phone. You will find these listed here:

www.siemens-mobile.com/ct66

Requirements

Browser profile (p. 77) and the access (p. 104) must be configured.

Download

Select the correct access depending on whether you are loading games or applications:

Menu →  → **Shop Games**

In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

Download New



Select a service provider or URL.



Start Browser and visit URL.

Only description file



The description file is loaded for information purposes only. The application/game itself must be loaded separately.

or complete download



The application/game is completely loaded.

Apply

 
Remember that applications/games may be protected (DRM, p. 20).



The executable application is saved on the phone and can be started immediately.

Additional information

You can control games with the joystick or by using the following keypad controls:

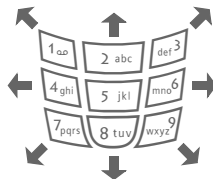

Games and applications – options

Processing and managing your applications and folders:

Information	List the version of the game and the size of the game.
Update	Reinstall an application (update).
Check Memory	Display memory capacity.
Delete	Delete marked application.
Sort	Set sort criteria (according to alphabetical order, type, time).
Shop Games	Access website to download applications.
Move	Move applications between folders.
Rename	Rename selected entry.
New Folder	Create and name new folder.
Security	Select a safety level.
Settings	Open Settings menu.
(For standard functions see p. 22)	

Additional information

You can use Browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.

For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired.

In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via Internet are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup.

Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again, or to do so free of charge. If technically possible, secure your applications on the PC with the "mobile phone manager", p. 110.

MEdia Mall

Access different websites to download various applications, graphics or ringtones.

Shop Ringtones

rtdownloads.cingular.com

Shop Games

downloads.cingular.com

Shop Graphics

grphdownloads.cingular.com

Shop Multimedia

mmsstore.cingular.com

Shop

appslink.cingular.com

MEdia Net

device.home

My Account options

Options Open menu.

Check Memory	Display memory capacity.
---------------------	--------------------------

My MEdia	Open My MEdia menu.
-----------------	---------------------

Settings	Open Settings menu.
-----------------	---------------------

(For standard functions see p. 22)

Media Player

When you are viewing a picture or listening to a melody, the application starts a media playback.



Browse to the next media file.



Switch on display illumination.

Pictures

The following functions can be applied to a displayed picture:



Zoom function if the displayed picture has a higher resolution than the display. The two soft keys (+/-) enlarge/reduce the picture. The joystick moves the picture detail.



Centre the picture.



Switch to full screen mode and back again.



E.g., send via MMS.

Melodies

The media playback offers the following functions for melody playback:



Play or stop, depending on the situation.



Set volume.



Switch to mute.



Pause function.



End playback.

Options



Open menu.

Different functions are offered depending on the starting situation and the object.

Volume	Set the volume with the joystick.
Set As...	Set picture as Wallpaper , Logo for example, and sounds for Incoming Call , Startup Melody , for example.
Slideshow	Automatic run-through in full-picture mode. Individual picture connection with joystick.
Edit	Access to picture editing.
(For standard functions see p. 22)	

MEdia Net

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Internet



Press the joystick in standby mode for activating the browser.

Browser menu

Options Open menu.

Bookmarks	<ul style="list-style-type: none"> • List Bookmarks Display list of bookmarks stored in the phone. • Bookmark Site The current page is saved as a bookmark.
Go to...	Enter URL for direct dial to an Internet address, e.g. wap.siemens-mobile.com
Reload	Reload current page.

Show URL	Display the URL of the page currently loaded for sending via SMS/MMS.
History	Display last Internet sites to be visited.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page; display saved pages.
Settings	Set or reset browser (p. 76).
Exit Browser	Close the browser.
MEdia Net	Connects you to the internet site MEdia Net .
Developer Menu	Display: Show Log, Log PDUs, Show IP Address, WSP Headers, Show Build Info, ...

End connection



Press and **hold** to clear down the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.



- Press **briefly**: back a page.
- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser (selection)



Enter special characters



Select important special characters.

Browser settings



Press the joystick in standby mode for activating the browser.

Options Open menu.

Settings Select.

Browser	Set start option as well as handling of pictures and sounds plus send options.
Profile Settings	The list of profiles is displayed for activation/setting. For more information, contact your service provider.
Protocol Parameters	Set protocol parameters, push messages and abort time as well as handling of cookies.
Security	Set encryption.
Context	Reset session; delete cache, history and cookies.
About	Information about the Browser version.

Your Internet browser is licensed by:



OPENWAVE™



Profile Settings

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

Set profile manually

If necessary, contact your service provider.

Options Open menu.

Edit	Start processing. For the Internet-specific settings below, please contact your service provider.
-------------	---

Delete	Delete selected profile.
---------------	--------------------------

Bookmarks



→ **Bookmarks**

Display URL/call up page

List Bookmarks

Display list of bookmarks stored in the phone.



Select bookmark.



Call up URL.

Save

Bookmark Site

The current page is saved in the phone as a bookmark.

Bookmark options

Options Open menu.

Here you will find functions for changing and managing bookmarks and their folders. This includes editing individual entries with the corresponding URLs as well as deleting and moving them to other folders.

My Account

Access different websites to view the status of you minutes and bill.

Pay My Bill

www.cingular.com/wap/paybill_deck

Check Balance

www.cingular.com/wap/balance_deck

View Minutes

www.cingular.com/wap/view_deck

Set VM Password

www.cingular.com/wap/reset_deck

MEdia Net

device.home

More...

www.cingular.com/wap

My Account options

Options Open menu.

Check Memory	Display memory capacity.
---------------------	--------------------------

My MEdia	Open My MEdia menu.
-----------------	---------------------

Settings	Open Settings menu.
-----------------	---------------------

(For standard functions see p. 22)

My Media

To organise your files, you can use the file system like a PC file manager. There are some folders for the various data types in My Media for this purpose.



The list of the folders and files is displayed.

Navigation



Select file/folder in lists.



The cursor can be moved as required in the preview.



Open folder or start file with related application.

<New Picture>/<New Sound>

The application for the folder currently selected is loaded.

<New Downl.>

The Browser is started and the URLs for downloading displayed.

My Media options

Options Open menu.

Move	Place highlighted file(s) or folder in temporary memory.
Copy	Place highlighted file(s) or folder in temporary memory.
Paste	Transfer content of temporary memory into current folder.
New Folder	Create a new folder and name it.
Preview	Switch over to miniature view.
Attributes	Display information on file or folder selected.

(For standard functions see p. 22)

Index structure

Some folders have already been created for different data types in **My MEdia**. These folders cannot be changed.

Folder	Description	Format
Graphics	Pictures	bmp bmx jpg/jpeg png gif
Animations	Switch on/off animations	bmx gif
Sounds	Melodies	mid amr wav
Themes	Loaded theme (zipped)	sdt
	Theme configuration (unzipped)	stc
Skins	Loaded user interfaces	scs
Games	Java archive	jar
	Download info	jad
Applications	Applications	*
Other	Text Templates	tmo
	Voice recordings	vmo

Depending on the service provider, the structure, content and functionality of **My MEdia** may vary.

Favorites

Menu → Favorite

Create your own menu with frequently used functions, phone numbers or WAP pages.

The list of 10 entries is preset. You can, however, change it as you wish.

Use



Select the required entry.



Confirm.

Or



If the entry selected is a phone number, you can also call it with the Call key.

Organizer

Calendar

Menu →  → Applications
→ Organizer → Calendar

You can enter appointments in the calendar. Time and date must be set for the calendar to work correctly.




The calendar offers you three views:

Monthly view

Special colour coding:

Day with entries for appointments, day of the week, weekend.

Navigation:



-  One day forward/back.
-  One week forward/back.
-  Open daily view.

Weekly view

Special displays:

Appointments are shown as a vertical colour bar on the horizontal hour division.

Navigation:



-  One day forward/back.
-  Forward/backward by the hour through the day.

Daily view


Special displays:

Description of appointment.

Navigation:

-  One day forward/back.
-  To the start/end of the day or next/last entry.

Appointments

Menu →  → Applications
→ Organizer → Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New Entry>

Select.

Types:



Memo

Text input for description.



Voice Memo

Enter voice memo.
Shown with alarm.



Call

Enter phone number to be displayed with the alarm.



Meeting

Text input for description.

**Vacation**

Enter start and end date.

**Birthday**

Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Default** at the end of the list.

Description:

Description of appointment.

Phone number:

Enter a phone number or select one from the addressbook.

Voice memo:Enter a voice recording, see **Dictation Mac**, p. 85.**Location:** Location of appointment.**Whole day:**All-day appointment:
Yes/No**Start date:**

Date when appointment starts.

Start time:

Time when appointment starts.

End date: Date when appointment ends.**End time:** Time when appointment ends.**Alarm time:****On/Off or Vibrating Alert.**Enter the period of time **before** the appointment and select the time unit:
Minutes, Hours, Days**Recurrence:**

Select a timeframe for repeating the appointment:

No, Daily, Weekly, Monthly, YearlyEnter a parameter for repeating:
Forever, Until, Events (number).If **Weekly** is selected, certain weekdays can be highlighted.**Default**

In the list, select those fields which are to be offered for future entries.

Additional information

Display above set alarms:



Alarm clock



Appointment

An alarm sounds even when the phone is switched off (except in **Airplane Mode**, p. 101). The phone does not go to standby mode. Pressing any key will lead to **Snooze** (see below).

Information on the alarm

When the set date and time are reached there is an audio and a visual alarm. If an alarm is missed it appears in the list of missed appointments (p. 84).

Alarm type **Memo**

Meeting: The text is shown in the display.

Alarm type **Call:** The phone number is displayed and can be dialled immediately.

Alarm type **Birthday:** You can send special birthday greetings by SMS, MMS or a call via **Options**.

With **Snooze** you can set the alarm to repeat.

Tasks

Menu →  → **Applications**
→ **Organizer** → **Tasks**

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.

The entries are made in the same way as **Appointments** (see "Appointments"). Then press

Status:

Select **Done** or **Outstanding**.

Priority:

Selection in 5 levels from **Lowest** to **Highest**.

Use Date

If activated with **Yes**, the following time-input option is offered.

Due date:/Expiry time:

Enter the date and time by which the task is to be completed.

Alarm: and **Default** as for **Appointments**.

Notes

Menu →  → Applications
→ Organizer → Notes

Write and administer brief text memos.

Enter a new memo

<New Entry>

Select.




Input text. The first line is displayed as a "title" in the memo list. Total length: max. 160 characters.

Options Open menu.

Save Save memo. When Confidential is selected, a memo is protected with the phone code.

Missed Appts.

Menu →  → Applications
→ Organizer → Missed Appts.

Events with an alarm (Appointments, Tasks) to which you have not reacted are listed for reading.

Organizer options

Depending on the application used (Calendar, Appointments, Tasks, Notes) and the current situation, different functions are offered.

Options Open menu.

Delete	Delete entry.
Delete Until	Delete all entries prior to a certain date.
Delete All	Delete all entries after confirmation.
Delete Done	Delete all completed tasks.
Activate/Deactivate	Switch alarm on/off.
Filter	Display all entries with the selected feature.
Confidential	Protect note with phone code. We recommend that you do not store any passwords (PIN, TAN etc.) as notes.
(For standard functions see p. 22)	

Dictation Mac

Menu →  → Applications
→ Organizer → Dictation Mac

Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an appointment in the calendar.
- Record a call – useful for remembering numbers or addresses.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

New recording

<New Entry>

Select.

The remaining time available, as well as the recording time, are shown in the display.



A brief tone sounds when the recording starts. Now say the text.



Alternate between pause/record.



End recording.

The recording is automatically saved with a time stamp. **Rename** with

Options.

Playback



Select the desired recording.



Alternate between playback/pause.



Press and **hold** for rapid rewind and fast forward.

Dictating machine options

Options Open menu.

Loudspeaker

Playback through the built-in loudspeaker.

(For standard functions, see p. 22)

Set Time Zones


Menu →  → Applications
→ Organizer → Set Time Zones

The time zone can be selected in the world map or a city list:

World map


 Select the desired recording.

City list

 Select a city in the selected time zone.

Time zone options

Options Open menu.

Auto Time-zone  The time zone is switched automatically to local time by the network.

Search City Search for a city.

Help Operating instructions.

Calend. Settings

Menu →  → Applications
→ Organizer → Calend. Settings

Start of day:

Time when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts.

Set Weekend

Set the days for the weekend.

Show birthday:

Synchronising with a PC







With the mobile phone manager (p. 110) you can synchronise appointments, tasks and memos with Outlook®.

Extras

Alarm Clock

Menu →  → Applications
→ Extras → Alarm Clock

The alarm will ring at the time set by you, even when the phone is switched off.

-  Activate/deactivate the alarm.
-  Switch to time setting.
-  Set alarm call time (hh:mm).
-  Switch to the week days.
-  Navigate to the various days.
-  Display options: alarm call time and days.



Set days for alarm calls. Press again to delete the highlighting.

Press and **hold** to highlight/unhighlight all the days.



Confirm setting.

Additional information



Screen display in standby mode: alarm clock activated.

With **Snooze** you can set the alarm to repeat.

Record Audio

Use the **Record Audio** to record noises or sounds for use as ringtones. The **Record Audio** is usually started from other applications/functions such as assigning a ringtone.

New recording

Start from main menu:

Menu →  → Applications
→ Extras → Record Audio




<New Entry>

Select.

The remaining time available, as well as the recording time, are shown in the display.

Start it from another application as follows

The recording display appears:




-  A brief tone sounds when the recording starts.
-  Alternate between pause/record.
-  End recording.

The recording is saved with a timestamp in the **Sounds** folder. Rename with **Options**.

Insert

Transfer the recording into the application.

Playback

-  Select the desired recording.
-  Alternate between playback/pause.
-  Press and **hold** for rapid rewind and fast forward.

Options

Open menu.

Loudspeaker Playback via the built-in loudspeaker.

Set As... Set the recording as a ringtone.

(For standard functions see p. 22)

Calc.

Menu →  → Applications
→ Extras → Calc.

The calculator can be used in a basic version and with an advanced range of functions. The input line and two calculation lines (including the matrix with the calculation functions) are located in the top half of the display.



Enter digit(s).



Navigate functions.




Use function. The result is calculated and displayed immediately.

Basic functions:

- +, -, *, /** Basic calculation types
- =** Result
- 1/x** Reversion
- %** Convert to percentage
- .** Decimal point.
- ±** Sign change "+"/"-"

Options

Expansion of the range of functions:

-  **x** Square root
- x²** Square
- e** Exponent
- MS** Save displayed number
- MR** Call up saved number
- M+** Insert number from memory

Calculator options



Options Open menu.

Convert	Call up the unit converter with the current result.
Clear All	Delete all units.
Extended Mode/ Basic Mode	Convert calculation functions.
(For standard functions see p. 22)	


Stopwatch

Menu →  → Applications
→ Extras → Stopwatch

Two intermediate times can be recorded and saved.

-  Start/stop.
-  Save intermediate time.

After a stop:

-  Reset to zero.

Stopwatch options

Options Open menu.




Stopwatch list Display saved entries.


(For standard functions see p. 22)



Countdown

Menu →  → Applications
→ Extras → Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

- If no time has been entered:
 -  Open input window.
-  Set period of time.
-  Confirm.

- If a countdown time is specified:
 -  Start countdown.

- While the time is elapsing:
 -  Interrupt counter.
 -  Let counter continue running.

- Reset** Reset counter to starting time.

Remote synchronisation

Menu →  → Applications
→ Extras → Remote Sync.

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone. The data can, for example, be saved on a company computer or the Internet, e. g.:

www.siemens-mobile.com/syncml

Synchronise

Sync The computer is selected and synchronisation started. When completed, the actions which have been performed are displayed.

Next Scroll through the various displays.

Sync. setting

The following settings can be made prior to synchronisation:

Sync. Profile

You can choose between 5 profiles.



Select profile.



Activate profile.

Or

Edit

Set profile

Server Sett.

Providers	Display the current service provider.
Homepage:	Set the homepage
Port:	Enter port number. e.g. 80.
Login:	Enter user name (login name).
Password:	Enter password (shown as a series of asterisks).
Calendar Path	e.g., events
Contacts Path	e.g., contacts
Notes Path	e.g., notes
Task Path	e.g., tasks
HTTP au- thentication.	Confirmation required; Yes/No (if No, the input fields are not visible).
HTTP name:	Enter name.
HTTP password:	Enter password.

Last sync:

Time of the last synchronisation.

Sync. Mode

- Sync data: Modified Data or All Data
- Sync instruction: Two-Way, Device Update or Server Update

Sync items:

Highlight database areas to be synchronised:

Calendar

Address Book

Notes

 
Tasks



Save settings.

Fast access

You can assign one important phone number or a function to each one of the two soft keys and number keys 2 to 9 (speed-dial numbers). The phone number can then be dialed or the function started at the touch of a button.

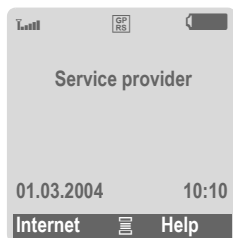

Additional information

The service provider may have already assigned functions to a soft key (e.g., access to "SIM services" or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

The left soft key may sometimes be replaced automatically by to access a new message, for example.

Soft keys

Change

For example, the **Internet** function is assigned to the soft key. To change this (in standby mode):

Internet Press **briefly**.

Change Scroll to new assignment in the list.



Confirm.

- Special case **Phone Number**. Pick out a name from the SmartChip/Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

Apply

In standby mode:

Application

The "Internet" is just used as an example here.

Internet Press and **hold**; the application is started.

Phone number

The setting "Carol" is used here only as an example.

Carol Press and **hold**, the phone number is dialed.

Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. Number key 1 is reserved for the mailbox phone number (p. 69).

Change

In standby mode:



Press number key **briefly** (e.g. the 3).

This number is still free:



Press.

Select a new function from the list and confirm with **OK**.

Or

An assignment has already been made to this key (assignment displayed above the right soft key):



Press **briefly**.

Change

Scroll to application in the list.



Confirm.

- Special case **Phone Number**. Pick out a name from the SmartChip/ Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

Apply

Select a stored phone number or start a stored application (e.g. **Internet**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the right soft key e.g.:



Press and **hold**.

Or simply



Press and **hold**.

Settings

Set Ringtones

Menu →  → **Set Ringtones**
→ Select function.

Set the signal tones on the phone to suit your requirements.

Assign ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

Calls

Assign a single ringtone to all phone numbers in the Addressbook.

Group Calls

Assign a different ringtone to each group.

Other Calls

Assign one ringtone to the remaining callers.

More Tones

Assign further ringtones for:

Messaging

Alarm Clock

Organizer

Startup Melody

Shutdn Melody

or record new ones with:

Record Audio (p. 87)

Set Wallpaper

Menu →  → **Set Wallpaper**

Set wallpaper graphic for the display.

If you have already defined a wallpaper, the selected one will automatically be opened. By clicking on "Change" you can select another one.

The device will just open the **Graphics** folder (see **My MEdia**, p. 80).

Set Screensaver

Menu →  → **Set Screensaver**

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and/or pressing any key will end the function except if the safety function is activated.

Preview

Display the screensaver.

Style:

Select **Digital Clock**, **Bitmap**, **Energy Saving**.

Picture:

Select image in **My MEdia**.

Timeout:

Set period after which the screensaver starts.

Code protection:

The phone code is requested to stop the screensaver.

Auto key lock:

Automatic keypad locking if no key has been pressed for one minute in standby mode.

Unlocking:



Press and **hold**.

Note

The "picture" (animated) and "digital clock" screensavers significantly reduce the phone's standby time.

Set Themes

Menu →  → Set Themes

Load a completely new visual presentation onto your phone. At the press of a key, various functions are re-organised on a theme basis, e. g.

Startup Anim., Shutdn Anim., Set Wallpaper, Set Screensaver, Startup Melody, Shutdown Melody.

Theme files are compressed to save memory space. After being downloaded (p. 71) or called up from **My MEdia**, these are automatically unzipped when activated.

Activate new theme



Select theme.



Display theme preview.



Activate new theme.

Audio Settings

Menu →  → Audio Settings
→ Select function.

Set the signal tones on the phone to suit your requirements.

Ringer Setting

On/Off Activate/deactivate all tones.

Beep Reduce ringtone to a short signal (beep).

Vibrating Alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringtone (e.g. in noisy environments). This function is deactivated when the battery is being loaded and accessories are connected (except the headset).



Select from several silent alert versions.

Volume

Set different volumes for types of call/functions.



Select

Incoming Call

Messaging

Alarm Clock

Organizer

System

Applications



The ringtone is repeated.



Set volume.



Confirm setting.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Call Screening

Only calls from phone numbers that are in the SmartChip/Addressbook or assigned to a group are signalled. Other calls are only displayed.

Minute Beep

During a call you have initiated you, and only you, will hear a beep every minute so you can check the call's duration. The recipient does not hear this beep.

Information Tones

Set service and alarm tones:


On/Off Activate/deactivate tones.

Extended If switched on, a wider range of service tones is available, e.g.: end of menu reached, network connection interrupted.

Key Tones

Set the type of acoustic key acknowledgement.


Display Settings

Menu →  → Display Settings
→ Select function.

Language

Set the language for the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

*#0000# 

T9 Input

T9 Preferred

Activate/deactivate intelligent text entry.

Input Language

Select language for text entry. Languages with T9 support are marked with the **T9** symbol.

Keyboard Language

Select keyboard language for text entry.

Logo

Choose graphic to be displayed instead of the provider logo.

Color Selection

Select colour scheme, incl. background image for the entire user interface

Startup Anim.

Select animation to be shown when the phone is switched on.

Shutdn Anim.

Select animation to be shown when phone is switched off.

My Greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Large Font

You can choose between two font sizes for the display.

Illumination

Set display illumination to brighter/darker. The darker the setting the longer the standby time.



Press the joystick repeatedly at the top/bottom to adjust up or down.

Contrast

Set display contrast.



Press the joystick repeatedly at the top/bottom to adjust up or down.

Call Settings

Menu →  → **Call Settings**
→ Select function.

Hide ID



When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

Call Waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Call Forward

You can specify the conditions under which calls should be diverted to your mailbox or other numbers.

Status Check

You can check the current divert status for all conditions. After a short pause, the current situation is transmitted by the network and displayed.



Condition set.



Not set.




Display if status is unknown (e.g. with a new SIM card).

Clear All



All set diversions are cleared.

Any Key Answ.

Incoming calls can be accepted by pressing any key (except for ).

Profile Settings

Menu →  → **Profile Settings**

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however:

Normal Environment

Quiet Environment

Noisy Environment

Car Kit

Headset

- You can set two personal profiles (<Name>).
- The special profile **Airplane Mode** is fixed and cannot be changed.

Switch on



Select default profile or personal profile.



Switch on profile.

Profile settings

Edit a default profile or create a new personal profile:



Select profile.

Options

Open menu.

Change Sett.

Select.

The list of available functions is displayed.


When you have finished setting a function, you return to the profile menu where you can change a further setting.

Additional information

- Call up the list in standby mode:



Profile list is displayed.

- The active profile is identified with .

Profile options

Options Open menu.

Activate	Activate selected profile.
Change Sett.	Change profile settings.
Copy From	Copy settings from another profile.
Rename	Change personal profile (except default profiles).

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically when the phone is inserted into the cradle (also see accessories).

Headset

The profile is only switched on automatically if an original Siemens headset is used (see accessories also).

Airplane Mode

The acoustic signals and vibration for the alarms (appointments, alarm clock) are switched off. The alarms continue to be shown in the display only.

Switch on



Scroll to **Airplane Mode**.



Confirm selection.



Confirm safety prompt again to activate the profile. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.


Phone Settings


Menu →  → **Phone Settings**
→ Select function.

Auto Off


The phone switches off each day at the set time.

Activate

Time Press.
 Enter time
(24-hour clock).

 Confirm.

Deactivate

Manual Press.
 Confirm.

Phone Identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternatively enter in standby mode:
***#06#**

Info Display further information about the appliance.

Device Check

A self-test and an individual test are offered after the last information page. If you select **Self Test**, all individual tests are carried out.

Software version

Display the software version for your phone in standby mode:

***#06#**, then press **Info**.

Memory Assis.

The delete assistant will help you if there is insufficient phone memory. It is also started automatically from applications if necessary.

After capacity has been checked, all files and folders are displayed along with their size and may be opened/ viewed and deleted if applicable.


Defrag FileSys

Creating more memory by deleting temporary files that are no longer required.

Master Reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively enter in standby mode:

***#9999#** 

Set Date/Time

Menu →  → **Set Date/Time**
→ Select function.

Set Date/Time

The clock must be set correctly once at start-up.

Change Press.



First enter the date (day/month/year), then the time (hours/minutes/seconds).

Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Set Time Zones

The time zone can be selected in the world map or a city list:

World map



Select the desired recording.

City list



Select a city in the selected time zone.

Options Open menu.

Set

Set time zone.

Auto Time-zone 

Have the time zone set automatically by the network.

Search City

Search for a city.

Help

Operating instructions.

Set Date Format

Select the display format for the date.

Time Format

Select **24h** or **12h**.

Show Clock

Activate/deactivate time display in standby mode.

Auto Timezone



The time zone is identified automatically.

Connectivity

Menu →  → **More Settings**
 → **Connectivity**
 → Select function.

Data Counter

Displays information on connection status.

IrDA

Your phone has an infrared interface. With this interface, you can exchange data such as pictures, ringtones, Addressbook entries, business cards or organiser data with other devices which also have an infrared interface.

The infrared interface is on the left side of the phone. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

Shown on the display:



IrDA activated.



During transmission.

Data Services

Basic setting and activation of the connection profiles for data transmission such as **MMS**, **WAP**.

The phone default setting varies from service provider to service provider.

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select profile and activate.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will also find the current settings for the service provider on the Internet at this address:

**[www.siemens-mobile.com/
mobilescustomer care](http://www.siemens-mobile.com/mobilescustomer care)**
in the FAQ section.

Select profile



Select the profile.



Confirm selection.

Set profile

Select the profile.

Options

Open menu.

Edit

Select **CSD Settings**, and/or **GPRS Settings**.

Edit

Make the settings as specified by your service provider.

HTTP Profile

The phone default setting varies from service provider to service provider.

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will also find the current settings for the service provider on the Internet at this address:

www.siemens-mobile.com/mobilescustomer care
in the FAQ section.



Make the settings.

Security

Menu →  → More Settings
 → Security
 → Select function.

Auto Key Lock

The keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Additional information

The keypad can also be directly locked and unlocked in idle state.

In each case:



Press and **hold**.

Only



(PIN2 or phone-code protected)

Dialling options are restricted to SIM-protected phone numbers in the SmartChip. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN2 input, the **whole** SmartChip can be protected with the phone code.

Codes

For description see p. 24:

PIN Control, Change PIN, Change PIN2, Chg.Phonecode

This Chip Only



(Phone-code protected)

The phone can be connected to a SIM card when the phone code is entered. Unless the phone code is known the phone will not operate with a **different** SIM card.

If the phone is to be used with a different SIM card, enter the phone code when requested.

Network Settings

Menu →  → **More Settings**
→ **Network Settings**
→ Select function.

Network Info

The list of GSM networks currently available is displayed.



Indicates non-authorized service providers (depending on SIM card).

Choose Network

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto Network** is set.

Auto Network

Activate/deactivate, see also **Choose Network** above. If "Automatic network" is activated, the next network on the list is dialled in ranking order of your "preferred networks". Otherwise a different network can be selected manually from the list of the available GSM networks.

Pref. Network

Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).

Your service provider is displayed:

List Display list of preferred networks.

Create/change entry:

<Empty> or select an existing entry, then select a new service provider in the list and confirm.

Record new service provider (last entry in the list):

Furth.Network

Select, enter the provider data and save it.

Additional information

If you are outside your home network, your phone automatically dials another GSM network.

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

Fast Search

When this function is active, network reconnection is speeded up (standby time is reduced).

User Group



Depending on the service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. The details can be clarified with your service provider.

Active

Activate/deactivate function. "User group" must be deactivated for normal phone use.

Select Group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

All Outgoing

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Pref. Group

If activated, calls may only be made within this standard user group (depending on the network configuration).

Accessories



- → More Settings
→ Accessories
→ Select function.

Car Kit

Only in combination with an original Siemens handsfree car kit (see accessories). The car kit profile is activated automatically when the phone is inserted into the cradle.

Auto Answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Shown on the display.

Automatic Switch Off

(factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the phone switching off automatically.

Car Loudspk.

Improves playback in certain circumstances.

Automatic settings

- Permanent illumination: switched on.
- Key lock: switched off.
- Charging the phone battery.
- Auto. activation of car kit profile when the phone is inserted.

Headset

Only in conjunction with an original Siemens headset (see accessories). If an original Siemens headset is used the profile is activated automatically when the headset is plugged in.

Auto Answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Automatic setting

Accept call with Call key or PTT key (Push To Talk), even when the auto key lock is activated.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Mobile Phone Manager

The Windows® PC program, Mobile Phone Manager, allows you to use extended phone functions from your PC. Among other things, you can easily manage your phone's Address-book, read, store and send SMS and MMS messages, or synchronise your phone with Outlook®. The phone and PC communicate with one another via a data cable (Accessories, p. 122).



MPM
Mobile Phone
Manager

You can download the software from the Internet:

www.siemens-mobile.com/ct66

Contacts management



You can use contacts management to manage, delete and edit the personal contacts on your phone and to add new ones. You can compare and copy contacts between your phone, Microsoft Outlook® and other Siemens phones (including Gigaset).

SMS and MMS management (messages)



You can create MMS and SMS messages conveniently using your PC. This means you can use all the options your PC offers, and use your sounds and pictures to create MMS and EMS messages. You can read, forward, print, delete and archive your messages.

Synchronisation (SmartSync)



At the touch of a key you can synchronise the contacts, appointments, notes and tasks on your mobile phone with Microsoft Outlook®. Any changes you have made on your phone are automatically transferred to your Outlook® database. In the same way, changes and new entries from Outlook® are updated in the phone.

Backup and restore



You can use the backup function to save backup copies of your phone data regularly to your PC. If you should lose the data you have in your phone or change your phone you can quickly re-instate all the data using the restore function.

Bookmark management (browser & bookmarks)



Use your PC to browse through Internet and define your preferred Browser sites. Save the Internet addresses as bookmarks on your phone so that you can find them quickly at a later time when you are on the move.

Phone Explorer



You can access your phone's file system with the Phone Explorer. Files such as photos and sounds can easily be copied between your phone and PC by dragging and dropping.

Processing pictures and photos (images)



Picture/photo processing offers the user the opportunity to conveniently create, edit and manage pictures and photos. Filters and effects are offered with which to create attractive graphics. The user-friendly interface makes it easy to transfer pictures from and into the mobile phone and to change their graphic settings (e.g. background images).

Ringtone and MP3 management (sounds)






The sound module offers the user the opportunity to conveniently manage just about any sound format and store it on the phone. In addition it supports MP3 play lists and the configuration of their ringtones. It is not possible to manage or play back MP3 files.

Questions & Answers

If you have any questions on the use of your phone, you can contact us at **www.siemens-mobile.com/mobilescustomer care** around the clock. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least 2 seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty. See also below under "Charging error".	Clean contacts.
Too little standby time.	Frequent use of applications such as organiser, games, camera.	Restrict use if applicable.
	Fast search activated.	Deactivate fast search (p. 108).
	Display illumination switched on.	Switch off display illumination (p. 98).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 106).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temperature out of range: +5 °C to +40 °C (41 °F to 110 °F).	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem	Check power supply and connection to the phone. Check battery contacts and telephone connection socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket; check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error.	SIM card not inserted correctly.	Check that the SIM card is inserted correctly (p. 15).
	Dirty SIM card contacts.	Clean SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3V SIM cards only.
	SIM card damaged (e.g., broken).	Carry out a visual check. Ask service provider to change SIM card.


114 Questions & Answers

Problem	Possible causes	Possible solution
No network connection.	Weak signal. Outside GSM range. Invalid SIM card. New network not authorised. Network overloaded.	Move higher, to a window or an open space. Check service provider's coverage area. Complain to the service provider. Try manual selection or select a different network (p. 107). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 107). Switching phone off and on again can speed this up.
Calls not possible.	New SIM card inserted. Credit used up.	Check for new barrings. Load credit.
Impossible to make entries in SmartChip/Addressbook.	SmartChip/Addressbook is full.	Delete entries in the Addressbook (p. 37)/SmartChip (p. 39).
Voice message not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (p. 69).
 flashes to indicate an SMS.	SMS memory is full.	Delete SMS or archive (p. 58).
 flashes to indicate an MMS.	MMS memory is full.	Delete MMS.
 flashes to indicate an MMS.	Phone memory full.	Delete messages, pictures, games or applications.
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ringtones, pictures, SMS archive.	Phone memory full.	Delete files in the relevant areas. You can use the memory assistant to delete specific files (p. 102).
No WAP access, downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate or set WAP profile (p. 77). If necessary ask your service provider.

Questions & Answers

115

Problem	Possible causes	Possible solution
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrectly set.	Set service centre (p. 59).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures & sounds are not displayed on the destination phone.	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect WAP profile set, or wrong or incomplete settings.	Check WAP settings (p. 77); contact your service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 116).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Missing/too many menu entries	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
Charge meter does not work	Charge pulse is not being transmitted.	Contact your service provider.
Damage		
Severe shock	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

Reset settings to the factory default, p. 102: * # 9 9 9 9 # 

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens-mobile.com/
mobilescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then **[More]**) and if available, your Siemens Service customer number.

You will also find the most frequently asked questions and answers in the section entitled "Questions & Answers" in this user guide on p. 113.

You can also get personal advice about our range of products on our Premium Hotline:
United Kingdom 0906 9597500
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 38 98 47 77
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany *	0 18 05 33 32 26
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13

* 0,12 Euro/min.

Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 57 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 07 00 80
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 27 22 11 18
Tunisia	71 86 19 02
Turkey	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam	84 89 30 01 21
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. At all events, should your phone become wet, disconnect it immediately from the power supply and remove the battery!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuitry!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The above suggestions apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Do not paint it. Paint can clog the your phone's moving parts and prevent proper operation.

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage your phone and may violate FCC regulations governing radio devices.

If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. Back up all data before taking your phone to a service center as maintenance or recovery of data is not guaranteed. If you have any sensitive information, please back it up and then delete it from your phone before taking your phone to the service center. The personnel there will assist you and, if necessary, arrange for service.

Limited Warranty 119**LIMITED WARRANTY**

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("Customer") for handsets and accessories ("Product") distributed by Siemens Information and Communication Mobile LLC ("Siemens"). This warranty is provided by the Seller of the Product ("Seller" shall be defined as the relevant authorized reseller or distributor of the Product or the reseller/distributor's warranty fulfillment partner, as applicable).

WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by Customer.

WARRANTY COVERAGE

If the Product is defective in materials or workmanship during the warranty period and is returned at Customer's expense to the original place of purchase, the Product will be repaired or replaced, at Seller's option, at no charge. Customer will be required to show valid "proof-of-purchase" (proof of date of sale, lease, or rental). Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the phone or SIM Card may be lost during repair.

**THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID
WITH RESPECT TO THE FOLLOWING:**

- Cosmetic damage.
- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Siemens or a Siemens-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage to and faults with the LCD display due to customer damage.
- Equipment and components not manufactured, supplied or authorized by Siemens.
- Failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by your carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product, or other acts which are not the fault of Siemens and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
- Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
- Signal reception problems (unless caused by defect in material or workmanship).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Siemens.
- Consumables (such as fuses).
- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Siemens.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems.

This warranty is valid only in Canada and the United States.

**USE WITH ACCESSORIES NOT SUPPLIED BY SIEMENS OR NOT OTHERWISE
EXPRESSLY AUTHORIZED BY SIEMENS MAY VOID WARRANTY.**

120 Limited Warranty**LIMITATION OF WARRANTY/LIABILITY**

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES, INCLUDING SPECIFICALLY THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND IS LIMITED TO THE DURATION OF THE LIMITED WARRANTY.

LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES IS SPECIFICALLY DISCLAIMED, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCT AND/OR ITS FITNESS FOR A PARTICULAR USE ARE SPECIFICALLY DISCLAIMED, TO THE EXTENT PERMITTED BY APPLICABLE LAW. SELLER'S LIABILITY HEREUNDER IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some STATES or PROVINCES do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from STATE to STATE or from PROVINCE to PROVINCE.

In no event shall Seller's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

INTELLECTUAL PROPERTY RESTRICTIONS

All Intellectual Property, as defined below, which is owned by or to which Siemens Information and Communication Mobile LLC ("Siemens"), its affiliates, partners or suppliers, otherwise have rights, relating to the Phone, including but not limited to accessories, parts or software relating thereto (the "Phone System"), is proprietary under federal laws, state laws, provincial laws and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate Siemens' rights with respect to the Intellectual Property. Moreover, you agree that you will not (and will not attempt to-) disassemble, decompile, reverse engineer, prepare derivative works from, modify or make any other effort to create source code from the software. No title to ownership in the Intellectual Property is transferred to you through purchase or possession of the Phone System or its components. All applicable rights related to the Intellectual Property shall remain with Siemens, its affiliates, partners or suppliers.

Siemens will have no liability with respect to any claim of patent infringement which is based upon the combination of the Phone System or parts furnished hereunder with software, apparatus or devices not furnished by Siemens, nor will Siemens have any liability for the use of ancillary equipment or software not furnished by Siemens which is attached to or used in connection with the Phone System. The foregoing states the entire liability of Siemens with respect to infringement of patents by the Phone System or any parts thereof.

Copyright Laws in the United States and other countries preserve for Siemens certain exclusive rights for copyrighted Siemens software, such as the exclusive rights to reproduce and distribute copies of such Siemens software. Siemens software may be used only in the Phone System in which the software was originally embodied when purchased, and such software in such Phone System may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such Siemens software or exercise of rights in such Siemens software is permitted. No license is granted by implication, estoppel or otherwise under Siemens patent rights or copyrights.

A30880-N5300-Z1-1-4A84

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or:

www.siemens-mobile.com/conformity

CE 0168

Technical data

GSM class:	4 (2 watt)
Frequency range:	824–894 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710–1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850–1,990 MHz
Weight:	86 g
Size:	105 × 47 × 18 mm (75.6 ccm)
Li-Ion battery:	750 mAh
Operating temperature:	–10 °C to 55 °C (14 °F to 130 °F)
SIM card:	3.0 V

Phone ID

You will need the following details if you lose your phone or SIM card:
the number of the SIM card (on the card):

.....
15-digit serial number of the phone
(under the battery):

.....
the customer service number of the service
provider:

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: up to 300 minutes
Standby time: up to 250 hours

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30–90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes

* Keypad input, games, organiser etc.

Accessories



Original Siemens Accessories

[www.siemens-mobile.com/
shop](http://www.siemens-mobile.com/shop)

Energy

Li-Ion battery (750 mAh) EBA-660

Spare battery

Travel Charger

Travel Charger ETC-520

Power supply for your phone and Desk Top Charger.

Car Charger Plus ECC-600

Handsfree talking and charging all in one.

Desk Top Charger EDC-520

Conveniently charge your phone.

Handsfree Portable

Headset HHS-510

Activate speech recognition or receive and end calls using the activation button.

Headset Purestyle HHS-610

Premium designed headset with full-duplex speech quality and optimum carrying comfort.

Office

Data Cable DCA-500

Transfer data from your PC to your phone.

Data Cable USB DCA-510

Connect your mobile phone to the USB interface of your PC.

Multitainment

Flash IFL-600

Capture more using the attachable Flash. The flash technology and red-eye reduction allow you to capture the moment in dark lighting conditions.

Please obey all applicable laws, including all laws pertaining to intellectual property and copyright, in use of this feature or accessory. Please note that in some jurisdictions it may be unlawful to take a picture without notice to or the consent of all participants.

Car Solutions

Car Kit Easy HKP-601

Mobile plug & play car kit with adjustable and exchangeable mobile holder.

Portable Car Kit HKP-500

Handsfree communication with high quality sound is easily transferred from one vehicle to the next.

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:

	<p>Original Siemens Accessories</p> <p>www.siemens-mobile.com/ shop</p>
---	--

Quality

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Display quality statement

For technological reasons, some small dots in other colours may appear in the display in rare cases.

Please remember that if some dots appear brighter or darker in the display, this generally does not mean that a fault has occurred.



The U.S. Food and Drug Administration's (FDA) Center for Devices and Radiological Health Consumer Update on Mobile Phones

FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known – and what remains unknown – about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has

been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna – the primary source of the RF – and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called "cordless phones," which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that handheld mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously – up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safe-

ty of mobile phones. This research has resulted in two findings in particular that merit additional study:

1. In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

2. Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³
- In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used. Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies

and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is

called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- Support needed research into possible biological effects of RF of the type emitted by mobile phones;
- Design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health.
- At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:
- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products – and at this point we do not know that there is – it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who

spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle,
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package, or
- a headset with a remote antenna to a mobile phone carried at the waist.

Where can I find additional information?

For additional information, see the following websites:

- Federal Communications Commission (FCC) RF Safety Program (select “Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters”): www.fcc.gov/oet/rfsafety

- World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As):
www.who.int/emf
- United Kingdom, National Radiological Protection Board:
www.nrpb.org.uk
- Cellular Telecommunications Industry Association (CTIA):
www.wow-com.com
- U.S. Food and Drug Administration (FDA) Center for devices and Radiological Health:
www.fda.gov/cdhr/consumer/

¹ Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.

² Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, DC; and personal communication, unpublished results.

³ Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915- MHz simulated mobile phone signal on cognitive function in man. Int. J. Radiat. Biol., April 8, 1999.

⁴ Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors; a case-control study. Int. J. Oncol, 15: 113-116, 1999.

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, please contact your local service facility.

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.



Your Siemens wireless phone gives you the power to communicate by voice – almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

Get to know your phone and its features such as speed dial and redial.

Carefully read your instruction manual and learn to take advantage of valuable features most phones offer including, automatic redial and memory dial – most phones can store up to 99 numbers in memory dial. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

When available, use a hands-free device.

A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speaker phone accessory, take advantage of these devices if they are available to you.

Position your phone within easy reach.

Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.

Suspend conversations during hazardous driving conditions or situations.

Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Do not take notes or look up phone numbers while driving.

If you are reading an address book or business card while driving a car, or writing a "to do" list, then you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

Dial sensibly and assess the traffic.

If possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting.

Stressful or emotional conversations and driving do not mix – they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations that have the potential to divert your attention from the road.

Use your phone to call for help.

Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 9-1-1 in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it is a free call on your wireless phone.

Use your phone to help others in emergencies.

Your wireless phone provides you a perfect opportunity to be a “good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergencies where lives are in danger, call 9-1-1, as you would want others to do for you.

Call roadside assistance or a special wireless non-emergency assistance number when necessary.

Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to 9-1-1. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless numbers.

“The wireless industry reminds you to use your phone safely when driving.”

For more information, please call 1 (888) 901-SAFE, or visit our Web site at: www.wow-com.com

Provided by the Cellular Telecommunications Industry Association (CTIA)

Intellectual Property Restrictions

All Intellectual Property, as defined below, which is owned by or otherwise the property of Siemens Information and Communications Mobile, LLC ("Siemens"), its affiliates, partners or suppliers, relating to the Phone, including but not limited to accessories, parts or software relating thereto (the "Phone System"), is proprietary under federal laws, state laws and International treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) disassemble, decompile, reverse engineer, prepare derivative works from, modify or make any other effort to create source code from the software. No title to ownership in the Intellectual Property is transferred to you through purchase or possession of the Phone or its components. All applicable rights of the Intellectual Property shall remain with Siemens, its affiliates, partners or suppliers.

Siemens will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software,

apparatus or devices not furnished by Siemens, nor will Siemens have any liability for the use of ancillary equipment or software not furnished by Siemens which is attached to or used in connection with the Product. The foregoing states the entire liability of Siemens with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for Siemens certain exclusive rights for copyrighted Siemens software, such as the exclusive rights to reproduce and distribute copies of such Siemens software. Siemens software may be used only in the Product in which the software was originally embodied when purchased, and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such Siemens software or exercise of rights in such Siemens software is permitted. No license is granted by implication, estoppel or otherwise under Siemens patent rights or copyrights.

SAR (CT66)

RF EXPOSURE/SPECIFIC ABSORPTION RATE (SAR) INFORMATION

THIS SIEMENS CT66 PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO ELECTROMAGNETIC FIELDS.

Your cell phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy established by the Federal Communications Commission (FCC) of the U.S. Government and by Health Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for cell phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit established by the FCC and by Health Canada is 1.6 W/kg**. Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest cer-

tified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and the manufacturer must certify to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body), reported to the FCC and available for review by Industry Canada. The highest SAR value for this Siemens CT66 when tested for use at the ear is

0.75 W/kg***

and when worn on the body⁺ is

0.65 W/kg***

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Internet Association (CTIA) web-site at www.phonefacts.net or the Canadian Wireless Telecommunications Association (CWTA) website www.cwta.ca

136 SAR (CT66)

SAR information on this Siemens CT66 phone is on file with the FCC and can be found under the Display Grant section of

www.fcc.gov/oet/fccid

after searching on FCC ID **PWX-C66**.

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the governmental requirements for safe RF exposure.

* For body worn operation, this mobile phone has been tested and meets FCC RF exposure guidelines when used with a Siemens accessory designated for this product, where available, or when used with a carry accessory that contains no metal and that positions the handset at least 2.2 cm/ 0.87 in is the correct testing distance from the body. Use of other carry accessories may not ensure compliance with FCC RF exposure guidelines.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland), on the basis of the actual knowledge, does not see any necessity for special precautionary measures when using cell phones.

Further information:

www.who.int/peh-emf

www.mmfa.org

www.siemens-mobile.com

** averaged over 1 g of tissue.

*** SAR values may vary depending on national requirements and network bands. SAR information for different regions can be found at **siemens-mobile.com**

End user license agreement

This Software License Agreement ("Agreement") is between You and Siemens Information and Communication Mobile, LLC and/or one of its affiliates ("Licensor"). The Agreement authorizes You to use the Software specified in Clause 1 below, which may be included on Your phone, stored on a CD-ROM, sent to You by electronic mail, downloaded from Licensor's Web pages or servers or from other sources under the terms and conditions set forth below. This is an agreement on end user rights and not an agreement for sale. Licensor continues to own the copy of the Software and any other copy that You are authorized to make pursuant to this Agreement. Read this Agreement carefully before installing, downloading or using the Software. Further, by installing, downloading and/or using the Software, You agree to the terms and conditions of this Agreement.

1. Software.

As used in this Agreement, the term "Software" means, collectively: (i) all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided; (ii) related Licensor or third party software; (iii) digital images, stock photographs, clip art or other artistic

works ("Stock Files") (iv) related explanatory written materials ("Documentation"); (v) fonts (vi) upgrades, modified versions, updates, additions and copies of the Software, if any, licensed to You by Licensor (collectively "Updates") and (vii) any other possible documentation related thereto.

2. End user rights and use.

Licensor grants to You a non-exclusive, non-transferable end user right to install the Software or use the Software installed on the phone. The Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

3. Limitations on end user rights.

(a) You may not copy, distribute, or make derivative works of the Software.

(b) You may not use, modify, translate, reproduce or transfer the right to use the Software or copy the Software except as expressly provided in this Agreement.

(c) You may not resell, sublicense, rent, lease or lend the Software; except You may permanently transfer all of Your rights as set forth in the Agreement only as part of a permanent sale or transfer of the phone, provided the recipient agrees to the terms of this Agreement.

138 End user license agreement

(d) You may not reverse engineer, reverse compile, disassemble or otherwise attempt to discover the source code of the Software (except to the extent that this restriction is expressly prohibited by law) or create derivative works based on the Software.

(e) You shall not display, modify, reproduce or distribute any of the Stock Files included with the Software.

(f) You shall not display, modify, reproduce or distribute any of the pre-loaded content included with the software unless permitted as stated in the User Guide or in the prompts in the Software. In the event that You are allowed to display, modify, reproduce or distribute certain parts of the pre-loaded content, You shall review the "Readme" files associated with the pre-loaded content (contained on the CD) to ascertain what rights You have with respect to such materials. Pre-loaded content may not be used in the production of libelous, defamatory, fraudulent, infringing, lewd, obscene or pornographic material or in any otherwise illegal manner. You agree that You shall only use the pre-loaded content in a manner that complies with all applicable laws, including, but not limited to, applicable restrictions concerning copyright and other intellectual property

rights. You may not register or claim any rights in the pre-loaded content or derivative works thereof.

(g) You agree that You shall only use the Software in a manner that complies with all applicable laws in the jurisdiction in which You use the Software, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights.

4. Copyright.

Licensor and/or its software suppliers and their respective affiliates own the Software and all rights, including without limitation including proprietary rights therein, are protected by international treaty provisions and other applicable national laws of the country in which it is being used. The structure, organization and code of the Software are the valuable trade secrets and confidential information.

5. Multiple copies/updates.

If the Software supports multiple platforms or languages, if You receive the Software on multiple media, or if You otherwise receive multiple copies of the Software, the number of phones on which all versions of the Software are installed shall be one phone. If the Software is an Update to a previous version of the Software, You must possess a valid end user right to such previous

version in order to use the Update and You may use the previous version for ninety (90) days after You receive the Update in order to assist You in the transition to the Update. After such time You no longer have a right to use the previous version, except for the sole purpose of enabling You to install the Update.

6. Commencement & termination.

This Agreement is effective from the first date You use or install the Software. Your end user rights automatically and immediately terminate without notice from Licensor if You fail to comply with any provision of this Agreement. In such event, You must immediately delete, destroy or return at Your own cost and expense, and without entitlement to any refund of the purchase price, the phone and the Software, and all related material to Licensor.

7. EXCEPT AS EXPRESSLY PROVIDED IN THE LIMITED WARRANTY FOR THE PHONE, YOU ACKNOWLEDGE THE SOFTWARE IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW NEITHER LICENSOR, LICENSOR'S SOFTWARE SUPPLIERS OR THEIR RESPECTIVE AFFILIATES, NOR THE COPYRIGHT HOLDERS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANT-

ABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTHER RIGHTS. THERE IS NO WARRANTY BY LICENSOR OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR FREE.

8. NOT FAULT TOLERANT. THE SOFTWARE MAY CONTAIN TECHNOLOGY THAT IS NOT FAULT TOLERANT AND IS NOT DESIGNED, MANUFACTURED, OR INTENDED FOR USE IN ENVIRONMENTS OR APPLICATIONS IN WHICH THE FAILURE OF THE LICENSED SOFTWARE COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE OR FINANCIAL LOSS.

9. Limitation of liability.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL LICENSOR OR LICENSOR'S SOFTWARE SUPPLIERS OR THEIR RESPECTIVE AFFILIATES AND EMPLOYEES BE LIABLE FOR ANY LOST PROFITS, REVENUE, SALES, DATA OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, PERSONAL INJURY, INTERRUPTION OF BUSINESS, LOSS OF BUSINESS INFORMATION OR FOR ANY SPECIAL, DIRECT, INDIRECT, INCIDENTAL, ECONOMIC,

COVER, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY ARISING OUT OF THE USE OF OR INABILITY TO USE THE SOFTWARE, EVEN IF LICENSOR OR ITS SOFTWARE SUPPLIERS ARE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME COUNTRIES/STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY, BUT MAY ALLOW LIABILITY TO BE LIMITED, IN SUCH CASES, THE LIABILITY OF LICENSOR, ITS SOFTWARE SUPPLIERS AND THEIR RESPECTIVE AFFILIATES AND EMPLOYEES SHALL BE LIMITED TO, AT LICENSOR'S OPTION, EITHER (A) RETURN OF THE PRICE PAID LESS A REASONABLE AMOUNT FOR USAGE, OR (B) REPAIR OR REPLACEMENT OF THE SOFTWARE THAT DOES NOT MEET THE LIMITED WARRANTY PROVIDED WITH THE PHONE AND WHICH IS RETURNED IN ACCORDANCE WITH THE REQUIREMENTS OF THE LIMITED WARRANTY.

Nothing contained in this Agreement shall prejudice the statutory rights of any party dealing as a consumer. Nothing contained in this Agreement limits Licensor's liability to You in the event of death or personal injury resulting from Licensor's negligence if law prohibits such a

limitation. Licensor is acting on behalf of its software suppliers and their respective employees and affiliates for the purpose of disclaiming, excluding and/or restricting obligations, warranties and liability as provided in this clause 9, but in no other respects and for no other purpose.

10. Technical support.

Licensor has no obligation to furnish You with technical support except as agreed in writing between You and Licensor in the Limited Warranty provided with the phone.

11. Export control.

The Software may be subject to export regulations of the United States and other countries. You agree that You shall comply with all applicable export laws, restrictions and regulations of the United States or foreign agencies or authorities, and shall not export, or transfer for the purpose of re-export, any Software, product or technical data received under this Agreement or any Software or product produced by use of such technical data, including processes and services, in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.

12. Applicable law & general provisions.

This Agreement shall be governed by and construed in accordance with the laws of the State of California without regard to its conflicts of laws rules. This is the entire agreement between Licensor and You relating to the Software and it supersedes any prior representations, discussions, undertakings, end user agreements, communications or advertising relating to the Software.

Menu tree

Recent Calls

 
- ▶ Calls Made
- Calls Received
- Missed Calls
- Voice Mail
- Speed Dial List
- Address Book

Messaging

- ▶ IM
 - Create New Msg
 - ▶ Text Message
 - Multimedia Msg
 - Inbox
 - ▶ Text Message
 - Multimedia Msg
 - WAP Push Inbox
 - CB Services
 - Sent Messages
 - ▶ Text Message
 - Multimedia Msg
 - Outbox
 - ▶ Text Message
 - Multimedia Msg
 - Saved Messages
 - ▶ Text Message
 - Multimedia Msg
 - Text Msg Archive

Games

- ▶ <Shop Games>
- ▶ Games

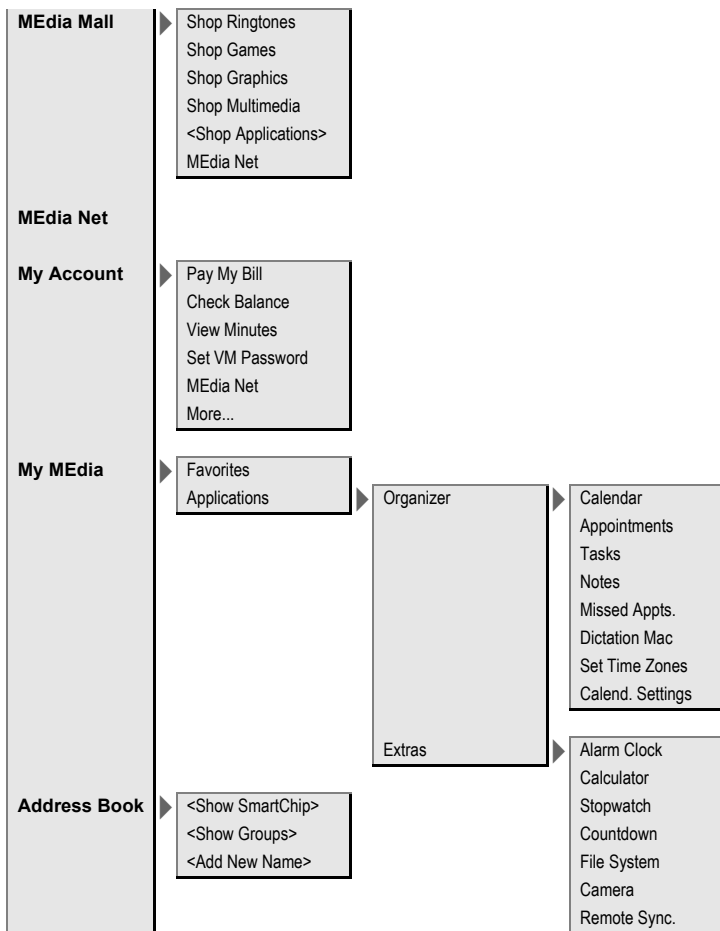

144 Menu tree

Settings

Set Ringtones



Calls

Group Calls

Other Calls

More Tones

Set Wallpaper

Set Screensaver

Preview

Style:

Picture:

Timeout:

Code protection:

Auto key lock:

Set Themes

Audio Settings

Ringer Setting

Vibrating Alert

Volume

Call Screening

Minute Beep

Info Tones

Key Tones

Messaging

Alarm Clock

Organizer

Startup Melody

Shutdown Melody

Record Audio

On

Off

Beep

Display Settings

Language

Automatic

English

Español

Française

T9 Input

Logo

Color Selection

Startup Anim.

Shutdn Anim.

My Greeting


T9 Preferred

Input Language

Keyboard Language

Settings	▶ Display Settings	▶ Large Font Illumination Contrast
	Call Settings	▶ Hide ID Call Waiting Call Forward Any Key Answer
	Profile Settings	▶ Normal Envi. Quiet Envi. Noisy Envi. Car Kit Headset <Name> Airplane Mode
	Phone Settings	▶ Auto Off Phone Identity Memory Assis. Defrag FileSys Master Reset
	Edit Favorites Set Date/Time	▶ Set Date/Time Set Time Zones Set Date Format Time Format Show Clock Auto Timezone

 146 Menu tree

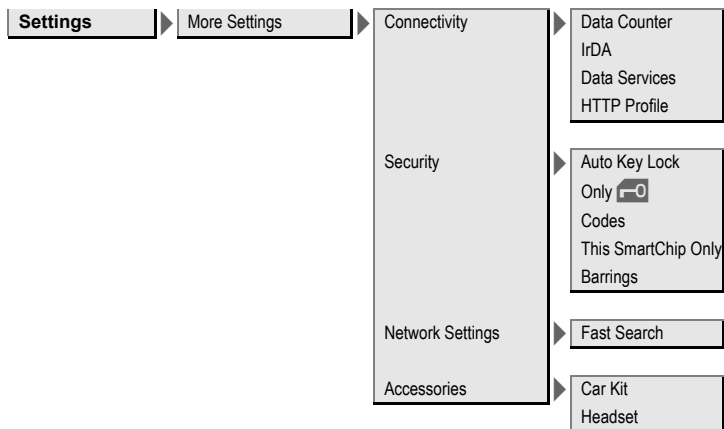

Index

A

Accessories.....	122
Addressbook	
Dial entry.....	39
Groups	40
New entry.....	37
Read entry	39
Aircraft mode	101
Alarm	
Alarm clock.....	87
Type	83
Alarm clock	87
Answering service (external).....	69
Any key answer	99
Appointments	81
Audio Settings.....	96
Auto display	
Clock	103
Auto key lock.....	12, 106
Auto time zone.....	86, 103
Auto. network selection.....	107
Auto. redial	31
Automobile accessories	123

B

Battery	
Charge.....	16
Insert.....	15
Operating times.....	17, 121
Quality Declaration	124
Speech time.....	121
Standby time	17
Bookmarks (MEdia Net)	75, 77
Browser.....	76
Business card.....	36
Busy number	31

C

Calculator	88
Calendar	81
Call	31
Accept/end.....	32
Conference	34
End	31
forward	99
Hold.....	33
Menu	34
Reject.....	32
Swap (change)	33
Call back	32
Call record (see Recent calls)	
Call transfer	34
Call waiting.....	33, 99
Calls dialled (call record)	44
Calls received (call record)	44
Camera	45
Car Charger, Accessories	122
Car Kit	
Accessories	123
Setting	109
Care of phone	118
Cell Broadcast (CB)	70
Change the keypad mat	18
Changing the faceplate	18
Changing the keypad	18
Charging the battery	16
Clock	103
Color selection	98
Conference	34
Connection profiles.....	104
Connectivity	104
Contact lists	49
Control code (DTMF).....	35
Countdown.....	89

148 Index

Covers, changing 18
 CSD settings 105

D

Date format 103
 Default book 36
 Delete assistant 102
 Desk Top Charger, Accessories .. 122
 Dialling code 31
 Dialling with number keys 31
 Dictating machine 85
 Digital rights management 20
 Direct reply (SMS) 59
 Display

 Illumination 98
 Language 98
 Large font 98
 Symbols 13

Download, games 71
 Driving safety 132
 DTMF codes (control codes) 35

E

Emergency number 19
 End user license agreement 137
 Extras 87

F

Fast access 92
 Fast search 108
 Format (SMS text) 55
 Forwarding (call) 34

G

Games 71
 Groups 40

H

Handset volume 31
 Handsfree talking 33
 Headset
 Accessories 122

 Setting 109
 Headset, Accessories 122
 Hide ID 99
 Hold call 33, 34
 Home network 107
 Hotline 116
 HTTP 105

I

Identity number (IMEI) 102
 IM 48
 IMEI number 102
 Inbox 47
 Information services (CB) 70
 Information tones 97
 Infrared (IrDA) 104
 Input language (T9) 27
 International dialling code 32
 Internet 75
 IrDA (Infrared) 104

J

Joystick 11

K


Key tones 97

L

Language 98
 Large font 98
 Legal notices 3
 Logo 98
 Loss of phone, SIM card 121

M

Mailbox 69
 Maintenance of phone 118
 Master reset 102
 MEdia Net 75
 Media player 74
 Menu controls 21
 Menu speed dialling 23

	Index	149
Menu tree	142	
Message		
CB	70	
MMS	61	
SMS	55, 57	
Message memory full	60	
Message type	59	
Microphone on/off	34	
Missed appointments	84	
Missed calls (call record)	44	
MMS		
Lists	66	
Receive	65	
Send	64	
Write	61	
Mobile Phone Manager	110	
Muting (microphone)	34	
My Account	78	
My Greeting	98	
My MEdia	79, 80	
My phone	30	
N		
Network (settings)	107	
Notes	84	
O		
Only 	106	
Operating times (battery) ...	17, 121	
Options		
My Account	78	
Organizer	81	
Own (phone) numbers	43	
Own greeting	98	
P		
Phone (settings)	102	
Phone code	24	
Phone data	121	
Phone identity number (IMEI) ...	102	
Phone number memo	32	
Phone number transmission on/off ..	99	
Phonebook (see SmartChip)		
Photo	45	
Picture & sound (SMS)	56	
PIN		
Change	24	
Control	24	
Enter	19	
Error	115	
PIN2	24	
Preferred network	107	
Preventing accidental activation ..	25	
Product data	121	
Profiles		
MEdiaNet	77	
MMS	67	
Phone	100	
Prompt	32	
Provider logo	98	
PUK, PUK2	24	
Q		
Questions & Answers	113	
R		
Recent calls	44	
Redial	31	
Reminder	32	
Remote synchronisation	90	
Ring setting	96	
Ringtones	40	
S		
Safety precautions	5	
Security	24	
Security codes	24	
Service centre (SMS)	59	
Service provider portal	30	
Service tones	97	
Set date/time	103	

150 Index

Set Ringtones	94	Speech time (battery)	121
Set Screensaver	94	Speed dialling keys	93
Set Themes	96	Standard functions	22
Set Wallpaper	94	Standby mode	20
Settings	94	Standby time	17, 121
SMS	59	Startup animation	98
Short message (SMS)	55	Stopwatch	89
Shown in the display	13	Storage location (SmartChip)	41
Shutdown animation	98	Swap	33
Siemens City Portal	30	Switch off phone	
Signal strength	20	Automatic	102
SIM card		Manually	19
Clear barring	25	Switch on phone	19
Insert	15	Symbols	13
Problems	113	Synchronisation	90
SmartChip	43	T	
SmartChip		T9 text input	27
Call an entry	42	Tasks	83
New entry	41	Technical data	121
Protected Cip	43	Text entry	
Special books	43	With T9	27
VIP numbers	43	Without T9	26
SMS		Text Message	55
Archive	58	Text templates	29
Lists	58	This Chip only	106
Profiles	59	Time zones	19, 86, 103
Read	57	Travel Charger, Accessories	122
Settings	59	U	
Signature	59	Upper and lowercase letters (T9)	26
T9 input	27	User group	108
To group	56	V	
Write	55	Validity, SMS	59
Software version	102	Vibrating alert	96
SOS	9, 19	Voice message (mailbox)	69
Sound recorder	87	Volume	
Spare battery, Accessories	122	Handset volume	31
Speakerphone	33	Profiles	100
Special books	43	Ringtone	97
Special characters	26		