	8	Ξ
	Ŧ	•
֡	>	1
i	_	5
į	٥	Ó
(_	2
•	4	5
:	=	-
	_	3
	π	3
	ă	5
•	Ι	
L	2)
ļ	٥	2
	=	-
	ă	3
	2	=
	۲	2
Č	ì	_
	٥	2
•	c	5
	9	2
	2	į
	'n	2
	ā	5
	٤	Ε
	٥	ز
ί	1	2
	٥	ת
	ŗ	2
٠	ŧ	-
	Ξ	3
•	₹	?
L	1	1
(Υ	j
(=	2
Ċ	7	í
(_	,
•	₫	-
	ú	2
	ă	,
	ξ	É
	ā	5
•	7	=

	Table of Contents	1
Safety precautions3	Address book	34
Antenna care5	New entry	34
Phone operation5	Change entry	36
Electronic devices6	Call entry	
Overview of phone	Groups	
(schematic)9	Phonebook	
Display symbols11	New entry	38
Getting started13	Call (search for an entry)	39
Insert SIM card/battery13	Change entry	39
Charge battery14	<special books=""></special>	40
Changing CLIPIt™ covers15	Call records	41
Switch on/off, PIN entry16	Time/charges	42
Entering the PIN16	Camera	
Emergency number (SOS)16	Main Inbox	45
General instructions17	SMS	
Standby mode17	Write/send	
Signal strength17	Read	
Digital Rights Mgmt. (DRM)17	Setting	
Main menu17	MMS	
Standard functions19	Create	
Highlighting mode20	Templates	
Menu speed dialling20	Send	
Security21	Receive	
Codes21	Read	
Preventing accidental	Setting	
activation22	Voice message/mailbox	
Text entry23	Start menu	
My phone27	Login	62
Calling28	Contact lists	
Default book33	Start chat room visit	65
Delault 200k33	Msg. history	66
	Catting	

See also Index at the end of this User Guide

) Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65IVZ.fm

2 Table of Contents

-	
CB services 68	Media player102
Surf & fun 69	Extras103
Internet 69	SIM services (optional) 103
Bookmarks71	Alarm clock103
Games and Applications 72	Sound recorder104
Download wiz 73	Calc 10!
Setup 74	Unit converter10!
Profiles 74	Stopwatch100
Topics	Countdown103
Display 77	Remote synchronisation 103
Ring tones 79	My stuff109
Call setup 81	Mobile Phone Manager11
Phone setup 83	Questions & Answers114
Clock 85	Customer Care11
Connectivity 86	Care and maintenance119
Security 88	
Network90	Product data120
Accessories92	U.S. FDA12
My menu 93	FCC/Industry Canada Notice 12
Fast access	Ten driving safety tips128
Organizer96	Intellectual property130
Calendar 96	Accessories13
Appointments 97	Quality133
Tasks 99	SAR (C71)134
Notes 99	
Missed appts 99	Menu tree130
Dictation mac 100	Index142
Time zones 101	

See also Index at the end of this User Guide

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The ringtone (p. 79), info tones (p. 83) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 30). Otherwise you risk serious permanent damage to your hearing.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.

Safety precautions



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

Important



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to Siemens original accessories.

The phone may only be used if the keypad is fully closed or fully opened; for optimum audio quality, however, it is recommended you open the keypad completely.

Important

Read this information before using your wireless handheld phone.

As this mobile phone is equipped with a fixed (non-retractable) antenna, some paragraphs in the text below may not be applicable.

Antenna care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone operation

Normal position

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on efficient operation

For your phone to operate most efficiently:

- Extend your antenna fully (if applicable).
- Do not touch the antenna unnecessarily when the phone is in use.
 Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

PoC Operation

Depending on the service options offered by your service provider, you may be able to use the C71 phone as a two-way radio (push-and-talk over cellular "PoC" mode). In order to maintain compliance with FCC RF exposure guidelines while using the C71 phone in PoC mode, the phone must be held in a vertical position at least one inch (2.5 cm) from the lips.

Driving

Laws pertaining to the use of mobile phones while driving vary significantly from state to state and sometimes even from locality to locality within states. For example, some areas may allow persons to use their mobile phones only if they employ a hands-free device, and some areas may prohibit the use of cell phones entirely. Accordingly, Siemens recommends that persons check the laws for the areas in which they drive or will be driving. For areas where the use of mobile phones while driving is permitted, Siemens encourages persons to use their phones responsibly and to employ handsfree devices. Also, if using your phone while driving, please:

- Give full attention to driving driving safely is your first responsibility;
- Use hands-free operation;

 Pull off the road and park before making or answering a call, if driving conditions so require.

For vehicles equipped with air bags

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers' Association recommends that a minimum separation of six inches (6") be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers

- should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- should not carry the phone in a breast pocket;
- should use the ear opposite the pacemaker to minimize the potential for interference;
- should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider or your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturers of your devices to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Turn your phone OFF in any facility where posted notices so require.

Airplanes

FCC and Airline Regulations prohibit using your phone while in the air. Turn your phone OFF when requested by the airline.

Check and comply with the policy of your airline regarding the use of your phone while the airplane is on the ground.

Blasting areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Potentially explosive atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include: fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls (SOS)

Your wireless phone can be used to make emergency calls. You can make an emergency call from the main display screen. Enter the local emergency number such as 911 and then press the 📉 key

This phone, like any wireless phone, operates using radio signals, wireless and landline networks, and userprogrammed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely on any wireless phone for essential communications (for example, medical emergencies). Remember - to make or receive any calls, the phone must be switched on and be used in a service area that has adequate signal strength. Emergency calls might not be possible on all wireless phone networks or when certain network services or phone features are in use. Check with local service providers regarding their network features.

Always make certain that your phone is properly charged before attempting any emergency calls. If you allow your battery to discharge, you will be unable to receive or make calls, including emergency calls. You must then wait a few minutes after the charging begins to place any emergency calls.

When making an emergency call, remember to give all of the necessary information as accurately as possible. Remember that your wireless phone might be the only means of communication at the scene of an accident, therefore you should not terminate the call until given permission to do so.

① 🔽 Call key

Dial displayed/highlighted phone numbers/names, take calls. Show last phone numbers dialled in standby mode.

② Ø On/Off/End key.

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press briefly to go back a level.
- Press and **hold** to go back to standby mode.
- In standby mode: press and hold to switch off phone.

3 Joystick

Press the joystick down vertically to start an application or function.

In standby mode:

- Open main menu.
- Open user profiles.
- Open Phonebook/Addressbook.
- Open Main Inbox.
- Start the camera.


In lists, messages and menus:

- Scroll up and down.
- Back a level.
- Has the same function as the right soft key.

During a call:



Call options.

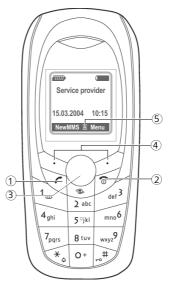

4 Soft keys

The current functions of this key are shown in the bottom line of the display as Text/symbol (e.g. —).

Additional symbol to display which function pressing the joystick has in different situations (see p. 12). VAR Language: am; VAR issue date: 040317

10 Overview of phone (schematic)

① Integrated antenna

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

- 2 Loudspeaker
- 3 Display
- 4 Infrared interface (IrDA)
- S Access to the Internet portal
- **6** Input keys

⑦ ◀ Ringtone

- Press and **hold** in standby mode: Switch all audible signals on/off (except alarm).
- Press and hold on incoming call: Switch off ringtone for this call only.

⊗ Key lock

Press and **hold** in standby mode: Switch key lock on/off.


Connection socket


For charger, headset, flash etc.

(ii) Connection for external antenna

① Camera lens

② Mirror (depending on phone model)

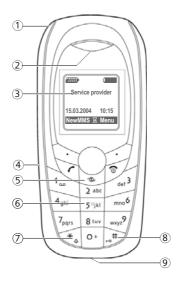

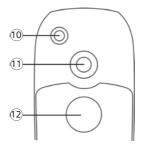

11

Battery charge level, e.g. 50 %

Display symbols

Signal strength

Display symbols (selection)

Charging

Phonebook

Call records

Surf & fun/

Organizer

Messages

Camera

Extras

My stuff

Ringer off

Alarm set

Keypad locked

Auto answer feature on

Activated and available

Text input with T9.

Short ring (beep) only

Ringer only if the caller is stored in the Phonebook.

Setup

iiiii

 \bigcirc

(1)

1

Û

⇒¦Ĉ

(Ġ)

C

T9Abc

Display symbols Registered

GP RS Temporarily interrupted • Browser offline

IGP!

? Browser online Browser via GPRS online

Ø Browser no network

D:-IrDA activated Dm IrDA transmission

Events (selection) SMS memory full

[I MMS memory full Ĺij Phone memory full

N No network access 令 Missed call

Delete assistant

Message symbols (selection) Unread

Read Draft

Delivered

MMS not sent MMS received

W MMS read

W

MMS with DRM contents (p. 17)

Voice mail received

12 Display symbols

Camera symbols				
3(╬)+2	Brightness			
⊕Q ×1	Zoom factor			
	White balance			
En	Flash connected			

Joystick	Joystick symbols				
<u> </u>	Camera				
×	Delete				
2	Make call/accept call				
	Menu				
\oplus	Zoom				
\subseteq	OK				


) Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Displaysymbols.fm

Getting started

Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

Press the grooved area 1, then push the battery cover towards the front in the direction indicated by the arrow 2.

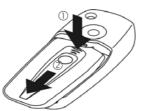

 Place the SIM card in front of the slot with the contact surface facing downwards. Then push the SIM card in using gentle pressure
 (ensure that the chamfered corner is in the correct position).



 Insert the battery sideways into the phone ⁽⁴⁾, then press it downwards ⁽⁵⁾ until it clicks into position.

Getting started



- Push the battery cover onto the side hooks ⑦, until it clicks into position.



Additional information

Please switch off your phone before removing the battery!

Only 3 V SIM cards are supported. Please contact your service provider if you have an older card.

SIM card problemsp. 114

14 Getting started

Charge battery

Charging procedure

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.



Display during charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 300 minutes Standby time: 60 to 250 hours

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit supplied!

Display while in service

Charge level display during operation (empty – full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore not remove the battery unnecessarily and where possible not finish the loading process early.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Changing CLIPIt™ covers

You can use CLIPIt™ covers (accessories) to personalise the appearance of your phone as you wish.


Dismantle the phone

To remove the upper faceplate remove the battery cover (see p.10). Use your fingers to press the side hooks ① and insert your finger nail into the division between the upper and lower faceplates ② to release the hooks in the lower part.



Assemble the phone

First insert the keypad mat ③ into the upper faceplate. Ensure that it is sitting exactly in place.

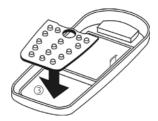

Getting started

Insert the phone into the bottom of the upper faceplate 4 and then push it in carefully until it clicks into position ⑤. Finally, replace battery cover (see p. 13).



CLIPit™ covers

Please switch the phone off before changing the keypad mat or faceplate.

The new keypad has an additional key beneath the joystick to permit direct access to the Internet information from the service

6 Switch on/off, PIN entry

Switch on/off, PIN entry

Switching phone on/off



Press and **hold** the On/Off/ End key.

Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.





Confirm by pressing the joystick. Logging on to the network will take a few seconds.

Additional information Change PIN.....p. 21 Clear SIM card barringp. 22

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the SOS soft key you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

Switching on your phone for the first time

Time/date

Set the clock correctly on a one-off basis when getting started.



Press this key, then select Change.



First enter the date (day/ month/year), then the time (24 hours, including seconds).



Press. The time and date are updated.

Time zones

Set the time zone for your area.



Select the city in the desired time zone from the list ...



... and set it.

Copy SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please do not interrupt this procedure. During this time do not accept incoming calls. Follow instructions in the display.

You can also copy data from the SIM card at a later time (p. 39).

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Press and hold the On/Off/ End key to return to standby mode from any situation.

Signal strength



Strong receiving signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your phone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc. (see also p. 73).

Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select the application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context.

Large letters	Select between two font sizes.
Illumination	Set display illumination to brighter/darker.
Help	Display a help text.

18 **General instructions**

Operating instructions eq.

Menu controls

The steps needed to reach a function are shown in a condensed form in this user guide, e. g., to display record of missed calls in condensed form:





This comprises the following steps:



Open main menu.



Select (highlight) ⊕ by moving the joystick upwards, then press vertically down on the joystick before using the joystick to highlight Missed calls.



Confirm. The record is opened.

Symbols

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key



Call key Soft keys



Displays a soft-key function.

The joystick can be moved in 5 directions.



Press the joystick vertically, e.g., to call up the menu.



Press the joystick in the direction indicated.



Function dependent on service provider, may require special registration.

Standard functions

Option menus

Functions which appear repeatedly in the options menu are listed here.

Options	Open	menu.
---------	------	-------

Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry / delete all entries after confirmation.
New entry	Create new entry.
Send	Select transmission service and medium for sending.
Reply/ Reply to all	The sender becomes the recipient. The received text is transferred into the new message.
Save	Store entry.
Save to 2	Save recipients in the current address directory.
Sort	Set sort criteria (according to alphabetical order, type, time).

Text input (p. 23)	T9 preferred: Activate/ deactivate T9 input. Input language: Select language for text.
Rename	Rename selected entry.
Capacity	Display memory capacity.
Attributes	Display properties of the highlighted object.
Help	Display help text.

Standard functions

20 Standard functions

Highlighting mode

With some applications (e.g. Phonebook/Addressbook) one or more entries in a list can be highlighted to carry out a function jointly.

Options Open menu.

Mark

Activate highlighting

If a **non-highlighted** entry is selected, this can be highlighted:

Mark

The current entry is high-

If a **highlighted** entry is selected, the highlighting can be deleted:

Dehighlight the current

Additional highlighting functions:

Mark all	Highlight all entries.
Deselect all	Delete highlighting on all marked entries.
Delete marked	All selected entries are deleted.

Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence. These numbers are shown in the top right of the display.

E.g., write new SMS (from standby mode):



Press to display the main menu. Then press



for Messages, then for Create new, then



for SMS.

Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Startup.fm

Security

The phone and SIM card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

Codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting



PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone together with your SIM card. Some service providers do not permit deactivating the control.



Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.

Confirm.



22 Security



→ Security → Codes
→ Select function.

Change PIN2

(Display only if PIN2 is available). Proceed as for Change PIN.

Chg.phonecode

(Change phone code)

You define the phone code (4 to 8 digits) when you call up a phone-code protected function for the first time (e.g. Direct call, p. 32). It is then valid for all phone codeprotected functions.
Following the third unsuccessful

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service (p. 117).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN control is deactivated (p. 21) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press and hold.



Press. The phone switches on.



Press this key or take no action. The phone does not switch on.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance. Example:




Press once briefly to write the letter a, twice to write **b** etc.

Press and hold to write the number.

Ä, ä, 1–9 Umlauts and numbers are

displayed after the relevant letters.

Press briefly to delete the **√**C letter before the cursor; press and hold to erase the whole word.

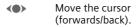



Press briefly: Swap between abc, Abc, ^{T9}abc, ^{T9}Abc, ^{T9}Abc, ^{T9}ABC, 123. Status shown in top line of dis-

Press and hold: All inputvariants are displayed.



Press briefly: Special characters are shown.

Press and hold: Open input



Press once/repeatedly:

.,?!'"0+-()@/:_

Press and hold: Writes 0.



Writes blank. Press twice = line break.

Special characters



Press **briefly**. The symbols chart is displayed

1)	ż	i	_	;	!	?	,	
+	-	"	,	:	()	1	*
¤	¥	\$	£	€	&	#	1	@
[]	{	}	%	~	<	=	>
Π	٨	§	Γ	Δ	Θ	٨	Ξ	П
Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.



Selection Confirm.



24 **Text entry**

Input menu

With text input:



Press and hold. The input menu is displayed:

Text format (SMS only) Input language Mark Copy/Insert

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

Text input Select.

T9 preferred

Select.

Change

Activate T9.

Select input language

Select the language in which you want to compose your message.

Options Open text menu.

Text input Select.

Input language

Select.

Selection Confirm. The new lang is set. Languages with T9 support are marked with the T9 symbol.

Writing with T9

The display changes as you proceed.

It is therefore best if you finish a word without looking at the display.

Simply press the keys once only where the relevant letter is located. For "hotel", for example:



Press briefly for T9Abc then





A blank space or moving to the right ends the word.

Do not use special characters such as Ä. Use the standard characters instead, e.g. A; T9 will do the rest for

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541 5,187,480, 5,945 928 and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Office Kingdom Fat. No. 2236 Fab, Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

25

VAR Language: am; VAR issue date: 040317

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be shown highlighted. Then press



The displayed word is replaced with a different word. If this word is also incorrect, press



Press until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

To add a word to the dictionary:

Learn Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press Save to add it automatically to the dictionary.

Correct a word

(

Move left or right, word by word, until the required word is highlighted.

1 2 3

Scroll through the T9 word suggestions again.

√C

Deletes the last character in a word **and** displays a new possible word.

Additional information

Within a "T9 word", individual letters may not be edited without first removing the T9 status. In most cases it is better to rewrite the complete word.



Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. Provider.s = provider's.

D>

Moving the cursor to the right ends the word.



Press briefly: Swap between abc, Abc, ^{T9}abc, ^{T9}Abc, 123. Status shown in top line of display.

Press and hold: All input modes are displayed.



Press briefly: Select special characters (p. 23).

Press and hold: Opens input menu (p. 24).

26 Text entry

Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS).

Write Text modules







Options

Select New text.

Write Text modules.

Open menu and select Save. Accept the specified name or allocate a new one.



Save.

Use Text modules



Write message (SMS, MMS).

Options Insert

Open text menu. Select.



Select Text modules.



Select text module from the list.



Confirm. The text module is displayed.



Confirm. The text module is inserted in the message to the right of the cursor.

My phone

Adjust your phone according to your own wishes in the following ways to give it a personal touch:

Ringtones (p. 79)

Assign individual ringtones to caller groups or special dates.

Pictures (p. 109)

Assign individual pictures or photos to your Addressbook entries.

Animations (p. 78)

Choose a start-up and closing animation as well as a personal greeting.

Screensaver (p. 77)

Choose an analogue or digital clock, or a personal picture.

(Operator) Logo (p. 77)

Choose an individual picture (to be displayed in standby mode).

Wallpaper (p. 77)

Choose your own permanent background image.

Colour scheme (p. 77)

Select a colour scheme for the user interface.

Applications (p. 72)

Download your own applications from the Internet.

Where do I get what?

You can purchase additional ringtones, logos, animations and Java applications from your service provider or directly from Siemens.

My phone

Service provider portal

Depending on your service provider, you will find direct access to his portal on your telephone via menu items or bookmarks. Please contact your service provider for more information on these services.

Siemens City Portal

You will find additional ringtones, logos, animations and screensavers as well as more application, games and services on the Internet at this address:

www.siemens-mobile.com

Or you can download them directly via Browser:

wap.siemens-mobile.com

You will also find a service for saving data here as well as a list of the countries in which these services are available.

My menu

Create your own menu (p. 93) with frequently used functions, phone numbers or Browser pages.

28

Calling

Calling

Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with dialling code/international dialling code).

A **short** press clears the last digit, a long press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

End call



Press the End key briefly. Press this key even if the person on the other end of the line has hung up

Set volume



Regulate the volume (only possible during à call).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number last called:



Press the Call key twice.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the phone number from the list, then to dial press the ...



If the number is busy

... key.

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto. redial



The phone number is dialled automatically up to ten times at increasing time intervals. End with: End key.

⊗!

VAR Language: am; VAR issue date: 040317

Call back



Call back Your phone rings when

the busy number is free. Press the Call key to dial the number.

Reminder



A beep reminds you to redial the displayed phone number after 15 minutes.

Additional information



Store phone number in the Addressbook/Phonebook.



Switch on Handsfree (playback through loudspeaker).

Always switch off "handsfree talking" before holding the phone to your ear. This will avoid damage to your hearing.



Press and hold to switch microphone off.

International dialling codes



Press and hold until a "+" is displayed.

Country

Press and select country.

Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

Accept call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press.

Or



Press.

A phone number transmitted by the network is displayed, along with the associated name (where applicable with picture) if this is stored in the Phonebook/Addressbook (p. 35).

Reject call

Reject

Press.

Or 5

Press briefly.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Additional information



Press and hold to switch off the ringing tone and vibration.

গ্ল

Missed call display.

Calling 30

Handsfree

You can put the phone down during a call. You can then use the loudspeaker to hear the caller.



Handsfr. Activate handsfree talking.



Switch on.



Use the joystick to adjust the volume.

Handsfr.

Deactivate.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

Swap between two calls



Establish a second connection

You can call another number during a call.

Options

Open call menu.

Hold

The current call is put on hold.



Now dial the new phone number or select

Options , Phonebook/ Addressbook, and select phone number.

When the new connection is established:



Swapping between calls.

Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 81). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

Accept the waiting call in addition to the first.

Toggle

Accept the waiting call, putting the current call on hold to do so.

Always proceed as above to swap between the two calls.

· Reject the waiting call

Reject

Press.

Or

Divert The waiting call is diverted, for example, to

the mailbox.

· Accept the waiting call and end the current call



End the current call.



Accept new call.

End call(s)



Press the End key.

After the Return to held call? display, you have the following selection:

You accept the call on

hold.

No You end the second call.

Conference

Call up to 5 parties one by one and link them together in a multiparty call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established:



Open menu and select Hold. The current connection is maintained.



Now dial a new number. When the new connection is established ...



... open menu and select Conference. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End



All calls in the multiparty conversation are ended when the End key is pressed.

Call options

The following functions are only available during a call:

Calling

31

Options Open menu.

Hold	Hold current call.
Microphone on	If switched off, the person on the other end of the line cannot hear you (muting). Also: Press and hold.
Handsfree	Call via the loudspeaker.
Volume	Adjust handset volume.
Default book	Display Phonebook/ Addressbook.
Conference	(See p. 31)
Time/ charges	Display talktime that has elapsed so far and (if set) cost incurred during the call.
Send DTMF	Enter control codes (numbers) for remote inquiries to an answering machine.
Call transfer < !	Connect the original call with a second call. For you, both calls are now ended.
Main menu	Access to the main menu.
Call status	List all held and active calls (e.g. participants in a conference).

Calling 32

Direct call

If this is active, only **one** number can be dialled.

Switch on



Security → Direct call



Confirm selection.



Enter phone code.

When first prompted you define and enter the phone code (4-8 digits).



Confirm selection.

Please do not forget this code (p. 21)!



Select phone number from the Phonebook/ Addressbook or enter it.



Confirm.

Apply



To dial the phone number (e.g. Carol's phone number), press and hold the right soft key.

Switch off



Press and hold.



Enter phone code.



Confirm input.

Control codes (DTMF)

You can, for example, enter control codes (numbers) for remote access to an automatic answering machine while another connection exists. These entries are transmitted directly as DTMF codes (control codes).

Options Open menu.

Send DTMF Select.

Using the Phonebook/ Addressbook

Store phone numbers and control codes (DTMF codes) in the Phonebook/Addressbook in the same way as a normal entry, see p. 33.



Enter phone number.



Press and hold until a "+" appears in the display (wait for the connection to be established).



Enter DTMF codes (numbers).



If necessary, wait again for three seconds at a time for the receiver to process the entries safely.



Enter a name.



Store entry.

You may also store just the DTMF codes (numbers) and then send them during the call.

Default book



◆ Select function.

Show entries

The entries in the default book (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

New entry

Create new entry. Address book (see also p. 34) Phonebook (see also p. 38)

Default book

You can set which directory you prefer to use.

The selected default book is opened in standby mode with the joystick.



Open Phonebook or Addressbook

Address book

A lot of data can be recorded in the Addressbook for each entry, and additional functions (e.g., pictures, birthdays) can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different phone.

Business card

Create your own business card to send to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.



Press.

Additional information

The content of the business card and the Addressbook entries correspond to international standards (vCard).



Copy numbers from Address-book/Phonebook.

Groups

See p. 37.

<Info numbers>

See p. 40.

Address book

Address book

The Addressbook can store up to 1000 entries, each with a variety of phone numbers and additional address details. These entries are managed separately from those in the Phonebook in the phone memory. However, you can exchange data between the Addressbook and the Phonebook on the SIM card.

New entry

The Addressbook is set as standard:



Open Addressbook (in standby mode)



Display input fields.



Select required input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name must be entered. Always enter phone number with dialling code.

Possible input fields

Last name:	URL:
First name:	Inst. Msg. >>
Phone number:	Group:
Phone/office:	Company:
Phone/cell:	Address: >>
Fax:	Birthday: >>
Fax #2:	Picture:
E-mail address:	
Email #2:	All fields

Additional information

Group: Assignment to a group

(p. 37).

Address: Extension to enter the

complete address:

Street:, ZIP:, City:, Country:

Inst. Msg. Information if the entry is contact (p. 61):

being used as a chat room

Nickname:, WV user ID:,

ICQ number:, AIM screen

name:

Birthday:

After activation, the date

of birth is entered.

Reminder: The phone reminds you at the time entered one day before

the birthday.

Picture:

Assign a picture to the entry. It is displayed if you are called by one of the corresponding phone numbers.

All fields/Reduced fields

Displays the required

input fields.

Save

Save the entry.

Additional information

filsfj

Temporary switch to Phonebook.

Synchronisation

You can use the mobile phone manager (p. 111) to synchronise your Addressbook with Outlook® and other Siemens telephones.

Using Remote sync. you can synchronise your mobile with an organiser stored on the Internet (see also p. 107).

Completing phone numbers

see p. 40

Display/find entry



Open Addressbook (in standby mode).



Select required entry.

Display.

Display options



The options menu only offers the functions for the currently selected input field.

Move to	Assign current entry or highlighted entries to a group.	
View	Display an assigned picture.	
Copy to SIM	Copies name and one phone number to the SIM card (Phonebook).	
New SMS, New MMS	Create a message with the selected entry.	
Browser	Start WAP browser and visit URL.	
Inst. Msg.	Begin dialogue, p. 61.	
(For standard functions see p. 19)		

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Adressbook.fm

36 Address book

Change entry



Open Addressbook (in standby mode).



Select required entry.



Select input field.

Press.



'



Open entry if necessary.



Make changes.

Save.

Call entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.



The number is dialled.

If there are several numbers in the address book entry, these are offered for selection.



Select phone number.



The number is dialled.

Addressbook options

Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

Options	Open menu.
---------	------------

Options C	pen mena.
Move to	Copy current entry or high-lighted entries to a group.
Copy to SIM	Copies name and number to the SIM card (Phonebook).
Filter	Only those entries which match the filter criteria are displayed.
Import	Set up readiness to receive for a Phonebook entry via IrDA (p. 86) or SMS (p. 46).
Sort	Specify sorting criteria for output of the Addressbook entries.
Search	Enter search term.

(For standard functions, see p. 19)

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.



Open Addressbook (in standby mode).

<Groups> Select (the number of entries is listed behind the group name).



Select group.

Groups menu

Options		Open menu.
	Rename group	Change name of group.
	Group symbol	Assign a symbol to a group. The symbol must then appear in the display when one of the group members calls.

Additional information

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Received: Contains Addressbook entries received by IrDA (p. 86) or SMS (p. 46) (name cannot be changed).

Ringtone for group

Assign a ringtone to a group that plays when one of its members calls you.




→ ⊇ → Ring tones → Group calls



Select group.



Confirm. If a ringtone has already been set, it will be played. Otherwise, the ringtone list will be displayed and you can select

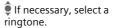



Confirm.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from the Addressbook. You can, however, exchange data between the Phonebook and the Addressbook.

New entry

If the Phonebook has been selected as standard:



Open Phonebook (in standby mode).



Select <New entry>.



Display input fields.
Select input field.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

Phone number:

Always enter phone number with dialling code. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default No group Important phone numbers may be combined in a group (VIP).

Location:

Default SIM

Special SIM cards can save phone numbers in a protected area (SIM protected) (PIN2 required).

Record #:

Each entry is automatically assigned a record number. You can also dial using the record number.



Press to store the new entry.

Additional information



Temporary switch to Address-book.

Country International dialling code...p. 29 Functions related to Text entryp. 23



Open Phonebook.



Select a name with the first letter and/or scroll.

Phone number is dialled.

Call using record no.

A record number is automatically assigned to every new entry in the Phonebook.



Enter record number.



Press.



Press.

Change entry



Select entry in Phonebook.



Press.



Select input field required.



Make changes.



Press.

Phonebook options

The following functions are available, depending on the current situ-

Options

Open menu.

Copy to 2	Copy all highlighted entries to the Addressbook.
Copy all to 2	Copy all entries to the Addressbook.
Delete all	The whole Phonebook is deleted. PIN-protected.
Import	Set up readiness to receive for a Phonebook entry via IrDA (p. 86) or SMS (p. 46).

(For standard functions, see p. 19)

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Phonebook.fm

40 Phonebook

<Special books>



Open Addressbook (in standby mode).

<Special books> Select.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Completing phone numbers in the Phonebook

Digits may be replaced by a "?" when phone numbers are entered in the Phone-book:



Press and hold.

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook/Addressbook.





Replace "?" with numbers.

Number is dialled.

Siemens AG 2003, E:\Auftraq\Siemens\MobilePhones\C65 Hera\us\LA\C65_Phonebook.fm

Call records

The phone number of a caller is displayed if

- the caller has switched off the Incognito function and
- the network supports the "Caller Identity" function.

Alternatively, a caller's name is displayed if it is stored in the Phonebook/Addressbook.

Your phone stores the phone numbers of calls for convenient redialling.







Select record.



Open record.



Select phone number. Dial phone number.



Or



Display information on the phone number.

Up to 500 entries are stored in the records:

Missed calls



VAR Language: am; VAR issue date: 040317

The phone numbers of calls that you have received but not answered are stored for callback purposes.



Icon for missed call (in standby mode). Press the display key beneath the symbol to call up the Main Inbox (p. 45).

Calls received

Accepted calls are listed.

Calls dialed

Access to the last numbers dialled by you.



Fast access in standby

Delete records

The records are deleted.

Call list menu

The records menu can be called up if an entry is highlighted.

Options

Open menu. Copy to SIM

Copy the currently selected phone number into the preferred direc-

(For standard functions see p. 19)

42

Time/charges

Time/charges

You can display the charges and duration during a call. You can set a unit limitation for outgoing calls.





→ Time/charges

Select:

Last call:

Incoming calls:

Outgoing calls:

Outgoing SMS:

Outgoing MMS:

GPRS data flow:

All calls:

Remaining units:



Scroll through the display.



Reset the selected setting.

Charge setting



Open menu.

Charge/Unit

(PIN2 prompt)

Enter the currency as well as the charge per unit and time.

Charge limit

(PIN2 prompt)

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.



Press.



Enter PIN2.

Charge limit

Switch on.



Enter number of units.



Confirm.

Then confirm the credit or reset the counter. The status display for prepaid cards may vary, depending on the service provider.

Auto display

Call duration and charges are displayed automatically.

Camera

You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a switch on/off animation or a screensaver.
- send the photo via MMS.

Switch on







Start camera in standby mode.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor



White balance



Flash connected.

The number of photos that can still be taken in the selected resolution is displayed in the top right-hand corner of the preview image. As the memory requirement depends essentially on the subject photographed and the resolution, the number of photos that are still possible can sometimes change unex-

pectedly. Information about the selected resolution is located under the preview image.



Record



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name see Setup in the options menu.

Settings prior to taking a photo:



Sets the brightness.



Sets the zoom factor.

44 Camera

Image resolution

It is possible to set the quality of the image regardless of the preview image resolution, e.g.:

Premium

Medium

Background

The resolution may decrease depending on the selected digital zoom.

Flash (accessories)

If the flash is active, this is shown by a symbol in the display. The flash is charged constantly while it is connected to the phone and the camera is activated. This reduces the standby time.



This symbol appears when the flash is being charged.

For settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options Open menu.

	Settings	Name for recordings Image resolution Colour mode: normal, sepia, grey tints	
	Pictures	The last picture taken is displayed.	
	Use flash	Choose between: Automatic, Off, Red-eye	
	Auto-timer	The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a beep each second.	
	White balance	Choose between: Automatic, Indoor, Outdoor	
	(For standard functions see p. 19)		

Additional information

Insufficient memory available. Start the delete assistant to delete data (p. 83).

A mirror can be attached to the back of the phone depending on the phone variant. This makes it easier to take self portraits.

Main Inbox

The inbox folder offers immediate access to the messages just received. This means that you no longer have to look through all inbox folders for the various message types. The entries are marked with a symbol to indicate their type and status. You will find a list of the symbols on p. 11.

To call up the inbox folder, e.g. if a new SMS has been received:



Press the soft key beneath the symbol.

Or



In standby mode:

You will find the following message types in the inbox folder:

SMS, MMS

System messages

Message about MMS, Missed alarm, Missed appts., Missed calls, WAP push, Voice message

Data objects

Ring tones, Pictures, calendar entries, Notes and Business card



When you open an entry, the relevant application also starts.

After a set period of time, entries which have already been read and opened are only displayed in the message-related inbox lists (see Setup in the optionsmenu).

Main Inbox options

Options Open menu.

Setup

If entries have been read, remove them from the Main Inbox:

Daily, Never, Immediately If Daily has been selected, specify the time.

(For standard functions see p. 19)

SMS 46

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "nor-mal" SMS messages (note higher charges).

You can also insert simple pictures and sounds in an SMS.

Write/send





♠ → Create new → SMS



Input text.

You will find information on writing texts with and without T9 in the chapter "Text entry" (p. 23).

The following is displayed in the top display line: Text entry status, number of SMS messages required, number of characters still available.



Start sending procedure.



Select phone number from the Phonebook/ Addressbook or enter it.

Group If necessary, select a group.



Confirm. The SMS is transmitted to the service centre to be sent and saved in the Sent items list.

Text options

Options	Open menu.
Save	Save composed text in draft list.
Picture& sound	Add pictures, animations and sounds into message (see following text).
Text modules	Insert Text modules (p. 26).
Format	Font size: Small font, Medium font, Large font Underline Alignment: Default alignm., Left, Center, Right Mark (highlight text with the joystick)
Delete text	Delete the whole text.
Send with	Select SMS profile so the SMS can be sent.
(For standa	ard functions see p. 19)

Picture&sound

With the text input field open:

Options

Open menu.

Send simple pictures and tones with



Select Picture&sound.

The menu contains:

Def animations

Def. sounds

Own anim.

Own pictures

Own sounds



Select list.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For Def animations/Def. sounds:



The selection is added to the SMS.

For Own anim./Own pictures/ Own sounds:



The selection is displayed/ played back.



The selection is added to the SMS.

The pictures which have been added are displayed. Sounds are displayed in the form of "wildcards".

SMS to group

You can send an SMS message as a "circular" to a recipient group. Open menu.

Options

Send Select.

Group

The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Transmission is started after a security prompt.

48 SMS

Read



Arrival of a new SMS announced in the display. Open Main Inbox (p. 45) using the soft key positioned beneath it.



Reading the SMS.

Scroll through message line by line.



Reply

You can answer the currently open SMS immediately. The newly added text is placed above the received text.

Reply options

Reply	Open	reply menu.
Create new	l	Create a new reply text.
Edit		Edit received SMS or add new text.
Answer is	YES	Add Answer is YES to the SMS.
Answer is	NO	Add Answer is NO to the SMS.
Call back, I Thanks	Delay,	Add a standard text as a reply to an SMS.

Read options

Options O	pen options menu.	
Reply	See "Reply options" above.	
Picture&sour	Save picture/sound contained in the SMS.	
Zoom in	Enlarge or reduce text display.	
Archive	Move SMS message to archive.	
(For standard functions see p. 19).		

Lists

All SMS messages are archived in different lists, according to their status. (For overview of message symbols, see p. 11):

Inbox

The list of received SMS messages is displayed.

Draft



The list of not yet transmitted SMS messages is displayed.

Unsent



The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted.

Sent items

● → Sent items → SMS

The list of sent SMS messages is displayed.

SMS archive

→ SMS archive

The list of SMS messages stored in the phone is displayed.

List options

Different functions are offered depending on the list.

Options Open menu.

Send	Send or forward entry.
Send with	Select an SMS profile for transmission.
Archive	Move SMS message to archive.
(For standard functions, see p. 19)	

50 SMS

Setting

SMS signature



→ Msg settings → SMS → SMS signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except for a Reply and when changes are made to an existing SMS.

SMS profiles



→ Msg settings → SMS → SMS profiles

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The presetting depends on the SIM card inserted.

Activate profile



Select profile.



Activate.

Set profile



Select profile.

Edit

Open to edit the profile.

Enter the phone numbers for the service centre as provided by the service provider.

Recipient

Enter a standard recipient for the profile.

Message • Manual: Inquiry for all messages. · Standard text: Normal SMS message. • Fax: Transmission via SMS. • E-mail: Transmission via SMS. • New: You may need to obtain the required code number from your service provider. Validity Period within which the service period centre is to try to deliver the message: Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits. Status Receive confirmation of sucreport ⊗! cessful/failed transmission of a message. This service may be subject to a charge. Direct If activated, the reply to your reply ⊗! SMS message is handled via your service centre (for information, please contact your service provider). SMS via Send SMS automatically via GPRS ⊗! GPRS (p. 86).

Sent SMS messages are

saved in the Sent items list.

Save aft.

send

More information on SMS

SMS status report

If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The Message sent. message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

See also Validity period (p. 50).

Phone number in SMS

Phone numbers displayed in highlighted text can be dialled (♥) or saved in the Phonebook/Addressbook.

Downloading ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications with an SMS. Please highlight this link and, by pressing the Call key , start the download. Please check that the dial-in access (p. 86) is configured.

Remember that these may be protected (DRM, p. 17).

SIM memory full

If the message icon flashes the SIM memory is full. **No** more SMS messages can be received. Messages must be deleted or archived.

MMS

The Multimedia Messaging Service enables you to send texts, pictures and sounds in a combined message to another mobile phone. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Create





An MMS consists of the address header and the content.

An MMS may consists of a series of pages. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected (DRM, p. 17).

Write texts with the help of T9 (p. 23).

Pictures may be taken using the integrated camera and/or loaded from My stuff (p. 109).

Sounds may be recorded using the Sound recorder and/or loaded from My stuff (p. 109).

First select an object for processing to be added to the first page of the MMS:

Pictures

Limits on picture size can be set in the user settings.

<Picture> Select.



Display picture functions:

Insert image

Open list to select a picture.

Camera

Activate the camera to take a photo for the MMS (p. 43).



Also possible.

Open

Display picture.

Delete

Delete inserted picture.

Store picture for use later on.

Properties

Display properties, incl. any user right restrictions (p. 17).

53

Sounds

<Sound> Select.



Display sound functions:

Insert sound

Open list to select a sound.

Record

Activate sound recording to record sounds (p. 104).



Also possible.

Open

Play back the sound.

Delete

Delete inserted sound.

Save

Save sound for use later on.

Properties

Display properties, incl. any user right restrictions (p. 17).

Text

<Text> Select and write the text.



The text functions are displayed (see also p. 23):

Insert from

Choose any of the following for insertion: Text modules, Bookmark,

Insert from <a>P
Delete text

Delete text on current page.

Save

Save text on the page as a text

module. Text input

T9 settings:

T9 preferred, Input language

Mark

Text processing together with Copy and Insert.

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_MMS.fm

54	MMS
J 4	IVI

Generation options

Options	Open	menu
Options	Open	memu

Options	Open menu.
Send MMS	Send MMS.
Play	Play back entire MMS on the display.
Picture	See p. 52.
Sound	See p. 53.
Text	See p. 53.
Page	Add page: Insert new page behind current one.
	Delete Page: Delete cur- rent page.
	Page list: Display available pages.
	Timing: Set the time sequence for the MMS presentation:
	Page duration: Automatic or Manual
	 Show page: Only if Manual is set in front of it. Enter the lifespan of a page.
Properties	Enter sending parameters (see next chapter).

Save as templ.	Save created MMS as a template. See also below.
Layout	Select one of four possible layouts: Text above, beneath, beside (on left or right of) picture.
Colors	Select the colours for: • Message • Page • Bitmap • Text backgrd. • Text color
(For standard functions see p. 19)	

Templates



→ MMS template

MMS templates are saved MMS messages with no address. They can be sent as new MMS messages or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.

Options

Open menu and select Save as templ.



Open address entry.



Subject: Enter a brief description.

Send to: Enter one or more phone number(s).

Insert from Addressbook.

Size: Display the size of the current MMS in kilobytes.



Start sending procedure.



The MMS is sent after confirmation.

Expanded address fields

More:

Scroll downwards.

Provide additional address fields.

Cc: Address(es) of copy recip-

ient(s).

Bcc: Address(es) of copy recip-

ient(s) who are not visible to the other recipients.

Attachments:

Insert attachments.

Date: Creation date.

Use delivery time:

Use specified send time.

If Yes:
Delivery date:
Send date.
Delivery time:
Send time.

Icons for status information



Priority



Send report



Contains protected contents (DRM, p. 17).

56 MMS

Sending options

Options Open menu.

Options	open menu.
Send MMS	Send MMS.
Play	Play back entire MMS on the display.
Edit	Display object selection to change an object.
Add addressee	Add recipient from the current address directory.
Del. addressee	Delete individual recipient.
Add attchmnt.	Add attachment: File Business card Appointment
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	Save created MMS as a template.
(For standard	d functions see p. 19)

Receive

Depending on the setting (p. 58) an MMS can be received in two ways:

Complete transmission

The complete MMS is sent to your phone. This can take quite a while if the MMS is large.



Shown in the display.



Start reception. The MMS is sent.

Prior notification

You are notified that an MMS is awaiting reception.



Shown in the display.



Read the notification. Display the size of the MMS in KB.



The complete MMS is sent.



Display in Main Inbox

An MMS has been received in full.

Select the MMS.



Start automatic playing of the MMS.

Key functions for playback:

To the next page.

⟨●

Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



End.

(1) The message details are displayed

when the MMS is complete. Subject: Description of the MMS.

From:

Information about the

sender.

Size: Size of the MMS in KB.

Expanded address fields



Scroll down.

More:

Additional input fields

Cc: Copy recipient Attachments:

Save attachments

Date: Date received Symbols for status information

(see p. 55)

Lists

All MMS messages are saved in four different lists (for list of message icons, see p. 11).

Inbox



The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press Accept.

Draft



 \bigcirc \rightarrow Draft \rightarrow MMS

The list of stored drafts is displayed.

Unsent



● → Unsent → MMS

The list of the MMS messages not yet completely transmitted is displayed.

Sent items



Sent items → MMS

The list of sent MMS messages is displayed.

Siemens AG 2003, E:\Auftraq\Siemens\MobilePhones\C65 Hera\us\LA\C65_MMS.fm

58 MMS

List options

Different functions are offered depending on the list/situation.

Options Open menu.

Play	Play MMS on the display.
Edit	Display MMS for processing
View	Display MMS for viewing only (write-protected).
Send MMS	Send MMS.
Reply MMS	Reply to MMS immediately.
Forward MMS	Enter recipient(s) for forwarding.
Properties	Display message parameters.
Receiv.all MMS	Send all new MMS messages immediately.
(For standar	d functions see p. 19)

Setting



→ Msg settings → MMS → Select function.

MMS profile:

Six MMS profiles can be set (5 in the telephone memory, one on the SIM card). The send properties can be specified in them. In most cases, the setting has already been made. If necessary, check with your service provider for details.

Activate profile



Select profile.

Options

Open menu and select Activate.

Set profile



Select profile.

Options

Open menu and select Change sett.

MMS

59

User settings

Set the MMS dispatch to suit your requirements:

	Delivery report:	Request delivery confirmation for sent messages.
	Read reply:	Request confirmation that the MMS has been read.
	Default priority:	Send priority: Normal, High, Low
	Validity:	Select the period in which the service centre is to try to deliver the message:
		Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum*
		* Maximum period that the service provider permits.
	Earliest deliv. time:	Transmission from the service centre to the recipient: Immediate, Tomorrow

Default duration:	Length of display for an MMS page (standard requirement).
Retrieval:	Receive complete MMS or only notification of arrival. Immediate
	Receive complete MMS immediately.
	Auto.homenet
	Receive complete MMS immediately in home network.
	Manual
	Only receive the notification.
Spam filter:	Settings for receipt of promotional MMS.
Size indication: ⊗!	Set max. message size and message handling.

Voice message/mailbox

Voice message/mailbox





Setup → Voice message

Most service providers provide a mailbox in which a caller can leave a voice mail for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if Call waiting (p. 81) is not activated).

If the voice mail service is not part of your service provider's standard package, you will need to register for it, and possibly set it manually. The following sequence may vary from service provider to service provider.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

You call this phone number to listen to the voice mails left for you.





(→ Voice message



Select number from Phonebook/Addressbook or enter/change it.



Confirm.

Save call divert number

Calls are diverted to this phone number.



→ ⊃ → Phone setup → Divert → e.g. Unanswered → Set



Enter phone number.

Registration with the network is confirmed a few seconds later.

Listen to message



A new voice message can be announced as follows, depending on the service provider:





Symbol plus beep. Notification via SMS.



You receive a call with an automatic

Call your mailbox and play the message(s) back.



announcement.

Press and hold (if necessary enter mailbox number once). Confirm with OK and Mailbox depending on your service provider.

Inst. Msg.

Through the chat room you can receive text, audioclips, pictures and files as well as send them directly to one or more end devices (mobile phone, PC). This function is not offered by all service providers. Please ask your service provider.

Your dialogue partners are entered in contact lists. Once a connection has been established these lists show who is available, whether hel she wishes to be disturbed and what mood he/she is in at present.

For the Inst. Msg. to function correctly it might be necessary for you to first enter your own mobile phone number in the Phonebook (on the SIM card) under < Own numbers > (p. 40).

GPRS must be switched on.



Start menu

Select the access through Login which the dialogue is to take place

or

Account: select (p. 66).

Msg. history

Read the messages from the last session.


Setup

Settings for your representation, the application and servers.

Exit End application.

Rapidly to chat room

Select access (p. 66)

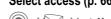

The current contact list or the over-

view is displayed (if necessary, set access first, p. 66).

Specify your own status (p. 67)

Open menu.

My settings

Select and make entries. Return to contact list.



62 Inst. Msg.

Enter new contact (p. 63)

Options

Open menu.

et Press, then select

Add contact

and enter at least the

user ID.

Return to contact list.

Hold dialogue with new contact (p. 65)



Select the contact.



Start dialogue.



Open editor.



Write text.



Send text ... and so on.

Login

● → Inst. Msg. → Login
Select the last access used (see also

Automatic login: p. 67).

Contact lists

When the connection has been established, the contact list or the overview of the contact lists is shown for selection.

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an "empty" contact list will be generated by the server if necessary.

Displays in the list:

-Conversation

Displays online contacts for whom there are messages.

-Online

Online contacts with whom no conversations are being held at present.

-Group



Groups for holding a dialogue with several contacts.

-Offline

Contacts who are not online at present.

Manage contacts

Select a contact.

Options Set

Open menu. Select.

Contacts

Different functions are offered depending on the selection:

depending on the selection.		
User ID:		
Enter an unambiguous user (login) name.		
Nickname:		
Enter your own nick- name for the contact.		
Friend:		
The contact receives the status Friend : and access to personal information (p. 67).		
Search for contact.		
Delete contact from the list.		
No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.		

Manage groups



63

⊗!

Select one of the groups you set up yourself.

Inst. Msg.

Options

Open menu.

Set Select.

Group settings

Different functions are offered depending on the selection:

Add member	Add a new group member, see also Add contact
Find member	Search for group member.
Invite	Invitation to the contacts in your own group to visit chat room.
Delete member	Delete contact from the group member list.
Add group	Add new group.
Find group	Search for group on the server (also groups no longer managed in the list).

64 Inst. Msg.

Create group	Group ID: Enter a non-ambiguous group name. Name: Name of group. Topic: Topic for group. Searchable: Other people can look for the group. Welcome msg.: Enter welcome text.
Create group	Delete group.

Create a new contact list

The current contact list is displayed.

Options Open menu.

Contact lists

Available contact lists are displayed.

Options Open menu.

Create Select.

Contact list ID:

Give the contact list its own, specific name.

Name: Allocate self-explanatory

names.

Confirm.

Contact list options

Contact list options		
Options Op	en menu.	
Details < !!	Additional information about the contact or the group.	
My settings	Information on your current personal status (p. 67).	
Set	Functions for managing a contact or a group.	
Contact lists	Display contact lists for selection.	
Block list	Display all blocked contacts. Can be unblocked.	
App. settings	Set the application (p. 67).	
Exclude	End the application; the server remains connected.	
Logout	Log off from the server and return to start menu.	
Help	Display help text.	

Start chat room visit

group.

A contact list must be displayed.



Select a contact or a



Start communication with the contact.

The page in the chat room is displayed. When a group is engaged in a dia-logue, the name of the sender is placed in front of each contribution.



Open editor.



Write text.



Send text. The text appears in the chat room soon afterwards.

Naturally, you can also receive messages from contacts you do not know. This will be pointed out to you in the display, and you can either switch to chat room or ignore/block the contact.

Options (individual contact)

Options Op	en menu.
Send sound	Select and send a melody/ sound from the list (DRM, p. 17).
Send picture	Select and send a picture from the list (DRM, p. 17).
Send other	Send any file.
Details	Information about the contact, if this is authorised by him.
Clear all	Delete all texts in the current chat room.
Block contact	No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Options (group contact)



- 1 (3-	
Options O	pen menu.
Subscribers	List group participants currently online.
Leave group	Exit group.
Details	Information about the group: Group ID:, Name:, Topic:, Owner:
Clear all	Delete all texts in the current chat room.

⊗!

66 Inst. Msg.

Receiving objects

If sounds or pictures are sent to you during a dialogue, you will be informed of such in the display.

Accept Accept object

or Reject

Reject object.

Msg. history



The messages from the last meeting are displayed. You can read and delete the contributions.

Requirement: The server must be disconnected, see Exclude (p. 64) and Automatic login: (p. 67).

Setting



Account

The list of available accesses is displayed.



Select an access to establish a connection.

⊗!

Or

<New entry>/Account sett.

Set up an account or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

Name:	Name of access.
URL:	Enter URL, e.g. http:// www.abc.com
User ID:	Enter an unambiguous user (login) name.
Password:	Enter password (shown as a series of asterisks).

Inst. Msg.

67

My settings

Information on your current personal status:

Alias:	Your own alias under which you can be found on the server.
Screen name:	Name to be displayed in the group.
Mood:	Information about your own mood, e. g. Happy, Sad, Tired, etc.
Status text:	Random text information, e. g. "Am at home".
Availability:	Availability: Available, Not available, Discreet
Cellphone:	Enter the phone number with international dialling

Options

For **each** setting, specify who is allowed to view

Public

App. settings

Settings for the application used:

J	
Automatic login:	Auto-reconnect to the last access used.
Timeout:	Time without action after which the application is ended. However, the server remains connected.
Message info:/ Online info:	Signal the receipt of messages: Yes/No Signal given as: Sound Silent alert Pop-up Popup windows authorised: Yes/No

code. your personal information: All contacts. Private Contacts designated as Friend: (p. 63). Hide Nobody.

CB services

CB services



Setup → CB services

Some service providers offer information services (info channels, Cell Broadcast). If reception is activated, you will receive messages on the activated topics in your Topic list.

CB messages are displayed in standby mode; longer messages are scrolled automatically.

Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

Topic list

You can add any topics to this personal list from the topic index. You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

New topic Select.

- If no topic index is available, enter a topic with its channel number and confirm with OK.
- If the topic index has already been transmitted, select a topic and activate it with Options

Topic Select

Options Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

CB languages

Receive Cell Broadcast messages in one specific language only or in all languages.



Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service pro-

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Internet



● → Internet

The browser is activated with the pre-set option as soon as you call up the function (Browser settings, p. 70; may be specified/pre-assigned by service provider).

Browser menu

Options Op	en menu.
Home	Call up the pre-set homepage for the current profile.
Bookmarks	List bookmarks Display list of bookmarks stored in the phone. Bookmark site The current page is saved as a bookmark.
Go to	Enter URL for direct dial to an Internet address, e.g. wap.siemens- mobile.com
Reload	Reload current page.
Show URL	Display the URL of the page currently loaded for sending via SMS/MME/e-mail.
History	Display last Internet sites to be visited.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page; display saved pages.
Settings	Set or reset browser (p. 70).
Exit browser	Close the browser.

70 Surf & fun

End connection



Press and hold to clear down the connection and close the browser.

Navigation in the browser



- · Select a link.
- · Settings, status on/off.



· Press briefly: back a page.



• One input field/link forward/back.

· Scroll one line.

Display symbols in the browser (selection)



Enter special characters



Select important special characters.

Browser settings



Options Open menu.

Settings Select.

Browser	Set start option as well as handling of pictures and sounds plus send options.
	sourido pido soria optiono.

The list of profiles is dis-played for activation/setting. For more information, con-tact your service provider. **Profiles**

Protocol Set protocol parameters,

parameters push messages and abort time as well as handling of cookies.

Security Set encryption.

Context Reset session; delete cache, history and cookies.

Your Internet browser is licensed by:





Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

Set profile manually

If necessary, contact your service provider.

Options Open menu.

	•
Edit	Start processing. For the Internet-specific settings below, please contact your service provider.
Delete	Delete selected profile.

Bookmarks





Display URL/call up page

List bookmarks

Display list of bookmarks stored in the phone.



Select bookmark.

Call up URL.

Save

Bookmark site

The current page is saved in the phone as a bookmark.

Bookmark options

Options Open menu.

Here you will find functions for changing and managing bookmarks and their folders. This includes editing individual entries with the corresponding URLs as well as deleting and moving them to other folders.

72 Surf & fun

Games and Applications

Games and applications are offered on the Internet. Once downloaded these are available to you on your phone. Most applications include instructions. Some applications and games are already pre-installed on your phone. You will find these listed here:

www.siemens-mobile.com/c65

Requirements

Browser profile (p. 71) and the access (p. 86) must be configured.

Download

Select the correct access depending on whether you are loading games or applications:



or



In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

Download new



Select a service provider or URL.



Start WAP browser and visit URL.

Only description file



The description file is loaded for information purposes only. The application/game itself must be loaded separately.

or complete download



The application/game is completely loaded.

Apply

Remember that applications/games may be protected (DRM, p. 17).



The executable application is saved on the phone and can be started immediately.

73

VAR Language: am; VAR issue date: 040317

Download wiz.




→ Download wiz.

You will not be left on your own during the download!

Additional information

You can control games with the joystick or by using the following keypad controls:

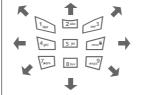

Games and applications - options

Processing and managing your applications and folders:

Move	Move applications between folders.
New folder	Create and name new folder.
Reinstall	Reinstall an application (update).
Security	Select a safety level.
Reinstall	Repeat after transmission error.
Attributes	Show details of the application/folder (name, version, size, path, producer, date).
HTTP profile	Display profile list for activation/setting
(For standard	d functions see p. 19)

Additional information

You can use Browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.
For technical reasons, such applications and sub-

sequent enabling of certain functions are lost in the event of the device being replaced/re-sup-plied and may be lost if it is repaired. In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via Internet are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again, or to do so free of charge. If technically possible, secure your applications on the PC with the "mobile phone manager", p. 111.

Setup

Profiles



♠ → Profiles

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

• Five standard profiles are provided with default settings. They can be changed however:

Normal environment

Quiet environment

Noisy environment

Car Kit

Headset

- You can set two personal profiles
- The special profile Airplane mode is fixed and cannot be changed.

Switch on



Select default profile or personal profile.



Profile settings

Edit a default profile or create a new personal profile:



Select profile.

Options

Open menu.

Change sett.

Select.

The list of available functions is displayed.

When you have finished setting a function, you return to the profile menu where you can change a further setting.

Additional information

- Call up the list in standby mode:
- Profile list is displayed.
- The active profile is identified with .

Profile options

Options Open menu.	
Activate	Activate selected profile.
Change sett.	Change profile settings.
Copy from	Copy settings from another profile.
Rename	Change personal profile (except default profiles).

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically when the phone is inserted into the cradle (also see accessories).

The profile is only switched on automatically if an original Siemens headset is used (see accessories also).

Airplane mode

The acoustic signals and vibration for the alarms (appointments, alarm clock) are switched off. The alarms continue to be shown in the display only.

Switch on



Scroll to Airplane mode.

Setup

75



Confirm selection.



Confirm safety prompt again to activate the profile. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

Topics



 \bigcirc \rightarrow \bigcirc \rightarrow Topics

Load a completely new visual presentation onto your phone. At the press of a key, various functions are re-organised on a theme basis, e. g. switch on/off animation, background image, screensaver, switch on/off melody, additional animations.

theme files are compressed to save memory space. After being downloaded (p. 72) or called up from My stuff, these are automatically unzipped when activated.

Activate new theme



Select theme.



Display theme preview.



Activate new theme.

77

Set wallpaper graphic for the display.

Wallpaper

Choose graphic to be displayed instead of the provider logo.

Color setting

Select colour scheme, incl. background image for the entire user interface

Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and/or pressing any key will end the func-tion except if the safety function is activated.

Preview

Display the screensaver.

Style

Select Analog clock, Digital clock, Bitmap, Energy saving.

Bitmap

Select image in My stuff.

Display



 → Display → Select function.

Language

Set the language for the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

*#0000# \

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry. Languages with T9 support are marked with the T9 symbol.

Timeout

Set period after which the screensaver starts.

Security

The phone code is requested to stop the screensaver.

Auto key lock

Automatic keypad locking if no key has been pressed for one minute in standby mode.

Unlocking:



Press and **hold**.

Note

The "picture" (animated) and "digital clock" screensavers significantly reduce the phone's standby time.

Start up anim.

Select animation to be shown when the phone is switched on.

Shutdn anim.

Select animation to be shown when phone is switched off.

Greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Large letters

You can choose between two font sizes for the display.

Illumination

Set display illumination to brighter/darker. The darker the setting the longer the standby time.



Press the joystick repeatedly at the top/bottom to adjust up or down.

Contrast

Set display contrast.



Press the joystick repeatedly at the top/bottom to adjust up or down.

79

Set different volumes for types of call/functions.



Volume

Select


Incoming call Messages

Alarm clock

Organizer System

Applications

The ringtone is repeated.

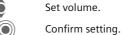

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Ring tones



→ ⊋→ Ring tones → Select function.

Set the signal tones on the phone to suit your requirements.

Ringer setting

On/off Activate/deactivate all

tones.

Reduce ringtone to a Веер

short signal (beep).

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringtone (e.g. in noisy environments). This function is deactivated when the battery is being loaded and accessories are connected (except the headset).



Select from several silent alert versions.

Assign ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

Calls

Assign a single ringtone to all phone numbers in the Addressbook.

Group calls

Assign a different ringtone to each group.

Other calls

Assign one ringtone to the remaining callers.

More melodies

Assign further ringtones for:

Messages

Alarm clock

Organizer

Startup melody

Shutdown mel.

or record new ones with:

Sound recorder (p. 104)

⊗!

⊗!

81

⊗!

Call setup



Hide ID

When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

Call waiting

If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify the conditions under which calls should be diverted to your mailbox or other numbers.

Status check

You can check the current divert status for all conditions. After a short pause, the current situation is transmitted by the network and dis-



Condition set.

Not set.

Display if status is unknown (e.g. with a new SIM card).

Setup

Clear all

All set diversions are cleared.

Set up call divert (example)

The most common condition for call divert is, for example:

Unanswered




Select Unanswered. (Includes the conditions Not reachable, No reply, Busy, see below)




Select. Set



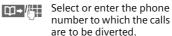

Mailbox Use existing mailbox phone numbers, or enter them if necessary.

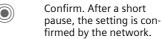



All calls

4

⊗!

All calls are diverted. Icon in the top line of the

display in standby mode.

Not reachable

Divert occurs if the phone is switched off or is out of range.

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5 second intervals.

Busy

Divert occurs if a call is in progress. If Call waiting is activated (p. 29) you will hear the call waiting tone during a call (p. 30).

Receiving data



Data calls are diverted to a phone number with a PC connection.

Additional information

Note that the divert is stored in the network and not in the phone (e.g., when the SIM card is changed).

Reactivate divert

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm number.

Call screening



Only calls from phone numbers that are in the Phonebook/Addressbook or assigned to a group are signalled. Other calls are only displayed.

Any key

Incoming calls can be accepted by pressing any key (except for 19).

Minute beep

During a call you have initiated you, and only you, will hear a beep every minute so you can check the call's duration. The recipient does not hear this beep.

83

VAR Language: am; VAR issue date: 040317

Phone setup



→ ⊃ → Phone setup → Select function.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones:

On/off Activate/deactivate tones.

Extended If switched on, a wider

range of service tones is available, e.g.: end of menu reached, network connection interrupted.

Automatic switch off

The phone switches off each day at the set time.

Activate



Press.



Enter time (24-hour clock).



Confirm.

Deactivate



Press.



Confirm.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternatively enter in standby mode: ***#06#**

Info

Display further information about the appliance.

Device check

A self-test and an individual test are offered after the last information page. If you select **Self test**, all individual tests are carried out.

Software version

Display the software version for your phone in standby mode:

* # 0 6 #, then press Info

Memory assis.

The delete assistant will help you if there is insufficient phone memory. It is also started automatically from applications if necessary.

After capacity has been checked, all files and folders are displayed along with their size and may be opened/ viewed and deleted if applicable.

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_PhoneSetup.fm

My stuff

Format

(Phone-code protected)

The phone memory is formatted and all saved data such as ringtones, pictures, games etc. are deleted. Formatting may take longer than 1 minute.

Clean up

Creating more memory by deleting temporary files that are no longer required.

Master reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively enter in standby mode:

*#9999# 🟹

VAR Language: am; VAR issue date: 040317



→ ⊃ → Clock → Select function.

Time/date

The clock must be set correctly once at start-up.



ress



First enter the date (day/ month/year), then the time (hours/minutes/ seconds).

Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Time zones

The time zone can be selected in the world map or a city list:

World map



Select the desired recording.

City list



Select a city in the selected time zone.

Options Open menu.

Set	Set time zone.
Auto time zone ⊗!	Have the time zone set automatically by the network.
Search city	Search for a city.
Help	Operating instructions.

Date format

Select the display format for the date.

Time format

Select 24h or 12h.

Buddhist year

Switch to the Buddhist year (not on all phone models).

Show clock

Activate/deactivate time display in standby mode.

Auto time zone



The time zone is identified automatically.

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Clock.fm

⊗!

86 Setup

Connectivity



GPRS

(General Packet Radio Service)



Switch GPRS on/off

GPRS is a method for transmitting data faster in the mobile network. Use GPRS and, if the network has sufficient capacity, you can be connected to the Internet permanently. Only the actual transmission time is charged by the network operator. Some service providers do not yet support this service.

Shown in the display:

GP RS	Activated and available.
GP RS	Registered.
GP RS	Temporarily interrupted.

GPRS info

Displays information on connection status.

IrDA

Your phone has an infrared interface. With this interface, you can exchange data such as pictures, ringtones, Addressbook entries, business cards or organiser data with other devices which also have an infrared interface.

The infrared interface is on the left side of the phone. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

Shown on the display:

IrDA activated.

During transmission.

Data services

Basic setting and activation of the connection profiles for data transmission such as MMS, WAP.

The phone default setting varies from service provider to service provider

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select profile and activate.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will also find the current settings for the service provider on the Internet at this address:

www.siemens-mobile.com/customercare in the FAQ section.

Select profile



Select the profile.



Confirm selection.

Set profile



Select the profile.

Options

Open menu.



Open the selection.



Select CSD settings, and/or GPRS settings.



Make the settings as specified by your service provider.

HTTP profile

The phone default setting varies from service provider to service provider.

Setup

87

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will also find the current settings for the service provider on the Internet at this address:

www.siemens-mobile.com/customercare in the FAQ section.



Make the settings.

Authentication

Activate or deactivate encrypted Internet dial-up (CSD connections only).

Security



→ ⇒ Security → Select function.

Auto key lock

The keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Additional information

The keypad can also be directly locked and unlocked in idle state.

In each case:



Press and hold.

Direct call

(Phone-code protected)

Only **one** phone number can be dialled (see also p. 32).

Only 🗖

⊗!

(PIN2 or phone-code protected)

Dialling options are restricted to SIMprotected phone numbers in the Phonebook. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN2 input, the **whole** Phonebook can be protected with the phone code.

This SIM only



(Phone-code protected)

The phone can be connected to a SIM card when the phone code is entered. Unless the phone code is known the phone will not operate with a different SIM card.

If the phone is to be used with a different SIM card, enter the phone code when requested.

Codes

For description see p. 21:

PIN control, Change PIN, Change PIN2, Chg.phonecode

⊗!

Setup

All outgoing

All outgoing calls except emergency numbers are barred.

Outgo internat

(International outgoing)

Only national calls can be made.

Out.int.x home

(International outgoing without home country)

International calls are not permitted. However you can make calls to your home country when abroad.

All incoming

The phone is barred for all incoming calls (forwarding all calls to mailbox provides a similar effect).

When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

Status check

The following information can be displayed after a status check:

	Barring set.
	Barring not set.
?	Status unknown
	(e. g. new SIM card)

Clear all

All barrings are deleted. A password which the service provider will give you is necessary for this function.

Network



→ ○ → Network
→ Select function.

Line

⊗!

This function is only displayed if it is supported by the service provider. **Two separate** phone numbers must be registered on the phone.

Select line

Select the currently used phone number.

1,,,,,

Display current phone number in standby mode.

Protected

(Phone-code protected)

You may limit usage to one phone number.

Additional information

Special settings may be made for each phone number (e.g., melody, call divert etc.) To do this, first switch to the required phone number.

Switch from phone number/connection in standby mode:

0+

Press.

Line 1

Network info

The list of GSM networks currently available is displayed.



Indicates non-authorised service providers (depending on SIM card).

Choose netwrk

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto** network is set.

Auto network

Activate/deactivate, see also Choose netwrk above. If "Automatic network" is activated, the next network on the list is dialled in ranking order of your "preferred networks". Otherwise a different network can be selected manually from the list of the available GSM networks.

Preferred net

Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).

Your service provider is displayed:



Display list of preferred networks.

91

Setup

Create/change entry:

<Empty>

or select an existing entry, then select a new service provider in the list and confirm.

Record new service provider (last entry in the list):

Furth.network

Select, enter the provider data and save it.

Additional information

If you are outside your home network, your phone automatically dials another GSM

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

Band selection

Select either GSM 900, GSM 1800 or GSM 1900.

Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

User group

⊗! Depending on the service provider, you can create groups with this service. These can have access to internal (company) information, for

example, or special tariffs apply. The details can be clarified with your service provider.

Active

Activate/deactivate function. "User group" must be deactivated for normal phone use.

Select group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

All outgoing

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Pref. group

If activated, calls may only be made within this standard user group (depending on the network configuration).



⊗!

Accessories



→ Accessories
→ Select function.

Car Kit

Only in combination with an original Siemens handsfree car kit (see accessories). The car kit profile is activated automatically when the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Shown on the display.

Automatic switch off (factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the phone switching off automatically.

Car loudspk.

Improves playback in certain circumstances.

Automatic settings

- Permanent illumination: switched on.
- Key lock: switched off.
- Charging the phone battery.
- Auto. activation of car kit profile when the phone is inserted.

Headset

Only in conjunction with an original Siemens headset (see accessories). If an original Siemens headset is used the profile is activated automatically when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Automatic setting

Accept call with Call key or PTT key (Push To Talk), even when the auto key lock is activated.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

VAR Language: am; VAR issue date: 040317

My menu



Press.

My menu Press.

Create your own menu with frequently used functions, phone numbers or WAP pages.

The list of 10 entries is preset. You can, however, change it as you wish.

Use



Select the required entry.



Confirm.

Or



If the entry selected is a phone number, you can also call it with the Call key.

Change menu

You can replace each entry (1-10) with another entry from the selection list.



Select the required entry.



The function list is opened for selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

If Phonebook is selected, the phone number must also be selected; if Internet is selected, the bookmark must also be selected.

Reset all

(Telephone code required)



Select. Following confirmation, the pre-assignment is reset.



94 Fast access

Fast access

You can assign one important phone number or a function to each one of the two soft keys and number keys 2 to 9 (speed-dial numbers). The phone number can then be dialled or the function started at the touch of a button.



Additional information

The service provider may have already assigned functions to a soft key (e.g., access to "SIM services" or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

The left soft key may sometimes be replaced automatically by / 100 to access a new message, for example.

Soft keys

Change

For example, the Internet function is assigned to the soft key. To change this (in standby mode):



Press briefly.

Scroll to new assignment in the list.



Confirm.

- Special case Phone number. Pick out a name from the Phonebook/ Addressbook for assignment to
- Special case Bookmark. Scroll to a URL in the bookmark list for assignment to the key.

Apply

In standby mode:

Application

The "Internet" is just used as an example here.

Internet

Press and hold; the application is started.

Phone number

The setting "Carol" is used here only as an example.



Press and hold, the phone number is dialled.

VAR Language: am; VAR issue date: 040317

Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. Number key 1 is reserved for the mailbox phone number (p. 60) and number key 0 is reserved for switching over two connections during use (p. 90).

Change

In standby mode:



Press number key briefly (e.g. the 3).

This number is still free:



Press.

Select a new function from the list and confirm with OK.

Or

An assignment has already been made to this key (assignment displayed above the right soft key):



Press briefly.



Scroll to application in the



Confirm.

- Special case Phone number. Pick out a name from the Phonebook/ Addressbook for assignment to the key.
- Special case Bookmark. Scroll to a URL in the bookmark list for assignment to the key.

Apply

Select a stored phone number or start a stored application (e.g. Internet).

In standby mode:



Press briefly.

The assignment of the number key 3 is displayed above the right soft key

Internet

Press and hold.

Or simply



Press and hold.




96

Organizer

Organizer

Calendar



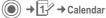

You can enter appointments in the calendar. Time and date must be set for the calendar to work correctly.

The calendar offers you three views:

Monthly view

Special colour coding:

Day with entries for appointments, day of the week, weekend.

Navigation:



One day forward/back.



One week forward/back.



Open daily view.

Weekly view

Special displays:

Appointments are shown as a vertical colour bar on the horizontal hour division.

Navigation:



One day forward/back.



Forward/backward by the hour through the day.

Daily view

Special displays:

Description of appointment.

Navigation:




One day forward/back.

To the start/end of the day or next/last entry.

Calend. setup



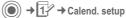

Start of day:

Time when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts.

Weekend

Set the days for the weekend.

Synchronising with a PC

With the mobile phone manager (p. 111) you can synchronise appointments, tasks and memos with Outlook®.

Siemens AG 2003, E:\Auftraq\Siemens\MobilePhones\C65 Hera\us\LA\C65_Organizer.fm

→ 1 → Appointments
Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Types:

7

Text input for description.

Ę

Voice memo Enter voice memo.

Shown with alarm.



Call

Enter phone number to be displayed with the

alarm.



Meeting

Text input for description.



/acation

Birthday

Enter start and end date.



Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see Default at the end of the list.

Organizer

Description:

Description of appointment.

Phone number:

Enter a phone number or select one from the address directory.

Voice memo:

Enter a voice recording, see **Dictation** mac, p. 100.

Location:

Location of appointment.

Whole day:

All-day appointment: Yes/No

Start date:

Date when appointment starts.

Start time:

Time when appointment starts.

End date:

Date when appointment ends.

End time:

Time when appointment ends.

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Organizer.fm

98 Organizer

Alarm time:

On/off or Silent alert.



Enter the period of time **before** the appointment and select the time unit: Minutes, Hours, Days

Recurrence:

Select a timeframe for repeating the appointment:

No, Daily, Weekly, Monthly, Yearly Enter a parameter for repeating: Forever, Until, Events (number). If Weekly is selected, certain weekdays can be highlighted.

Default

In the list, select those fields which are to be offered for future entries.

Additional information

Display above set alarms:



Alarm clock Appointment

An alarm sounds even when the phone is switched off (except in Airplane mode, p. 75). The phone does not go to standby mode. Pressing any key will lead to Snooze (see below).

Information on the alarm

When the set date and time are reached there is an audio and a visual alarm. If an alarm is missed it appears in the list of missed appointments (p. 99).

Alarm type Memo

Meeting: The text is shown in the display.

Alarm type Call: The phone number is displayed and can be dialled immediately.

Alarm type Birthday: You can send special birthday greetings by SMS, MMS or a call via Options.

With **Snooze** you can set the alarm to repeat.

VAR Language: am; VAR issue date: 040317

Tasks



A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.

The entries are made in the same way as Appointments (see "Appointments"). Then press

Status:

Select Done or Outstanding.

Selection in 5 levels from Lowest to Highest.

Use date

If activated with Yes, the following time-input option is offered.

Due date:/Expiry time:

Enter the date and time by which the task is to be completed.

Alarm: and Default as for Appointments.

Notes



Write and administer brief text memos.

Enter a new memo

<New entry>

Select.



Input text. The first line is displayed as a "title" in the memo list. Total length: max. 160 characters.

Organizer

Options

Open menu.

Save

Save memo. When Confidential is selected, a memo is protected with the phone code.

Missed appts.



→ Missed appts.

Events with an alarm (Appointments, Tasks) to which you have not reacted are listed for reading.

100 Organizer

Organizer options

Depending on the application used (Calendar, Appointments, Tasks, Notes) and the current situation, different functions are offered.

Options Open menu.

Delete	Delete entry.
Delete until	Delete all entries prior to a certain date.
Delete all	Delete all entries after confirmation.
Delete done	Delete all completed tasks.
Activate/ Deactivate	Switch alarm on/off.
Filter	Display all entries with the selected feature.
Confidential	Protect note with phone code. We recommend that you do not store any passwords (PIN, TAN etc.) as notes.

(For standard functions see p. 19)

Dictation mac

→ Dictation mac

Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an appointment in the calendar.
- Record a call useful for remembering numbers or addresses.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

VAR Language: am; VAR issue date: 040317

The remaining time available, as well as the recording time, are shown in the display.

A brief tone sounds when the recording starts. Now say the text.



Alternate between pause/record.



End recording.

The recording is automatically saved with a time stamp. Rename with Options.

Playback



Select the desired recording.



Alternate between playback/pause.



Press and hold for rapid rewind and fast forward.

Dictating machine options

Options Open menu.

Loudspeaker

Playback through the built-in loudspeaker.

(For standard functions, see p. 19)

Time zones



 $\rightarrow 17 \rightarrow \text{Time zones}$

The time zone can be selected in the world map or a city list:

World map

(

Select the desired recording.

City list



Select a city in the selected time zone.

Time zone options

Help

Options)pen menu.
Set	Specify the time zone.
Auto time zone 🛞 🎚	The time zone is switched automatically to local time by the network.
Search city	Search for a city.

Operating instructions.

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Organizer.fm

102 Media player

Media player

When you are viewing a picture or listening to a melody, the application starts a media playback.



Browse to the next media




Switch on display illumi-

Pictures

The following functions can be applied to a displayed picture:



Zoom function if the displayed picture has a higher resolution than the display. The two soft keys (+I-) enlarge/reduce the picture. The joystick moves the picture detail.

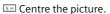



Switch to full screen mode and back again.



E.g., send via MM S.

Melodies

The media playback offers the following functions for melody play-



Play or stop, depending on the situation.



Set volume.



Switch to mute. Pause function.



End playback.

Options

Options Open menu.

Different functions are offered depending on the starting situation and the object.

Volume	Set the volume with the joystick.
Set as	Set picture as Wallpaper, Logo for example, and sounds for Incoming call, Startup melody, for exam- ple.
Slideshow	Automatic run-through in full-picture mode. Individual picture connection with joystick.
Edit	Access to picture editing.
(For standard functions see p. 19)	

Extras

103

Extras

SIM services (optional)



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the soft key (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu. With the SIM services menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

Alarm clock



The alarm will ring at the time set by you, even when the phone is switched off.



Activate/deactivate the alarm.



Switch to time setting. Set alarm call time (hh:mm).



Switch to the week days.

Navigate to the various days.



Display options: alarm call time and days.





Set days for alarm calls. Press again to delete the highlighting.

Press and **hold** to highlight/unhighlight all the

OK Confirm setting.

Additional information



Screen display in standby mode: alarm clock activated.

With Snooze you can set the alarm to repeat.

epeat.

104 Extras

Sound recorder

Use the Sound recorder to record noises or sounds for use as ringtones. The Sound recorder is usually started from other applications/functions such as assigning a ringtone.

New recording

Start from main menu:



Select.

The remaining time available, as well as the recording time, are shown in the display.

Start it from another application as follows

The recording display appears:



A brief tone sounds when the recording starts.



Alternate between pausel record.



End recording.

The recording is saved with a timestamp in the Sounds folder. Rename with Options .

Insert

Transfer the recording into the application.

Playback



Select the desired recording.



Alternate between playback/pause.



Press and hold for rapid rewind and fast forward.

Options Open menu.

Loudspeaker	Playback via the built-in loudspeaker.
Set as	Set the recording as a ringtone.
(For standard functions see p. 19)	

Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Extras.fm

105

Calc.



◆ → Calc.

The calculator can be used in a basic version and with an advanced range of functions. The input line and two calculation lines (including the matrix with the calculation functions) are located in the top half of the display.



Enter digit(s).



Navigate functions.



Use function. The result is calculated and displayed immediately.

Racio	functions:
Dasic	iunicuons.

+, -, *, /	Basic calculation types
=	Result
1/x	Reversion
%	Convert to percentage
.	Decimal point.
±	Sign change "+"/"-"
Options	Expansion of the range of functions:
$\sqrt{\mathbf{x}}$	Square root
x ²	Square
е	Exponent
MS	Save displayed number
MR	Call up saved number
M+	Insert number from memory

Calculator options

Options Open	menu.
Convert	Call up the unit converter with the current result.
Clear all	Delete all units.
Extended mode/ Basic mode	Convert calculation functions.
(For standard functions see p. 19)	

Unit converter



You can convert various measurement units into other measurement

The following types are offered with various units:

> Energy Mass Pressure Time Volume Area Length Power Temperature Currency

Velocity

Example using Velocity units:

Туре	Units
Velocity	Kilometers/h, Meters/sec, Miles/h, Miles/sec, Knots, Mach

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Extras.fm

Converting the units/currency

Select the source unit/ currency.



Switch to the input field. Enter the quantity to be converted.



Switch to the selection field.



Select the target measurement unit/currency. The result is displayed.

You can use both input fields alternately.

Special key functions:

*

Enter decimal point.



Change sign.

Currency

When you call up the function, you must enter a basic currency into which the conversions are to be made.



Enter currency (e.g. euro).



Store entry.

Now enter the name and exchange rate of the currency to be converted.

Options Open menu.				
Add currency	Enter new currency and exchange rate.			
Set as base	Use entered currency as basic currency.			
Edit rate	Change the exchange rate of the basic currency.			
Calc.	Start calculator.			
(For standard fu	inctions see p. 19)			

Stopwatch



● → Stopwatch

Two intermediate times can be recorded and saved.



Start/stop.



Save intermediate time.

After a stop:



Reset to zero.

Stopwatch options

Options Open menu.

Stopwatch list Display saved entries.

(For standard functions see p. 19)

VAR Language: am; VAR issue date: 040317

Countdown



→ Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

If no time has been entered:



Open input window.



Set period of time.



Confirm.

If a countdown time is specified:



Start countdown.



While the time is elapsing: Interrupt counter.



Let counter continue



running.



Reset counter to starting

Remote synchronisation





→ Remote sync.

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone. The data can, for example, be saved on a company computer or the Internet, e.g.:

www.siemens-mobile.com/syncml

Synchronise



The computer is selected and synchronisation started. When completed, the actions which have been performed are displayed.

Next

Scroll through the various displays.

Sync. setting

The following settings can be made prior to synchronisation:

Sync. profile

You can choose between 5 profiles.



Select profile.



Activate profile.

108

Extras

Or Edit Se	t profile
Providers	Display the current service provider.
Homepage:	Set the homepage
Port:	Enter port number. e.g. 80.
Login:	Enter user name (login name).
Password:	Enter password (shown as a series of asterisks).
Calendar path	e.g., events
Contacts path	e.g., contacts
Notes path	e.g., notes
Task path	e.g., tasks
HTTP authentication.	Confirmation required; Yes/No (if No, the input fields are not visible).
HTTP name:	Enter name.
HTTP password:	Enter password.

Last sync:

Time of the last synchronisation.

Sync. mode

- Sync data: Modified data or All data
- Sync instruction: Two-way, Device update or Server update

Date range

Select On/off

Enter the time in weeks in which entries (past and future) are to be synchronised.

Sync items:

Highlight database areas to be synchronised:

Tasks

Calendar Address book Notes



Save settings.

Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_Extras.fm

My stuff

To organise your files, you can use the file system like a PC file manager. There are some folders for the various data types in My stuff for this purpose.





The list of the folders and files is displayed.

Navigation



Select file/folder in lists.



The cursor can be moved as required in the preview.



Open folder or start file with related application.

<New picture>/<New Sound>

The application for the folder currently selected is loaded.

<New downl.>

The WAP browser is started and the URLs for downloading displayed.

My stuff options

Options Op	oen menu.
Move	Place highlighted file(s) or folder in temporary memory.
Сору	Place highlighted file(s) or folder in temporary memory.
Paste	Transfer content of temporary memory into current folder.
New folder	Create a new folder and name it.
Preview	Switch over to miniature view.
Attributes	Display information on file or folder selected.
(For standard f	unctions see p. 19)

110 My stuff

Index structure

Some folders have already been created for different data types in My stuff. These folders cannot be changed.

Folder	Description	Format
Pictures	Pictures	bmp
		bmx
		jpg/jpeg
		png
		gif
Anima-	Switch on/off	bmx
tions	animations	gif
Sounds	Melodies	mid
		amr
		wav
Themes	Loaded theme (zipped)	sdt
	Theme configura- tion (unzipped)	stc
Skins	Loaded user inter- faces	scs
Games	Java archive	jar
	Download info	jad
Applica- tions	Applications	*
Misc	Text modules	tmo
	Voice recordings	vmo

Depending on the service provider, the structure, content and functionality of My stuff may vary.

Mobile Phone Manager

The Windows® PC program, Mobile Phone Manager, allows you to use extended phone functions from your PC. Among other things, you can easily manage your phone's Addressbook, read, store and send SMS and MMS messages, or synchronise your phone with Outlook®. The phone and PC communicate with one another via a data cable (Accessories, p. 131).



MPM Mobile Phone Manager

You can download the software from the Internet:

www.siemens-mobile.com/c65

Contacts management



You can use contacts management to manage, delete and edit the personal contacts on your phone and to add new ones. You can compare and copy contacts between your phone, Microsoft Outlook® and other Siemens phones (including Gigaset).

SMS and MMS management (messages)



You can create MMS and SMS messages conveniently using your PC. This means you can use all the options your PC offers, and use your sounds and pictures to create MMS and EMS messages. You can read, forward, print, delete and archive your messages.

112 Mobile Phone Manager

Synchronisation (SmartSync)



At the touch of a key you can synchronise the contacts, appointments, notes and tasks on your mobile phone with Microsoft Outlook®. Any changes you have made on your phone are automatically transferred to your Outlook® database. In the same way, changes and new entries from Outlook® are updated in the phone.

Backup and restore



You can use the backup function to save backup copies of your phone data regularly to your PC. If you should lose the data you have in your phone or change your phone you can quickly re-instate all the data using the restore function.

Bookmark management (browser & bookmarks)



Use your PC to browse through Internet and define your preferred Browser sites. Save the Internet addresses as bookmarks on your phone so that you can find them quickly at a later time when you are on the move.

Phone Explorer



You can access your phone's file system with the Phone Explorer. Files such as photos and sounds can easily be copied between your phone and PC by dragging and dropping.

Processing pictures and photos (images)



Picture/photo processing offers the user the opportunity to conveniently create, edit and manage pictures and photos. Filters and effects are offered with which to create attractive graphics. The user-friendly interface makes it easy to transfer pictures from and into the mobile phone and to change their graphic settings (e.g. background images).

Ringtone and MP3 management (sounds)



The sound module offers the user the opportunity to conveniently manage just about any sound format and store it on the phone. In addition it supports MP3 play lists and the configuration of their ringtones. It is not possible to manage or play back MP3 files.

114 Questions & Answers

Questions & Answers

If you have any questions on the use of your phone, you can contact us at **www.siemens-mobile.com/customercare** around the clock. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least 2 seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error".	
Too little standby time.	Frequent use of applications such as organiser, games, camera.	Restrict use if applicable.
	Fast search activated.	Deactivate fast search(p. 91).
	Display illumination switched on.	Switch off display illumination (p. 78).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 88).
Charging error (charge icon not displayed).	Battery totally discharged.	Plug in charger cable, battery is on charge. Charge icon appears after approx. 2 hours. Charge battery.
	Temperature out of range: +5 °C to +40 °C.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem	Check power supply and connection to the phone. Check battery contacts and telephone connection socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket; check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error.	SIM card not inserted correctly.	Check that the SIM card is inserted correctly (p. 13).
	Dirty SIM card contacts.	Clean SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3V SIM cards only.
	SIM card damaged (e.g., broken).	Carry out a visual check. Ask service provider to change SIM card.

115

VAR Language: am; VAR issue date: 040317

Questions & Answers

Problem	Possible causes	Possible solution
No network connec-	Weak signal.	Move higher, to a window or an open space.
tion.	Outside GSM range.	Check service provider's coverage area.
	Invalid SIM card.	Complain to the service provider.
	New network not authorised.	Try manual selection or select a different network (p. 90).
	Network call barring is set.	Check network barrings (p. 89).
	Network overloaded.	Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 90). Switching phone off and on again can speed this up.
Calls not possible.	Second line set.	Set first line (p. 91).
	New SIM card inserted.	Check for new barrings.
	Charge limit reached.	Reset limit with PIN2 (p. 42)
	Credit used up.	Load credit.
Certain uses of phone not possible.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (p. 89).
Impossible to make entries in Phone-book/Addressbook.	Phonebook/Addressbook is full.	Delete entries in the Addressbook (p. 34)/Phonebook (p. 36).
Voice message not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (p. 60).
flashes to indicate an SMS.	SMS memory is full.	Delete SMS or archive (p. 49).
[>!] flashes to indicate an MMS.	MMS memory is full.	Delete MMS.
flashes to indicate an MMS.	Phone memory full.	Delete messages, pictures, games or applications.
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ringtones, pictures, SMS archive.	Phone memory full.	Delete files in the relevant areas. You can use the memory assistant to delete specific files (p. 83).
No WAP access, downloading not	Profile not activated, profile settings wrong/incomplete.	Activate or set WAP profile (p. 71). If necessary ask your service provider.

116 Questions & Answers

Problem	Possible causes	Possible solution
Text message can- not be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrectly set.	Set service centre (p. 50).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures & sounds are not displayed on the destination phone.	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect WAP profile set, or wrong or incomplete settings.	Check WAP settings (p. 71); contact your service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 117).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Missing/too many menu entries	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
Charge meter does not work	Charge pulse is not being transmitted.	Contact your service provider.
Damage		
Severe shock	Remove battery and SIM and re-	insert them. Do not dismantle the phone!
Phone became wet.		mediately with a cloth, but do not apply heat. ly. Stand mobile upright in an air current. Do not dis-

Reset settings to the factory default, p. 84: * # 9 9 9 9 # 🟹

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

www.siemens-mobile.com/customercare

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#0 6#), the software version (to display, press *#0 6#, then info) and if available, your Siemens Service customer number.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	
Brazil	0 80 07 07 12 48

Brunei			02	43	08	01
Bulgaria						
Cambodia			12	80	05	00
Canada	1	88	87	77	02	11
China	0	21	38	98	47	77
Croatia		_0	16	10	53	81
Czech Republic		2	33	03	27	27
Denmark			35	25	86	UU.
Dubai		٠	43	96	64	33
Egypt		o	23	33	41	11
Estonia		0	06	30	47	97
Finland		na	22	QΛ	37	nr
France		.03 101	56	38	12	nn
Germany	۰۰۰۰۰۰	1Ω	05	33	32	26
Greece	٥	QΛ	11	11	11	16
Long Kong	0	00	20	61	11	10
Hong Kong Hungary		06	1/	71	24	10
nuliyaly		.00	14	11	24	44
Iceland	0.70		5	l I	30	40
Inuia22 24 9	0 / 0	24	40	un.	70	40
Indonesia	0	41	40	82	50	81
Ireland						
Italy		02	24	<i>3</i> 6	44	UU
Ivory Coast			05	02	02	55
Jordan		0	64	39	86	42
Kenya			2	/2	3/	1/
Kuwait			2	45	41	/8
Latvia			/	50	11	18
Lebanon			01	44	30	43
Libya						
Lithuania		8	52	74	20	10
Luxembourg			43	84	33	99
Macedonia			02	13	14	84
Malaysia	.+6	03	77	12	43	04
Malta						
Mauritius			2	11	62	13
Mexico	01	80	07	11	00	03
Morocco			22	66	92	06
Netherlands	0	90	03	33	31	00
New Zealand		.08	00	27	43	63
Nigeria		0	14	50	05	00
Norway			22	70	84	00
Oman				79	10	12
Pakistan		02	15	66	22	00
Paraguay		8	00	10	20	04
Philippines		0	27	57	11	18
* *						

118 Customer Care

Poland	08 01 30 00 30
Portugal	
Qatar	
Romania	
Russia	
Saudi Arabia	
Serbia	
Singapore	
Slovak Republic	02 50 68 22 66
Slovenia	
South Africa	
Spain	
Sweden	
Switzerland	
Taiwan	
Thailand	
Tunisia	
Turkey	
Ukraine	
United Arab Emirates	
United Kingdom	
USA	
Vietnam	84 89 30 01 21
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic components.

- Do not drop, knock or shake your phone. Rough handling can damage components inside the device!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

120 Product data

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or:

www.siemens-mobile.com/conformity

(€ 0168

Technical data

GSM class: 4 (2 watt)
Frequency range: 880–960 MHz
GSM class: 1 (1 watt)

Frequency range: 1,710–1,880 MHz

GSM class: 1 (1 watt)
Frequency range: 1,850–1,990 MHz

Weight: 86 g

Size: 105 × 47 × 18 mm

(75.6 ccm)

Li-lon battery: 600 mAh

Operating

temperature: -10 °C to 55 °C

SIM card: 3.0 V

Phone ID

You will need the following details if you lose your phone or SIM card:

the number of the SIM card (on the card):

15-digit serial number of the phone (under the battery):

the customer service number of the service provider:

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 300 minutes Standby time: 60 to 250 hours

•		
Action taken	Time (min)	Reduction of stand- by time by
Calling	1	30-90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes
* Keypad inpu	t, game	s, organiser etc.



The U.S. Food and Drug Administration's (FDA) Center for Devices and Radiological Health Consumer Update on Mobile Phones

FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is know – and what remains unknown – about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered nonsignificant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has

been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate adverse health effects associated with the use of mobile phones.

U.S. FDA

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna - the primary source of the RF – and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called "cordless phones," which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been auestioned.

How much evidence is there that handheld mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously - up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

1. In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepithelliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the

123

U.S. FDA

National Cancer Institute is expected to bear on the accuracy and repeatability of these results.1

2. Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus follow-up research is neces-

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing

research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³
- In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used. Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not,

any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones

among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

Support needed research into possible biological effects of RF of the type emitted by mobile phones;

125

- Design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health.
- At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:
- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products – and at this point we do not know that there is – it is probably very small. But if people are concerned about avoiding even potential risks,

there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle.
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package, or
- a headset with a remote antenna to a mobile phone carried at the wait

Where can I find additional information?

For additional information, see the following websites:

Federal Communications Commission (FCC) RF Safety Program (select "Information on Human

Exposure to RF Fields from Cellular and PCS Radio Transmitters"): http://www.fcc.gov/oet/rfsafety

- World Health Organization (WHO) International Commission on Non-lonizing Radiation Protection (select Qs & As): http://www.who.int/emf
- United Kingdom, National Radiological Protection Board: http://www.nrpb.org.uk
- Cellular Telecommunications Industry Association (CTIA): http://www.wow-com.com
- U.S. Food and Drug Administration (FDA) Center for devices and Radiological Health:

http://www.fda.gov/cdhr/consumer/

- ¹ Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
- ² Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, DC; and personal communication, unpublished results.
- ³ Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915- MHz simulated mobile phone signal on cognitive function in man. Int. J. Radiat. Biol., April 8, 1999.
- ⁴ Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors; a case-control study. Int. J. Oncol, 15: 113-116, 1999.

FCC/Industry Canada Notice

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\FDA.fm

128 Ten driving safety tips



Your Siemens wireless phone gives you the power to communicate by voice – almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

Get to know your phone and its features such as speed dial and redial.

Carefully read your instruction manual and learn to take advantage of valuable features most phones offer including, automatic redial and memory dial – most phones can store up to 99 numbers in memory dial. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

When available, use a hands-free device.

A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speaker phone accessory, take advantage of these devices if they are available to you.

Position your phone within easy reach.

Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.

Suspend conversations during hazardous driving conditions or situations.

Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Do not take notes or look up phone numbers while driving.

If you are reading an address book or business card while driving a car, or writing a "to do" list, then you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

129

Ten driving safety tips

Dial sensibly and assess the traffic.

If possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting.

Stressful or emotional conversations and driving do not mix – they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations that have the potential to divert your attention from the road.

Use your phone to call for help.

Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 9-1-1 in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it is a free call on your wireless phone.

Use your phone to help others in emergencies.

Your wireless phone provides you a perfect opportunity to be a "good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergencies where lives are in danger, call 9-1-1, as you would want others to do for you.

Call roadside assistance or a special wireless non-emergency assistance number when necessary.

Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to 9-1-1. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless numbers.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1 (888) 901-SAFE, or visit our Web site at: www.wow-com.com

Provided by the Cellular Telecommunications Industry Association (CTIA)

130 Intellectual property

Intellectual Property Restrictions

All Intellectual Property, as defined below, which is owned by or otherwise the property of Siemens Information and Communications Mobile, LLC ("Siemens"), its affiliates, partners or suppliers, relating to the Phone, including but not limited to accessories, parts or software relating thereto (the "Phone System"), is proprietary under federal laws, state laws and International treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You $may \ not \ infringe \ or \ otherwise \ violate$ the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) disassemble, decompile, reverse engineer, prepare derivative works from, modify or make any other effort to create source code from the software. No title to ownership in the Intellectual Property is transferred to you through purchase or possession of the Phone or its components. All applicable rights of the Intellectual Property shall remain with Siemens, its affiliates, partners or suppliers.

Siemens will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by Siemens, nor will Siemens have any liability for the use of ancillary equipment or software not furnished by Siemens which is attached to or used in connection with the Product, The foregoing states the entire liability of Siemens with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for Siemens certain exclusive rights for copyrighted Siemens software, such as the exclusive rights to reproduce and distribute copies of such Siemens software. Siemens software may be used only in the Product in which the software was originally embodied when purchased, and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution. or reverse engineering of such Siemens software or exercise of rights in such Siemens software is permitted. No license is granted by implication, estoppel or otherwise under Siemens patent rights or copyrights.

131

Accessories

Fashion & Carry

CLIPit™ covers

Changeable faceplates as well as keypads are available in specialist shops. Alternatively, you can visit our online shop.

Carrying Cases

A range of carrying cases is available at specialist shops or you can visit the Siemens Mobile Store online:



SIEMENS Original Siemens Accessories www.siemens-mobile.com/ shop

Energy

Li-Ion battery (600 mAh) EBA-670

Spare battery

Travel Charger

Travel Charger ETC-500 (EU)

Travel Charger ETC-510 (UK)

Travel charger with an extended input voltage range of 100-240 V.

Car Charger Plus ECC-600

Charger for the cigarette lighter socket in the car. It is possible to make phone calls during charging.

Handsfree Portable

Headset PTT HHS-510

Headset PTT HHS-610

Headset Purestyle HHS-610

Headset with PTT key to accept and end

Accessories

Office

Data Cable DCA-500

For connecting the phone to the serial RS232 port of the PC.

Data Cable USB DCA-540

For connecting the phone to the USB port of the PC. With load function.

SyncStation DSC-600

Table support for the phone to facilitate simultaneous data exchange and telephone charging. Contains a desktop stand and a data cable USB.

Multitainment

Plug-in Flash IFL-600

Plug-in flash module for taking photos in areas with low ambient light.

132 Accessories

Car Solutions

Mobile Holder HMH-680

Cradle without antenna port.

Mobile Holder HMH-685

The cradle for connecting an external antenna. Ideal for use with headset PTT or car kit portable.

Can also be used as cradle for retrofitting your handsfree car kit (series 55).

Car Kit Comfort HKC-680

Handsfree kit with first-class digital call quality and supreme ease of use. Includes all components needed for installation. The individual antenna solution is available in specialist shops.

Car Kit Easy HKP-600

Facilitates convenient handsfree talking with high call quality. With the integrated, rotating cradle and the flexible microphone positioning, the phone can be optimally adjusted to suit any vehicle interior. The power is supplied via the cigarette lighter socket.

Optional Car Kit accessories

Car Data Adapter HKO-690

Phone-in Adapter HKO-570

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:



Original Siemens Accessories

www.siemens-mobile.com/ shop

Quality

133

Quality

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Display quality statement

For technological reasons, some small dots in other colours may appear in the display in rare cases.

Please remember that if some dots appear brighter or darker in the display, this generally does not mean that a fault has occurred.

SAR (C71)

RF EXPOSURE/SPECIFIC ABSORPTION RATE (SAR) INFORMATION

THIS SIEMÉNS C71 PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO ELECTROMAGNETIC FIELDS.

Your cell phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy established by the Federal Communications Commission (FCC) of the U.S. Government and by Health Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for cell phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit established by the FCC and by Health Canada is 1.6 W/kg**. Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified

power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output. Before a phone model is available for sale to the public, it must be tested and the manufacturer must certify to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body), reported to the FCC and available for review by Industry Canada. The highest SAR value for this Siemens C71 when tested for use at the ear is

0.75 W/kg*** and when worn on the body $^{+}$ is 0.65 W/kg***

with PoC is

0.39 W/kg***

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Internet Association (CTIA) web-site at www.phonefacts.net or the Canadian Wireless Telecommunications Association (CWTA) website www.cwta.ca

Siemens AG 2003, W:\\CM_MP_CCQ_S_U\\\N0471E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\00641E\

SAR information on this Siemens C71 phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID PWX-C66, Canada IC 267E-C66. While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the

- governmental requirements for safe RF exposure.
- This cell phone has been tested for body worn operation and meets FCC RF exposure quidelines when used with a Siemens accessory designated for this product, where available, or when used with a carry accessory that contains no metal and that positions the handset at least 2.2 mm/.87 in (2.5 cm/0.99 in for PoC) in is the correct testing distance from the body. Use of other carry accessories may not ensure com-pliance with FCC RF exposure quidelines.

© Siemens AG 2003, W:NICM_MP_CCQ_S_UMI04FL00641 Emoty/Work/frame_und_Grafiklemo_us_FCC_zweiter_laufframe_enlSAR.fm

The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland), on the basis of the current knowledge, does not see any necessity for special precautionary measures when using cell phones. Further information:


www.who.int/peh-emf, www.mmfai.org, www.siemens-mobile.com.

- ** averaged over 1 g of tissue.
- ***SAR values may vary depending on national requirements and $network\ bands.\ SAR\ information$ for different regions can be found at www.siemens-mobile.com

Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_MenuTree.fm

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_MenuTree.fm

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_MenuTree.fm

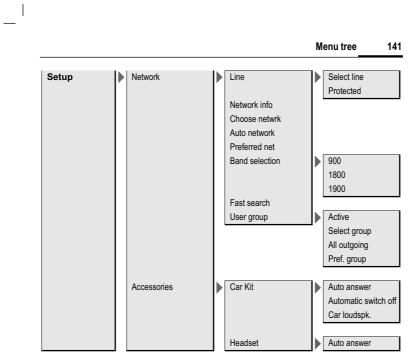

left page (141) of C65 Hera FUG us, A31008-H7800-A40-1-4A19 (01.04.2004, 17:26)

© Siemens AG 2003, E:\Auftrag\Siemens\MobilePhones\C65 Hera\us\LA\C65_MenuTree.fm

A	Dusii
Accessories131	Busy
Addressbook	C
Dial entry36	Calcu
Groups 37	Cale
New entry 34	Call
Read entry 36	Ac
Aircraft mode 75	Ва
Alarm	Ch
Alarm clock103	Co
Type 98	Di
Alarm clock 103	En
All calls (call time/charge) 42	Ho
All calls (diversion) 82	Me
All incoming (barrings) 89	Re
Answering service (external) 60	Sv
Any to answer 82	Call I
Appointments 97	Call
Auto display	Call
Clock 85	Call t
Duration/charges 42	
Auto key lock10, 88	Call v
Auto time zone 85, 101	Callin
Auto. network selection	Calls
Auto. redial	Calls
Automobile accessories	Cam
	Car k
В	Ac
Band selection91	Se
Battery	Car k
Charge14	Care
Insert 13	Cell I
Operating times 14, 120	Char
Quality Declaration 133	Char
Big letters 78	Char
Bookmarks (WAP) 69, 71	Char
Browser	Char
Buddh. year 85	Char
,	

Business card		33
Busy number	••••	28
C		
Calculator		
Calendar		96
Call		
Accept/end		29
Barring		89
Charges		42
Conference		31
Divert		81
End		28
Hold		30
Menu		31
Reject		29
Swap (change)		30
Call back		29
Call divert		
Call screening		82
Call transfer		31
Call waiting		
Calling		28
Calls dialled (call record)		
Calls received (call record)		
Camera		43
Car Kit		
Accessories	1	32
Setting		
Car kit accessories		
Care of phone	1	19
Cell Broadcast (CB)		68
Change the keypad mat		15
Changing the faceplate 1!	5, 1	31
Changing the keypad 1!	5, 1	31
Charge rate		
Charges		
Charging the battery		14

_
_
≐
⇟
\simeq
S
2
9
()
⋾
\$
_
S
⊐
æ
_
Ū
I
_
5
9
$_{\sim}$
S
Ф
\Box
0
Ē
Δ.
<u>e</u>
ō
ŏ
ĕ
2
S
\Box
Φ
=
ā
$\underline{}$
S
б
ĕ
Ξ
≠
\Box
≤
ш
Σ
\supseteq
\circ
7
ר
$ \neq$
ns
ē
~

CLIPIt™ covers 15 Clock 85 Colour skin 77 Conference 31 Connection profiles 86 Contact list 62 Control code (DTMF) 32 Countdown 107 Credit limit 42 CSD settings 87 Currency 106 Customer care 117
D
Date format 85
Default book
Delete assistant 83
Dialling code
Dialling with number keys 28
Dictating machine 100
Digital rights management 17
Direct reply (SMS) 50
Display
Illumination 78
Language 77
Symbols11
Wallpaper 77
Divert 81
Download 72
Driving safety 128
DTMF codes (control codes) 32
Duration/charges 42
E
Emergency number 16
Extras
F
Fast access
Fast search 91

	Index	143
Formatting (phone m Formatting (SMS text Forwarding (call) Frequency range)	46 31
G Games and applicatio GPRS Groups		86
Handset volume Handsfree talking Headset		
Accessories Setting	30,	92 81 20 31 90 17
Identity number (IME IMEI number	(CB)	83 45 83 68 86 86 24 61 29
J Joystick		9
K Key tones		83

L	N
Language 77	Network
Limit (call time/charge) 42	Barring89
Logo77	Connection90
Loss of phone, SIM card 120	Settings90
M	Notes99
Mailbox 60	0
Maintenance of phone 119	One number only32
Master reset 84	Only 🗂88
Media player 102	Operating times (battery) 14, 120
Menu	Organiser96
Controls 18	Own (phone) numbers40
My menu 93	Own greeting78
Speed dialling 21	P
Menu speed dialling 20	Phone (settings)83
Menu tree 136	Phone code21
Message	Phone data120
CB 68	Phone identity number (IMEI)83
MMS 52	Phone number memo29
SMS 46, 48	Phone number transmission
Message memory full 51	on/off81
Message type 50	Phonebook
Microphone on/off31	Call an entry39
Minute beep 82	New entry 38
Missed appointments	Protected SIM40
Missed calls (call record) 41	Special books40
MMS	VIP numbers40
Lists 57	Photo43
Receive 56	Pictures & sounds (SMS)47
Send55	PIN
Write 52	Change21
Mobile Phone Manager 111	Control21
Muting (microphone) 31	Enter16
My menu	Error116
My phone	PIN221
My stuff 109	

145

2	
۲	-
۰	;
×	
	•
J	7
2)
۷)
L)
=	=
◁	
]
7	5
×	ź
=	2
α	3
ř	÷
a	J
J	
_	
3)
۷)
L)
₹	-
ă	;
4	
2	=
C)
c	=
n	
a	,
Ξ	=
\bar{c}	2
7	5
è	_
2	2
U	
۲	2
'n	,
4	
۲	=
ñ	,
2	_
1	1
=	ξ
۲	עַ
ū	3
÷	5
t	=
Ξ	2
◁	5
-	
ù	j
~	ī
÷	Ś
≍	
_	?
	1
	7
خ	2
◁	
u	1
	-
9	5

Preferred network	SIM card
Preventing accidental	Clear barring22
activation 22	Insert13
Product data120	Phonebook40
Profiles	Problems114
MMS 58	SIM services (optional)103
Phone	SMS
SMS50	Archive49
WAP	Lists49
Prompt	Profiles50
Provider logo	Read48
PUK, PUK2 21	Settings50
FUK, FUK221	Signature50
Q	T9 input24
Questions & Answers114	To group47
R	Write46
Records 41	SMS push45
Redial28	Software version83
Reminder 29	SOS
Remote synchronisation 107	Sound recorder104
Ringer setting 79	Special books40
Ringtones 37, 79	Special characters23
S	Speech time (battery)120
Safety precautions 3	Speed dialling keys95
Screensaver	Standard functions19
Second phone number 90	Standby mode
Security21	Standby time14, 120
Security codes	Start up animation
Service centre (SMS)50	Stopwatch106
Service supplier portal 27	Storage location (Phonebook) 38
Service tones	Surf & fun69
Set time/date85	Swap30
Settings	Switch off phone
Short message (SMS)46	Automatic 83
Shown in the display 11	Manually16
Shut down animation 78	Switch on phone16
Siemens City Portal 27	Symbols11
Signal strength 17	Synchronisation 107
Silent alert79	-

T
T9 text input 24
Tasks99
Technical data 120
Text entry
With T9 24
Without T9 23
Text modules
Themes
This SIM only 88
Time zones16, 85, 101
U
Unanswered 81
Unit converter 105
Upper and lowercase letters
(T9)23
User group 91
V
Validity, SMS 50
Voice message (mailbox) 60
Volume
Handset volume
Profiles74
Ringtone79
W
Wallpaper (display) 77
WAP69