

Table of Contents 1

Legal notices	3	Address book	39
Safety precautions	5	New entry	39
Antenna care	7	Change entry	41
Phone operation	7	Call entry	41
Electronic devices	8	Groups	42
Overview of phone	12	Phonebook	43
Display symbols	14	New entry	43
Getting started	16	Call (search for an entry)	44
Inserting SIM card/ battery	16	Change entry	44
Inserting an RS MultiMediaCard™	17	<Special books>	45
Charging the battery	18	Call records	46
Switch on/off, PIN entry	20	Dur./charges	47
Entering the PIN	20	Camera	48
Emergency number (SOS)	20	Photo mode	49
General information	21	Video mode	49
Standby mode	21	Main Inbox	51
Signal strength	21	SMS	52
Digital Rights Mgmt. (DRM)	21	MMS	58
Main menu	21	E-mail	66
Standard functions	23	Voice message/mailbox	69
Highlighting mode	24	Chat room	70
Menu speed dialling	24	Start menu	70
Security	25	Login	71
PIN code	25	Contact lists	71
Text entry	27	Start Chat room	74
Calling	31	Msg. history	75
My items	37	Setting	75
Default book	38	CB services	77
		Zoom in	77
		Surf & fun	78
		Internet	78

See also Index at the end of this User Guide

2 Table of Contents

Bookmarks	80	Alarm clock	121
Games and Applications	81	Sound recorder	122
Download wiz.	81	Calculator	123
Settings	83	Unit converter	124
Profiles	83	Stopwatch	125
Topics	85	Countdown	125
Display setup	86	Remote synchronisation	126
Ring tones	88	Device manag.	127
Call setup	90	Media player	128
Phone setup	92	My stuff	129
Clock	94	Mobile Phone Manager	131
Connectivity	95	Questions & Answers	133
Security	101	Customer Care	136
Network	103	Care and maintenance	138
Accessories	105	Product data	139
My menu	106	Accessories	140
Fast access	107	SAR (CX75)	142
Speed dialling keys	108	Quality	144
Organizer	109	U.S. FDA	145
Calendar	109	FCC/Industry Canada Notice	151
Appointments	110	Ten Driving Safety Tips	152
Tasks	111	Intellectual property	154
Notes	112	End user license agreement	155
Missed appts.	112	Menu tree	159
Dictat.machine	113	Index	165
Time zones	114		
Extras	115		
SIM services (optional)	115		
Music player	115		
Push-and-talk			
over cellular (PoC)	116		

See also Index at the end of this User Guide

Legal notices

The mobile phone described in this guide is approved for use on the GSM and GPRS networks operating on the GSM 900, 1800 (DCS/PCN) and 1900 (PCS) bands. It is approved for use in the country where it was originally sold and may be approved for use in other countries.

© 2005 Siemens Information and Communication Mobile, LLC.
All rights reserved.

Siemens and the CX75 model phone are trademarks or registered trademarks of Siemens AG and/or its affiliates in the United States and/or other countries.

T9® is a registered trademark of America Online, Inc. in the United States. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S and other countries. The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Disclaimer

The information contained in the User Guide is written for the CX75 phone. Siemens reserves the right to make changes and improvements to the products and any of the features of the products described in this document without prior notice. The contents of the user guide are provided "AS IS". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited

to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Siemens reserves the right to revise the user guide or withdraw it at any time without prior notice. Under no circumstances shall Siemens be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Export Information

The mobile phone may be subject to export regulation of the United States and other countries. Diversion contrary to law is prohibited. You must comply with all applicable export laws, restrictions and regulations of the United States foreign agencies or authorities, and may not export, or transfer for the purpose of re-export, the mobile phone or any part of the phone in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.

Network Services

A number of features included in this guide are called Network Services. They are special services provided by wireless service providers. In order to use any of these Network Services, you must subscribe to these service(s) from your service provider and obtain instructions for their use. Some of these Network Services may not be available when roaming on a network other than your home network.

Standby and Talk Time Information

The mobile phone incorporates features that are new to the mobile phone world. These may include color displays and lighting, graphic games, music reproduction and browsing the Internet. The way you use the display and the features will affect the performance of the battery and how long it lasts between charge cycles. The quoted standby times and talk times show the minimum and maximum performance that can be expected from the battery under normal network conditions and with the default settings as set by the factory. However, playing games (particularly with the backlight continuously switched on) and listening to music will shorten the time available for standby and to make and receive telephone calls. Operation times also vary depending

on network conditions, SIM settings, charging and battery condition, how you use your phone and other factors.

Memory

The mobile phone contains an internal memory device that stores the software required to operate the mobile phone, communicate with the GSM/GPRS network and provide the user interface. Some features in the internal memory run additional devices and some additional games and utilities. The amount of memory available in the mobile phone is finite and may be insufficient to store large numbers of applications and files.

Warning!

Remember to back up your data and to do so frequently. Always back up all data and programs before sending the mobile phone in for repair.

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use.
Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The ringtones (p. 88), message tones (p. 92) and handsfree (p. 33) talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 33). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



Do not use a handheld while driving.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

Important:



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!
These safety instructions also apply to Siemens original accessories.

Product attributes are subject to changes in technology, design and availability. Siemens reserves the right to modify products without prior notice.

Bluetooth®

Your phone has a Bluetooth interface. This makes it possible to establish a wireless connection of your phone with a headset of a car kit, or with other Bluetooth-enabled devices.

In order to establish a secure link between the devices and to prevent a third party from having access to your phone, you should observe the following points:

- The initial connection between two devices, what is called "pairing", should take place in familiar surroundings.
- Both devices must be able to identify themselves one time by using a password/PIN. To ensure sufficient security, you should choose a 16-digit number combination for a password that would be difficult to guess (if a PIN has not been assigned).
- An automatic connection acceptance ("connection without confirmation") should only be used in exceptional cases.
- In general, only trustworthy devices should be linked in order to minimize security risks.
- The name of your phone is transmitted in a Bluetooth connection. The factory default is the "Bluetooth ID". The first time Bluetooth is activated, or later in the Bluetooth menu, you can change this name (My BT name, page 96).
- If Bluetooth is not needed, this function should be deactivated.

Before using Bluetooth accessories, or a mobile phone inside a vehicle, check the vehicle user guide for any limitations on the use of these products.

Important

Read this information before using your wireless handheld phone.

As this mobile phone is equipped with a fixed (non-retractable) antenna, some paragraphs in the text below may not be applicable.

Antenna care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone operation

Normal position

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on efficient operation

For your phone to operate most efficiently:

- Extend your antenna fully (if applicable).
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

PoC Operation

Depending on the service options offered by your service provider, you may be able to use the CX75 phone as a two-way radio (push-and-talk over cellular "PoC" mode). In order to maintain compliance with FCC RF exposure guidelines while using the CX75 phone in PoC mode, the phone must be held in a vertical position at least one inch (2.5 cm) from the lips.

Driving

Laws pertaining to the use of mobile phones while driving vary significantly from state to state and sometimes even from locality to locality within states. For example, some areas may allow persons to use their mobile phones only if they employ a hands-free device, and some areas may prohibit the use of cell phones entirely. Accordingly, Siemens recommends that persons check the laws for the areas in which they drive or will be driving. For areas where the use of mobile phones while driving is permitted, Siemens encourages persons to use their phones responsibly and to employ hands-free devices. Also, if using your phone while driving, please:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;

- Pull off the road and park before making or answering a call, if driving conditions so require.

For vehicles equipped with air bags

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers' Association recommends that a minimum separation of six inches (6") be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers

- should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- should not carry the phone in a breast pocket;
- should use the ear opposite the pacemaker to minimize the potential for interference;
- should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider or your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturers of your devices to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Turn your phone OFF in any facility where posted notices so require.

Airplanes

FCC and Airline Regulations prohibit using your phone while in the air. Turn your phone OFF when requested by the airline.

Check and comply with the policy of your airline regarding the use of your phone while the airplane is on the ground.

Blasting areas


To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Potentially explosive atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include: fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls (SOS)

Your wireless phone can be used to make emergency calls. You can make an emergency call from the main display screen. Enter the local emergency number such as 911 and then press the  key

This phone, like any wireless phone, operates using radio signals, wireless and landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely on any wireless phone for essential communications (for example, medical

emergencies). Remember – to make or receive any calls, the phone must be switched on and be used in a service area that has adequate signal strength. Emergency calls might not be possible on all wireless phone networks or when certain network services or phone features are in use. Check with local service providers regarding their network features.

Always make certain that your phone is properly charged before attempting any emergency calls. If you allow your battery to discharge, you will be unable to receive or make calls, including emergency calls. You must then wait a few minutes after the charging begins to place any emergency calls.

When making an emergency call, remember to give all of the necessary information as accurately as possible. Remember that your wireless phone might be the only means of communication at the scene of an accident, therefore you should not terminate the call until given permission to do so.

Batteries and Chargers

Only use original Siemens batteries (100% mercury-free) and charging devices. Use of non-Siemens batteries and/or charging devices may cause explosion resulting in serious injury and/or property damage. Use original Siemens accessories in order to avoid possible injury and property damage and to ensure compliance with applicable laws and regulations. Improper use invalidates the warranty.

Battery safety precautions

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions. CONTAINS LITHIUM-ION OR NICKEL-METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE IN MUNICIPAL WASTE.

1. Only use the batteries specified for use with this mobile phone.
2. Do not use batteries of different sizes or from different manufacturers in this mobile phone.
3. Do not dispose of the battery in a fire; it may explode. Dispose of used batteries and phones in accordance with applicable laws and safety regulations. Do not expose battery to water. Check with local codes for special disposal instructions.

4. Do not open or mutilate the battery. Doing so may cause damage to the eyes or skin.
5. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conducting material may overheat and cause burns or fire.
6. Charge the battery provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the User's Guide. Do not attempt to charge the battery by any means other than those specified in the User's Guide.

Overview of phone

① Call key

Dial displayed/highlighted phone numbers/names, take calls. In standby mode, show last phone numbers dialled.






② On/Off/End key

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** to go back a level. Press and **hold** to return to standby mode.
- In standby mode: press and **hold** to switch off phone.



③ Joystick

- Press the joystick down vertically to start an application or function. The current function is displayed between the softkeys page 22.



In standby mode:

-  Open main menu.
-  Open user profiles.
-  Open Phonebook/Addressbook.
-  Open Main Inbox.
-  Start the camera.

In lists, messages and menus:

 
-  Scroll up and down.
-  Back one level.

During a call:

-  Set volume.
-  Call options.



④ Softkeys

The current functions of this key are shown in the bottom line of the displays as **Text**/symbol (e.g. ).

⑤ Internet

Access to the Internet portal.

① Integrated antenna

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

② Loudspeaker

③ Sidekeys

Camera

- Press in standby mode: Start the camera.
- During a call: Decrease volume.

Push-and-talk over cellular

- Press in standby mode: Start Push-and-talk over cellular (PoC).
- During a call: Increase volume.

④ Display

⑤ Infrared interface (IrDA)

⑥ Ringtone

- Press and **hold** in standby mode: switch acoustic signals on/off (except for alarm clock).
- Press and **hold** when incoming call is received: switch off ringtone for this call only.

⑦ Key lock

Press and **hold** in standby mode or when playing a music file: Switch key lock on/off.

⑧ Connection socket

For charger, headset, flash, etc.

⑨ Slot for RS MultiMediaCard™

⑩ Car kit holder


















⑪ Connection for external antenna













⑫ Camera lens









Display symbols

Display symbols (selection)

	Strength of receiving signal
	Charging
	Battery charge level, e.g. 50%
	Phonebook
	Call records
	Surf & fun/ Service provider portal
	Organizer
	Messages
	Camera
	Extras
	My stuff
	Settings
	All calls are diverted
	Ringer (beep) off
	Short ring (beep) only
	Ringtone only if the caller is stored in the Phonebook
	Alarm set
	Keypad locked












	Auto answer feature on
	Activated and available
	Registered
	Temporarily interrupted
	Internet offline
	Internet online
	Internet via GPRS online
	Internet no network
	IrDA activated
	IrDA transmission
	Bluetooth activated
	Bluetooth transmission

Events (selection)







	SMS memory full
	MMS memory full
	Phone memory full
	No network access
	Missed call
	Memory assistant

Display symbols 15

Message symbols (selection)

	Unread
	Read
	Draft
	Sent
	MMS not sent
	MMS notification received
	MMS notification read
	MMS with DRM contents (page 21)
	E-mail forwarded
	E-mail with attachment
	Voice mail received

Camera symbols

	Switch to photo mode
	Switch to video mode
	Brightness
	Zoom factor
	White balance
	Flash connected

Getting started

The phone is packaged in dismantled form and must be re-assembled prior to using for the first time.



Your phone's display is supplied with a **protective film**. Remove this film slowly before assembling the phone.


In rare cases, static discharge may cause discolouration at the edges of the display. However, this will disappear within approx. 10 minutes.

Inserting SIM card/ battery


The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

- Place the SIM card in front of the slot with the contact surface facing **downwards**. Then push the SIM card gently inwards ① (ensure that the chamfered corner is in the correct position). Please do

not use any tools, when removing the SIM card.

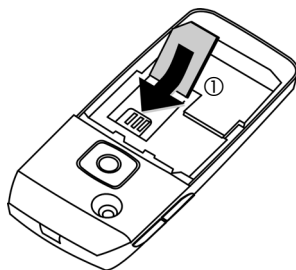


- Insert the battery sideways into the phone ②, then press it downwards ③ until it clicks into position.

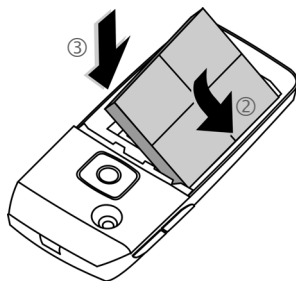

- To remove the battery, pull it out with the retaining tab on the side.

- Place the cover in position and push it towards the front ④ until it latches into place.

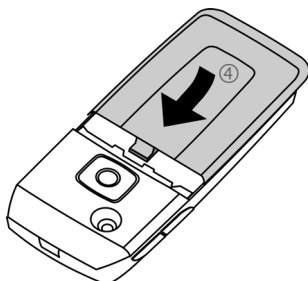

Additional information


Switch off your phone before removing the battery.

The phone supports 1.8 V and 3 V SIM cards. Please contact your service provider if you have an older card.


Inserting an RS MultiMediaCard™

When delivered, the RS MultiMediaCard™ is not yet in the phone. Please comply with the user instructions given by the manufacturer of the RS MultiMediaCard™.


- Open the cover out to the left to insert the RS MultiMediaCard™ ①.

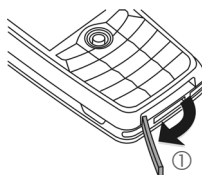

- Insert the RS MultiMediaCard™ with the contact surface facing downwards ②. Gently push the card right in until it engages.

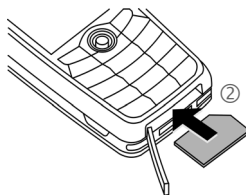

- If necessary, use the battery cover ③.

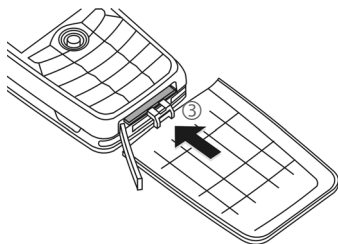


- Finally, close the cover again.
- **Before removing the RS MultiMediaCard™**, carry out the **Eject card** function in the **My stuff** options menu. This prevents any data from being lost.
- To remove the RS MultiMediaCard™, open the cover and press the card briefly (if necessary, use the battery cover). The card will pop out a little and you can remove it. To finish, close the cover again.

Charging the battery

Charging procedure

The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours**.

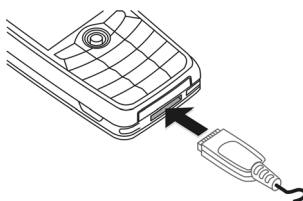

Display during charging

Charging time

A flat battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C (+41 °F to +113 °F). If the temperature rises/falls 5 °C above/below this, i.e. drops to 32 °F or rises to 122 °F, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating times

The operating times depend upon the conditions of use. Extreme temperatures considerably reduce the phone's standby time. Therefore, avoid placing the phone in the sun or on a heater.

Talktime: up to 300 minutes

(standard battery)

Standby time: up to 250 hours

(standard battery)

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case, the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit included in delivery!

Display while in service

Charge level display during operation (flat – fully charged):



A beep sounds when the battery is nearly flat. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. Therefore **do not remove the battery unnecessarily**, and where possible, **do not end the charging process prematurely**.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switch on/off, PIN entry

Switching phone on/off



Press and **hold** the On/Off/End key.

Entering the PIN

The SIM card may be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters ******** appear in the display to ensure nobody can read your PIN. Make any corrections with **⌫**.

OK

Confirm by pressing the joystick. Logging on to the network will take a few seconds.

Additional information

Changing the PINpage 25
Clearing SIM card barringpage 26

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the **SOS** softkey you can make an emergency call on any network **without** a SIM card and without entering a PIN (not possible in all countries).

Switching your phone on for the first time

Time/date

Set the clock correctly on a one-off basis when getting started.



Press this key, then select **Change**.



First enter the date (day/month/year), then the time (24 hour format, including seconds).



Press. The time and date are updated.

Time zones

Specify the time zone for your area.



Select the city in the desired time zone from the list ...

Set

... and set it.

Copying SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. **Do not interrupt this procedure.** During this time, do **not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (page 41).

General information

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Press and **hold** the On/Off/End key to return to standby mode from any situation.

Main menu

The main menu is displayed graphically with symbols:



Call main menu up from standby mode.



Select the application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context:

Large letters	Select one of two font sizes.
Illumination	Set display illumination to brighter/darker.
Eject card	Allows the RS MultiMediaCard™ to be removed without loss of data.

Signal strength



Strong receiving signal.



A weak signal reduces the voice quality, can cause the connection to be lost, and consumes more current. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your telephone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used (see also page 82).


User guide



Menu controls


The steps needed to reach a function are shown in a **condensed form** in the user guide, e. g. to display record of dialled calls in condensed form:


 →  → Calls dialed


This comprises the following steps:

 Open main menu.

 Select .

 Confirm.

 Select **Calls dialed** function.

 Confirm.

Symbols

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key



Call key



Softkeys



Displays a softkey function.



Press the joystick vertically (to call up the menu e.g.).



Press the joystick in the direction indicated.



Function dependent on service provider. May require special registration.



Press joystick

The symbol in the centre of the lower line of the display shows the current function when the joystick is pressed down vertically.



Display menu



Take photos



Zoom



Call, accept call



OK




Play/Pause for sounds & videos.

Standard functions

Option menus

Functions which appear repeatedly in the options menu are listed here.



Options Open menu.

Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry/delete all entries after confirmation.
New entry	Create new entry.
Send...	Select transmission service and medium for sending or printing e.g. IrDA or Bluetooth.
Reply/ Reply to all	The sender becomes the recipient, "Re." is placed in front of the subject matter and the received text is transferred into the new message.
Save	Save entry.
Save to 	Save recipients in the current address directory.
Sort	Set sort criteria (alphabetical order, type, time).

Text input (page 27)	T9 preferred: Activate/deactivate T9 input. Input language: Select language for text.
Rename	Rename selected entry.
Capacity	Display memory capacity.
Properties	Display properties of the highlighted object.
Help	Display help text.

Highlighting mode

With some applications (e.g. Phonebook/Addressbook), you can highlight one or more entries in a list in order to carry out a function jointly.

- Options** Open menu.
- Mark** Activate highlighting mode.
-  Select entry/entries.
-  Highlight or delete highlighting.
- Mark** The current entry is highlighted.
- Unmark** Unhighlight the current entry.

Additional highlighting functions:

- Options** Open menu.
- Mark all** Highlight all entries.
- Deselect all** Delete highlighting on all highlighted entries.
- Delete marked** All selected entries are deleted.

Menu speed dialling

All menu functions are numbered internally. You can select a function directly by entering these numbers one after the other.

For example, to write a new SMS (from standby mode):



Press this key to display the main menu. Then press



for **Messages**, then



for **Create new**, then



for **SMS**.

Security

The phone and SIM card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

PIN code

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards if the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



→ → Security → PIN code
→ Select function.

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivation of the control.

Change

Press.



Enter PIN.



Confirm entry.

Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.

Selection

Press.



Enter **current** PIN.



Press.



Enter **new** PIN.



Repeat **new** PIN.



→  → Security → PIN code
→ Select function.

Change PIN2

(Display only if PIN2 is available).
Proceed as for **Change PIN**.

Chg.phonecode

(Change phone code)

You define the phone code (4 to 8 digits) when you call up a phone-code protected function for the first time (e.g. **Direct call**, page 101). It is then valid for all phone-code protected functions.

If an incorrect phone code is entered three times in succession, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service (page 136).

Preventing accidental activation

Even if PIN control is deactivated, (page 25) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or are travelling in an aircraft.



Press and **hold**.

OK

Press. The phone switches on.

Cancel

Press this key or take no action. The phone does not switch on.

Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Text entry

Text entry without T9

Press the number key repeatedly until the required character appears. After a brief interval the cursor will advance. Example:



Press once **briefly** to write the letter **a**, twice to write **b** etc.

Press and **hold** to write the number.

Ä, ä, 1–9

Unusual characters and numbers are displayed after the relevant letters.



Press **briefly** to delete the letter before the cursor. Press and **hold** to erase the whole word.



Move the cursor (forwards/back).



Press **briefly**: Swap between **abc**, **Abc**, **T9abc**, **T9Abc**, 123. Status shown in top line of display.

Press and **hold**: all input-variants are displayed.



Press **briefly**: special characters are shown.

Press and **hold**: open input menu.



Press **once/repeatedly**:

., ? ! ' " 0 + - () @ / : _

Press and **hold**: writes 0.



Writes blank. Press twice = line break.

Special characters



Press **briefly**. The symbols chart is displayed:

1)	¿	¡	—	;	.	,	?	!
+	-	"	'	:	*	/	()
¤	¥	\$	£	€	@	\	&	#
[]	{	}	%	~	<	=	>
	^	`	§	Γ	Δ	Θ	Λ	≡
Π	Σ	Φ	Ψ	Ω				

1) Line break



Navigate to characters.



Press.

Input menu

For text input:



Press and **hold**. The input menu is displayed:

Text format (SMS only)

Input language

Mark

Copy/Insert

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

T9 input Select.

Change Activate T9.

Select input language

Select the language in which you want to compose your message.

Options Open text menu.

Input language

Select.



Select language.

Selection Confirm. The new language is set. Languages with T9 support are marked with the T9 symbol.

Writing with T9

The display changes as you proceed.

It is therefore best if you finish a word without looking at the display.

Simply press the keys **once** where the relevant letter is located. For "hotel", for example:



Press **briefly** for T9Abc then



A blank ends a word.

Do not use special characters such as Ä. Use standard characters instead, e.g. A; T9 will do the rest for you.

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;
Canadian Pat. No. 1,331,057;
United Kingdom Pat. No. 2238414B;
Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383;
Euro.Pat. No. 0 842 463 (96927260.8)
DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;
and additional patents are pending worldwide.

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be shown **highlighted**. Then press



Press. The displayed word is replaced with a different word. If this word is also incorrect, press again.



Press. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

To add a word to the dictionary:



Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

Correct a word



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word.

Additional information

Within a "T9 word", individual letters may not be edited without first removing the T9 status. In most cases it is better to rewrite the complete word.



Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.



Moving the cursor to the right ends the word.



Press **briefly**: switch between: **abc**, **Abc**, **T9abc**, **T9Abc**, **123**. Status shown in top line of display.

Press and **hold**: all input variants are displayed.



Press **briefly**: select special characters (page 27).

Press and **hold**: opens input menu (page 28).


Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

Write text modules

 →  → Text modules
<New entry>

Select.


 The input field is opened.

 Write text.

Options Open menu and select **Save**. Accept the suggested name or allocate a new one.

 Save.


Use text modules

 Write message (SMS, MMS, e-mail).


Options Open text menu.

Insert from Select.

 Select **Text module**.

 Select text module from the list.

Selection Confirm. The text module is displayed.

 Confirm. The text module is inserted in the message to the right of the cursor.

Calling

Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with area/international dialling code).



A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

End call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

Set volume

It is only possible to adjust the volume during a call.



With the joystick or with the sidekeys.

If a car kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key **once**.



Pick out the phone number from the list, then to dial press the ...



... key.

If the number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto. redial

Auto dial The phone number is automatically dialled ten times at increasing time intervals. End with:



End key.

Or

Call back



Call back Your phone rings when the busy number is free. Press the Call key to dial the number.

Reminder

Prompt A beep reminds you to redial the displayed phone number after 15 minutes.

Additional information



Store phone number in the Addressbook/Phonebook.

Handsfr.

Switch on Handsfree (playback from loudspeaker).



Press and hold to switch microphone off.

International dialling codes



Press and **hold** until a "+" is displayed.

Country

Press and select country.

Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

Accept call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press.

Or



Press.

A phone number transmitted by the network plus the corresponding name (possibly with a picture) are displayed if they are stored in the Phonebook/Addressbook (p. 40).

Reject call

Reject

Press.

Or



Press **briefly**.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Additional information



Press and **hold** to switch off the ringtone and silent alert.



Missed call display.

Handsfree

You can put the phone down during a call. You can then hear the caller via the loudspeaker.

Handsfr.

Activate handsfree talking.



Switch on.



Regulate the volume with the joystick.

Handsfr.

Deactivate.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

Swap between 2 calls

Establish a second connection

You can call another number during a call.




Hold

Open call menu.

The current call is put on hold.



Now dial the new phone number or select

 Open the call menu, then select **Default book**, and then select the phone number.

When the new connection is established:

Toggle Swap between calls.

Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 90). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

- **Accept the waiting call in addition to the first**

Toggle Accept the waiting call, putting the current call on hold to do so.

Always proceed as above to swap between the two calls.

- **Reject the waiting call**

Reject Press.

Or

Forward The waiting call is diverted, for example, to the mailbox.

- **Accept the waiting call and end the current call**



End the current call.



Accept new call.

End call(s)



Press the End key.

After the **Return to held call?** display, you have the following selection:

Yes

You accept the call on hold.

No

You end the second call too.

Conference



Call up to 5 parties one by one and link them together in a multiparty call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established:



Open the call menu and select **Hold**. The current connection is maintained.



Now dial a new number. When the new connection is established...



... Open the call menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End




All calls in the conference are ended when you press the End key.

Call options

The following functions are only available during a call:



Press.

Hold	Hold current call.
Microphone on	If switched off, the person on the other end of the line cannot hear you (muting). Also:  Press and hold.
Handsfree	Playback through the loudspeaker.
Volume	Adjust handset volume.
Default book	Phonebook/Addressbook.
Conference	(p. 34)
Time/charges	Display talktime that has elapsed so far and (if set) charges incurred during the connection (p. 47).
Send DTMF	Enter tone sequences (numbers) for remote inquiries to an answering machine.

Call transfer



Connect the original call to a second call. For you, both calls are now ended.

Main menu

Access to the main menu.

Call status

List all held and active calls (e.g. participants in a conference).

Direct call

If this is active, only **one** number can be dialled.

Switch on



→  → Security
→ Direct call



Confirm selection.



Enter phone code.


When first prompted you define and enter the phone code (4–8 digits).



Confirm selection.

Please do not forget this code (page 25)!



→  Select phone number from the Phonebook/Addressbook or enter it.



Confirm.

Apply

Carol

To dial the phone number (e.g. Carol's phone number), press and **hold** the right softkey.

Switch off



Press and **hold**.



Enter phone code.



Confirm input.

Tone sequences (DTMF)

You can, for example, enter control codes (numbers) for remote access to an automatic answering machine **while another connection exists**. These entries are transmitted directly as DTMF codes (control codes).



Open the call menu.

Send DTMF

Select.

Using the Phonebook/Addressbook

Store phone numbers **and** control codes (DTMF codes) in the Phonebook/Addressbook in the same way as a normal entry.



Enter phone number.



Press until a "+" appears in the display (wait for the connection to be established).



Enter DTMF codes (numbers).



If necessary, wait again for three seconds at a time for the receiver to process the entries safely.



Enter a name.



Store entry.

You may also store just the DTMF codes (numbers) and then send them during the call.

My items

Set your phone as you wish for the following items:

Ringtones (p. 88)

Assign individual ringtones to caller groups or special dates.

Pictures (page 129)

Assign individual pictures or photos to your Addressbook entries.

Animations (p. 87)

Choose a start up and shut down animation as well as a personal greeting.

Themes (p. 85)

Load a completely new visual presentation onto your phone.

Screensaver (p. 86)

Choose an analogue or digital clock, or a personal picture.

(Operator) Logo (p. 86)

Choose an individual picture (to be displayed in standby mode)

Wallpaper (p. 86)

Choose your own permanent background image.

Colour skin (p. 86)

Select a colour skin for the user interface.

Applications (p. 81)

Download your own applications from the Internet.

Where do I get what?

You can purchase additional ringtones, logos, animations and Java applications from your service provider or directly from Siemens.

Service provider portal

Depending on your service provider, you will find direct access to his portal on your telephone via menu items or bookmarks. Please contact your service provider for more information on these services.

Siemens Mobile Portal

You will find additional ringtones, logos, animations and screensavers as well as more applications, games and services on the Internet at:
www.siemens.com/mobilephones

or you can download them directly from the Internet:
wap.siemens.com

You will also find a service for saving data here as well as a list of the countries in which these services are available.

My menu

Create your own menu (p. 106) with frequently used functions, phone numbers or Internet pages.

Default book



→ Select function.

Show entries

The entries in the default book (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

New entry

Create new entry.

Address book (see also page 39)

Phonebook (see also page 43)

Default book

You can set which directory you prefer to use.

The selected default book is opened in standby mode with the joystick.



Open Phonebook or Addressbook

Address book

A lot of data can be saved in the Addressbook for each entry and additional functions (e.g., **Birth day**, **Picture**, **Chat room**) can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook

on the SIM card can easily be transferred into a different phone.

Business card

Create your own business card to send to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.

Save

Press.

Additional information

The content of the business card corresponds to international standards (vCard).



Copy numbers from Addressbook/Phonebook.

Groups

See page 42.

<Info numbers>

See page 45.

Address book

The Addressbook can store up to 1,000 entries, each with a variety of phone and fax numbers as well as additional address details. These entries are managed in the phone memory separately from those in the Phonebook. However, you can exchange data between the Addressbook and the Phonebook on the SIM card.

New entry

The Addressbook is set as standard:



Open Addressbook (in standby mode).



Display input fields.



Select required input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name must be entered. Always enter phone number with dialling code.

Possible input fields

Last name:	URL:
First name:	Chat room >>
Phone number:	Group:
Phone no./office:	Company:
Phone no./cell:	Address: >>
Fax:	Birthday: >>
Fax #2:	Picture:
E-mail:	
Email #2:	All fields

Additional information

Group: Allocation to a group (page 42).

Address: Extension to enter the complete address:

Street:, ZIP:, City:, Country:

Com. services

Information if the entry is being used as an Inst. Message contact (page 70) or for Push-and-talk over cellular:

Nickname:, Push-and-talk over cellular ID:, Push-and-talk over cellular type:, WV user ID:, ICQ number:, AIM screen name:

40 Address book

Birthday: After activation, the date of birth is entered.

Reminder: The phone reminds you at the time you set one day before the birthday.

Picture: Assign a picture to the entry. This is displayed when you are called by a corresponding phone number.

All fields/Reduced fields

Displays the number of input fields.

Save

Save the entry.

Additional information



Temporary switch to Phonebook.

Synchronisation

With the mobile phone manager (page 131) you can synchronise your Addressbook with Outlook®, Lotus Notes™ and other Siemens phones.

Using **Remote sync.** you can synchronise your mobile with an organiser stored on the Internet (see also page 126).

Display/find entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.



Display.








Display options

Options




The options menu only ever offers the functions for the currently selected input field.

Move to ...	Assign current entry or highlighted entries to a group.
View	Display an assigned picture.
Copy to SIM	Copy name and one phone number to the SIM card (Phonebook).
New SMS, New MMS, New e-mail	Create a message with the selected entry.
Browser	Start browser and visit URL.
Inst. Msg.	Start a dialogue with the selected entry (page 70).
(For standard functions see page 23)	



Change entry

-  Open Addressbook (in standby mode).
-  Select required entry.
-  Press.
-  Select input field.
-  Open entry.
-  Make changes.
-  Save.

Call entry

-  Open Addressbook (in standby mode).
-  Select a name with the first letter and/or scroll.
-  The number is dialed.

If there are several numbers in the Addressbook entry, these are offered for selection.

-  Select phone number.
-  The number is dialed.

Addressbook options

Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

Options Open menu.

Move to ...	Assign current or highlighted entries to a group.
Copy to SIM	Copy name and phone number to the SIM card (Phonebook).
Filter	Only those entries which match the filter criteria are displayed.
Import	Set up readiness to receive for a Phonebook entry via IrDA (page 95) or SMS (p. 52).
Search	Enter search term.

(For standard functions see page 23)

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.



Open Addressbook
(in standby mode).

<Groups>

Select (the number of entries is listed after the group name).



Select group.



List entries in the group for viewing and editing.

Groups menu

Options

Open menu.

Rename

Change name of group.

Group symbol

Assign a symbol to a group. The symbol will then appear in the display when one of the group members calls.

Ringtone for group

Assign a ringtone to a group that plays when one of its members calls you.



→ → Ring tones
→ Group calls



Select group.



Confirm. If a ringtone has already been set, it will be played. Otherwise, the ringtone list will be displayed and you can select one.



If necessary, select a ringtone.



Confirm.

Additional information

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Received: Contains Addressbook entries received by IrDA (page 95), Bluetooth (p. 96) or SMS (p. 52) (name cannot be changed).

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook. You can, however, exchange data between the Phonebook and the Addressbook.

New entry

If the Phonebook has been selected as the default book:



Open Phonebook
(in standby mode).

<New entry>

Select.



Display input fields.



Select input field.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

Number:

Always enter phone number with dialling code. An entry will not be saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default: **No group**

Important phone numbers can be put in one group (VIP). This group is independent from groups in the Addressbook.

Location:

Default: **SIM**

Special SIM cards can save phone numbers in a protected area (**SIM protected**) (PIN2 required).

Record #:

Each entry is automatically assigned a record number. You can also dial using the record number.

Save

Press to store the new entry.

Additional information



Temporary switch to Addressbook.



Country International

dialling codepage 32

Functions concerning Text entry ..page 27

Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Phone number is dialled.

Call using record no.

A record number is automatically assigned to every new entry in the Phonebook.



Enter record number.



Press.



Press.

Change entry



Select entry in Phonebook.



Press.



Select desired input field.



Make changes.



Press.

Phonebook options

The following functions are available, depending on the current situation.

Options Open menu.

Copy to	Copy all highlighted entries to the Addressbook.
Copy all to	Copy all entries to the Addressbook.
Delete all	The whole Phonebook is deleted (PIN-protected).
Import	Set up readiness to receive for a Phonebook entry via IrDA (page 95) or SMS (p. 52).
(For standard functions see page 23)	

<Special books>



Open Phonebook
(in standby mode).

<Special books>

Select.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Completing phone numbers in the Phonebook

Digits may be replaced by a "?" when phone numbers are entered in the Phonebook:



Press and hold.

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook.



Press.



Replace "?" with numbers.

The phone number is dialled.

Call records

The phone number of a caller is displayed if

- the caller has switched off the **Hide ID** function and
- the network supports the "Caller Identity" function.

Alternatively, a caller's name is displayed if it is stored in the Phonebook/Addressbook.

Your phone stores the phone numbers of calls for convenient redialling.



Or

View

Select record.

Open call record.

Select phone number.

Dial phone number.

Display information on the phone number.

Up to 500 entries are stored in the records:

Missed calls



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Symbol for missed call (in standby mode). Press the softkey beneath the symbol to bring up the **Main Inbox** (page 51).

Calls received

Accepted calls are listed.

Calls dialed

Access to the last numbers you have dialled.



Fast access in standby mode.


Delete records

The records are deleted.

Records menu

The records menu can be called up if an entry is highlighted.

Options Open menu.

Copy to 

Copy the currently selected phone number into the preferred directory.

(For standard functions see page 23)

Dur./charges

You can display the charges and duration during a call. You can set a unit limit for outgoing calls.



→ Dur./charges

Select

Last call

All outg. calls

All incom.calls

Remain. units

Charge setting



Scroll through the display.



Open item.

Reset

Reset the currently selected setting.

Charge setting



Open menu.

Currency

Enter desired currency.

Charge/Unit

(PIN2 prompt)

Enter the currency as well as the charge per unit and time.

Account limit

(PIN2 prompt)

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.

Edit

Press.



Enter PIN2.

Account limit

Switch on.



Enter number of units.

OK

Confirm.

Then confirm the credit or reset the counter. The status display for pre-paid cards may vary depending on the service provider.

Auto display

Call duration and charges are displayed automatically.

Camera

You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a start-up/shutdown animation or a screensaver;
- assign the photo to an Address-book entry;
- send the photo/video via MMS or e-mail;
- save the photo in **My stuff** (page 129) or on the **RS MultiMediaCard™** (page 130).

The number of photos which can still be taken in the selected resolution is displayed in the top right-hand corner of the preview image. This number varies considerably depending on the subject matter and how much storage space is required.

The selected resolution is indicated beneath the preview image or, if video mode has been selected, there is an indication as to how much recording time has already been used and how much time is still available for a video.

Switch on



Or



Pressing sidekey to start the camera in standby mode.



Switch to single image.



and video recording.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor



White balance (p. 50)



Flash connected.

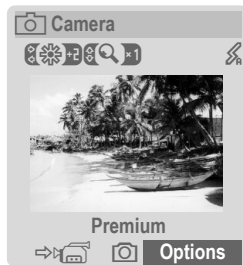


Photo mode



Take a photo.



Display the preview image for the next photo.

The photo is saved with a name, the date and the time. To enter the name, see **Settings** in the options menu.

Settings prior to taking a photo:



Set the brightness.



Set the zoom factor.

Image resolution

The quality of the image can be set in four stages regardless of the preview image resolution. The highest possible resolution is 1280 × 960 pixels.

To create your own display background, select the **Wallpaper** resolution (page 86).

The resolution may decrease depending on the selected digital zoom.

Video mode

The video mode resolution is the same as the preview image resolution. You can set two different resolutions.



Start the video recording.



End the video recording.

A red dot appears in the top right of the display while the video recording is being made.



Plays the video recording.

Flash (accessories)

If the flash is active, this is shown by a symbol in the display. The flash is constantly charged while connected to the phone and switched on. This reduces the stand-by time.



This symbol appears when the flash is being charged.

For settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options Open menu.

Settings	<ul style="list-style-type: none"> • Name for recordings • Image resolution • Colour mode: normal, sepia, grey tones. • Storage medium: My stuff (page 129) or RS MultiMediaCard™ (page 130)
Pictures	Display list of photos.
Other videos	Display list of videos.
Microphone on	Switch microphone on or off.
Use flash	Choose between: Automatic, Off, Red-eye
Auto-timer	The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a beep each second.
White balance	Choose between: Automatic, Indoor, Outdoor

(For standard functions see page 23)

Additional information



Insufficient memory available. Start the memory assistant to delete specific data (p. 92).

Alternatively, you can transfer data to the RS MultiMediaCard™.

Main Inbox

The inbox folder offers immediate access to the messages currently received. This means that you no longer have to look through all inbox folders for the various message types. The entries are marked with a symbol to indicate their type and status. You will find an overview of the symbols on page 14.

To call up the inbox folder, e.g. if you have received a new SMS:



Press the softkey beneath the symbol.

Or



Press in standby mode.

In the inbox folder you will find the following message types:

SMS, MMS, E-mail

System messages

Notification about **MMS**, **Missed alarm**, **Missed appts.**, **Missed calls**, **WAP push**, **Voice message**

Data objects

Ring tones, **Pictures and Video**, calendar entries, **Notes and Business card**.



When you open an entry, the relevant application also starts.

After a set period, entries which have already been read and opened are only displayed in the message-related incoming lists (see **Settings** in the options menu).

Main Inbox options

Options Open menu.

Receive emails	Select set account and send all e-mails.
Settings	If entries have been read, remove them from the Main Inbox : Daily, Never, Immediately If Daily has been selected, specify the time.

(For standard functions see page 23)

Additional information

Where applicable you will receive WAP push messages from special servers. These may contain information from the service provider or important data such as how to set up a connection profile.

Accept For example, start setting up a connection profile automatically.

SMS

You can use your phone to transmit and receive very long messages (up to 760 characters). They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally, you can insert pictures and sounds in an SMS.

Write/send



→ → Create new
→ SMS



Enter text.

You will find information on writing texts with and without T9 in the chapter "Text entry" (page 27).

The following is displayed in the display line: text entry status, number of SMS required, number of characters still available.



Start sending procedure.



Select phone number from the Phonebook/ Addressbook or enter it.

Group If necessary, select a group.



Confirm. The SMS is transmitted to the service centre to be sent and saved in the **Sent items** list.

Text options

Options Open menu.

Save	Save composed text in draft list.
Picture& sound	Add pictures, animations and sounds to message (see following text).
Insert from	Text module (page 30), Bookmarks, From (Addressbook/Phonebook).
Format	Font size: Small font, Medium font, Large font Underline Alignment: Default alignm., Left, Center, Right Mark (highlight text with the joystick)
Delete text	Delete the whole text.
Send with...	Select SMS profile so the SMS can be sent.

(For standard functions see page 23)

Picture&sound

Send pictures and sounds with or without accompanying text.

Remember that these may be protected (DRM, page 21).

With the text input field open:

Options

Open menu.



Select **Picture&sound**.

The menu contains:

Def animations

Def. sounds

My anim.

My pictures

My sounds



Select list.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For **Def animations/Def. sounds**:



The selection is added to the SMS.

For **My anim./My pictures/My sounds**:



The selection is displayed/played back.



The selection is added to the SMS.

The pictures which have been added are displayed. Sounds are displayed in the form of "wildcards".

SMS to group

You can send an SMS message as a "circular" to a recipient group.



Start sending procedure.

Group

The Addressbook is opened.

<Groups> The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Transmission is started after a security prompt.

Read




Arrival of a new SMS announced in the display. Open **Main Inbox** (page 51) with the softkey beneath it.



Reading the SMS.



Scroll through message line by line.

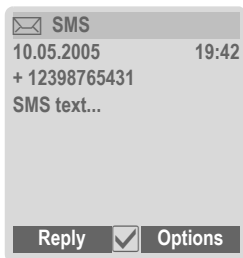

Reply

You can answer the SMS that is currently open immediately. The newly added text is placed above the received text.



Reply immediately.

Reply options

Reply Open reply menu.

Write message	Create a new reply text.
Edit	Edit received SMS or add new text.
Answer is YES	Add Answer is YES to the SMS.
Answer is NO	Add Answer is NO to the SMS.
Please call back, Delay, Thank you	Add a standard text as a reply to the SMS.

Read options

Options Open reply menu.

Reply	See "Reply options" above.
Picture&sound	Save picture/sound contained in the SMS.
Zoom in	Enlarge or reduce text display.
Archive	Move SMS message to archive.
(For standard functions see page 23)	

Lists

All SMS messages are archived in different lists, according to their status. (For overview of message symbols, see page 14):

Inbox



The list of received SMS messages is displayed.

Draft



The list of not yet transmitted SMS messages is displayed.

Unsent



The list of concatenated SMS messages not yet sent is displayed. Transmission can be restarted.

Sent items



The list of sent SMS messages is displayed.

SMS archive



The list of SMS messages stored in the phone is displayed.

List options

Different functions are offered depending on the list.

Options Open menu.

Send	Send or forward entry.
Send with...	Select an SMS profile for transmission.
Archive	Move SMS message to archive.

(For standard functions see page 23)

Setting

SMS signature



→ → Msg settings
→ SMS setup → SMS signature

You can enter a "signature" with up to 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

SMS profiles



→ → Msg settings
→ SMS setup → SMS profiles

Up to 5 SMS profiles can be set. These define the transmission characteristics of an SMS. The pre-setting depends on the SIM card inserted.

Activate profile



Select profile.



Activate.

Set profile



Select profile.

Edit

Open to edit the profile.

Service center

Enter the phone numbers for the service centre as provided by the service provider.

Recipient

Enter a standard recipient for the profile.

Message type

- **Manual:** Inquiry for all messages.
- **Standard text:** Normal SMS message.
- **Fax:** Transmission via SMS.
- **E-mail:** Transmission via SMS.
- **New:** You may need to obtain the required code number from your service provider.

Validity period

Period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum*

* Maximum period that the service provider permits.

Status report

Receive confirmation of successful/failed transmission of a message. This service may be subject to a charge.

Direct reply

If activated, the reply to your SMS message is handled via your service centre (for information, please contact your service provider).

SMS via GPRS

Send SMS automatically via GPRS (page 95).

Save aft. send

Send SMS messages are saved in the **Sent** items list.


More information on SMS

SMS status report


If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The **Message sent.** message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

See also **Validity period** (page 56).

Phone number in SMS

Phone numbers displayed **highlighted** in the text can be dialled () or saved in the Phonebook/Addressbook.

Downloading ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications with an SMS. Please highlight this link and, by pressing the Call key , start the download. Please check that the dial-in access is configured (page 98).

Remember that these may be protected (DRM, page 21).



SIM memory full

If the message symbol flashes the SIM memory is full. **No** more SMS messages can be received. You need to delete messages or move them to the RS MultiMediaCard™.

MMS

The **Multimedia Messaging Service** enables you to send texts, pictures/videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Create



An MMS consists of the address header and the content.

An MMS may consist of a series of pages. Each page may contain a text, a picture/video and a sound. Remember that pictures and sounds may be protected (DRM, page 21).

Write **texts** with the help of T9 (page 27).

Pictures and videos can be recorded with the integrated camera and/or loaded from **My stuff** (page 129).

Sounds can be recorded with the sound recorder and/or loaded from **My stuff** (page 129).

First select an object for processing to be added to the first page of the MMS:

Pictures/videos

Limits on picture size can be set in the user settings.



Display picture/video functions:

Insert picture

Open list to select a picture.

Insert video

Open list to select a video.

Camera

Activate the camera to take a photo or record a video for the MMS (page 48).



Also possible.

Open

Display picture.

Delete item

Delete inserted picture/video.

Save picture/Save video

Save picture/video for use later on.

Rights details

Display properties, including any user right restrictions (page 21).

Sounds

SOUND Select.



Display sound functions:

Insert sound

Open list to select a sound.

Record

Activate sound recording to record sounds (page 122).



Also possible.

Open

Play back sound.

Delete item

Delete inserted sound.

Save sound

Save sound to use later on.

Rights details

Display properties, including any user right restrictions (page 21).

Text

TEXT Select and write the text.



The text functions are displayed (see also page 27):

Insert

Choose any of the following for insertion: **Text module**, **Bookmark**, **From**

Delete text

Delete text on current page.

Save text

Save text on the page as a text module.

T9 input

T9 settings:

T9 preferred, **Input language**

Mark

Text processing together with **Copy** and **Insert**.

Generation options

Options	Open menu.
Send	Send MMS.
Preview	Play entire MMS on the display.
Picture...	See page 58.
Sound...	See page 59.
Text...	See page 59.
Page...	<p>Add page: Insert new page after current one.</p> <p>Delete Page: Delete current page.</p> <p>Page list: Display available pages.</p> <p>Timing: Enter the lifespan of a page in seconds.</p>
Properties	Enter sending parameters (page 62).
Save as templ.	Save created MMS as a template. See also below.
Layout	<p>Select one of four possible layouts:</p> <p>Text above, beneath, beside (on left or right of) picture.</p>
Color...	<p>Select the colours for:</p> <ul style="list-style-type: none"> • Pict. backgrd. • Text backgrd. • Text color

(For standard functions see page 23)

Templates



→ MMS templates

MMS templates are MMS messages that are saved without an address. They can be sent as new MMS messages or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.

Options

Open menu and select **Save as templ.**

Send

The page(s) of the new MMS is (are) already created and the MMS is displayed.



Open address entry.

MMS

Subject:
 Greetings from London

To:
 +1234567654321 |

Size:
 85 KB

Options

Subject: Enter a brief description.

Send to: Enter one or more phone number(s) / e-mail address(es).
 → Insert from Address-book.

Size: Display the size of the current MMS in kilobytes (KB).

Attachments:

Insert attachments.



Start sending procedure.



The MMS is sent after confirmation.

Expanded address fields



Scroll downwards.



More: Provide additional address fields.

Cc:

Address(es) of copy recipient(s).

Bcc:

Address(es) of copy recipient(s) who are not visible to the other recipients.

Date:

Creation date.

Use delivery time:

Use specified send time.

If **Yes**:

Delivery date:

Send date.

Delivery time:

Send time.

Symbols for status information



Priority



Send report



Contains DRM (page 21).

Sending options

Options	Open menu.
Send	Send MMS.
Play	Play entire MMS on the display.
Edit	Display object selection so that object can be changed.
Add addressee	Add recipient from the current address directory.
Del. addressee	Delete individual recipient.
Add attachmnt.	Add attachment: <ul style="list-style-type: none"> • Business card • Appointments • Picture • Video • Audio • File
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	Save created MMS as a template.
(For standard functions see page 23)	

Receive

Depending on the setting (page 64), an MMS can be received in two ways:

Complete transmission

The complete MMS is sent to your phone. This can take quite a while if the MMS is large.



Shown in the display.



Start reception. The MMS is sent.

Preliminary notification

You are notified that an MMS is waiting to be received.



Shown in the display.



Open the notification. Display sender/date.



Display the properties of the MMS.

Accept

The complete MMS is sent.

OK

Display in Main Inbox.

Read

An MMS has been received in full.



Select the MMS.



Start automatic playing of the MMS.

Key functions for playback:



To the next page.



Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



End.

The message details are displayed when the MMS is complete.

Subject: Description of the MMS.

From: Information about the sender.

Size: Size of the MMS in KB.

Expanded address fields



Scroll downwards.

More: Additional input fields.

Cc: Copy recipient.

Attachments:
Save attachments.

Date: Date received.

Symbols for status information (see page 61).

Lists

All MMS messages are saved in four different lists (for overview of message symbols, see page 14):

Inbox



→ Inbox → MMS

The list of MMS messages and notifications received is displayed. To receive an MMS at a later time, open notification and press **Accept**.

Draft



→ Draft → MMS

The list of stored drafts is displayed.

Unsent



→ Unsent → MMS

The list of the MMS messages not yet fully transmitted is displayed.

Sent items



→ Sent → MMS

The list of sent MMS messages is displayed.

List options

Different functions are offered depending on the list/situation.

Options Open menu.

Play	Play MMS on the display.
Edit	Display MMS for processing.
View	Display MMS for viewing only (write-protected).
Send all	Send MMS.
Reply to all	Reply to MMS immediately.
Forward	Enter recipient(s) for forwarding.
Properties	Display message parameters.
Receiv.all MMS	Send all new MMS messages immediately.

(For standard functions see page 23)

Setting



-  → **Msg settings**
- **MMS settings**
- **Select function.**

Connection profile:

Six MMS profiles can be set (5 in the telephone memory, one on the SIM card). The send properties can be specified in them. In most cases, they have already been set. If necessary, check with your service provider for details.

Activate profile



Select profile.



Profile is activated.

Set profile



Display list of profiles.



Select profile.



Press. Make settings.

User settings

Set the MMS dispatch to suit your requirements:

Delivery report:	Request delivery confirmation for sent messages.
Default priority:	Send priority: Normal, High, Low
Expiry time:	Select the period of time in which the service centre is to try to deliver the message: Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
Page duration:	Enter the lifespan of a page in seconds (standard requirement). Scroll forward in Manual or Automatic mode.
Retrieval:	Receive complete MMS or only notification of arrival. Automatic Receive complete MMS immediately. Auto.homenet Receive complete MMS immediately in home network. Manual Only receive the notification.

Create mode:

Free, Limited, Warning
May be used to receive a warning message or to limit the size of a message.

Size indication:


Set max. message size and message handling.

E-mail

Your phone has an e-mail program (client). You can use it to create and receive e-mails.

Write



Create new → E-mail

Enter the address details for the e-mail:

To: Enter one or more e-mail address(es).
 → Insert from Addressbook/Phonebook.

Subject: Enter e-mail heading (up to 255 characters).

Text: Enter text.

Expanded address fields

More: Open additional input fields.

Cc: Address(es) of copy recipient(s).

Bcc: Address(es) of copy recipient(s) who are not visible to the other recipients.

Attachments:

Add attachments such as images and sounds.

To send:



Press.

Options

Different functions are offered depending on the position of the cursor.

Options Open menu.

Send	Send e-mail.
Send later	Transfer e-mail into the Unsent list.
Save	Save e-mail in the Draft list.
Add addressee	Add recipient from the current address directory.
Delete line	Delete current line.
Insert from	Text module Bookmark From insert from the Addressbook/Phonebook.
Add attachmnt.	My stuff Open to make a selection. Remember that pictures and sounds may be protected (DRM, page 21).
Delete text	Delete the whole text.
Text input	<ul style="list-style-type: none"> • T9 preferred • Input language

Receive/read



Before an e-mail can be read, it must be retrieved from the server. You have two options:

Retrieve email

Only the message header in the **Main Inbox** (page 51) is sent. You can then decide if you also want to receive the contents:

Options Open menu and select **Ret. content.**

or if you want to delete the e-mail on the server:

Options Open menu and select **Del. on server.**

Send/receive

The set access is selected and all e-mails transferred to the **Main Inbox** (page 51). At the same time, completed e-mails are transferred from the **Unsent** list.

Attachments

Contains the e-mail attachments; these can be saved in **My stuff** (page 129).

Options Open menu and select **Save attach.**

Lists

All e-mails are saved in different lists depending on their status (for overview of message symbols, see page 14):

Inbox



The list of received e-mails is displayed.

Draft



The list of e-mails not yet transmitted is displayed.

Unsent



The list of e-mails not yet transmitted is displayed.

Sent items



The list of transmitted e-mails is displayed.

List options

Different functions are offered depending on the list.

Options Open menu.

Retrieve email	Only transfer the message header into the Main Inbox (page 51).
Ret. content	Retrieve the contents from the server if only the message header was received.
Del. on server	Delete the contents on the server if only the message header was received.

(For standard functions see page 23)

Setting



→  → **Msg settings**
→ **E-mail setup**
→ **Select function.**

Accounts

Before using this service you must set the server access and your e-mail parameters. You will receive the necessary data from the service provider.



Select account.

Activating access



Activate an account that has already been created.

Set access



Start editing. Fill in the data fields as specified by your service provider.

General sett.

Enter an e-mail address to which a **Bcc** (blind carbon copy) is **always** sent.

Voice message/mailbox



Most service providers provide a mailbox in which a caller can leave a voice mail for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if **Call waiting** (page 90) is not activated).

If the voice mail service is not part of your service provider's standard package, you will need to register, and possibly adjust the settings manually. The following sequence may vary from service provider to service provider.

Settings



The service provider supplies you with two phone numbers:

Save mailbox number

You call this phone number to listen to the voice mails left for you.



Select number from Phonebook/Addressbook or enter/change it.

OK

Confirm.

Save call divert number

Calls are diverted to this phone number.



Or

Enter phone number.

Mailbox

Press to divert call to the mailbox number.

OK

Registration with the network is confirmed a few seconds later.

Listen to message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once). Confirm with **OK** and **Mailbox** depending on your service provider.

Chat room



With **Chat room** you can transfer text, audio clips, pictures and files straight to and from one or more terminals (mobile phone, PC). This function is not offered by all service providers. Please ask your service provider about this.

Your dialogue partners are entered in contact lists. When a connection has been established, these lists show who is available, whether he/she wants to be disturbed and what mood he/she is in at present.

GPMS must be switched on.



→ Chat room

Start menu

Login Select the access through which the dialogue is to take place
or
 select **Account** (page 75).

Msg. history

Read the messages from the last session.

Settings Settings for your representation, the applications and servers.

Exit End application.

Fast access...

Select account (page 75)



→ Chat room
 → Login

The current contact list or the overview is displayed (if necessary, set account first, page 75).

Specify your own status (page 76)

Options Open menu.

My settings

Select and make entries.

Return to contact list.



Enter new contact

Options Open menu.

Set Press, then:

Add contact

select and enter at least the user ID.

Return to contact list.



Hold dialogue with new contact (page 74)



Select the contact.



Start dialogue.



Open editor.



Write text.



Send text...

... and so on.

Login



Chat room

Login

Select the last account used (see also Automatic login: page 76).

Contact lists

When the connection has been established, the contact list or the overview of the contact lists is shown for selection.

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an "empty" contact list will be generated by the server if necessary.

Displays in the list:

-Conversation

Displays online contacts for whom there are messages.

-Online

Online contacts with whom no conversations are being held at present.

-Group

Groups for Inst. Messaging with several contacts.



-Offline

Contacts who are not online at present.

Manage contacts



Select a contact.

Options

Open menu.

Set

Select.

Contacts

Different functions are offered depending on the selection:

Add contact	<p>User ID: Enter an unambiguous user (login) name.</p> <p>Nickname: Enter your own nickname for the contact.</p> <p>Friend: The contact receives the status Friend: and access to personal information (page 76).</p>
Find contact	Search for contact.
Delete contact	Delete contact from the list.
Block contact	No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Manage groups



Select one of the groups
you set up yourself.

Options

Open menu.

Set

Select.

Group settings

Different functions are offered depending on the selection:

Add member	Add a new group member, see also Add contact.
Find member	Search for group member.
Invite	Invitation to the contacts in your own group to Inst. Message.
Delete member	Delete contact from the group member list.
Add group	Add new group.
Find group	Search for group on the server (also groups no longer managed in the list).

Create group

Group ID:

Enter an unambiguous group name.

Name:

Name of group.

Topic:

Topic of group.

Searchable:

Other people can look for the group.

Welcome msg.:

Enter own greeting.

Create group

Delete group.

Create a new contact list

The current contact list is displayed.

Options Open menu.

Contact lists

Available contact lists are displayed.

Options Open menu.

Create Select.

Contact list ID:

Give the contact list an unambiguous name.

Name: Allocate self-explanatory name.



Confirm.

Contact list options

Options Open menu.

Details	Additional information about the contact or the group.
My settings	Information on your current personal status (page 76).
Set	Functions for managing a contact or a group.
Contact lists	Display contact lists for selection.
Block list	Display all blocked contacts. Can be unblocked.
App. settings	Set the application (page 76).
Exclude	End the application; the server remains connected.
Logout	Log off from the server and return to start menu.
Help	Display help text.

Start Chat room

A contact list must be displayed.



Select a contact or a group.



Start communication with the contact.

The page with the **Chat room** is displayed. When a group is engaged in a dialogue, the name of the sender is placed in front of each contribution.



Open editor.



Write text.



Send text. The text appears in the **Chat room** soon afterwards.

Naturally, you can also receive messages from contacts you do not know. This will be pointed out to you in the display, and you can either switch to Inst. Message or ignore/block the contact.

Options (individual contact)

Options Open menu.

Send sound 	Select and send a melody/sound from the list (DRM, page 21).
Send picture 	Select and send a picture from the list (DRM, page 21).
Send other 	Send any file.
Details	Information about the contact, if they authorise this.
Clear all	Delete all texts in the current Inst. Message.
Block contact	No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Options (group contact)



Options Open menu.

Leave group Exit group.

Details Information about the group:
Group ID:, Name:, Topic:, Owner:

Clear all Delete all texts in the current Inst. Message.

Receiving objects



If sounds or pictures are sent to you during a dialogue, you will be informed of such in the display.

Accept Accept object
or

Reject Reject object.

Msg. history

→ → Chat room
→ Msg. history

The messages from the last meeting are displayed. You can read and delete the contributions.

Requirement: The server must be disconnected, see **Exclude** (page 73) and **Automatic login:** (page 76).

Setting



→ → Chat room
→ Settings
→ Select function.

Account

The list of available accounts is displayed.



Select an account to establish a connection.

Or

<New entry>/Account sett.



Set up an account or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

Name:	Name of account.
URL:	Enter URL, e.g. www.abc.com
User ID:	Enter an unambiguous user (login) name.
Password:	Enter password (shown as a series of asterisks).

My settings

Information on your current personal status:

Alias:	Your own alias under which you can be found on the server.
Screen name:	Name to be displayed in the group.
Mood:	Information about your own mood, e.g. Happy, Sad, Tired etc.
Status text:	General text information, e.g. "Am at home".
Availability:	Availability: Available, Not available, Discreet
Cellphone:	Enter the phone number with international dialling code.

App. settings

Settings for the application used:

Automatic login:	Auto-reconnect to the last account used.
Timeout:	Time without action after which the application is terminated. However, the server remains connected.
Message info:/ Online info:	Signal the receipt of messages: Yes/No Signal given as: <ul style="list-style-type: none"> • Audio • Silent alert • Pop-up Popup windows authorised: Yes/No

Options

For **each** setting, specify who is allowed to view your personal information:

Public

All contacts.

Private

Contacts designated as Friend: (page 71).

Hide

Nobody.

CB services



→ Msg settings
→ CB services

Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, you will receive messages on the activated topics in your **Topic list**.

CB messages are displayed in standby mode; longer messages are scrolled automatically.

Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

Topic list

You can add any topics to this personal list from the topic index. You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

New topic Select.

- If no topic index is available, enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and activate it with **Options**.

Topic

Select

Options

Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

Zoom in

You can set three fixed sizes for the presentation of the display texts across the entire message range:

Default

Medium font size

Zoom +

Large font

Zoom -

Small font

Surf & fun

Obtain the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Internet



→ Internet

The browser is activated with the pre-set option as soon as you call up the function (Browser settings, page 79; may be specified/pre-assigned by service provider).

Browser menu

Options Open menu.

Homepage	Call up the pre-set homepage for the current profile.
Bookmarks	List bookmarks Display list of bookmarks stored in the phone. Bookmark site The current page is saved as a bookmark.
Go to...	Enter URL to dial an Internet address directly, e.g. wap.siemens.com
Reload	Reload current page.
Show URL	Display the URL of the page currently loaded for sending via SMS/MMS/e-mail.
History	Display most recently visited Internet sites.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page; display saved pages.
Settings	Set or reset browser (page 79).
Exit browser	Close the browser.

End connection



Press and **hold** to clear down the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.



- Press **briefly**: one page back.



- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser (selection)

	Connect		No network
	Network		GPRS online

Enter special characters



Table of special characters (page 27).



List of special characters, depending on the situation.

Browser settings



→ Internet

Options Open menu.

Settings Select.

Browser	Set start option as well as handling of pictures and sounds plus send options.
Profiles	The list of profiles is displayed for activation/setting. For more information, contact your service provider.
Protocol parameters	Set protocol parameters, push messages and abort time as well as handling of cookies.
Security	Set encryption.
Context	Reset session; delete cache, history and cookies.

Your Internet browser is licensed by:



OPENWAVE™



Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profil pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

Set profile manually

If necessary, please contact your service provider.

Options Open menu.

Edit	Start processing. For the Internet-specific settings below, please contact your service provider.
-------------	---

Delete	Delete selected profile.
---------------	--------------------------

Bookmarks



→ Bookmarks

Display URL/call up page

List bookmarks

Display list of bookmarks stored in the phone.



Select bookmark.



Call up URL.

Save

Bookmark site

The current page is saved in the phone as a bookmark.

Bookmark options

Options Open menu.

Here you will find functions for changing and managing bookmarks and their folders. This includes editing individual entries with the corresponding URLs as well as deleting and moving them to other folders.

Games and Applications

Games and applications are offered on the Internet. Once downloaded, you can access these via the phone. Most applications include instructions. Some applications and games are already pre-installed on your phone. You will find these described under

www.siemens.com/cx75

Requirements

Browser profile (page 79) and access (page 98) must be configured already.

Download

Select the correct access depending on whether you are loading games or applications:



→ Games

or



→ Applications

Load or start games, or else start applications or reload them with **Download-Assistant**.

Description file only



The description file is loaded for information purposes only. The application/game itself must be loaded separately.

or complete download



The application/game is completely loaded.

Apply

Remember that applications/games may be protected (DRM, page 21).



The executable application is saved on the phone and can be started immediately.

Download wiz.



→ Download wiz.

You will not be left on your own during the download!

Games&More options

Processing and managing your applications and folders:

Move	Move applications between folders.
New folder	Create and name new folder.
Update	Reinstall an application (update).
Security	Select a security level.
Reinstall	Repeat after transmission error.
Properties	Show details of the application/folder (name, version, size, path, producer, date).
HTTP profile	Display profile list for activation/setting
(For standard functions see page 23)	

Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or enable the application again.

Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens offers no warranty or guarantee nor does it accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your Windows® PC using the "Mobile Phone Manager"

(www.siemens.com/mobilephones), page 131.

Settings

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Six standard profiles are provided with default settings. They can be changed however:

Normal environment

Quiet environment

Noisy environment

Car Kit

Headset

- You can set two personal profiles (<Name>).
- The special profile **Airplane mode** is fixed and cannot be changed.

Switch on



Select default profile or personal profile.



Switch on profile.

Profile settings

Edit a default profile or create a new personal profile:



Select profile.



Open menu.

Change sett.

Select.

The list of available functions is displayed.

When you have finished setting a function, return to the profile menu where you can change a further setting.

Additional information

Call up the list in standby mode:



The profile list is displayed.

The active profile is identified with .

Profile options

Options Open menu.

Activate	Activate selected profile.
Change sett.	Change profile settings.
Copy from	Copy settings from another profile.
Rename	Change personal profile (except default profiles).

Car Kit

If an original Siemens car kit is used, the profile is switched on automatically when the phone is inserted into the cradle (also see accessories).

Headset

The profile is only switched on automatically if an original Siemens headset is used (also see accessories).

Airplane mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**.

Switch on



Scroll to **Airplane mode**.



Confirm selection.



Confirm safety inquiry again in order to activate the profile. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

Topics



→ Topics

Load a completely new visual presentation onto your phone. At the press of a key various functions are re-organised on a theme basis, e.g.

Start up/shut down animation, wallpaper, screensaver, start up/shutdown melody, additional animations.

Theme files are compressed to save memory space. After being downloaded or called up from

My stuff, these are automatically unzipped when activated.

Activating a new theme



Select theme.




Display theme preview.



Activate new theme.

Display setup




→  → Display setup
→ Select function.

Language

Set the language for the display text. When “automatic” is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

*#0000# 

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry. Languages with T9 support are marked with the T9 symbol.

Wallpaper

Set wallpaper graphic for the display.

Logo

Choose graphic to be displayed instead of the provider logo.

Color scheme

Select colour skin, incl. background image for the entire user interface.

Screensaver

After a specifiable time, the screensaver shows a picture in the display. An incoming call and/or pressing any key will end the function except if the code protection is activated.

Change settings:

Change Settings are displayed:

Preview

Display the screensaver.

Style:

Select **Analog clock**, **Digital clock**, **Bitmap**, **Energy saving**

Picture:

Select image in **My stuff**.

Timeout:

Set period after which the screensaver starts.

Code protection:

The phone code is requested to close the screensaver.

Auto key lock:

Automatic keypad locking if no key has been pressed for one minute in standby mode.

Unlocking:

Press and **hold**.

Note

The animated **Bitmap** screensaver and the **Digital clock** considerably reduce the phone's standby time.

Start up anim.

Select animation to be shown when phone is switched on.

Shutdn anim.

Select animation to be shown when phone is switched off.

Greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Large letters

You can choose between two font sizes for the display.

Illumination


Set display illumination to brighter/darker. The darker the setting the longer the standby time.



Press the joystick repeatedly at the top/bottom to adjust up or down.

Ring tones



→  → Ring tones
→ Select function.

Set the signal tones on the phone to suit your requirements.

Ringer setting

- On/off** Activate/deactivate all tones.
- Beep** Reduce ringtone to a short signal (beep).

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringtone (e.g. in noisy environments). This function is deactivated when the battery is being charged and accessories are connected (except the headset).



Settings are displayed for changing.



Select from several silent alert versions.



Confirm setting.

Volume

Set different volumes for types of call/functions.



Settings are displayed for changing.



Select

Calls

Push-and-talk over cellular

Messages

CB services

Alarm clock

Organizer

System

Applications



The ringtone sounds again.



Set volume.



Confirm setting.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Assign ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

Calls

Assign a single ringtone to all phone numbers in the Addressbook.

Group calls

Assign a different ringtone to each group.

Other calls

Assign one ringtone to the remaining calls.

Push-and-talk over cellular

Assign one ringtone to Push-and-talk over cellular calls.

More melodies

Assign further ringtones for:

Messages

Alarm clock

Organizer

Startup melody

Shutdown mel.


or record new with:

Sound recorder (page 122)

You will find a list of all supported formats for ringtones in **My stuff** (p. 130).

Call setup



→  → **Call setup**
→ Select function.

Hide ID



When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify the conditions under which calls should be diverted to your mailbox or other numbers.

Status check

You can check the current divert status for all conditions. After a short pause, the current situation is transmitted by the network and displayed.



Condition set.



Not set.



Display if status is unknown (e.g. with a new SIM card).

Clear all



All set diversions are cleared.

Set up call divert (example)

The most common condition for call divert is, for example:

Unanswered



Select **Unanswered**. (Includes the conditions **Not reachable**, **No reply**, **Busy**, see below)



Confirm.

Set

Select.



Confirm.



Select or enter the phone number to which the calls are to be diverted.

Mailbox Use existing mailbox phone numbers, or enter them if necessary.



Confirm. After a short pause, the setting is confirmed by the network.

All calls

All calls are diverted.



Symbol in the top line of the display in standby mode.

Not reachable

Divert occurs if phone is switched off or is out of range.

No reply

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5-second intervals.

Busy

Divert occurs if a call is in progress. If **Call waiting** is activated (page 32), you will hear the call waiting tone during a call (page 34).

Receiving fax

Fax calls are diverted to a number with a fax connection.

Receiving data

Data calls are diverted to a phone number with a PC connection.

Additional information

Note that the divert is stored in the network and not in the phone (e.g. when the SIM card is changed).

Reactivate divert

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm number.

Call screening

Only calls from phone numbers that are in the Phonebook/Addressbook or assigned to a group are signalled. Other calls are only displayed.

Any key

Incoming calls can be accepted by pressing any key (except for).

Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The person you are talking to does not hear this beep.

Phone setup



→ → Phone setup
→ Select function.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones:

On/off Activate/deactivate tones.

Extended If switched on, a wider range of service tones is available, e.g. end of menu reached, network connection interrupted.

Auto off

The phone switches off each day at the set time.

Activate

Time

Press.



Enter time
(24-hour clock).

OK

Confirm.

Deactivate

Manual

Press.

OK

Confirm.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Device check

After the last information page, a self-test as well as individual tests are offered. If you select **Self test**, all individual test are carried out.

Software version

Display the software version for your phone in standby mode:

* # 0 6 #, then press **More**.

Memory assis.

The memory assistant will help you if there is insufficient phone memory. If required it can also be started automatically from applications.

After their capacities have been checked, all files and folders are displayed along with their size and may be viewed/opened and, if necessary, deleted.

File system

Format

(Phone-code protected)

The telephone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted.

Formatting may take longer than one minute.

Clean up

Create more memory by deleting temporary files no longer required.

Format card

All saved data on the RS MultiMediaCard™ are deleted.


Eject card

Allows the RS MultiMediaCard™ to be removed without loss of data.

Fact. settings

The phone is reset to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively, in standby mode enter:

***#9999#** 

Clock



Clock

→ Select function.

Time/date

The clock must be set correctly once, at start-up.

Change

Press.



First enter the date (day/month/year), then the time (hours/minutes/seconds).

Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Time zones

The time zone can be selected in the world map or a city list:

World map



Select the desired time zone.

City list



Select a city in the selected time zone.

Options

Open menu.

Set

Set time zone.

Auto time zone



Have the time zone automatically set by the network.

Search city

Search for a city.

Help

Operating instructions.

Date format

Select the display format for the date.

Time format

Select **24h** or **12h**.

Buddhist date

Switch to the Buddhist year (not on all phone models).

Show clock

Activate/deactivate time display in standby mode.


Auto time

The timezone is identified automatically.



Connectivity



→  → Connectivity
→ Select function.

GPRS




(General Packet Radio Service)



Switch GPRS on/off.

GPRS is a method for transmitting data faster in the mobile network. Use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently. The network provider charges only for the volume of data transmitted. Some service providers do not yet support this service.

Shown in the display:

	Activated and available.
	Registered.
	Temporarily interrupted.

GPRS info

Display the transmitted volume.

IrDA



Activate/deactivate IrDA.

Your phone has an infrared interface. With this interface, you can exchange data such as pictures, ringtones, Addressbook entries, business cards or organiser data with other devices which also have an infrared interface.

The infrared interface is on the left side of the phone. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

Shown in the display:



IrDA activated.



During transmission.

If IrDA is activated, standby time for the phone will be reduced.

Bluetooth® (BT)

Bluetooth is a short-range radio connection by means of which a headset or car kit, for example, can be connected without the need for wires. Using the **Send/print** function in the options menu for the application concerned you can also use this route to send data.

With SAP (SIM Access Profile) a car phone GSM module can, for example, use the access data from the SIM card on your phone. There is no need to swap the SIM card. It is possible that SAP might not be supported by your service provider.

Each Bluetooth device has its own specific address and can be given a self-explanatory name as an option. Password protection ensures the security of a Bluetooth connection, as does including the BT partner in a list as a "confidential" device.

To establish a Bluetooth connection between your phone and other Bluetooth devices you must activate Bluetooth.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Siemens are under license. Other trademarks and trade names are those of their respective owners.



Activate/deactivate Bluetooth.

My BT name: You can give the phone a name when you activate Bluetooth for the first time.

If Bluetooth is activated, IrDA (infrared) is not active and vice versa.

If Bluetooth is activated, standby time for the phone will be reduced.

B-tooth setup



Call up the setting functions (Bluetooth must be activated).

• Search/Search all

Specify which BT devices are to be searched for:

- All** All BT devices
- Audio** E.g. headset, car kit
- Phone** Other BT phones
- PC** Personal computer with BT connection



Start search

The number and name of the most recently found BT device are displayed.



The search is ended and the first 10 devices found are shown in a list.

Repeat Start new search.



Scroll to entry required.



Dial the device or start the procedure for acceptance as a "confidential" device (see below).

Options

Open menu.

Details	Display the name and address of the BT device.
Trusted dev.	Add the device as confidential to the list of known devices. To do this, enter the password for the other device. The device must first be set to a "confidential mode". If the list is full it is not possible to add another device.
to known list	Add to the list of known devices (see below).
to black list	Add to the black list (see below).
Retry	Start new search.

• Known devices

To make selection easier, frequent BT partners can be recorded in the known device list. If entries are "confidential", no password query is made.

• Last connect.

List of most recently and/or still connected devices.

• Black list

Attempts to make connections to devices in this list are rejected.

List options

Each list offers different functions.

Options Open menu.

Mark as audio	If not possible automatically, specify device as an "audio" device.
Higher priority	Move entry up the list so that, for example, a specific audio device is used first.
Lower priority	Move entry down the list.
to known list	Move entry to the list of known devices.
to black list	Move entry to the black list.

(For standard functions see page 23)

• My BT name

The phone is given a name (max. 16 characters) – this is the name the partner sees. If no name is given, the phone uses the non-changeable device address.

• Visib.to others

Set how your phone should respond to other BT devices. This means (if “visible”) for example that the device address or the BT name of your phone is shown to other BT devices if they request this in order to receive or send data.

• Not visible

Your phone is not “visible” to other BT devices. Known devices such as Bluetooth-Headset/Car Kit continue operating.

• Auto mode

Your phone is “visible” to other BT devices for several minutes. You will then be asked if “visibility” should continue.

Shown in the display



- Bluetooth activated.
- Bluetooth visible to others.
- Bluetooth during data transfer.
- Call to Bluetooth device accepted.

Data services

Basic setting and activation of the connection profiles for data transmission such as **MMS**, **WAP**.

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will also find the current settings for the service provider on the Internet at **www.siemens.com/mobilephones-customer-care** in the FAQ section.

Select profile



Select the profile.



Confirm selection.

Set profile



Select the profile.

Options

Open menu.

Edit

Open the selection.



Select **CSD settings**, and/or **GPRS settings**.

Edit

Make the settings as specified by your service provider.

HTTP profile

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually.

If necessary, check with your service provider for details. You will also find the current settings for the service provider on the Internet at **www.siemens.com/mobilephonescustomercare** in the FAQ section.



Make the settings.

Authentication

Activate or deactivate encrypted dial-up (CSD connections only) for Internet access.

Fax/data

Fax/data mode using a PC

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for fax and data communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. There are variations in fax and data reception, depending on the network. Please ask your service provider about this.

Send voice/fax



Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

100 Settings

Rec voice/fax

(Only if no special fax or data number is available)

Start the required communication program on your PC and activate the function on the phone **during** the call (the PC will take over the connection).

End transmission

End transmission with PC software and/or press


Rcve fax/data

Your service provider has given you a number for telephoning and a fax/data number.

The call is signalled by a special ring-tone and the type of call (fax or data) is displayed. Now start the communication program on your PC to receive the fax/data.

Security



→  → Security
→ Select function.

Auto key lock

The keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Additional information

The keypad can also be directly locked and unlocked in standby mode.

In each case:



Press and hold.

Direct call

(Phone-code protected)

Only **one** phone number can be dialled (see also page 35).

Only



(PIN2 or phone-code protected)

Dialling options are restricted to SIM-protected phone numbers in the Phonebook. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN2 input, the **whole** Phonebook can be protected with the phone code.

PIN code

For description, see page 25:

PIN control, Change PIN, Change PIN2, Chg.phonecode

This SIM only



(Phone-code protected)

The phone can be connected to a SIM card once the phone code is entered. Unless the phone code is known the phone will not operate with a **different** SIM card.

If the phone is to be used with a different SIM card, enter the phone code when requested.

Barring



Barring restricts the use of your SIM card (not supported by all service providers). You need a 4-digit network password for network barring. Your service provider will give you this password. You may need to be registered separately for each barring.

All outgoing

All outgoing calls except emergency numbers are barred.

Outgoing intl.

(International outgoing)

Only national calls can be made.

Out.int.x home

(International outgoing without home country)

International calls are not permitted. However you can make calls to your home country when abroad.

All incoming

The phone is barred for all incoming calls (forwarding all calls to mailbox provides a similar effect).

When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

Status check

The following information can be displayed after a status check:



Barring set.



Barring not set.



Status unknown
(e. g. new SIM card).

Clear all

All barrings are deleted. A password which the service provider will give you is necessary for this function.

Network



→  → Network
→ Select function.

Line

This function is only displayed if it is supported by the service provider.

Two separate phone numbers must be registered on the phone.

Select line

Select the currently used phone number.



Display current phone number.

Protected

(Phone-code protected)

You may limit usage to one phone number.

Additional information

Special settings may be made for each phone number (e.g., melody, call divert etc.) To do this, first switch to the required phone number.

Switch from phone number/connection in standby mode:



Press.



Press.

Network info

The list of GSM networks currently available is displayed.



Indicates non-authorised service providers (depending on SIM card).

Choose netwrk

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto network** is set.

Auto network

Activate/deactivate, see also **Choose netwrk** above. If "Automatic network" is activated, the next network on the list is dialled in ranking order of your "preferred networks". Otherwise a different network can be selected manually from the list of the available GSM networks.

Preferred net

Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).

104 Settings

Your service provider is displayed:

List Display list of preferred networks.

Create/change entry:

<Empty> or select an existing entry, then select a new service provider in the list and confirm.

Record new service provider (last entry in the list):

Furth.network

Select, enter the provider data and save it.

Additional information

If you are outside your home network, your phone automatically dials another GSM network.

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

Band selection

Select either GSM 900, GSM 1800 or GSM 1900.

Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

User group



Depending on the service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special rates apply. Please check with your service provider for details.

Active

Activate/deactivate function. "User group" must be deactivated for normal phone use.

Select group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

All outgoing

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Pref. group

If activated, calls may only be made within this standard user group (depending on the network configuration).

Accessories



→ Accessories

→ Select function.

Car Kit

Only in combination with an original Siemens handsfree car kit (see page 140). The car kit profile is activated automatically when the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Shown on the display.

Automatic switch off

(factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the time at which the phone switches off automatically.

Car loudspk.

Improves playback in certain circumstances.

Automatic settings

- Permanent illumination: switched on.
- Key lock: switched off.
- Charging the phone battery.
- Auto. activation of the car kit profile when phone is inserted in the cradle.

Headset

Only in conjunction with an original Siemens headset (see accessories). If an original Siemens headset is used the profile is automatically activated when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Automatic setting

Accept call with Call key or PoC key (Push-and-talk over cellular), even when the auto key lock is activated.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

My menu



Press.



Press.

Create your own menu with frequently used functions, phone numbers or Internet pages.

The list of 10 entries is preset. You can, however, change it as you wish.

Use



Select the required entry.



Confirm.



Or

If the entry selected is a phone number, you can also dial it with the Call key.

Change menu

You can replace each entry (1–10) with another entry from the selection list.



Select the required entry.



The function list is opened for selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

If **Phonebook** is selected, the phone number must also be selected; if **Internet** is selected, the bookmark must also be selected.

Reset all

(Phone code required)



Select. After a security prompt, the pre-assignment is reset.

Fast access

You can assign one important phone number or function to each of the two softkeys and number keys 2 to 9 (speed-dial numbers). The phone number can then be dialled or the function can be started at the touch of a button.



Additional information

The service provider may have already assigned functions to a softkey (e.g. access to "SIM services" or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

The left softkey may sometimes be replaced automatically by / to access a new message for example.

Softkeys

Change

For example, the **Internet** function is assigned to the softkey. To change this (in standby mode):

- Internet** Press **briefly**.
- Change** Scroll to new assignment in the list.
- Confirm.

- Special case **Phone number**. Choose a name from the Phonebook/Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

Apply

In standby mode:

Application

The "Internet" is just used as an example here.

- Internet** Press and **hold**; the application is started.

Phone number

The assignment "Carol" is used here only as an example.

- Carol** Press and **hold**. The phone number is dialled.

Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. Number key 1 is reserved for the mailbox phone number (page 69) and number key 0 is reserved for switching between two connections during use (page 103).

Change

In standby mode:



Press number key **briefly** (e.g. the 3).

If this number is still free:

Set

Press.

Select a new function from the list and confirm with **OK**.

Or

If an assignment has already been made to this key (assignment displayed above the right softkey): e.g. **Games**.

Games

Press **briefly**.

Change

Scroll to application in the list.



Confirm.

- Special case **Phone number**. Choose a name from the Phonebook/Addressbook for assignment to the key.
- Special case **Bookmark**. Scroll to a URL in the bookmark list for assignment to the key.

Apply

Select a stored phone number or start a stored application (e.g. **Calendar**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the right softkey e.g.:

Calendar

Press and **hold**.

Or simply



Press and **hold**.

Organizer

Calendar



You can enter appointments in the calendar. Time and date must be set for the calendar to work correctly.




The calendar offers you three views:

Monthly view

Special colour coding:

Day with entries for appointments, day-long appointments, weekends.

Navigation:



-  One day forward/back.
-  One week forward/back.
-  Daily view open.

Weekly view

Special displays:

Appointments are shown as a horizontal colour bar on the vertical hour division.

Navigation:



-  One day forward/back.
-  Forward/backward by the hour through the day.

Daily view

Special displays:

Description of appointment.

Navigation:

-  One day forward/back.
-  To the start/end of the day or next/last entry.

Calend. setup



Start of day:

Time when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts.

Weekend

Set the days for the weekend.

Show birthdays:

Shown in the display

Synchronising with a PC

With the mobile phone manager, (page 131) you can synchronise appointments, tasks and memos with Outlook® or Lotus Notes™.

Appointments



→ Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Category:



Memo

Text input for description.



Voice memo

Enter voice memo.
Shown with alarm.



Call

Enter phone number to
be displayed with the
alarm.



Meeting

Text input for description.



Vacation

Enter start and end date.



Birthday

Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Default**, page 111.

Description:

Description of nature of appointment.

Phone number:

Enter a phone number or select one from the Addressbook.

Voice memo:

Enter a voice recording, see **Dictat.machine**, page 113.

Location:

Location of appointment.

Whole day:

All-day appointment: Yes/No

Start date:

Date when appointment starts.

Start time:

Time when appointment starts.

End date:

Date when appointment ends.

End time:

Time when appointment ends.

Alarm:**On/off or Silent alert.**

Enter the period of time
before the appointment
and select the time unit:

Minutes, Hours, Days**Recurrence:**

Select a timeframe for repeating the
appointment:

No, Daily, Weekly, Monthly, Yearly

Enter a parameter for repeating:

Forever, Until, Events (number)

If **Weekly** is selected, certain week-
days can be highlighted.

All fields/Reduced fields

In the list, select those fields which
are to be offered for future entries.

Additional information

Display above set alarms:



Alarm clock



Appointment

An alarm sounds even when the phone is
switched off (except in aircraft mode,
page 84). The phone does not go to stand-
by mode. Press any button to switch the
alarm off.

Information on the alarm

When the set date and time are
reached there is an audio and a visu-
al alarm. If an alarm is missed it ap-
pears in the list of missed appoint-
ments (p. 112).

Alarm type **Memo:**

Meeting: The text is shown in the
display.

Alarm type **Call:** The phone number
is displayed and can be dialed
immediately.

Alarm type **Birthday:** You can send
special birthday greetings by SMS,
MMS, e-mail or a call via **Options**.

Use **Pause** to set the alarm to repeat.**Tasks**→ **Tasks**

A task is displayed like an appoint-
ment in the agenda of the selected
day. However, unlike an appoint-
ment it does not require a time.
When no time is entered the task ap-
pears at the top of the list every day
until it is marked as completed.

The entries are made in the same
way as **Appointments** (see "Appoint-
ments"). Then:

112 Organizer

Status:

Select **Done** or **Outstanding**.

Priority:

Select 5 levels from **Lowest** to **Highest**.

Date used:

If activated with **Yes**, the following time input option is offered.

Date due:/Due time:

Enter the date and time by which the task is to be completed.

Alarm: As for **Appointments**.

Notes

→ **Notes**

Write and manage brief text notes.

Enter a new note

<New entry>

Select.



Enter text. The first line is displayed as a "title" in the notes list. Total length: max. 160 characters.

Options

Open menu.

Save

Save note. When **Confidential** is selected, a note is protected with the phone code.

Missed appts.

→ **Missed appts.**

Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.

Organiser options

Depending on the application used (**Calendar**, **Appointments**, **Tasks**, **Notes**) and the current situation, different functions are offered.

Options Open menu.

Delete	Delete entry.
Delete by	Delete all entries prior to a certain date.
Delete all	Delete all entries after confirmation.
Delete done	Delete all completed tasks.
Activate/Deactivate	Switch alarm on/off.
Filter	Display all entries with the selected feature.
Confidential	Protect note with phone code. We recommend that you do not store any passwords (PIN, TAN etc.) as notes.

(For standard functions see page 23)

Dictat.machine



Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an appointment in the calendar.

New recording

<Record again>

Select.

The remaining time available, as well as the recording time, are shown in the display.



A brief beep sounds when the recording starts. Now dictate the text.



Switch between pause/record.



End recording.

The recording is automatically saved with a time stamp.

Rename with **Options**.

Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.

Dictating machine options

Options Open menu.

Handsfree

Playback through the built-in loudspeaker.

(For standard functions see page 23)

Time zones



Time zones

The time zone can be selected in the world map or a city list:

World map



Select the desired time zone.

City list



Select a city in the selected time zone.

Time zone options

Options

Open menu.

Set

Specify the time zone.

Auto time zone



The time zone is switched automatically to local time by the network.

Search city

Search for a city.

Help

Operating instructions.

Extras

SIM services (optional)



→ SIM services

Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under “Extras” or directly above the softkey (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu. With the SIM services menu, your phone can support future additions to your service provider's user package. For further information, please contact your service provider.

Music player



→ Music player

With the Music Player, you can play music files, e.g. in AAC format, and group together several tracks as a playlist. Music files and playlists are stored by default in **My stuff/Sounds**.

Music files can, for example, be downloaded from the Internet or transferred to the telephone via a PC connection. (page 21).

Playing music

You can play music by

- Starting the **Music player** and selecting a track or a playlist.
- Selecting a music file directly from **My stuff** and opening it.



Press and hold to lock/unlock keypad, when a music file is playing.

Displays

Music Player entries appear in the following order:

Folder - Playlists - Music files

New play list

<New Play list>

Select.



Enter a name for the playlist.



Select the required track.

Repeat the process until the playlist is complete.

Music Player options

Options Open menu.

Different functions are offered depending on the situation.

Shuffle	Random playback of tracks in the current directory.
Repeat	Repeat tracks in a playlist.
New play list	Create a new playlist.
Add to play list	Add a track to the playlist.
Properties	Display information about a track or a playlist.
(For standard functions see page 23)	

Push-and-talk over cellular (PoC)



This application can be used to simultaneously connect multiple subscribers. Like a normal Walky-Talky, only one subscriber can speak at a time. The others can only listen until the speaker allows others to talk.

A recipient is selected using their Push-and-talk over cellular address (PoC ID) or their phone number. Groups created in advance (p. 119) can be invited to a session. Your service provider will supply you with your own PoC address.

The recipient can also use a mobile phone, as well as a PC with an Internet connection and headset (depending on service provider).

To use the application, GPRS (page 95) must be switched on and **Push-and-talk over cellular** (p. 121) activated.

Preparing a session

From the Addressbook



Open Addressbook (in standby mode).



Select an entry with a PoC ID (**Com. services**).



The session with the selected subscriber is started. For details of how to invite additional subscribers, see page 118.

From standby mode

→ Push-and-talk over cellular

<New session>

Select.

The possible functions as well as already added subscribers are displayed.

You have several options to combine the subscribers:

<Add from [book icon]>

Search and mark recipient in Addressbook.



Add recipient.

Or**<Add f. sess.>**

Select a subscriber from an earlier session.

Or**<Enter PoC ID>**

Enter PoC ID of a recipient.

Selection Add entries.**Or****<Add from grp>**

Select group.



Open



Select and mark recipient.

Selection Add recipient.**Starting a session**

If all the desired subscribers are combined, start the session:



The subscribers are displayed, and the authorised speaker is shown in bold.

Speaking rights

The list of subscribers is displayed. The current authorised speaker is shown in bold.



Request speaking rights. The delegation of speaking rights is displayed and then the requester can talk.



Returning speaking rights.

Additional information

Depending on the setting for **Hold mode** (page 121) must be pressed and held as long as one speaks.

If the person with speaking rights takes a long pause, the speaking rights are automatically released again.

Inviting additional subscribers

You can invite additional subscribers during a session.

Options Open menu, select **Invite** and mark new subscribers.

You are being invited

The invitation is shown in a window. You can accept/refuse this invitation.

 Accept the invitation.

The list of subscribers is displayed.

Leaving the session and ending

Only if you yourself started the session.

Options Open menu.

End session Select. You will leave **and** end the current session.

Letting the session run in the background

The current session remains open in the background and you can listen to the calls. A phone call ends the session.

 Press and **hold**.

Request speaking rights:

 Press.

View the session again:

 
→ Push-and-talk over cellular
→ Sessions

Push-and-talk over cellular options

Options Open menu.

Different functions are offered depending on the situation.

History view	Display of subscribers in order of speaking.
Session view	Display of subscribers for the current session.
End session	End session.
Session details	Start time, Status, Duration, Type etc.
User details	Display subscriber properties (see also My presence , page 120).
Add to 	Save PoC ID in Address-book.
Invite user	Invite a subscriber to a session.
Add to group	Add subscriber to the group.
Clear	Delete the list except for the last entry.
Handsfree	Switch on handsfree talking (loudspeaker).
Request pres.	Request information about the readiness to receive for a subscriber.
Volume	Set volume.  is also possible.
(For standard functions see page 23)	

Sessions



- Push-and-talk over cellular
- Sessions

Display subscriber list for the current session. The authorised speaker is shown in bold.

Records



- Push-and-talk over cellular
- Records

Select the list of received and made PoC calls as well as the option to delete all lists.

You can mark subscribers for one session in the list.



Start session.

The function **Save as group** in **Options** can be used to combine entries in the list into a new group.

Groups



- Push-and-talk over cellular
- Groups

Only **your** groups are displayed and can be edited.

Setting up a new group

<New entry>

Select.



Fill in input fields:

Push-and-talk over cellular ID:
Subscriber ID.

Name: Group name.

Type Now or Chat.

Max users: Maximum number of group members ("0" means "no limit").

Membership: Set if membership in this group is open to everyone (**Open**) or if the subscriber is limited to the member list (**Limited**).

Memberlist Add member to the group.

Reject list List of subscribers which may not become members of this group.

Save Save group.

<Rejectlist>

List of subscribers with whom a session is not desired. Invitations from this list are always refused automatically.

<Acceptlist>

List of subscribers whose invitation is automatically accepted (see also **Auto answer** page 120).

Starting a session (group conversation)



Select group.



Start session.

Viewing group properties



Select group.



View properties.

Options

Open menu.

Add to	Copy group ID to the Addressbook.
Edit	Edit (your own) group.
Copy ID to clip	Save group ID (PoC ID) in the clipboard.
Memberlist	Display the member list.
Reject list	Display the refused subscribers.

My presence



→ Push-and-talk over cellular

→ Presence → My presence

The following properties (yours) can be set:

Interruption

Allow, forbid interruption

Mood

Display your mood.

Notes

Note.

Settings



→ Push-and-talk over cellular

→ Settings

Some settings must be made by the user or can be copied from your service provider.



Select and confirm the function, area.

Load settings

Download settings from the server of the service provider.

PoC online

Log in/out, status information for login.

Block PoC calls

Allow/block PoC calls.


Auto answer

Automatically accept invitations because of the **Accept list** (page 120).

Use Acc.& Rej.

Activate/deactivate the use of **Accept list/Reject list** page 120).

Push-and-talk over cellular

- **PoC enabled**
Activate/deactivate PoC.
- **History length:**
Number of entries in the list.
- **Timeout(min.):**
PoC is put in the background if not used after an adjustable amount of time.
- **Hold mode**
Depending on the setting,  must be pressed and held to speak.
- **Default view**
Session view or **History view**.
- **Request pres.**
The saved properties are displayed.

Server

Settings for the server. Please check with your service provider.

Advanced

Further settings. Please check with your service provider.

Additional information

If an accessory such as the car kit is connected, its PTT key also functions as a PoC-key.

Alarm clock

→ Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.



Press to set.



Activate/deactivate the alarm.



Switch to time setting.



Set alarm call time (hh:mm).




Switch to week days.



Navigate to the various days.



Display options: alarm call time and days.

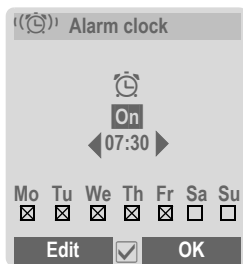

122 Extras



Set days for alarm calls.
Press again to delete the highlighting.
Press and **hold** to highlight/unhighlight all the days.



Confirm setting.

Additional information



Screen display in standby mode: alarm clock activated.

Use **Pause** to set the alarm to repeat.

Sound recorder

Use the sound recorder to record noises and sounds for use as ringtones. The sound recorder is usually started from other applications/functions such as assigning a ringtone.

New recording

Start from main menu



→ Sound recorder

or also start from another application:

<Record again>

Select.

The remaining time available, as well as the recording time, are shown in the display.



A brief beep sounds when the recording starts.



Switch between pause/record.



End recording.

The recording is saved with a timestamp in the **Sounds** folder.
Rename with **Options**.

If starting from another application, e.g. create MMS:



Transfer the recording into the application.

Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.



Open menu.

Handsfree	Playback through the built-in loudspeaker.
Set as...	Set the recording as a ringtone.
(For standard functions see page 23)	

Calculator



The calculator can be used in a basic version and with an advanced range of functions. The input line and two calculation lines (including the matrix with the calculation functions) are located in the top half of the display.



Enter digit(s).



Navigate functions.



Use function.



Enter digit(s).



Use function. The result is calculated and displayed immediately.

Basic functions

+, -, *, / Basic calculation types

= Result

1/x Reversion

% Convert to percentage

. Decimal point.

± Sign change “+”/“-”

Options **Expansion of the range of functions:**

\sqrt{x} Square root

x^2 Square

e Exponent

MS Save displayed number

MR Call up saved number

M+ Insert number from memory

Calculator options

Options Open menu.

Convert	Call up the unit converter with the current result.
----------------	---

Clear all	Delete all units.
------------------	-------------------

Extended mode/Basic mode	Convert calculation functions.
---------------------------------	--------------------------------

Memory save, Memory recall, Memory clear	Save or recall result; delete memory.
---	---------------------------------------

(For standard functions see page 23)

Unit converter



→ Unit converter

You can convert various measurement units into other measurement units.

The following types are offered with various units:

Velocity	Energy
Mass	Pressure
Time	Volume
Area	Length
Power	Temperature
Currency	

Example for **Velocity** units:

Type	Units
Velocity	Kilometers/h, Meters/sec, Miles/h, Miles/sec, Knots, Mach

Converting the units/currency



Select the source unit/
currency.



Switch to the input field.



Enter the quantity to be
converted.



Switch to the selection
field.



Select the target mea-
surement unit/currency.
The result is displayed.

You can use both input fields alter-
nately.



Opens the calculator
with the current convert-
ed value.

Special key functions:



Set decimal point.



Change sign.

Currency

When you call up the function, you
must enter a base currency into
which the conversions are to be
made.



Enter currency
(e. g. euro).



Store entry.

Now enter the name and exchange
rate of the currency to be converted.



Open menu.

Add currency	Enter new currency and exchange rate.
Set as base	Use entered currency as base currency.
Edit rate	Change the exchange rate of the base currency.
Calc.	Start calculator.

(For standard functions see page 23)

Stopwatch



Two intermediate times can be recorded and saved.

Display, also in standby mode.

Start/Stop



Save intermediate time.

After a stop:

Reset

Reset to zero.

Stopwatch options

Options

Open menu.

Stopwatch list

Display saved entries.

(For standard functions see page 23)

Countdown



A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Display, also in standby mode.

If **no time** has been entered:



Open input window.



Set period of time.



Confirm.



Start countdown.

If a **countdown** time is specified:



Start countdown.

While the time is elapsing:



Interrupt counter.



Let counter continue running.

Reset

Reset counter to starting time.

Edit

Enter new period of time and confirm with **OK**.

Remote synchronisation



→ Remote sync.

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone. The data can, for example, be saved on a company computer or the Internet e.g.:

www.siemens-mobile.com/syncml

Synchronise

Sync

The computer is selected and synchronisation started. When completed, the actions which have been performed are displayed.

Next

Scroll through the various displays.

Sync. setting

The following settings can be made prior to synchronisation:

Active profile

You can choose between 5 profiles.



Select profile.



Activate profile.

Or

Edit

Set profile.

Server sett.

Providers	Display the current service provider.
Homepage:	e.g. www.siemens-mobile.com/syncml
Port:	Enter port number e.g. 80.
User name:	Enter user name (login name).
Password:	Enter password (shown as a series of asterisks).
Calendar path:, Contacts path:, Notes path:, Tasks path:	
HTTP authentication.	Confirmation required; Yes/No (if No, the input fields are not visible).
HTTP name:	Enter name.
HTTP password:	Enter password.

Last sync:

Time of the last synchronisation.

Sync. mode

- Sync data: Modified data or All data
- Sync instruction: Two-way, Device update or Server update

Sync items:

Highlight database areas to be synchronised:

Calendar, Contacts, Notes, Tasks



Save settings.

Device manag.



If you were informed about software updates by a push message, you can establish a connection to the provider's server using the Device manager, so you can download them.

When downloading is finished, you will be asked to switch the phone off and on again. Afterwards, the software of your phone will be updated. Please follow the instructions in the display.

The phone default setting varies from service provider to service provider:

- The settings have already been implemented by the provider. You can start immediately.
- Access profiles have already been created by your provider. Then select and activate profile.
- The access profiles must be configured manually. If necessary, check with your service provider for details. You will find the current settings for the service provider on the Internet at www.siemens.com/mobilephonescustomercare under "FAQ".

Active profile

A standard profile for downloading the current software of the operating system is displayed.

Sync

Establish a connection to the active profile.

Or

Edit

Call up profile list.



Select profile.



Activate profile.

Or

Edit



Set profile.

Last connect.

Display last connection.






Media player

The Media Player is started by the application if you play a media file that has been received by SMS/MMS or downloaded from the Internet.

-  Press **briefly** to scroll to the next media file.
-  Switch on display illumination.






Pictures

The following functions can be applied to a displayed picture:


-  Zoom function if the displayed picture has a higher resolution than the display.
-  The joystick moves the picture detail.
-  Centre the picture.
-  Switch to full screen mode and back again.
-  Send via MMS or e-mail, for example.

Melodies/playlists/video

The media playback offers the following functions for music, playlist and video playback:

-  Play or stop, depending on the situation.
-  Set volume.
-  Switch to mute.
-  Pause function.
-  End playback.

Options

-  Open menu.

Different functions are offered depending on the starting situation and the object.

Volume	Set the volume with the joystick.
Set as...	Set picture as Wallpaper , Logo , for example, and sounds, for example, for Incoming call , Startup melody .
Slideshow	Automatic run-through in full screen mode. Change individual picture with joystick.
Edit	Access to picture editing.
(For standard functions see page 23)	

My stuff

To organise your files, you can use the file system like a PC file manager. There are separate folders for the various data types in **My stuff**. If, for example, you want to download new pictures or sounds, the download function is contained in the relevant folder.

Remember that pictures and sounds may be protected (DRM, page 21).



The list of the folders and files is displayed. The first entry in **My stuff** is always the RS MultiMediaCard™ (p. 130).

Navigation



Select file/folder in lists.



The cursor can be moved as required in the preview.



Open folder, start download or start file with the related application.

My stuff options

Options Open menu.

Move	Place highlighted file(s) or folder in temporary memory.
Copy	Place highlighted file(s) or folder in temporary memory.
Paste	Transfer content of temporary memory into current folder.
New folder	Create a new folder and name it.
Preview/ List view	Switch over to miniature view/view of list.
Properties	Display information on file or folder selected.
Format card	Format inserted RS MultiMediaCard™.
Eject card	Allows the RS MultiMediaCard™ to be removed without loss of data.

(For standard functions see page 23)

Directory structure

Separate folders have already been created for different data types in **My stuff**. These folders cannot be changed.

Folder	Description	Format
MultiMediaCard	Access to the card	
Pictures	Pictures	bmp bmx jpg/jpeg png gif
Videos	Videos	3gp
Animations	Start up/shut down animations	bmx gif
Sounds	Ringtones, music	mp3 aac(+) m3u mid amr wav
Topics	Loaded theme (zipped)	sdt
	Theme configuration (unzipped)	stc
Color skins	Colour skins for the user interface	scs
Games	Java archive	jar
	Download info	jad
Applications	Applications	*
Other	Text modules	tmo
	Voice recordings	vmo

Depending on the service provider, the structure, content and range of functions in **My stuff** may vary.

RS MultiMediaCard™

The RS MultiMediaCard™ gives your phone a very large memory capacity. This allows you to save picture/video files, and sound recordings, for example. However, you can also use this memory card like a floppy disk to save any other files you may wish to save.



The list of the folders and files is displayed. The first entry is always **My stuff**.

The folders and files on the memory card are managed in the same way as in **My stuff**. If the memory card assigns a file to a function in the phone such as a ringtone, this is copied to **My stuff**.

Additional information

RS MultiMediaCard™ is a trademark of the MultiMediaCard Association.

Changing the RS MultiMediaCard™ (page 17)

New RS MultiMediaCard™

1. Create a backup copy on a PC of the data on the old memory card.
2. Format the new memory card.
3. Copy the data from the PC onto the new memory card.

Mobile Phone Manager

The Windows® PC program, Mobile Phone Manager, enables you to use extended phone functions from your PC. For example, you can update your Addressbook in the phone, read, save and send SMS and MMS messages, or synchronise your phone with Outlook® or Lotus Notes™. The phone and PC communicate via a data cable (See Accessories, page 140).



You can download the software from the Internet:

www.siemens.com/cx75

Contacts management



You can use contacts management to manage the personal contacts you have stored in your phone, to add new ones and to delete and edit them. You can compare and copy contacts between your phone, Outlook®, Lotus Notes™ and other Siemens phones (including Gigaset).

SMS and MMS management (messages)



Write MMS and SMS messages from the convenience of your PC. Use all the options your PC offers you and use your sounds and pictures to create MMS and EMS messages. You can read, forward, print, delete and archive your messages.

Backup and restore



With the back-up function, you can regularly make a back-up copy of your telephone data on the PC. If you ever lose the data on your phone or replace the phone, you can quickly re-instate all data with the restore function. Please observe any possible restrictions for DRM-protected data (p. 21).

Bookmark management (browser & bookmarks)



Use your PC to browse through the Internet and define your preferred sites. Save the Internet addresses as bookmarks on your phone so that you can quickly call them up at a later time when you are on the move.

Phone explorer



You can use the phone explorer to read your phone's file system. Files such as pictures, sounds and much more can easily be copied between the phone and PC by dragging and dropping.

GPRS modem



The GPRS modem establishes an Internet connection via your mobile phone so that you can surf the Internet on your laptop while on the move and at the touch of a button.

Processing pictures and photos (images)



Picture/photo processing offers the user the opportunity to conveniently create, edit and manage pictures and photos. Filters and effects are offered to help create colourful, attractive graphics. The user-friendly interface makes child's play of transferring pictures/photos from or to the mobile phone, and of changing the graphic settings.

Ringtone management (sound)







The sound module allows the user to manage nearly all sound formats easily and to save them on the phone. This phone does not support MP3 functionality.

Questions & Answers

If you have any questions on the use of your phone, you can contact us at **www.siemens.com/mobilephonescustomer care** around the clock. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough. Flat battery. Battery contacts dirty. See also below under "Charging error".	Press On/Off key for at least 2 seconds. Charge battery. Check charging indicator in the display. Clean contacts.
Standby time is too short.	Frequent use of organiser and games. Fast search activated. Display illumination switched on. Unintentional keystrokes (illumination!).	Restrict use if applicable. Deactivate speed search (page 104). Switch off display illumination (page 87). Activate key lock (page 101).
Charging error (charge icon not displayed).	Battery totally discharged. Temperature out of range: +5 °C to +45 °C (+41 °F to +113 °F). Contact problem No mains voltage. Wrong charger. Battery faulty.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery. Make sure the ambient temperature is right, wait for a while, then recharge. Check power supply and connection to the phone. Check battery contacts and telephone connection socket, clean them if necessary, then insert battery again. Use different mains power socket, check mains voltage. Only use original Siemens accessories. Replace battery.
SIM error.	SIM card not inserted correctly. Dirty SIM card contacts. SIM card with wrong voltage. SIM card damaged (e.g. broken).	Check that the SIM card is inserted correctly (page 16). Clean SIM card with a dry cloth. Use 1.8 or 3 V SIM cards only. Carry out a visual check. Have service provider change the SIM card.

134 Questions & Answers

Problem	Possible causes	Possible solution
No network connection.	Weak signal. Outside GSM range. Invalid SIM card. New network not authorised. Network call barring is set. Network overloaded.	Move higher, to a window or an open space. Check service provider's coverage area. Complain to the service provider. Try manual selection or select a different network (page 103). Check network barrings (page 102). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (page 103). Switching phone off and on again can speed this up.
Calls not possible.	Second line set. New SIM card inserted. Charge limit reached. Credit used up.	Set first line  (page 104). Check for new barrings. Reset limit with PIN2 (page 47). Load credit.
Some calls not possible.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (page 102).
Impossible to make entries in Phonebook/Addressbook.	Phonebook/Addressbook is full.	Delete entries in the Addressbook/Phonebook (see standard functions, page 23).
Voice message not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (page 69).
 flashes to indicate an SMS.	SMS memory full.	Delete SMS messages (see standard functions, page 23) or archive them (page 54).
 flashes to indicate an MMS.	MMS memory full.	Delete MMS messages (see standard functions, page 23).
 flashes to indicate an MMS.	Phone memory full.	Delete messages, pictures, videos, games or applications.
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ring-tones, pictures, videos, SMS archive.	Phone memory full.	Delete files in the relevant areas. You can use the memory assistant to delete specific files (page 92).
No Internet access; downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate or set browser profile (page 79). If necessary ask your service provider.

Questions & Answers 135

Problem	Possible causes	Possible solution
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrectly set.	Set service centre (page 56).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre overloaded.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures are not displayed on the destination phone.	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect browser profile set, or wrong or incomplete settings.	Check browser settings (page 79), or contact your service provider.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If you have lost the PUK (MASTER PIN), contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (page 136).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
No fax possible.	Wrong settings in the PC.	Check settings (page 99).
	No authorisation for this service.	Contact your service provider.
Charge meter does not work.	Charge pulse is not being transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

Reset all settings to factory default, page 93: * # 9 9 9 9 # 

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens.com/
mobilephonescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then **More**) and if available, your Siemens Service customer number.

You will also find the most frequently asked questions and answers in the chapter entitled "Questions & Answers" (page 133).

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 25 93
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
Chile	8 00 53 06 62
China	0 21 23 01 71 88
Colombia	01 80 07 00 66 24
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Ecuador	18 00 10 10 00
Egypt	0 23 33 41 11
Estonia	6 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43

Libya	02 13 50 28 82
Lithuania	8 70 07 07 00
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Peru	0 80 05 24 00
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 07 00 80
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 27 22 11 18
Tunisia	71 86 19 02
Turkey	0 21 64 59 98 98
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Venezuela	0 80 01 00 56 66
Vietnam	84 89 20 24 64
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.

- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres (see also page 136).

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original or visit:
www.siemens.com/mobiledocs

CE 0168

Technical data

GSM class:	4 (2 watt)
Frequency range:	880–960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710–1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850–1,990 MHz
Weight:	102 g
Size:	111.7 × 48 × 19.5 mm (94,2 ccm)
Li-Ion battery:	750 mAh
Operating temp.:	–10 °C to +55 °C (+14 °F to +131 °F)
SIM card:	1.8 or 3.0 V

Phone ID

You will need the following information if you lose your phone or SIM card:
 the number of the SIM card (on the card):

 15-digit serial number of the phone
 (under the battery):

 the customer service number of the service
 provider:

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: up to 300 minutes

Standby time: up to 250 hours

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30–90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes
* Key input, games, organiser etc.		

Accessories

Fashion & Carry

Carrying Cases

A range of carry cases is available at specialist shops or you can visit the Siemens Mobile Store online at:



Siemens Original Accessories

www.siemens.com/shop

Energy

Li-Ion Battery (750 mAh) EBA-660

Spare battery

Travel Charger

Travel Charger EU ETC-500

Travel Charger UK ETC-510

Travel charger with an extended input voltage range of 100–240 V.

Car Charger Plus ECC-600

Charger for the cigarette lighter socket in the car. It is possible to make phone calls during charging.

Handsfree portable

Headset Basic HHS-500

Simple headset without PTT (Push to Talk) key

Headset HHS-510

Headset with PTT (Push to Talk) key to accept and end calls.

Headset Purestyle HHS-610

High quality headset with removable ear-piece and PTT (Push to Talk) key.

Headset Stereo HHS-700

Stereo headset with PTT (Push to Talk) key for listening to music and making calls.

Headset Bluetooth®

HHB-600 with EU power supply unit

HHB-610 with UK power supply unit

HHB-620 with Australian power supply unit

Elegant, small, easy to wear Bluetooth headset.

Office

Data Cable DCA-500

For connecting the phone to the serial RS232 port of the PC.

Data Cable USB DCA-510

For connecting the phone to the USB port of the PC. With charging function

Data Cable USB DCA-540

For connecting the phone to the USB port of the PC.

Multitainment

Flash IFL-600

Plug-in flash module for taking photos in areas with low ambient light.

Mobile Music Set IMS-700

The portable Mobile Music Set allows to listen to the music of the mobile phone in excellent sound quality everywhere and share it with others via active loudspeakers.

Bike-o-Meter IBS-700

The innovative Bike-o-Meter with additional water protection cap for non-outdoor phones and included altimeter combines a robust and handy cradle for the mobile phone with a powerful bike computer.

Car Solutions

Mobile Holder Antenna HMH-710

The cradle for connecting an external antenna. Ideal for use with headset or car kit portable.

Can also be used as cradle for retrofitting your handsfree car kit (series 55).

Car Kit Comfort Basic HKC-710

Handsfree kit with first-class digital call quality and supreme ease of use. The phone specific Mobile Holder Antenna is necessary in addition.

Car Kit Easy HKP-700

Facilitates convenient handsfree talking with high call quality. With the integrated, rotating cradle and the flexible microphone positioning, the telephone can be optimally adjusted to suit any vehicle interior. The power is supplied via the cigarette lighter socket.

Car Kit Portable HKP-500

With the Car Kit Portable hands-free communication is easily transferred from one vehicle to the next. Simply plug into the cigarette lighter, connect and speak.

Car Kit Bluetooth® Portable HKW-700

Bluetooth high-tech handsfree kit without cable connection to the mobile phone. Plugs into cigarette lighter socket – no installation effort.

Car Kit Bluetooth® HKW-600

Innovative Bluetooth handsfree kit with an external display for making in-car calls safely and conveniently.

Optional car kit accessories

Car Data Adapter HKO-690

Phone-In Adapter Cable HKO-570

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:



Siemens Original Accessories

www.siemens.com/shop

SAR (CX75)

RF EXPOSURE/SPECIFIC ABSORPTION RATE (SAR) INFORMATION

THIS SIEMENS CX75 PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO ELECTROMAGNETIC FIELDS.

Your cell phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy established by the Federal Communications Commission (FCC) of the U.S. Government and by Health Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for cell phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit established by the FCC and by Health Canada is 1.6 W/kg**. Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest cer-

tified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and the manufacturer must certify to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body), reported to the FCC and available for review by Industry Canada. The highest SAR value for this Siemens CX75 when tested for use at the ear is

0.781 W/kg***

and when worn on the body⁺ is

0.293 W/kg***

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Internet Association (CTIA) web-site at www.phonefacts.net or the Canadian Wireless Telecommunications Association (CWTA) website www.cwta.ca

SAR information on this Siemens CX75 phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/fccid.

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the governmental requirements for safe RF exposure.

* For body worn operation, this mobile phone has been tested and meets FCC RF exposure guidelines when used with a Siemens accessory designated for this product, where available, or when used with a carry accessory that contains no metal and that positions the handset at least 2.2 cm/0.87 in is the correct testing distance from the body. Use of other carry accessories may not ensure compliance with FCC RF exposure guidelines.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland), on the basis of the actual knowledge, does not see any necessity for special precautionary measures when using cell phones.

Further information:

www.who.int/peh-emf

www.mmfai.org

www.siemens.com/mobilephones

** averaged over 1 g of tissue.

*** SAR values may vary depending on national requirements and network bands. SAR information for different regions can be found at

www.siemens.com/mobilephones

Quality

Battery quality declaration

The capacity of your mobile phone battery will reduce each time it is charged/discharged. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Display quality declaration

For technological reasons, some small dots in other colours may appear in the display in rare cases.

Please remember that if some dots appear brighter or darker in the display, this generally does not mean that a fault has occurred.



U.S. FDA

The U.S. Food and Drug Administration's (FDA) Center for Devices and Radiological Health Consumer Update on Mobile Phones

FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known – and what remains unknown – about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through

what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna – the primary source of the RF – and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called "cordless phones," which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that handheld mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously – up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safe-

ty of mobile phones. This research has resulted in two findings in particular that merit additional study:

1. In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

2. Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³
- In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used. Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies

and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is

called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- Support needed research into possible biological effects of RF of the type emitted by mobile phones;
- Design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health.
- At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:
- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products – and at this point we do not know that there is – it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who

spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle,
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package, or
- a headset with a remote antenna to a mobile phone carried at the waist.

Where can I find additional information?

For additional information, see the following websites:

- Federal Communications Commission (FCC) RF Safety Program (select “Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters”):
www.fcc.gov/oet/rfsafety

- World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As):
www.who.int/emf
- United Kingdom, National Radiological Protection Board:
www.nrpb.org.uk
- Cellular Telecommunications Industry Association (CTIA):
www.wow-com.com
- U.S. Food and Drug Administration (FDA) Center for devices and Radiological Health:
www.fda.gov/cdhr/consumer/

¹ Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.

² Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, DC; and personal communication, unpublished results.

³ Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915- MHz simulated mobile phone signal on cognitive function in man. Int. J. Radiat. Biol., April 8, 1999.

⁴ Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors; a case-control study. Int. J. Oncol, 15: 113-116, 1999.

FCC/Industry Canada Notice

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, please contact your local service facility.

This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.



Ten Driving Safety Tips

Your Siemens wireless phone gives you the power to communicate by voice – almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

Get to know your phone and its features such as speed dial and redial.

Carefully read your instruction manual and learn to take advantage of valuable features most phones offer including, automatic redial and memory dial – most phones can store up to 99 numbers in memory dial. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

When available, use a hands-free device.

A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your phone or a speaker phone accessory, take advantage of these devices if they are available to you.

Position your phone within easy reach.

Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voicemail answer it for you.

Suspend conversations during hazardous driving conditions or situations.

Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Do not take notes or look up phone numbers while driving.

If you are reading an address book or business card while driving a car, or writing a “to do” list, then you are not watching where you are going. It’s common sense. Don’t get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

Dial sensibly and assess the traffic.

If possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip, or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting.

Stressful or emotional conversations and driving do not mix – they are distracting and even dangerous when you are behind the wheel. Make people you are talking with aware you are driving and if necessary, suspend phone conversations that have the potential to divert your attention from the road.

Use your phone to call for help.

Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 9-1-1 in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it is a free call on your wireless phone.

Use your phone to help others in emergencies.

Your wireless phone provides you a perfect opportunity to be a “good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergencies where lives are in danger, call 9-1-1, as you would want others to do for you.

Call roadside assistance or a special wireless non-emergency assistance number when necessary.

Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call to 9-1-1. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless numbers.

“The wireless industry reminds you to use your phone safely when driving.”

For more information, please call 1 (888) 901-SAFE, or visit our Web site at: www.wow-com.com

Provided by the Cellular Telecommunications Industry Association (CTIA)

Intellectual property

Intellectual Property Restrictions

All Intellectual Property, as defined below, which is owned by or otherwise the property of Siemens Information and Communications Mobile, LLC ("Siemens"), its affiliates, partners or suppliers, relating to the Phone, including but not limited to accessories, parts or software relating thereto (the "Phone System"), is proprietary under federal laws, state laws and International treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) disassemble, decompile, reverse engineer, prepare derivative works from, modify or make any other effort to create source code from the software. No title to ownership in the Intellectual Property is transferred to you through purchase or possession of the Phone or its components. All applicable rights of the Intellectual Property shall remain with Siemens, its affiliates, partners or suppliers.

Siemens will have no liability with respect to any claim of patent infringement

which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by Siemens, nor will Siemens have any liability for the use of ancillary equipment or software not furnished by Siemens which is attached to or used in connection with the Product. The foregoing states the entire liability of Siemens with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for Siemens certain exclusive rights for copyrighted Siemens software, such as the exclusive rights to reproduce and distribute copies of such Siemens software. Siemens software may be used only in the Product in which the software was originally embodied when purchased, and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such Siemens software or exercise of rights in such Siemens software is permitted. No license is granted by implication, estoppel or otherwise under Siemens patent rights or copy-

End user license agreement

This Software License Agreement ("Agreement") is between You and Siemens Information and Communication Mobile, LLC and/or one of its affiliates ("Licensor"). The Agreement authorizes You to use the Software specified in Clause 1 below, which may be included on Your phone, stored on a CD-ROM, sent to You by electronic mail, downloaded from Licensor's Web pages or servers or from other sources under the terms and conditions set forth below. This is an agreement on end user rights and not an agreement for sale. Licensor continues to own the copy of the Software and any other copy that You are authorized to make pursuant to this Agreement. Read this Agreement carefully before installing, downloading or using the Software. Further, by installing, downloading and/or using the Software, You agree to the terms and conditions of this Agreement.

1. Software.

As used in this Agreement, the term "Software" means, collectively:

- (i) all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided;
- (ii) related Licensor or third party software;

(iii) digital images, stock photographs, clip art or other artistic works ("Stock Files");

(iv) related explanatory written materials ("Documentation");

(v) fonts;

(vi) upgrades, modified versions, updates, additions and copies of the Software, if any, licensed to You by Licensor (collectively "Updates") and

(vii) any other possible documentation related thereto.

2. End user rights and use.

Licensor grants to You a non-exclusive, non-transferable end user right to install the Software or use the Software installed on the phone. The Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

3. Limitations on end user rights.

(a) You may not copy, distribute, or make derivative works of the Software.

(b) You may not use, modify, translate, reproduce or transfer the right to use the Software or copy the Software except as expressly provided in this Agreement.

(c) You may not resell, sublicense, rent, lease or lend the Software; except You may permanently transfer all of Your rights as set forth in the

Agreement only as part of a permanent sale or transfer of the phone, provided the recipient agrees to the terms of this Agreement.

(d) You may not reverse engineer, reverse compile, disassemble or otherwise attempt to discover the source code of the Software (except to the extent that this restriction is expressly prohibited by law) or create derivative works based on the Software.

(e) You shall not display, modify, reproduce or distribute any of the Stock Files included with the Software.

(f) You shall not display, modify, reproduce or distribute any of the pre-loaded content included with the software unless permitted as stated in the User Guide or in the prompts in the Software. In the event that You are allowed to display, modify, reproduce or distribute certain parts of the pre-loaded content, You shall review the "Readme" files associated with the pre-loaded content (contained on the CD) to ascertain what rights You have with respect to such materials. Pre-loaded content may not be used in the production of libelous, defamatory, fraudulent, infringing, lewd, obscene or pornographic material or in any otherwise illegal manner. You agree that You shall only use the pre-loaded content in a manner that complies with all applicable laws, including, but not

limited to, applicable restrictions concerning copyright and other intellectual property rights. You may not register or claim any rights in the pre-loaded content or derivative works thereof.

(g) You agree that You shall only use the Software in a manner that complies with all applicable laws in the jurisdiction in which You use the Software, including, but not limited to, applicable restrictions concerning copyright and other intellectual property rights.

4. Copyright.

Licensor and/or its software suppliers and their respective affiliates own the Software and all rights, including without limitation including proprietary rights therein, are protected by international treaty provisions and other applicable national laws of the country in which it is being used. The structure, organization and code of the Software are the valuable trade secrets and confidential information.

5. Multiple copies/updates.

If the Software supports multiple platforms or languages, if You receive the Software on multiple media, or if You otherwise receive multiple copies of the Software, the number of phones on which all versions of the Software are installed shall be one phone. If the Software is an Update to a previous version of the Software, You must possess a

valid end user right to such previous version in order to use the Update and You may use the previous version for ninety (90) days after You receive the Update in order to assist You in the transition to the Update. After such time You no longer have a right to use the previous version, except for the sole purpose of enabling You to install the Update.

6. Commencement & termination.

This Agreement is effective from the first date You use or install the Software. Your end user rights automatically and immediately terminate without notice from Licensor if You fail to comply with any provision of this Agreement. In such event, You must immediately delete, destroy or return at Your own cost and expense, and without entitlement to any refund of the purchase price, the phone and the Software, and all related material to Licensor.

7. Except as expressly provided

in the limited warranty for the phone, you acknowledge the Software is provided "as is" without warranty of any kind express or implied. To the maximum extent permitted by applicable law neither Licensor, Licensor's Software suppliers or their respective affiliates, nor the copyright holders make any representations or warranties, express or implied, including but not limited to the warranties of merchantability or fitness for a particular purpose or

that the Software will not infringe any third party patents, copyrights, trademarks or other rights. There is no warranty by Licensor or by any other party that the functions contained in the Software will meet your requirements or that the operation of the Software will be uninterrupted or error free.

8. Not fault tolerant.

The Software may contain technology that is not fault tolerant and is not designed, manufactured, or intended for use in environments or applications in which the failure of the licensed Software could lead directly to death, personal injury, or severe physical or environmental damage or financial loss.

9. Limitation of liability.

To the maximum extent permitted by applicable law, in no event shall Licensor or Licensor's Software suppliers or their respective affiliates and employees be liable for any lost profits, revenue, sales, data or costs of procurement of substitute goods or services, property damage, personal injury, interruption of business, loss of business information or for any special, direct, indirect, incidental, economic, cover, punitive, special or consequential damages, however caused and whether arising under contract, tort, negligence, or other theory of liability arising out of the use of or inability to use the Software, even if Licensor or its Software

suppliers are advised of the possibility of such damages. Because some countries/states/jurisdictions do not allow the exclusion or limitation of liability, but may allow liability to be limited, in such cases, the liability of Licensor, its Software suppliers and their respective affiliates and employees shall be limited to, at Licensor's option, either (a) return of the price paid less a reasonable amount for usage, or (b) repair or replacement of the Software that does not meet the limited warranty provided with the phone and which is returned in accordance with the requirements of the limited warranty.

Nothing contained in this Agreement shall prejudice the statutory rights of any party dealing as a consumer. Nothing contained in this Agreement limits Licensor's liability to You in the event of death or personal injury resulting from Licensor's negligence if law prohibits such a limitation. Licensor is acting on behalf of its software suppliers and their respective employees and affiliates for the purpose of disclaiming, excluding and/or restricting obligations, warranties and liability as provided in this clause 9, but in no other respects and for no other purpose.

10. Technical support.

Licensor has no obligation to furnish You with technical support except as agreed in writing between You and Licensor in the Limited Warranty provided with the phone.


11. Export control.


The Software may be subject to export regulations of the United States and other countries. You agree that You shall comply with all applicable export laws, restrictions and regulations of the United States or foreign agencies or authorities, and shall not export, or transfer for the purpose of re-export, any Software, product or technical data received under this Agreement or any Software or product produced by use of such technical data, including processes and services, in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.

12. Applicable law & general provisions.


This Agreement shall be governed by and construed in accordance with the laws of the State of California without regard to its conflicts of laws rules. This is the entire agreement between Licensor and You relating to the Software and it supersedes any prior representations, discussions, undertakings, end user agreements, communications or advertising relating to the Software.


Menu tree

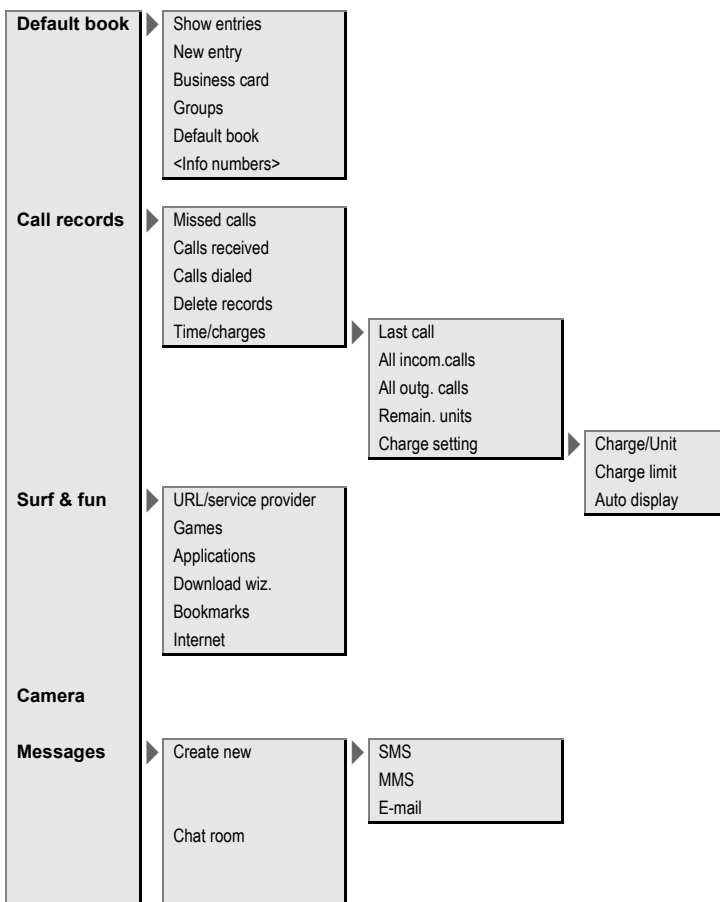

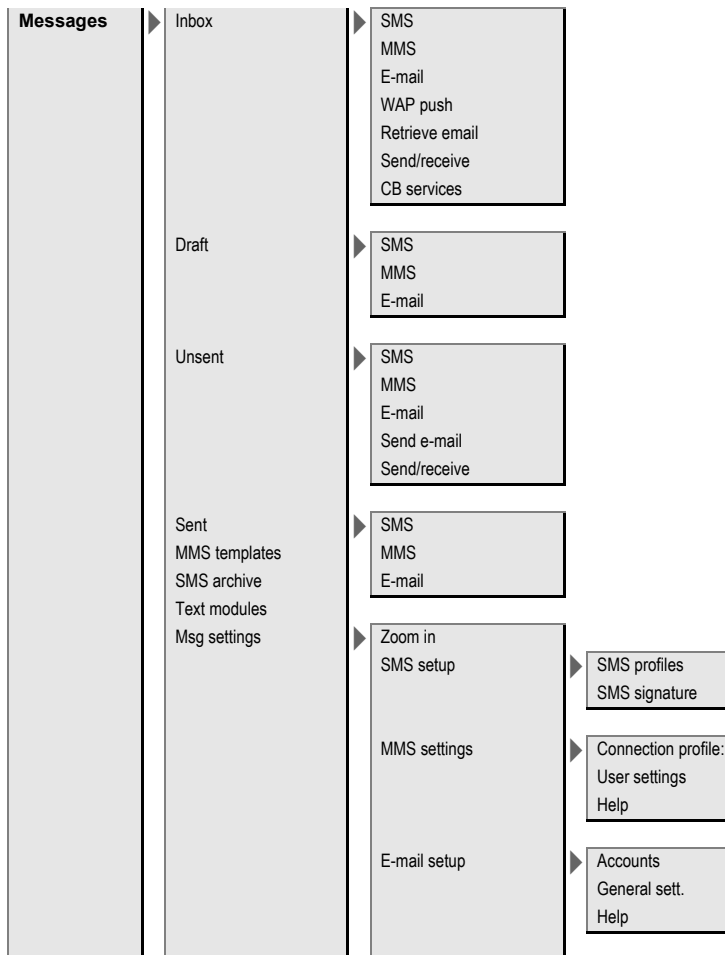




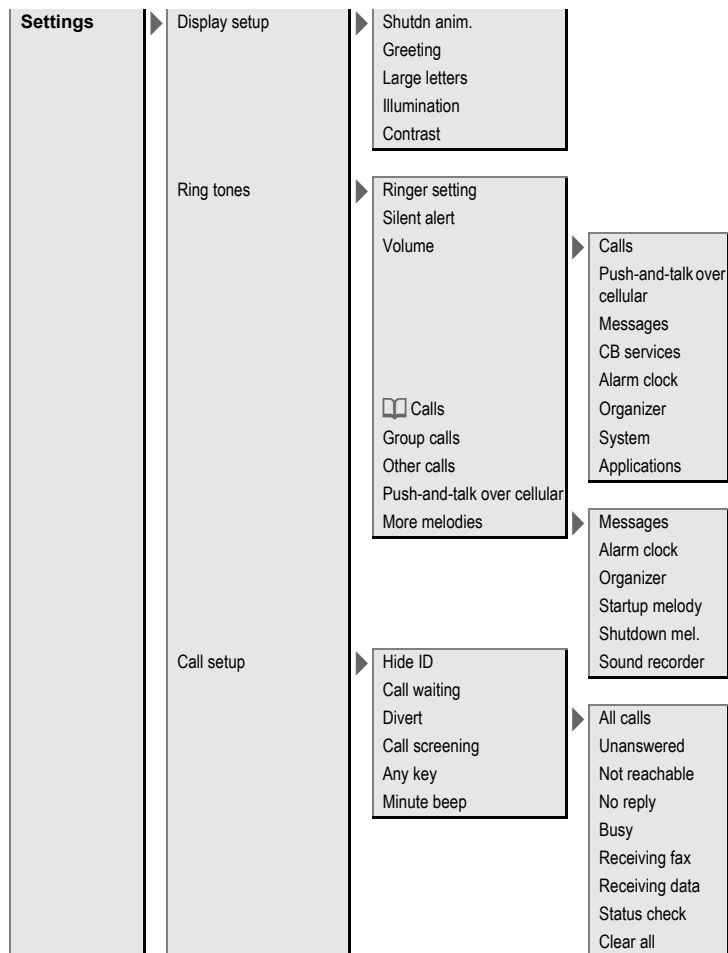

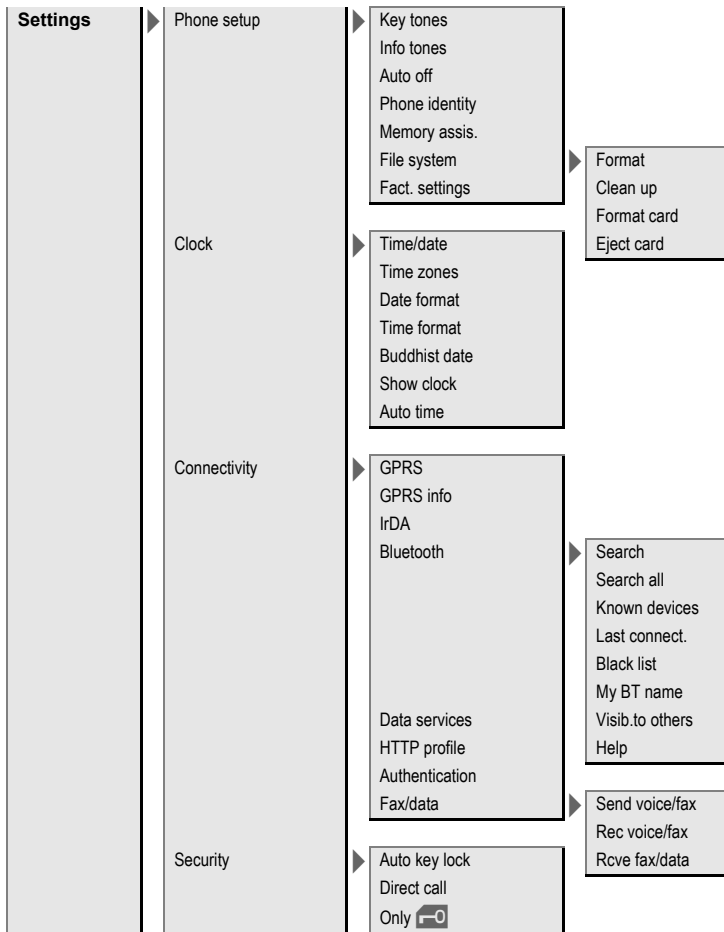

164 Menu tree

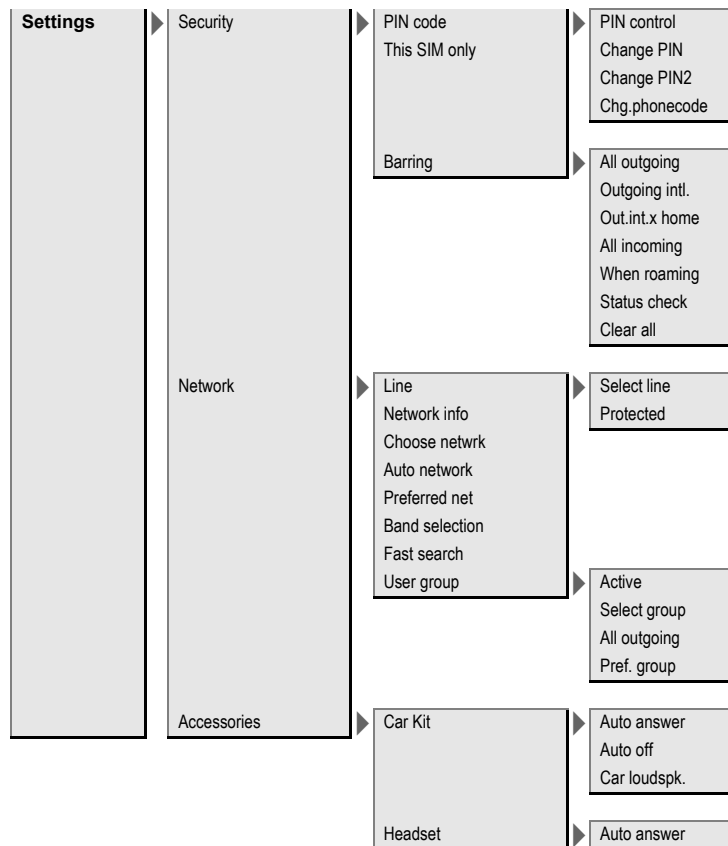

Index

A

Accessories	140
Addressbook	
Dial entry	41
Groups	42
New entry	39
Read entry	41
Aircraft mode	84
Alarm	
Alarm clock	121
Type	111
All calls (diversion)	91
All incoming (barrings)	102
Answering service (external)	69
Any key to answer	91
Appointments	110
Authentication	100
Auto display	
Clock	94
Duration/charges	47
Auto key lock	101
Auto time zone	94, 114
Auto. network dialling	103
Auto. redial	32
Automobile accessories	141

B

Band selection	104
Battery	
Charge	18
Insert	16
Operating times	19, 139
Quality Declaration	144
Big letters	87
Bluetooth®	96
Bookmarks (WAP)	78, 80
Browser	79
Buddh. year	94
Business card	38
Busy number	32

C

Calculator	123
Calendar	109
Call	
Accept/end	33
Barring	102
Charges	47
Conference	34
Divert	90
End	31
Hold	33
Menu	35
Reject	33
Swap between calls (change)	33
Call back	32
Call divert	90
Call screening	91
Call transfer	35
Call waiting	34, 90
Calling	31
Calls dialled (call record)	46
Calls received (call record)	46
Camera	48
Car Kit	
Accessories	141
Setting	105
Car kit accessories	141
Care of phone	138
Cell Broadcast (CB)	77
Charges	47
Charges/units	47
Charging the battery	18
Clock	94
Colour skin	86
Conference	34
Connection profiles	98
Connectivity	95
Contact list	71
Control code (DTMF)	36
Converter	124
Countdown	125
Credit limit	47
CSD settings	98
Currency converter	124
Customer care	136

166 Index

D

Date format	94
Default book	38
Device manag.	127
Dialling code	31
Dialling with number keys	31
Dictating machine	113
Digital Rights Management	21
Direct reply (SMS)	56
Display	
Illumination	87
Language	86
Symbols	14
Wallpaper image	86
Divert	90
Download	81
Driving safety	152
DTMF tones (tone sequences)	36
Duration/charges	47

E

E-mail	
Lists	67
Settings	68
Write	66
Emergency number	20
End user license agreement	155
Extras	115

F

Fast access	107
Fast network search	104
Fax/data mode	99
Flash	49
Formatting (phone memory)	93
Formatting (SMS text)	52
Forwarding (call)	35
Frequency range	104

G

Games and applications	81
GPRS	95
Groups	42

H

Handset volume	31
Handsfree talking	33
Headset	
Accessories	140
Setting	105
Hide ID	90

Highlighting mode	24
Hold call	33, 35
Home network	103
Hotline	136
HTTP profile	99

I

Identity number (IMEI)	92
IMEI number	92
Inbox	51
Info tones	92
Information services (CB)	77
Infrared (IrDA)	95
Input language (T9)	28
Inst. Message	70
International dialling code	32
Internet	78

J

Joystick	12
----------------	----

K

Key tones	92
-----------------	----

L

Language	86
Legal notices	3
Limit (duration/charges)	47
Logo	86
Loss of phone, SIM card	139

M

Mailbox	69
Maintenance of phone	138
Master reset	93
Media player	128
Memory assistant	92
Menu	
Controls	22
My menu	106
Speed dialling	24
Menu speed dialling	24
Menu tree	159
Message	
CB	77
E-mail	66
MMS	58
SMS	52, 54
Message memory full	57
Message type	56
Microphone on/off	35, 50
Minute beep	91


Index 167

Missed appointments.....	112
Missed calls (call record)	46
MMS	
Lists.....	63
Receive.....	62
Send.....	61
Write	58
Mobile Phone Manager.....	131
MultiMediaCard.....	130
Muting (microphone).....	35, 50
My items	37
My menu	106
My stuff.....	129

N

Network	
Barring	102
Connection.....	103
Settings.....	103
Notes.....	112

O

One number only.....	35
Only 	101
Operating times (battery).....	19, 139
Organiser.....	109
Own (phone) numbers.....	45
Own greeting	87

P

Phone code.....	25
Phone data	139
Phone identity number (IMEI)	92
Phone number memo	32
Phone number transmission.....	90
Phone setup	92
Phonebook	
Call an entry	44
New entry	43
Protected SIM	45
Special books.....	45
VIP numbers	45
Photo	48
Pictures & sounds (SMS).....	53
PIN	
Change.....	25
Control.....	25
Enter	20
Error.....	135
PIN2	25
Preferred network.....	103
Preventing accidental activation.....	26
Product data	139

Profiles	
MMS.....	64
Phone	83
SMS	56
WAP.....	80
Prompt.....	32
Provider logo.....	86
PUK, PUK2	25
Push-and-talk over cellular (PoC).....	116

Q

Questions & Answers.....	133
--------------------------	-----

R

Records	46
Redial.....	31
Reminder	32
Remote synchronisation	126
Ringtones setting.....	88
Ringtones	42, 88

S

Safety precautions.....	5
Screensaver	86
Second phone number	103
Security	25
Security codes	25
Service centre (SMS).....	56
Service provider portal.....	37
Service tones.....	92
Set time/date.....	94
Settings.....	83
Short message (SMS).....	52
Shown in the display	14
Shut down animation	87
Siemens City Portal	37
Signal strength	21
Silent alert.....	88
SIM card	
Clear barring	26
Insert	16
Problems.....	133
SIM services (optional)	115, 120
SMS	
Archive	55
Lists	55
Profiles.....	56
Read	54
Settings	56
Signature	56
T9 input	28
To group	53
Write.....	52

168 Index

Software version	92
SOS	9, 20
Sound recorder	122
Special books	45
Special characters	27
Speech time (battery)	139
Speed dialling keys	108
Standard functions	23
Standby mode	21
Standby time	19, 139
Start up animation	87
Stopwatch	125
Storage location (Phonebook)	43
Surf & fun	78
Swap	33
Switch off phone	
Automatic	92
Manually	20
Switch on phone	20
Symbols	14
Synchronisation	126
T	
T9 text input	28
Tasks	111
Technical data	139
Text entry	
With T9	28
Without T9	27
Text module	30
Themes	85
This SIM only	101
Time zones	94, 114

U

Unanswered	90
Upper and lowercase letters (T9)	27
User group	104

V

Validity (SMS)	56
Video mode	49
Video playback	128
Voice message (mailbox)	69
Volume	
Handset volume	31
Profiles	83
Ringtone	88

W

Wallpaper (display)	86
WAP push	51