

Jada	Final Output Approval (Hong Kong Office use only)	
	Signature	Date of approval
JURASSIC WORLD	Art Dept Approved	
	Engineer Approved	
	QA Engineer Approved	
Description: RC	Remarks:	
Scale: Instruction Sheet 12.5"		
Material Code: F97055-0000-ISH-EN01A		
Date: 14 JAN 2015		
Prepared By: ANDY		



KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

These operating, installation, and safety instructions are integral parts of the product.

IMPORTANT:
Please read all "CONSUMER INFORMATION" before operating this toy vehicle.
ADULT SUPERVISION REQUIRED.

Note to Adults: to ensure that the child's play is both safe and fun, please review all operating instructions and safety tips in the CONSUMER INFORMATION section with your child.

--- CONSUMER INFORMATION ---

CONTENTS:

- 1 x Vehicle With Built-in Rechargeable Battery
- 1 x Transmitter Controller, 2 x AA Batteries

SAFETY TIPS:

- Toy surface may become hot and cause burns if the electronics get wet. DO NOT OPERATE this vehicle near/in/through water, snow, sand, grass or any wet or muddy surfaces.
- Never play this vehicle on streets! The streets are for real cars!
- Do not pick up vehicle while in motion.
- Always place the car gently on the floor by hand. Never throw the car onto the floor.
- Avoid collisions with walls, any hard objects, or human/animal bodies.
- Keep fingers, hair and loose clothing away from tires and wheel hubs.
- To avoid accidental operation, remove all batteries from controller when not in use.
- Do not play with the antenna wire, as it may cause bodily injury and product defect.
- Do not connect this toy with other power supplies.
- Do not insert any wire into electrical outlets.
- Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operations.

YOUR NEW R/C IS DESIGNED WITH A BUILT-IN RECHARGEABLE BATTERY. CONTROLLER IS DESIGNED TO WORK WITH 2 AA BATTERIES, BATTERIES ARE INCLUDED.

INSTALLING 2 BATTERIES INTO CONTROLLER (See Diagram 1)

Requires 2 (two) "AA" alkaline batteries (Included)

- Using a screwdriver (not included), remove the battery compartment door.
- Remove and properly dispose of the used batteries (if any).
- Insert the 2 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
- Replace the battery compartment door and use a screwdriver to lock the compartment door.

BATTERY SAFETY INFORMATION (CONTROLLER)

- Ensure that battery polarity is correct.
- It is recommended to use only Alkaline type batteries.
- Do not mix used and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove used batteries immediately.

- Remove controller batteries if R/C will not be used for a long period of time to prevent possible battery leakage.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.

CAUTION: BUILT-IN BATTERY SAFETY INFORMATION

- The vehicle includes a non-replaceable battery. Do not open, disassemble or alter the vehicle in anyway.
- Built-in USB adapter is permanently attached to the vehicle. To protect your vehicle, only connect to USB certified port.
- Adult supervision is required when charging the vehicle.
- Never charge or store the vehicle in extremely hot or cold temperatures (about 104°F/40°C or below 14°F/-10°C) or beyond 60±25% related humidity. Don't charge or store the vehicle toy inside a parked car under the sun.
- Keep USB cable enclosed inside the chassis box after charging or before playing. DO NOT over extend or detach the cable.
- Charge battery in isolated area. Keep away from flammable materials.
- Do not expose to direct sunlight.
- Do not recharge the toy if it is hot. Allow it to cool before recharge.
- Do not drop or subject to strong impacts.
- Do not allow the batteries to get wet.
- Carefully read the instruction guide and use the batteries correctly.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher for the battery.
- Rechargeable batteries are only to be charged under adult supervision.
- Routine examination for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with USB port until the damage has been repaired.
- This toy is not intended for children under 3 years old.

QUICK TIPS

- The included rechargeable battery is not charged prior to shipment and must be charged before the first use.
- When your vehicle starts to lose power, it may lose function or performance. It's time to recharge the batteries. Your vehicle's running time may change depending on your driving style.
- Radio interference can make your vehicle run abnormally. Interference can be caused by other R/C vehicles running on the same frequency; electrical wires, large buildings; or CB radios. Try to stay away from these!
- Point your transmitter controller antenna up – not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- Don't store your vehicle near heat or in direct sunlight. Always turn the switch to the off position when not in play.

CLEANING INSTRUCTION

 
To clean, wipe excess dirt from toy. Wipe toy clean with damp cloth. Wipe dry. DO NOT IMMERSER IN WATER and DO NOT CLEAN VEHICLE WITH ANY CHEMICALS. Let the toy completely dry before playing.

INSTRUCTION FOR DISPOSAL OF WASTE

- Your batteries and electronic toys should be recycled or disposed per your local waste management guidelines.
- Contact your local waste management officials for information regarding the environmentally sound recycling and disposal of batteries and electronic toys.


CHARGING THE R/C CAR

- BUILT-IN NON REMOVABLE RECHARGEABLE BATTERY**
- CHARGING THE R/C CAR:**
- Open the USB charging plug compartment door
 - Take out the USB plug
 - Make sure the switch is in the ON/CHARGE position
 - Locate a USB certified port from any of the devices specified on the Jada Charging Eco System Chart
 - Plug in the built in USB charging plug from RC vehicle to USB certified port
 - The LED light will start blinking to show it is charging
 - Once the LED light stays on, the RC vehicle is fully charged

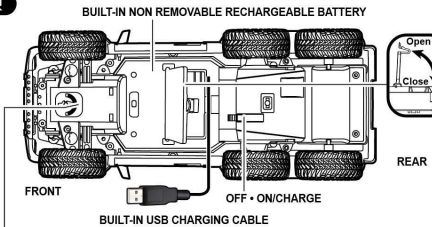


TO ADJUST STEERING ALIGNMENT

Adjust the steering alignment lever on the underside of the vehicle when the vehicle doesn't run straight forward.

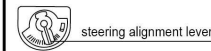

JADA HYPERCHARGERS CHARGING ECO SYSTEM

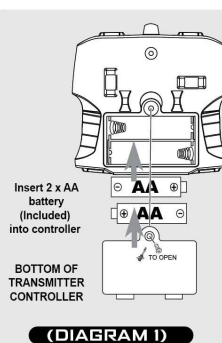 


(DIAGRAM 1)

Operations Tips:

ON / OFF switch located on the bottom of the car.
When you are ready to run, please make sure to push the ON / OFF switch to the "ON" position. Have fun!

 Power on:
LED Lights Up

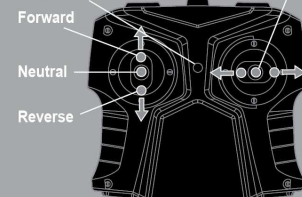

TRANSMITTER CONTROLLER

OPERATING FREQUENCY TABLE


MHz	PLAY WITH
A	RC with B & C MHz
B	RC with A & C MHz
C	RC with A & B MHz



We reserve the right to improve or amend color product content specifications. Colors may vary.
Jada oval mark is a registered trademark of Jada Toys, Inc.

©2015 JADA TOYS, INC. CITY OF INDUSTRY, CA 91748, USA

F97055-0000-ISH-EN01A

	Final Output Approval (Hong Kong Office use only)	
	Signature	Date of approval
HyperChargers	Art Dept Approved	<input type="checkbox"/>
Description: RC Instruction Sheet	Engineer Approved	<input type="checkbox"/>
Scale: 12.5"	QA Engineer Approved	<input type="checkbox"/>
Material Code: F97055-0000-ISH-EN01A	Remarks:	<input type="text"/>
Date: 14 OCT 2015		
Prepared By: ANDY		

TROUBLE SHOOTING

PROBLEM	SOLUTION
Vehicle will not START	1. Power switch is off. Make sure to turn it on. 2. Batteries are drained. Charge batteries.
Vehicle does not respond to controls.	1. Transmitter controller battery is drained. Replace the controller battery. 2. Vehicle is out of range. Bring controller closer to the vehicle. 3. Interference from surrounding electrical machinery. Bring to a wide open space.
Vehicle does not drive straight.	1. Adjust the steering dial underneath the front axle, left or right, until the wheels point straight forward.
Vehicle does not move	1. Stop operation, switch off the power and rest your vehicle a few minutes. 2. Check the channels match on the vehicle and controller.
What does MHZ stand for and where can I find it?	MHZ stands for Megahertz, which is the frequency used to communicate between the vehicle and remote. MHZ is broken down to two frequencies, 27MHZ and 49MHZ. IT IS IMPORTANT TO NOTE, IN ORDER TO PLAY WITH 2 VEHICLES SIMULTANEOUSLY, EACH VEHICLE MUST HAVE A DIFFERENT MHZ. To locate what MHZ your vehicle is, it will be clearly marked on the front of all Jada RC packaging as well as on the back or bottom of the remote unit and underneath the actual vehicle.
Why does one remote controller control both vehicles when trying to play 2 RC vehicles at the same time?	Please double check that both remotes and vehicles are not the same MHZ (Megahertz) frequency. These should be denoted as either 27MHZ or 49MHZ. NOTE: IN ORDER TO PLAY 2 VEHICLES AT THE SAME TIME, EACH VEHICLE MUST HAVE A DIFFERENT MHZ.

WWW.JADATOYS.COM

Industry Canada Warning:

Operation is subject to the following two conditions:
(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
This Category II radiocommunication device complies with Industry Canada Standard RSS-310.

COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY) THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This device generates and uses radio waves and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference.

FCC Warning:

CAUTION:
The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Important! Problems?



DO NOT RETURN IT TO THE STORE!

First, call our friendly technicians at:

1-800-679-5232

1-626-810-8910

between the hours of 9 am to 6 pm Pacific Time; Monday - Friday.

or check our websit at:

WWW.JADATOYS.COM

U.S.A & Canada

30-Day Limited Warranty

Jada Toys Products

Jada Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for thirty (30) days from the date of purchase. Jada Toys will repair or replace the product, at our sole discretion, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the phone numbers listed above. Many problems can be solved in this manner. If necessary, you will be instructed to return the product (postage pre-paid and insured by the consumer) to the address below. Include your name, address, telephone number, copy of dated sales receipt, and a brief explanation of the defect. Repair / replacement and return shipment will be free of charge. Please return the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty.

Jada Toy's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole discretion, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. **Valid only in U.S.A. and Canada.** This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-800-679-JADA (5232) (valid only in U.S.A. and Canada)

Hours: 9:00 A.M. – 6:00 P.M. Pacific Time; Monday – Friday. Expect some delay in January following the holiday season. Please be patient and keep trying the toll-free number.

Address for Returns:
Consumer Relations, Jada Toys, Inc.
938 Hatcher Ave.
City of Industry, CA 91748, USA