



(DIAGRAM 3)

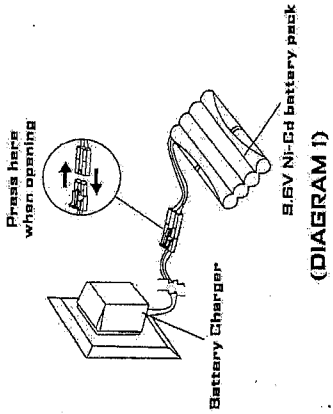

(DIAGRAM 1)

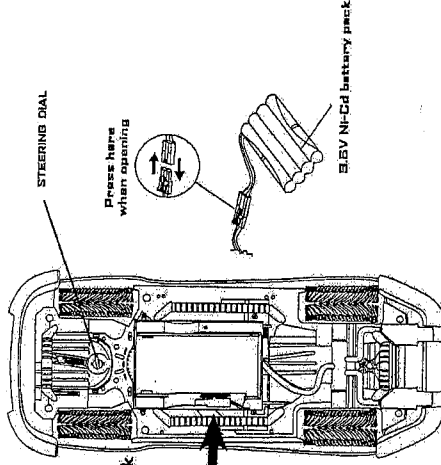

(DIAGRAM 2)



TO REPLACE BATTERY REMOVE SCREW ON BATTERY COVER AS SHOWN IN ILLUSTRATION AND REPLACE BATTERY

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period of time to prevent possible leakage.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Remove rechargeable battery before recharging.
- Rechargeable battery must be charged by adult only.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.
- Do not disassemble the battery pack.
- Battery pack can be charged for much longer periods without harm. However, we recommend unplugging the battery pack if battery pack will not be used for several days.

**Battery Performance Note:**

- When using alkaline batteries, battery life may vary depending on battery brand.

**COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY) THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
2. THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference.

**FCC Warning:**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such change or modifications could void the User's authority to operate this equipment.

**CONTENTS**

- Vehicle
- Transmitter Controller
- Antenna for Transmitter Controller
- 9.6V Ni-Cd Battery Pack
- Charger for 9.6V Ni-Cd Battery Pack (20V AC 60Hz)

**BEFORE BATTERY INSTALLATION**

Your new R/C is designed to work with standard R/C 9.6-volt Ni-Cd batteries and charger.

Controller is designed to work with a 9-volt alkaline battery.

For detailed information regarding Ni-Cd battery charging and safety, please follow the specific instructions that came with your battery pack and charger.



Keep these instructions for future reference: they contain important information.

**IMPORTANT:** Please read all "Consumer Information" before operating your vehicle.

**CAUTION: ELECTRICALLY OPERATED PRODUCT**

Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock. **ADULT SUPERVISION REQUIRED.**

Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

**Consumer Information:**

**Note to Adults:** to ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

**Safety Tips**

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.
- Battery charger used with the toy to be regularly examined for damage to cord, plug enclosure and other parts; and in the event of such damage, Toy must not be used with the battery charger until such damage has been repaired.
- For transformer toys and toys with battery boxes: toy is not to be connected to more than recommended number of power supplies.
- Recommended rechargeable battery 9.6V 700mAh Ni-Cd.
- **Battery Safety Information**
- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).

**BATTERY CHARGING:**  
(When using 9.6V Ni-Cd Battery Pack)  
**\*\*RECHARGEABLE BATTERIES ARE TO BE CHARGED BY ADULT ONLY\*\***

- (The rechargeable Ni-Cd battery pack is not charged, please charge battery for 4 (four) hours prior to use)
1. Plug the wall pack battery charger into wall outlet.
  2. Connect the cables leading from the Battery Pack and the charger together by snapping the jack and the socket tightly. (See diagram 1)
  3. To disconnect cables, press down on the clip and pull apart. (See diagram 1)
  4. After charging for 4 (four) hours, the battery will be warm. This condition is normal for fully charged batteries.
  5. After use, the battery pack will be hot!!! Wait at least 20 minutes until the battery cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.



©2004 Jada Toys, Inc.  
City of Industry, CA 91748 USA  
IMPORT RACER!™ and R/C SPEC™  
are trademarks of Jada Toys, Inc.  
All Rights Reserved.