



EURO-SPEC

R/C ROLLERS®

Keep these instructions for future reference; they contain important information.

IMPORTANT: Please read all "Consumer Information" before operating your vehicle.

Consumer Information:

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

CONTENTS

- Vehicle
- Transmitter Controller
- Antenna for Transmitter Controller

CAUTION:

ELECTRICALLY OPERATED PRODUCT
Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

ADULT SUPERVISION REQUIRED.

Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

Safety Tips

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.
- Avoid collisions with wall or hard surfaces.
- Keep fingers, hair and loose clothing away from tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.
- To avoid accidental operation, remove all batteries when not in use.
- Be sure to rest your vehicle for at least 5 minutes after every 15 minutes of operation.

BEFORE BATTERY INSTALLATION

Your new R/C is designed to work with standard 6 (six) "AA" alkaline batteries, sold separately. Controller is designed to work with a 9-volt alkaline battery, sold separately.

INSTALLING BATTERIES IN THE R/C

1. Push the ON/OFF to "OFF" position on vehicle.
2. Using a Phillips screwdriver (not included), to remove the battery compartment door underneath the vehicle. (See diagram 1)
3. Insert the 6 "AA" alkaline, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door and use Phillips screwdriver to lock the compartment door.

INSTALLING CONTROLLER - 9 VOLT BATTERY

1. (one) 9V Alkaline battery (Not included)
2. Open the battery cover as shown (See Diagram 2)
3. Install one 9V battery with polarity (+/-) as shown inside battery compartment.
3. Replace battery cover.

Battery Safety Information

 
 
- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period of time to prevent possible leakage.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.

QUICK TIPS

- When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries (Or a recharge). Your vehicle's running time may change depending on your driving style.
- Radio interference can make your vehicle run badly. Interference can be caused by other R/C vehicles running on the same frequency; electrical wires, large buildings; or CB radios. Try to stay away from these!
- Point your transmitter controller antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- Don't drive your vehicle in sand or through water or snow.
- Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.

Cleaning Instruction:

To clean, wipe excess dirt from toy. Remove batteries first. Wipe clean with wet cloth using plain water. Wipe dry. DO NOT IMMERSIE IN WATER and DO NOT CLEAN VEHICLE WITH ANY CHEMICALS. Let the toy completely dry up before putting batteries back into clean, dry battery compartment.

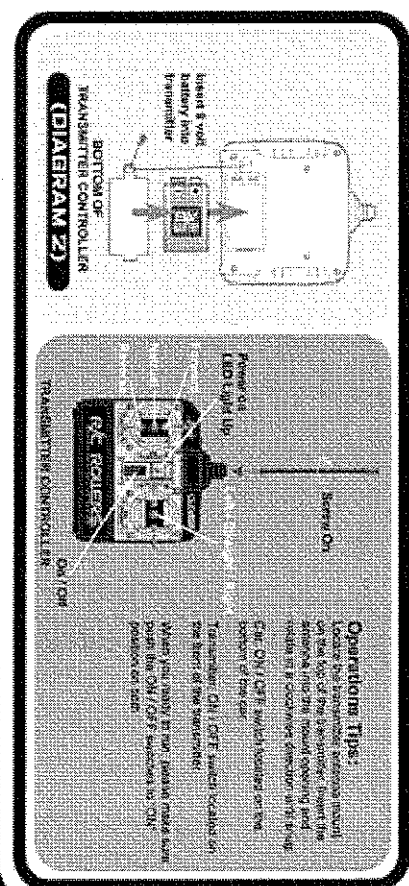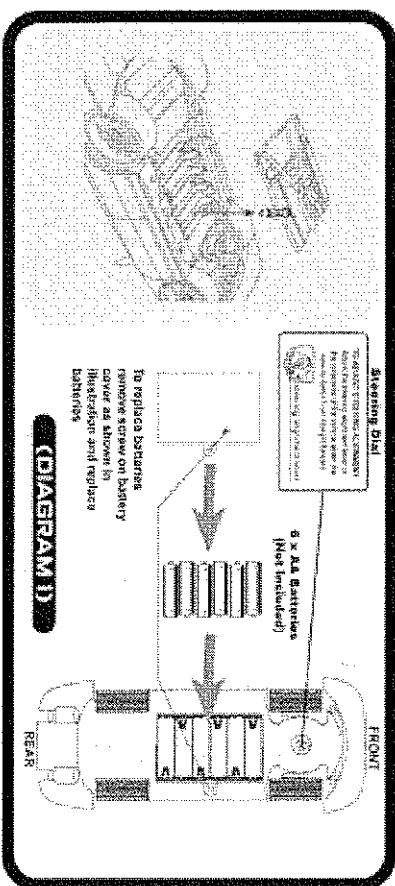

Operations Tips:

Locate the transmitter antenna on the side of the transmitter. Point the antenna into the forward opening and hold it in a downward position with the ON/OFF switch located on the bottom of the car.

Transmitter ON/OFF switch located on the front of the transmitter. When the vehicle is not used, make sure power the ON/OFF switch is in the OFF position to save battery.



©2006 Jada Toys, Inc.
City of Industry, CA 91748 USA
DUB CITY® is trademarks of
Jada Toys, Inc.
All Rights Reserved.

TROUBLE SHOOTING

PROBLEM	SOLUTION
Car will not START	1. Power switch is off. Turn on. 2. Batteries are installed with incorrect polarities. Check the + and - markings to make sure the batteries are properly aligned. 3. Batteries are drained. Charge batteries and/or install new batteries.
Car does not respond to controls.	1. Transmitter controller battery is drained. Replace the 9V controller battery. 2. Vehicle is out of range. Bring controller closer to the vehicle. 3. Interference from surrounding electrical machinery. Bring to a wide open space.
Car does not drive straight.	1. Adjust the steering dial underneath the front axle, left or right, until the wheels point straight forward.
Car does not move	1. Release the trigger immediately, and rest your car for few minutes.

WWW.JADATOYS.COM

COMPLIANCE WITH FCC REGULATIONS (VALID IN U.S. ONLY) THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
2. THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC which are designed to provide reasonable protection against such interference.

FCC Warning:

 
CAUTION:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important! Problems?

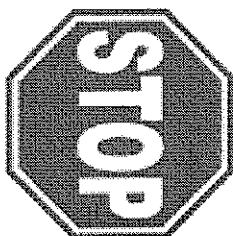

Before taking your new R/C back to the retailer, call our friendly R/C technicians at:
1-800-679-5232
between the hours of 9 am to 5 pm Pacific Time, Monday - Friday.

WWW.JADATOYS.COM
Questions or problems with your vehicle?

DO NOT RETURN IT TO THE STORE!

U.S.A. & Canada
60-Day Limited Warranty
Jada Toys R/C Products

Jada Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for sixty (60) days from the date of purchase. Jada Toys will repair or replace the product, at our sole option, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage pre-paid and insured, to the address below. Enclose your name, address, telephone number, copy of dated sales receipt and a brief explanation of the defect.

Repair or replacement, and return shipment, will be free of charge. Please return on the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty.

Jada Toys's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive and is made in lieu of any express or implied warranty. **Valid only in U.S.A. and Canada.** This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-800-679-JADA (5232) (valid only in U.S.A. and Canada)
Hours: 9:00 A.M. - 5:00 P.M. Pacific Time, Monday - Friday. Expect some delay in January following the holiday season. Please be patient and keep trying the toll-free number.

Address for Returns:
Consumer Relations, Jada Toys, Inc.
938 Hatcher Ave.
City of Industry, CA 91748