 


ElegantIndustrial PDA

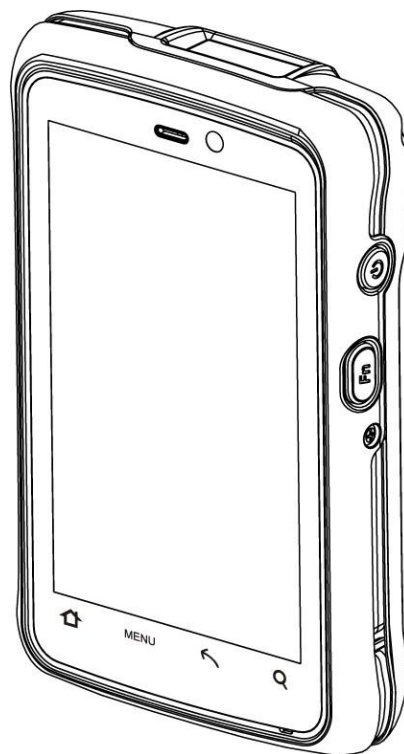

E430RM4L Series

User Guide

Version 1.0

Document Part Number:

Preface

Copyright Notice

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

Disclaimer

We reserve the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. We assume no responsibility or liability for the use of the described product(s) conveys no license or title under any patent, copyright, or masks work rights to these products, and make no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. We make no representation or guarantee that such application will be suitable for the specified use without further testing or modification.

Warranty

Our warranty guarantees that each of its products will be free from material and workmanship defects for a period of one year from the invoice date. If the customer discovers a defect, we will, at his/her option, repair or replace the defective product at no charge to the customer, provide it is returned during the warranty period of one year, with transportation charges prepaid. The returned product must be properly packaged in its original packaging to obtain warranty service. If the serial number and the product shipping data differ by over 30 days, the in-warranty service will be made according to the shipping date. In the serial numbers the third and fourth two digits give the year of manufacture, and the fifth digit means the month (e. g., with A for October, B for November and C for December).

For example, the serial number 1W16Axxxxxxx means October of year 2016.

Customer Service

We provide a service guide for any problem by the following steps: First, visit the website of our distributor to find the update information about the product. Second, contact with your distributor, sales representative, or our customer service center for technical support if you need additional assistance.

You may need the following information ready before you call:

- Product serial number
- Software (OS, version, application software, etc.)
- Description of complete problem
- The exact wording of any error messages

In addition, free technical support is available from our engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products.

Advisory Conventions

Four types of advisories are used throughout the user manual to provide helpful information or to alert you to the potential for hardware damage or personal injury. These are Notes, Important, Cautions, and Warnings. The following is an example of each type of advisory.



NOTE

A note is used to emphasize helpful information.



IMPORTANT

An important note indicates information that is important for you to know.



CAUTION

A Caution alert indicates potential damage to hardware and explains how to avoid the potential problem.



WARNING!

An Electrical Shock Warning indicates the potential harm from electrical hazards and how to avoid the potential problem.

Read Me First

Safety Information

Follow and adhere to all warnings and instructions in this manual. For your safety, please read all safety and operating instructions before using the product. Keep this manual for future reference.



General Product Safety **Sécurité générale des produits**

This product should not be used near water such as bathtubs, sinks, swimming pools, wet basement, etc.

Ce produit ne doit pas être utilisé près de l'eau comme les baignoires, les évier, les piscines, les sous-sols humides, etc.

Do not block any ventilation openings. Do not place the product against a wall or in an enclosed space as doing so might impede the flow of cooling air.

Ne pas bloquer les ouvertures de ventilation. Ne pas placer le produit contre un mur ou dans un espace clos de façon à entraver la circulation de l'air de refroidissement.

Do not place the product near any heat sources such as radiators, warm air intakes, stoves or other heat-generating devices (including amplifiers or other heat producing equipment).

Ne pas placer le produit près d'une source de chaleur comme des radiateurs, les arrivées d'air chaud, poêles ou autres produits générant de la chaleur (y compris les amplificateurs ou autre équipement produisant de la chaleur.)

Do not disregard the safety that a polarized or grounded connection can provide. A polarized connection consists of two plugs, one of which is larger than the other. A grounded connection has two blades and a third one that is grounded. If the main plug provided cannot be inserted into your outlet, consult an electrician to replace your obsolete outlet.

Ne pas ignorer la sécurité qu'une prise polarisée ou une prise de terre peut prévoir. Une prise polarisée se compose de deux fiches, dont l'une est plus large que l'autre. Une prise de terre possède deux lames et une troisième qui est la terre. Si la fiche principale fournie ne peut être insérée dans votre prise, consultez un électricien pour remplacer votre prise obsolète.

Protect the power cord from being crushed or pinched, particularly in the area of the plugs, any receptacles used, and the point of exit from the apparatus. Do not break off the ground pin of the power cord.

Empêcher le cordon d'alimentation d'être écrasé ou pincé, en particulier dans les zones de prises, des containers utilisés, et du point de sortie de l'appareil. Ne pas casser la broche de terre du cordon d'alimentation.

Use only accessories specified by the manufacturer.

Utiliser uniquement les accessoires spécifiés par le fabricant.

Use only with its transport carriage, stand, tripod, console or table specified by the manufacturer or sold with the product. When using a carriage, move the carriage assembly with the product carefully to avoid damage from falling over.

Utiliser uniquement avec son chariot de transport, support, trépied, console ou table spécifiés par le fabricant ou vendu avec le produit. Lors de l'utilisation d'un charriot, déplacez l'ensemble chariot avec le produit avec soin pour éviter tout dommage de chute.

Unplug this apparatus during lightning storms or when it is not being used for long periods.

Débrancher cet appareil durant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes.

Refer all servicing to qualified service personnel. A technical intervention is required when the apparatus has been damaged in any way, for example if the power cord or plug is damaged, liquid has been spilled or objects have fallen inside the unit, if the product has been exposed to rain or moisture, if it does not operate normally or if it has been dropped.

Confier toute réparation à du personnel qualifié. Une intervention technique est nécessaire lorsque l'appareil a été endommagé de quelque façon, par exemple si le cordon d'alimentation ou la fiche est endommagé, du liquide a été renversé ou des objets sont tombés à l'intérieur de l'unité, si le produit a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il a été jeté.



Precaution on Battery Pack
Précaution avec le bloc-pile

Do Not Expose the Battery Pack to Excessive Heat, or Extreme Heat (Near Fire, in Direct Sunlight for example)

Generation of heat, ignition or rupture may result

Ne pas exposer le bloc-pile à une Chaleur Excessive, ou une Chaleur Extrême (Près d'un feu, sous la lumière du soleil par exemple) Une production de chaleur, l'amorçage ou la rupture peuvent être occasionnés

Do Not Disassemble, Modify, or Insert Sharp Objects Into the Battery Pack. Electrolyte leakage, generation of heat, ignition or rupture may result.

Ne pas démonter, modifier, ou insérer des objets pointus à l'intérieur du bloc-pile. Une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.

Do Not Short the Positive (+) and Negative (-) Terminals of the Battery. Generation of heat, ignition or rupture may result. When carrying or storing the device, do not place the battery pack together with articles that may contact electricity.

Ne pas court-circuiter les bornes Positive (+) et Négative (-) de la pile, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés. Lors du transport et du rangement de l'appareil, ne pas placer le bloc-pile en même temps que des articles pouvant créer un contact électrique.

Do Not Apply Shocks to the Battery by Dropping It or Applying Strong Pressure to It. Electrolyte leakage, generation of heat, ignition or rupture of battery may occurs.

Ne pas faire subir de choc à la pile en la laissant tomber ou en appliquant une forte pression dessus. Une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.

Do Not Charge the Battery Other Than Methods Those Specified In This Manual. If the battery is not charged using one of the specified methods, electrolyte leakage, generation of heat, ignition or rupture may result.

Ne pas charger la pile par d'autres méthodes que celles spécifiées dans ce manuel. Si la pile n'est pas chargée en utilisant l'une des méthodes spécifiées, une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.

When the Battery Pack Has Deteriorated, Replace It with a New Battery. Continued use of a damaged battery pack may result in heat generation, ignition or battery rupture.

Lorsque la pile est détériorée, la remplacer par une nouvelle pile. L'utilisation continue d'une pile endommagée peut occasionner une génération de chaleur, l'amorçage ou la rupture de la pile.

Do Not Use the Battery Pack With Any Other Products. The battery pack is rechargeable and is only designed for this specific product. If it is used with a product other than the specified product, electrolyte leakage, generation of heat, ignition or rupture may result.

Ne pas utiliser avec un autre produit La batterie est rechargeable et a été conçue pour un produit spécifique. Si elle est utilisée sur un produit différent de celui pour lequel elle a été conçue, des pertes d'électrolytes et une production de chaleur sont possibles, elle risque également de prendre feu ou de casser.

Do Not Use This Product With Battery Other Than the One Specified.

Ne pas utiliser ce produit avec une batterie autre que celle spécifiée

Exposure to Radio Use

E430RM4L series is equipped with Cellular modem radio. In some situations or areas, user may be required to turn off the radios. For example:

- User's needs to turn the PDA OFF when in an area posted "**TURN OFF RADIO SIGNAL.**" to avoid interfering with blasting operations.
- User needs to turn OFF the radio signal in health care facilities. Hospitals or health care facilities may be using devices that sensitive to Radio Frequency energy.
- Aviation authority regulations prohibit user from using PDA while in the aircraft.

In order to prevent the handheld from emitting radio

signals, do the following steps:

- To turn off the device:
Press and hold the power button to display the PDA Options menu for 3 sec then tap the **POWER OFF**
- To set the device into airplane mode:
Press and hold the power button to display the PDA Options menu for 3 sec then tap **AIRPLANE MODE**
- To turn off the Communication options

Select **MENU** , tap **SETTINGS** , and then tap **WIRELESS & NETWORKS**.

If any radios are on, tap them to uncheck all the radios' checkboxes in the devices.

FCC RF exposure guidelines for use with an accessory that contains no metal and the positions of the handset minimum of 1.5 cm from the body. User of other enhancements may not ensure compliance with FCC RF exposure guidelines. If user do not use a body-worn accessory and are not holding the PDA at the ear, position the handset a minimum of 1.5 cm from your body when the device is switched on.

RF Exposure Information

This PDA meets the government's requirement for exposure to radio waves. This PDA is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/Kg. Test for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the PDA is designed to operate at multiple power levels so as to use only the power required to reach the network.

In general, the closer user to a wireless base station antenna, the lower the power output. For body worn operation, this PDA has been tested and meets the

Electrostatic Discharge



CAUTION

Please follow proper electrostatic discharge precaution to prevent static damage that can harm electronic components inside your device.

Driving



Using mobile device or accessories while driving may cause distraction and can be illegal in some areas where you drive. Please obey the laws and regulations on the use of mobile device

Handling and Maintenance

Follow and adhere to all warnings and instructions in this manual. For the longevity of the product usage, please read all operating instructions before using the product. Keep this manual for future reference.



General Guideline *Guide Général*

Keep the product at least 13 cm (5 inches) away from electrical appliances that can generate a strong magnetic field such as TV, refrigerator, motor, or a large audio speaker.

Garder le produit au moins à 13 cm (5 pouces) de distance des appareils électriques qui peuvent générer un fort champ magnétique comme une télévision, un réfrigérateur, un moteur, ou un important haut-parleur.

Do not place heavy objects on top of the tablet computer as this may damage the display.

Ne pas placer d'objets lourds sur le dessus de l'ordinateur tablette cela peut endommager l'écran.

The screen surface can be easily scratched. Use with care. Do not use paper towels to clean the display but use the included cleaning cloth. Avoid touching it with a pen or pencil.

La surface de l'écran peut être facilement rayée. Utiliser avec précaution. Ne pas utiliser de serviette en papier pour nettoyer l'écran mais utiliser le chiffon de nettoyage inclus. Éviter de toucher avec un stylo ou un crayon.

To maximize the life of the backlight in the display, allow backlight to automatically turn off as a result of power management. Avoid using a screen saver or other software that prevents the power management from working.

Pour maximiser la durée de vie du rétroéclairage de l'écran, autoriser le rétroéclairage résultant de la gestion de l'alimentation. Éviter d'utiliser un économiseur d'écran ou un autre logiciel empêchant la gestion de l'alimentation de fonctionner.



Cleaning Guideline *Guide de nettoyage*

Use a soft cloth moistened with water or a non-alkaline detergent to wipe the exterior of the product.

Utiliser un chiffon doux humidifié avec de l'eau ou un détergeant non alcalin pour essuyer l'extérieur du produit.

Gently wipe the display with a soft, lint-free cloth. Do not use alcohol or detergent on the product.

Essuyer délicatement l'écran avec un chiffon doux non pelucheux. Ne pas utiliser d'alcool ou un détergent sur le produit.



Touchscreen Guideline *Guide de l'écran tactile*

Use your finger or the stylus on the display. Using sharp or metallic object may cause scratches and damage the display, thereby causing errors.

Utiliser votre doigt ou le stylet sur l'écran. L'utilisation d'un objet pointu ou métallique peut provoquer des rayures.

Use a soft cloth to remove dirt on the display. The touchscreen surface has a special protective coating that prevents dirt from sticking to it. Not using a soft cloth may cause damage to the special protective coating on the touchscreen surface. To clean off hard to remove dirt, blow some steam on the particular area and gently wipe away using a soft cloth.

Utiliser un chiffon doux pour enlever la poussière sur l'écran. La surface de l'écran tactile a un revêtement protecteur spécial empêchant la saleté de se coller à lui. Ne pas utiliser un chiffon doux peut endommager le revêtement spécial sur la surface de l'écran tactile. Pour nettoyer les saletés plus difficiles à enlever, souffler de la buée sur la zone particulière et essuyer doucement avec un chiffon doux.





Do not use excessive force on the display. Avoid placing objects on top of the display as this may cause the glass to break.

Ne pas utiliser une force excessive sur l'écran. Éviter de placer des objets au dessus de l'écran cela pourrait provoquer une cassure du verre.

When there is a noticeable discrepancy in the operation of the touchscreen function (your touch does not correlate to the proper location on the screen), recalibrate the touchscreen display.

Lorsqu'il y a un écart sensible dans le fonctionnement de l'écran tactile (votre contact ne correspond pas à la bonne position sur l'écran), recalibrer l'écran tactile.

Important Information

Countries/ Area	Symbol	This equipment complies with essential requirements of:
European Union 		Electromagnetic Compatibility Directive(2014/30/EU) Low Voltage Directive (2014/35/EU) Radio and Telecommunication Terminal Equipment (R&TTE) Directive (2014/53/EU)
USA 		FCC Part 15 Subpart B Regulations Class B

EC Declaration of Conformity



This equipment is in conformity with the requirement of the following EU legislations and harmonized standards. Product also complies with the Council directions.

Electromagnetic Compatibility Directive (2014/30/EU)

- EN55024: 2010 EN 55022: 2010 Class B
 - IEC61000-4-2: 2009
 - IEC61000-4-3: 2006+A1: 2007+A2: 2010
 - IEC61000-4-4: 2012
 - IEC61000-4-5: 2014
 - IEC61000-4-6: 2013
 - IEC61000-4-8: 2010
 - IEC61000-4-11: 2004
- EN55022: 2010/AC:2011
- EN61000-3-2:2014
- EN61000-3-3:2013

Low Voltage Directive (2014/30/EU)

- EN 60950-1:2006/A11:2009/A1:2010/A12:2011/ A2:2013

Radio and Telecommunication Terminal Equipment (R&TTE) Directive (2014/53/EU):

Federal Communications Commission Radio Frequency Interface Statement



This mobile PDA complies with part 15 of the FCC Rules..

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This mobile PDA has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure information (SAR)

This PDA is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States. During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and near the body with the separation of 15 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the PDA is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

This device is complied with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528. This device has been tested and meets the FCC RF exposure guidelines when tested with the device directly contacted to the body.

The FCC has granted an Equipment Authorization for this model PDA with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model PDA is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: PX9E430RM

SAR compliance for body-worn operation is based on a separation distance of 15 mm between the unit and the human body. Carry this device at least 15 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 15 mm between this device and your body. RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

IC NOTICE TO CANADIAN USERS

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. This device complies

This Class B digital apparatus complies with Canadian ICES-003.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter, except tested built-in radios.

The County Code Selection feature is disabled for products marketed in the US/ Canada.

Radiation Exposure Statement:

The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Cet appareil et son antenne ne doivent pas être situés ou fonctionner en conjonction avec une autre antenne ou un autre émetteur, exception faite des radios intégrées qui ont été testées.

La fonction de sélection de l'indicatif du pays est désactivée pour les produits commercialisés aux États-Unis et au Canada.

Déclaration d'exposition aux radiations:

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les États-Unis et le Canada établies pour un environnement non contrôlé.

Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

Contents

PREFACE	I
READ ME FIRST	III
SAFETY INFORMATION	III
EXPOSURE TO RADIO USE.....	V
RF EXPOSURE INFORMATION	VI
ELECTROSTATIC DISCHARGE	VI
DRIVING	VI
HANDLING AND MAINTENANCE	VI
ABOUT THIS USER GUIDE	1
CHAPTER 1 GETTING STARTED	2
INTRODUCTION	2
PRODUCT FEATURES.....	2
UNPACKING.....	2
DESCRIPTION OF PARTS	4
<i>Front View</i>	4
<i>Rear View</i>	5
<i>Dimensions</i>	7
GETTING STARTED	8
<i>SIM Card and SD Card Installation</i>	8
<i>Battery Installation</i>	9
<i>Charging the Battery</i>	10
TURNING ON AND OFF THE DEVICE	11
<i>Turning ON</i>	11
<i>Turning OFF</i>	11
RESETTING TO FACTORY DEFAULTS.....	12
CHAPTER 2 USING THE DEVICE	13
USING THE TOUCH SCREEN.....	13
WAKE UP THE PDA	14
USING THE HOME SCREEN.....	14
<i>Personalizing Home Screen</i>	15
<i>Viewing other parts of the Home Screen</i>	17
STATUS AND NOTIFICATION ICONS	18
<i>Notification Icons</i>	18
USING THE ON-SCREEN KEYBOARD	18
<i>Entering Text</i>	18
<i>Editing Text</i>	19
DISPLAY SETTINGS	20
AUDIO PROFILE SETTINGS	22
<i>Sounds Settings</i>	22
<i>Adjusting Volume</i>	22
LANGUAGE AND KEYBOARD SETTINGS.....	23
<i>Changing the Keyboard Language</i>	24
ABOUT PHONE.....	25
CHAPTER 3 USING WINMATE HOME MANAGER	26

HOW TO LOCK APPLICATIONS	26
HOW TO UNLOCK APPLICATIONS	29
CHAPTER 4 CONNECTING TO NETWORK AND DEVICES	31
CONNECTING TO COMPUTER VIA USB	31
<i>USB Computer Connection</i>	31
<i>USB Debugging Settings</i>	32
CHAPTER 5 USING CAMERA	34
CAPTURING PHOTOS OR VIDEO	34
<i>Opening Camera</i>	34
<i>Taking pictures</i>	34
<i>Switching between front and rear cameras</i>	35
<i>Viewing pictures</i>	35
<i>Shooting videos</i>	35
CHAPTER 6 DATA CAPTURING	37
ANDROID WINMATE DATA COLLECTION (WDC)	37
<i>Where To Find WDC?</i>	37
<i>How to Turn On/Off the Power of Barcode Reader?</i>	38
<i>How to change the symbologies of Barcode?</i>	39
<i>How to add command to my output of the barcode?</i>	39
<i>How to change the scan type for the Barcode Reader?</i>	40
<i>How to change the setting of the application WDC or reset the setting back to default?</i>	40
<i>Scanning the Barcode</i>	41
<i>Scanning Tips and Considerations</i>	42
CHAPTER 7 ACCESSORIES	43
STANDARD ACCESSORIES.....	43
<i>Universal USB Adapter</i>	44
<i>Micro USB Cable</i>	44
<i>Bluetooth Manager</i>	45
<i>Micro SD Card</i>	45
<i>Screen Protector</i>	45
<i>Hand Strap</i>	45
OPTIONAL ACCESSORIES.....	46
<i>Two Slot Battery Charger</i>	47
<i>Charging Dock</i>	47
<i>Micro USB Host Cable (OTG Cable)</i>	48
<i>Bluetooth Printer</i>	48
<i>Soft Case Holder</i>	49
<i>Lanyard</i>	49
APPENDIX A: PRODUCT SPECIFICATIONS.....	50
APPENDIX B: ORDER INFORMATION	52
APPENDIX D: WINMATESOFTWARE DEVELOPMENT KIT.....	53

About This User Guide

This User Guide provides information about using the Winmate® E430RM4L and accessories.



NOTE

Some pictures in this guide are samples and can differ from actual product.

Documentation set

The documentation set for the E430RM4L provides information for specific user needs, and includes:

- **E430RM4L Series Quick Start Guide** - describes how to get the E430RM4L up and running.
- **E430RM4L Series User Guide** – contains detailed description on how to use the E430RM4, its components and features.

Configurations

This guide covers the following configurations of E430RM4L Series:

Model Number	Specifications
E430RM4L	Standard
E430RM4L-3BM	1D/2D Barcode Reader
E430RM4L- 3HF	HF RFID Reader

Chapter Descriptions

[Chapter 1, Safety Information](#) provides important safety information for you to know prior using E430RM4L.

[Chapter 2, Getting Started](#) provides basic instructions on how to use E430RM4L, including main SIM card, SD card and battery installation, powering on and resetting E430RM4L.

[Chapter 3, Using the Device](#) provides basic instructions on using the E430RM4L.

[Chapter 4, Connecting to Network and Devices](#) explains how to connect E430RM4L to networks, Bluetooth devices, and computer.

[Chapter 5, Data Capture](#) provides information on how to use Barcode Reader, Smartcard Reader and Fingerprint Scanner that might be present in E430RM4L.

[Chapter 6, Accessories](#) describes the available accessories and how to use them with the E430RM4L.

Chapter 1 Getting Started

This chapter tells you information about Winmate® E430RM4L Series PDA, its highlighted features, and provides basic instructions for using the E430RM4L, including powering on and resetting the E430RM4L.

Introduction

Thank you for purchasing Winmate® E430RM4L Series Industrial PDA. Winmate® E430RM4L Series Industrial PDA is an enterprise-class PDA with powerful mobile computing solution. The E430RM4L series PDA brings a new level of flexibility, functionality and rugged design to pocket-sized mobile devices, providing task workers and managers with the power to streamline business processes, increasing productivity and improving customer service.

The E430RM4L pack WWAN function—all into a single device. With great multiple wireless communicate design, this product will be applicable to mobile worker, business application, and IT requirements.

Product Features

Wimate® E430RM4L Industrial PDA features:




- ARM® Cortex™-A53 Quad-core 1.3Ghz
- 4.3" 800x480 Panel with Projective Capacitive Multi-touch
- Built-in 2 Mega-pixel Camera at front side and 8 Mega-pixel Camera with LED at rear side
- Support NFC function as default
- Compliance with MIL-STD-810G for High/Low Temperature, Vibration, Drop Test
- Support Android 5.1 operating system
- •3900 mAh full-day battery with user-replaceable design
- Other new era tech includes Barcode/RFID and micro-SD card slot




Unpacking


E430RM4L User Guide

If any of the following items are missing or damaged, contact us.

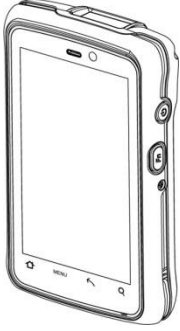Standard packing list includes:

		
E430RM4L Series PDA	Quick Start Guide (hardcopy)	Li-poly Battery

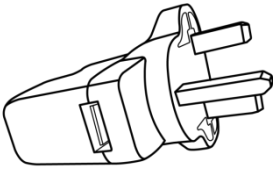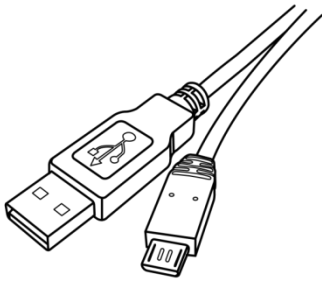		
*Universal USB Adapter Input: AC 100-240V 50/60 Hz Output : 5V-1A	Micro USB Cable	Micro SD Card (4GB)

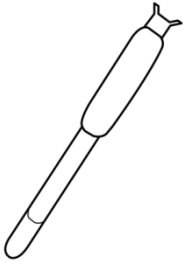
Hand Strap

 
**Universal USB Adapter socket varies by country and region. E430RM4L will be shipped with the socket according to your order.*

Your package may include optional accessories based on your order. To see the list of available accessories and its specifications, refer to [Chapter 6](#) of this User Guide.

Inspect the equipment for damage. If any equipment is missing or damaged, contact us..




Description Of Parts

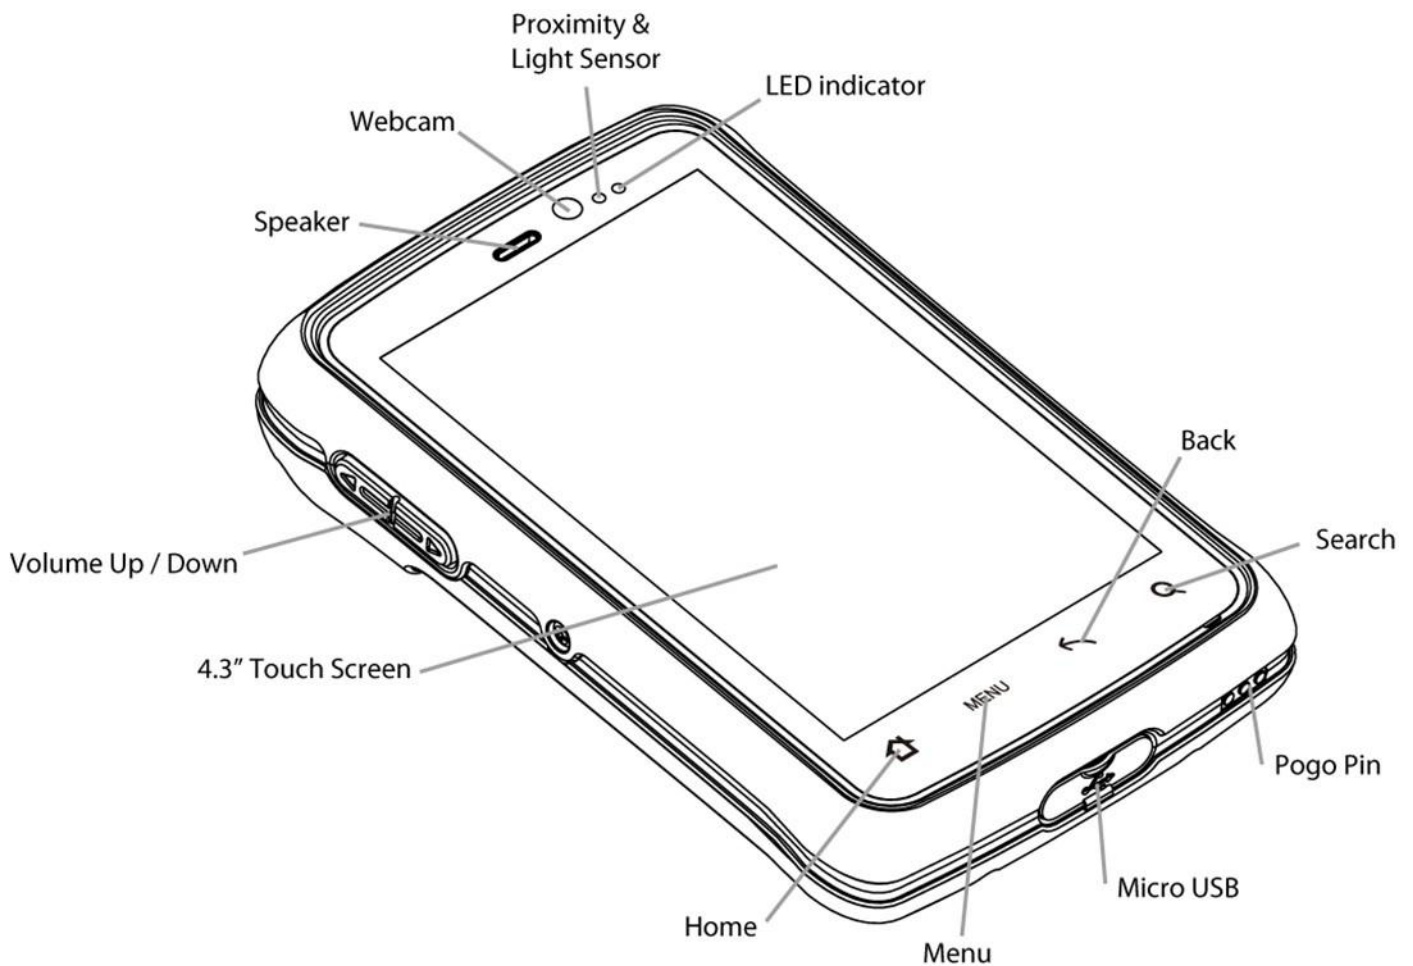Front View




Parts Description:

No	Item	Description
1	LED Indicator	LED indicator indicates the battery power or charging status
2	Light Sensor	Light sensor detect the availability of light and automatically control the brightness of a screen backlight intensity
3	Proximity Sensor	Proximity function is used specifically towards near field proximity applications. In mobile PDAs, the proximity detection can detect when the user positions of mobile PDA is close to their ear
4	Webcam	To capture a front view picture and use for Video call.
5	Speaker	Speaker provides audio output.
6	Volume Up / Down	Increases or decreases the call volume when a call is in progress. In other applications, it controls the volume of music or
7	4.3" Touch Screen	Displays all information needed to operate the device.


8	Capacitive Touch Keys		Opens the home screen with single touch
		MENU	Opens a menu with items that affect the current screen or application
			Opens the previous screen and to close onscreen keyboard if it is open and Return to the previous action
			Opens Google search
9	Micro USB	Use for making a voice recordings	
10	Pogo Pin	Pogo-pin can be used for charging & extension function	

 Rear View

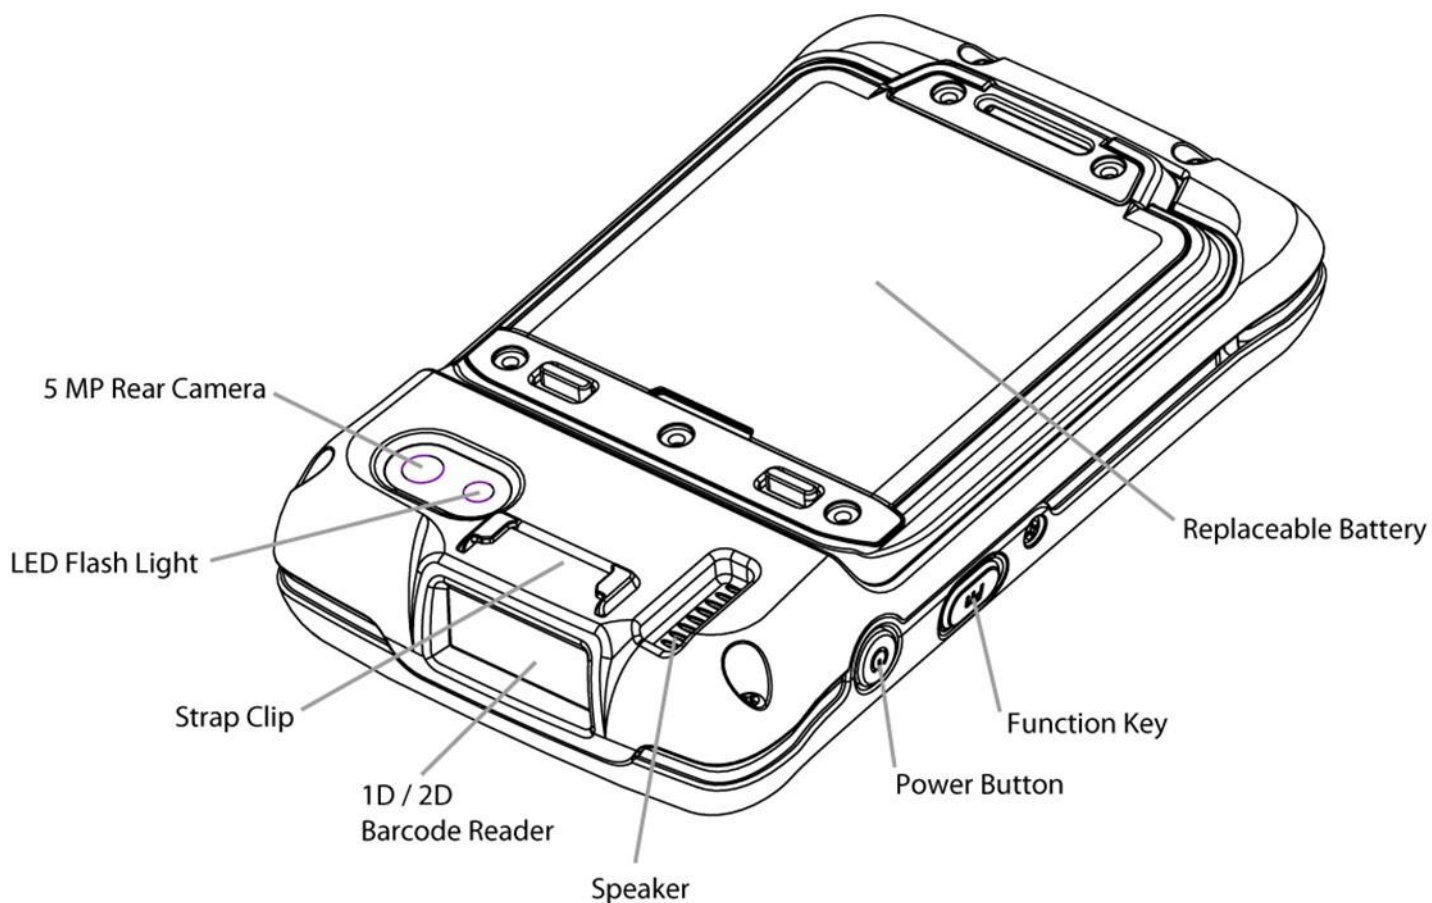

No	Item	Description
1	5MP Rear Camera	To capture a rear view picture and use for making videos.
2	LED Flash Light	Use it as a flashlight to enhance light while making photos.
3	Strap Clip	To install a hand strap
4	Barcode Reader (optional)	1D/2D Barcode Reader <i>*Note: Will change to flat cover when without Barcode Reader</i>
5	Speaker	Provides audio output for music and video
6	Power Button	Press and hold the button for 3 seconds to turn on E430RM4L. Press to turn on/off the screen. Press and hold the button for 3 seconds to select: <ul style="list-style-type: none"> • POWER OFF –to turn off the device press button for 8 Sec to force system power off • AIRPLANE MODE –to disable all wireless connection • SILENT MODE – to disable all the sounds except for the alarms • VIBRATION MODE – to vibrate all the notifications across the entire device • NORMAL MODE – Return to the user setting mode Press and hold the button for 8 seconds to reboot the device.
7	Removable Battery	Removable battery
8	Function Key	Use to trigger the barcode reader for E430RM4L series with barcode reader (differs by product type)

 Dimensions

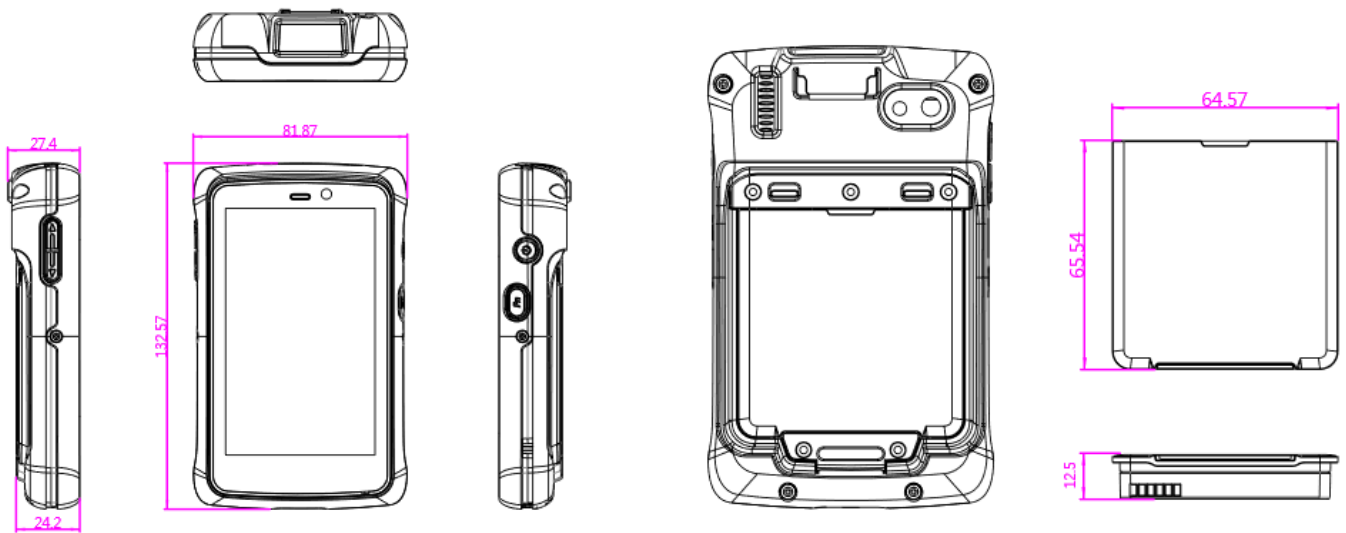

**Note: Measurements shown in mm.*

***Note: this is a simplified drawing and some components are not marked in detail. Please contact our sales representative if you need further product information.*

Getting Started

 
 
To start using the E430RM4L for the first time:

- Install SIM Card
- Install Micro SD Card
- Install the Battery
- Charge the E430RM4L
- Power on the E430RM4L
- Configure the E430RM4L


SIM Card and SD Card Installation

To Install the SIM Card and SD Card:



1. Place the E430RM4L facing down.
2. Press the two latches up and removable the battery.

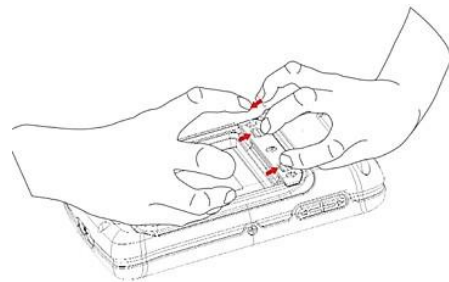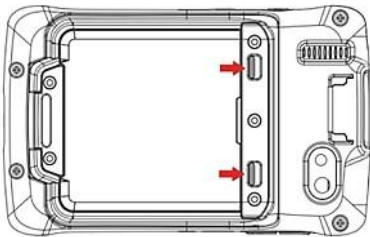

 3. Locate the SIM card holder
4. Insert the SIM card (with the gold parts facing down and cut-off corner facing out) in the direction of the arrow as shown in the figure.

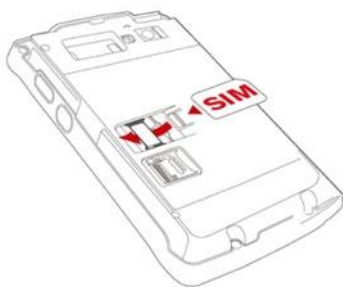

  5. Locate the SD card holder.
6. Push the SD card holder in the direction of the arrow to unlock it.

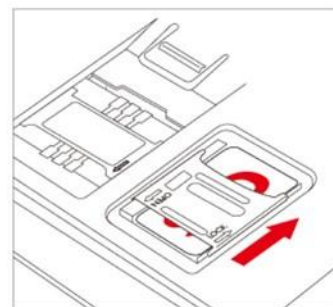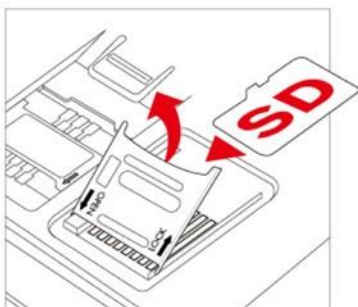


7. Pick and raise the SD card holder up in upright position and then put the SD Card into the socket.
8. Close the SIM card holder and push it into lock position until there is a click sound.

Battery Installation

Inserting the standard BatteryPack into the device:

 1. Disconnect AC adapter and power cord from the device.
2. Turn the device over, back facing up.
3. Locate the Battery Lock Latch and push it to the “Unlocked” position.
4. Locate the Battery Release Slider that is spring-loaded. Pull back and hold.
5. Insert the battery on the connector-pins side first, and then lower the battery into the battery compartment. Continue to hold the Battery Release Slider before battery is fully inserted.
6. Make sure the battery is completely lowered into the compartment before letting go the Battery Release Slider. Battery will be flat against the housing once fully inserted.


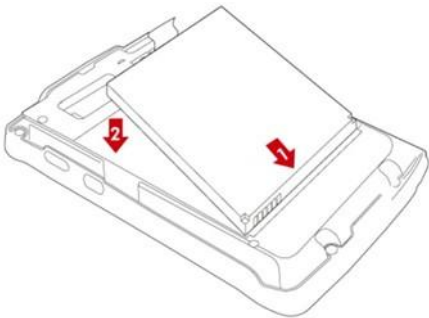


Reinsert the battery by latching the bottom first (1) and then pushing the battery pack down (2).



CAUTION

  Check the battery latch:

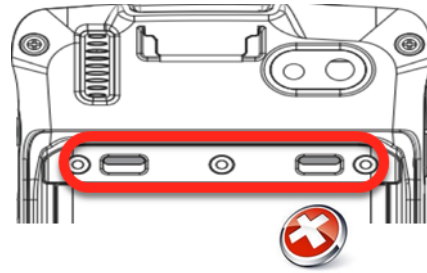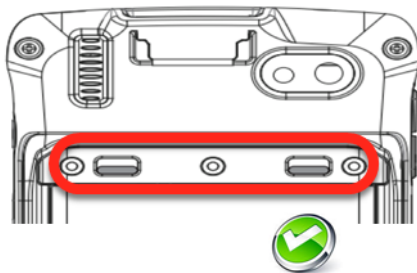




Removing the Battery Pack:


1. Power off the PDA. Disconnect any cords connected to the device.
2. Turn the PDA over, back facing up.
3. Locate the Battery Lock Latch and push it to the “Unlocked” position.
4. Locate the Battery Release Slider that is spring-loaded. Pull back and hold.
5. Lift the battery out using the opening on side of battery compartment.

Charging the Battery

Please charge the battery before using the PDA for the first time, charge the battery until the LED indicator turns solid green. To charge the E430RM4L, use a cable or a docking with appropriate power supply. For more information about the E430RM4L accessories, refer to [Chapter 6](#).


LED Status	Indicator	
OFF	The PDA is not charging or not properly connected	
Solid Red		Low battery
Solid Orange		Charging in progress
Solid Green		Charging complete

 Charging the battery using USB Cable

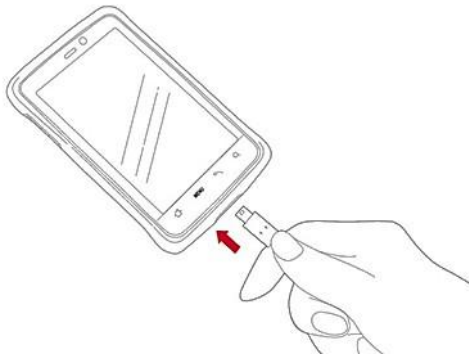

1. Connect the power supply output connector to the input power port on the DC Jack cable.
2. Remove the protective rubber and connect the DC Jack cable to the side of E430RM4L. The battery charge LED indicates the battery charging status.

 Charging the battery using Charging Dock

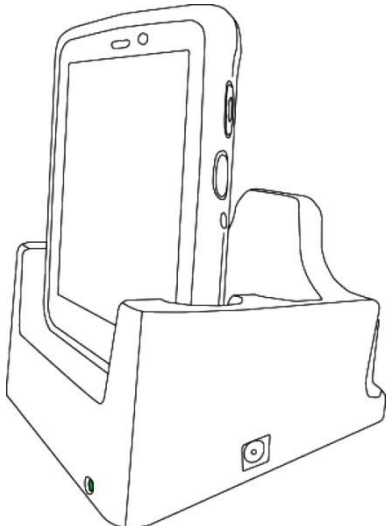

1. Connect the battery charger dock to power, insert the battery into the slot to begin charging.
2. The E430RM4L LED indicator indicates the status of the battery charging

 
This docking provides input: 12V/36W DC in

Turning On and Off the Device

This section describes how to turn on/ off the device.

Turning ON


1. Press and hold the power button for 3 seconds, located on the right side of the unit.

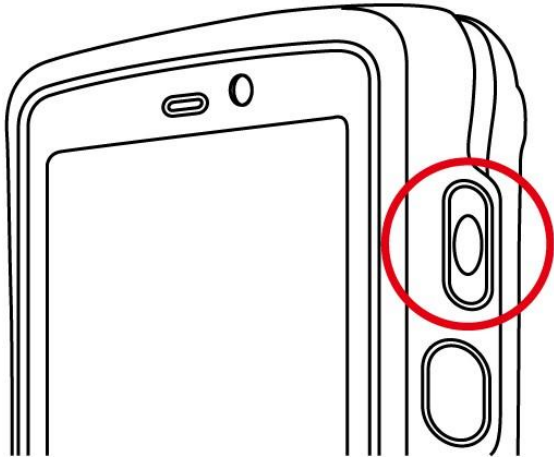

2. When the device vibrates, release the power button.
The desktop screen is displayed.


Turning OFF



 
1. To turn off the device, press and hold the power button until the PDA options menu appears, tap the **Power Off**.
2. User can also use the PDA options menu to put the device into silent or airplane mode, see features table.

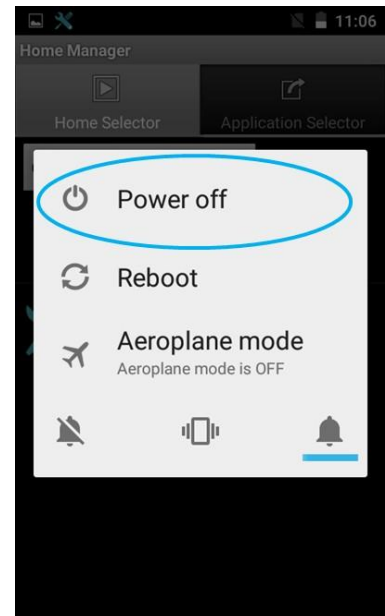

Resetting to Factory Defaults

To reset the device to factory defaults:

   1. Tap **Menu** , then tap **Settings**
2. In the **Personal** tab, tap **Backup & Reset**.
3. User can select to back up application data, passwords and other settings to Google servers by tapping **Backup My Data**.
4. Tap **Factory Data Reset** to reset the PDA.

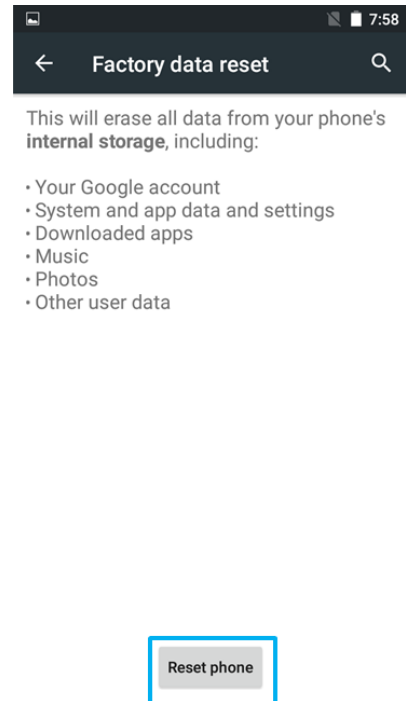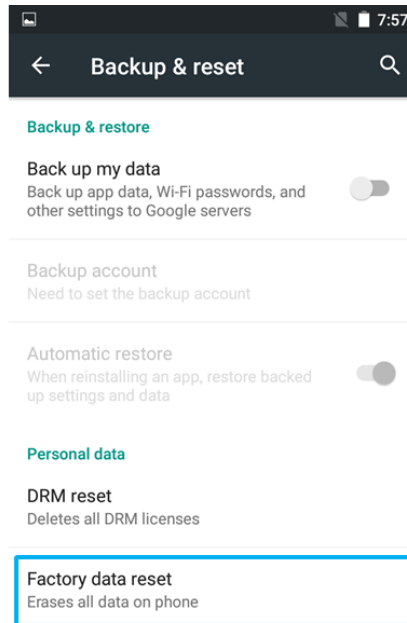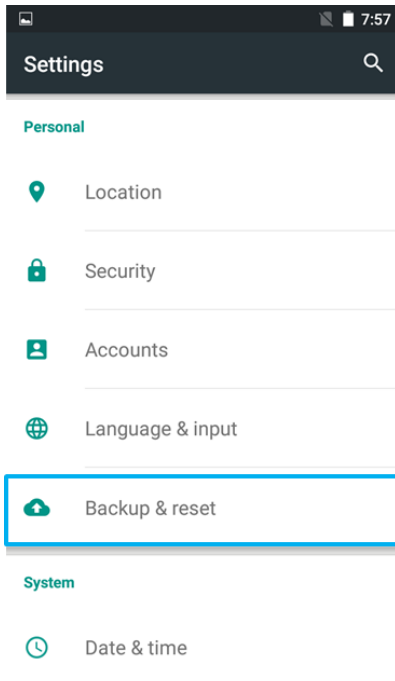








5. Read all the available information and then check Erase PDA storage if user wants to erase all the data on the PDA storage such as music or photo.

Chapter 2 Using the Device

This chapter explains how to use the buttons, status cons, and controls on E430RM4L PDA running on Android 5.1 Operating System, provide instructions on entering and capturing data.

Using the Touch Screen

The touchpad supports the core gestures for Android.

Gesture	Action	Description
Tap		To select or activate something
Tap& Hold		Touch and hold an item on the screen by touching it and not lifting your finger until it respond
Touch, Hold & Drag		Touch and hold an item for a moment and then without lifting your finger, move your finger on the screen until you reach the target position. i.e. moving the apps around the home screen
Swipe or slide		Quickly move the finger across the surface of the screen. i.e. slide a lock screen to open the lock
Double-tap		Tap quickly twice on a webpage, screen, or App to zoom
Scale		Place two finger on the screen and pinching them together
Rotate		Two-finger press, simultaneously orbit both fingers around the center point, lift.

Wake Up the PDA

If you do not use the PDA for a while, the screen dims and then darkens to conserve the Battery. To wake up the PDA:

 
1. Press the Power button on the right side of the PDA.

2. Drag the lock icon up



Using the Home Screen


Home screen is the starting point to access all the features on your PDA Device. It displays application icons, widgets, shortcuts, and other features. User can personalize the home screen. See “Personalizing home screen”.



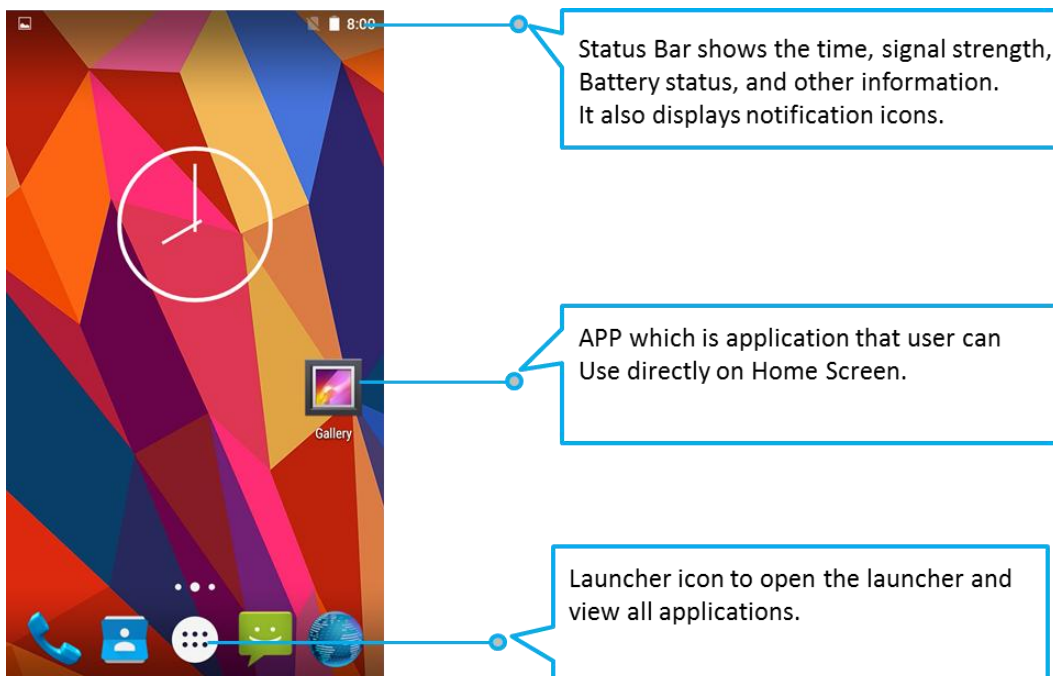


Personalizing Home Screen

User can add application icons, shortcuts, widgets, and other items to any part of any Home screen where there is free space. User can also switch the wallpaper.

To change wallpaper on the HOME SCREEN:

   1. Tap **MENU** , and then open **Settings**.
2. In the Device tab, tap **Display > Wallpaper**.
3. In the Wallpaper menu select the location of wallpaper, and then tap the type of item you want to add.

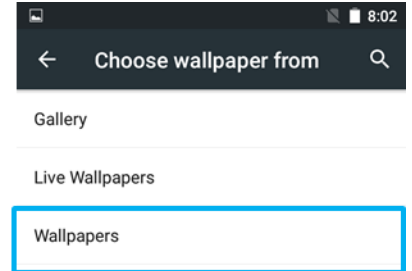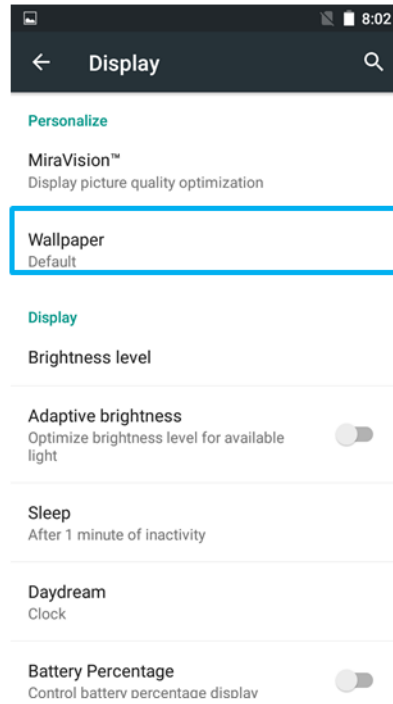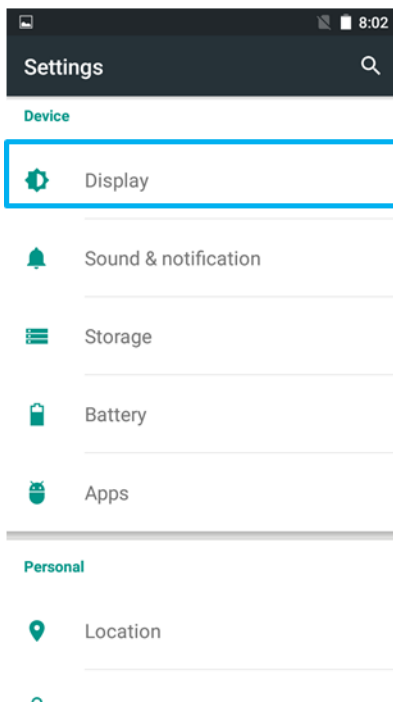


To move an item on the HOME SCREEN:

1. Tap and hold the item you want to move, until it can be moved.
2. Drag it to a new location on the screen.
3. Place the item where you want to put it and lift your finger.


**To remove items from the HOME SCREEN:**

 1. Tap and hold the item you want to remove. The launcher icon will show **Remove** on the top of the screen.
2. Drag the item you want to remove to the Remove icon.
3. When the icon turns red, release your finger.

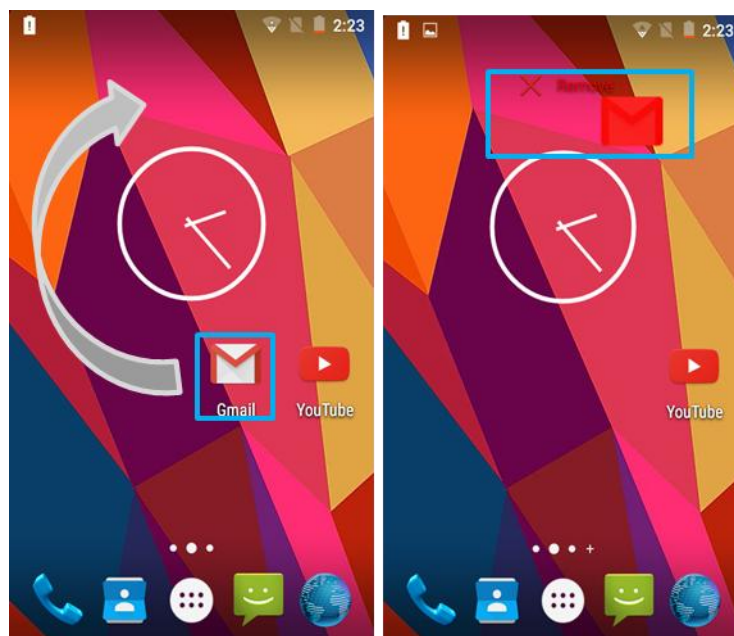


Viewing other parts of the Home Screen

 1. Slide your finger left or right across the Home screen Extensions to the Home screen provide extra space for APPS, shortcuts, and other items.

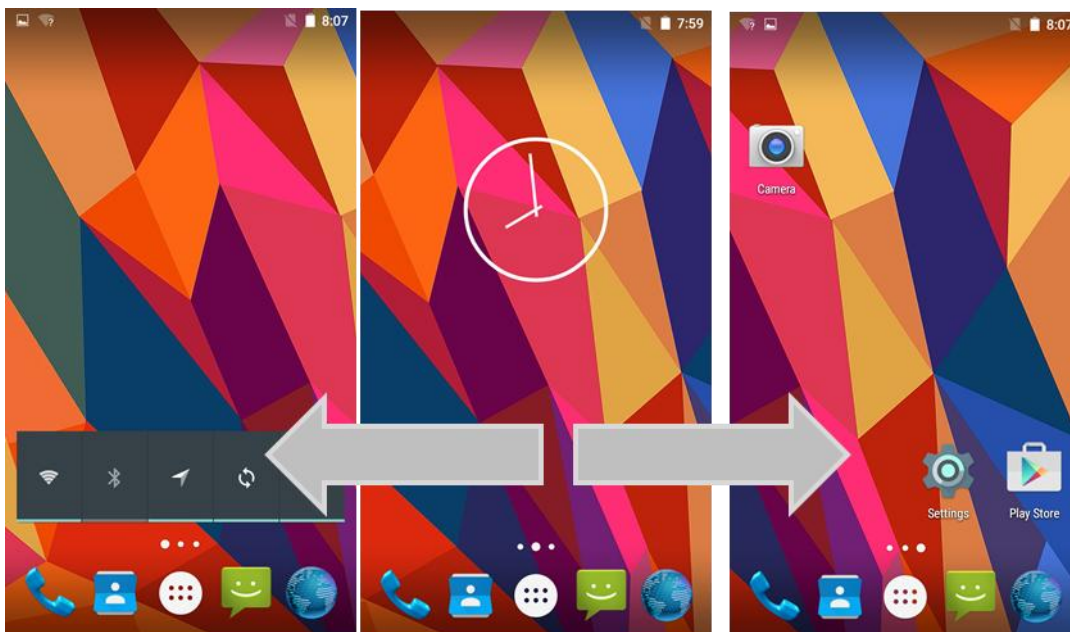

 2. Tap the launcher icon  to view the entire APPS of the device.

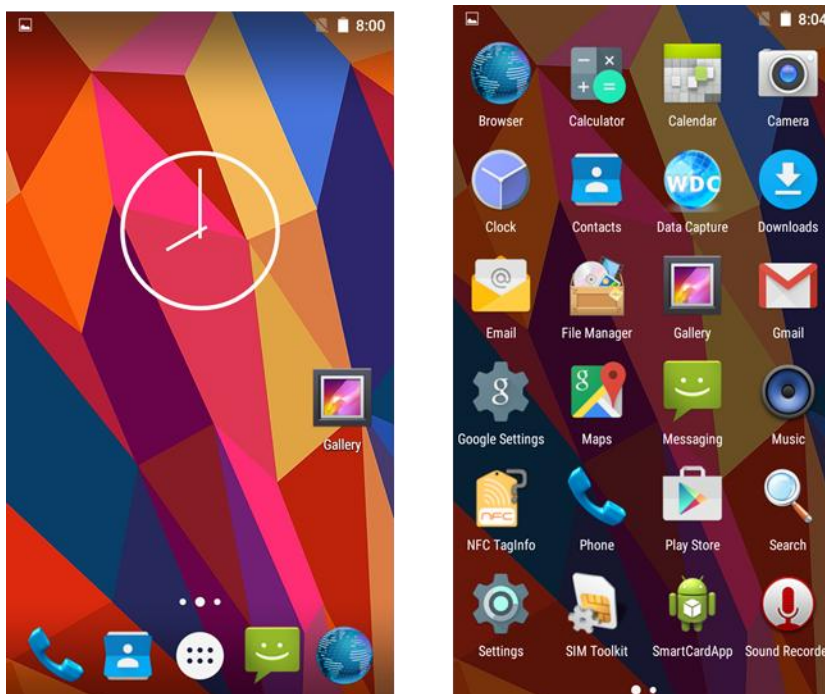

The status bar appears at the top of every screen. On the left are notification icons and on the right are status icons, along with the current time.



Notification icons
















Status Icon

Status and Notification Icons

Notification Icons


Pull down from the left top of the screen to get the notifications area. The following icons indicate that you have received notification.


	New email message		Incoming call
	New text or multimedia message		Missed call
	Alarm is set		Speakerphone is activated
	Upcoming event		Phone microphone is muted
	Data is syncing		Downloading data
	Problem with sign-in or sync		Phone is connected via USB cable
	A screenshot is captured		

Using the On-Screen Keyboard




User will be able to enter text using the On-Screen Keyboard. Some applications will launch the keyboard automatically. In others, user needs to touch a text field where user wants to enter text to launch the keyboard.

 Entering Text

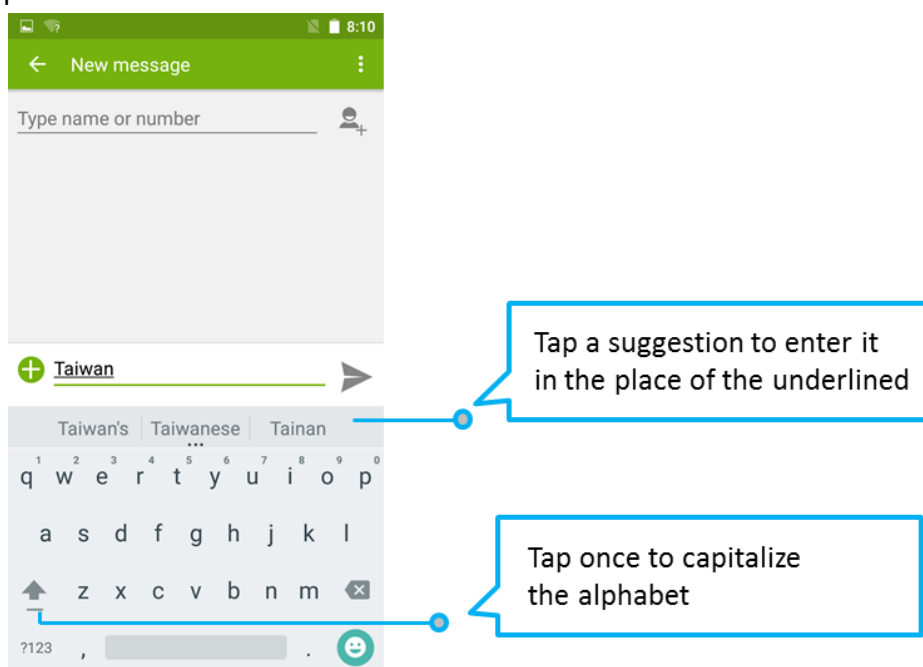
1. Open a text field, in this example we used Messaging  to compose a message. The On-Screen Keyboard opens.

 


*If user taps in a text field which already contains text, the insertion point is set where user tap and the cursor appears. User can drag the cursor to pick exactly where you want to add more text. User can also select a word to copy, cut and paste it. See "[Editing Text](#)".

2. Tap the delete key  to erase characters to the left of the cursor.
3. Tap  to enter numbers. Tap  to return to letters.
4. To enter symbols and other characters, tap and hold one of the top-row keys and slide your finger up to the list of the options. Lift your finger when you find your selection.




5. To view additional symbols, tap  on the numeric keyboard.

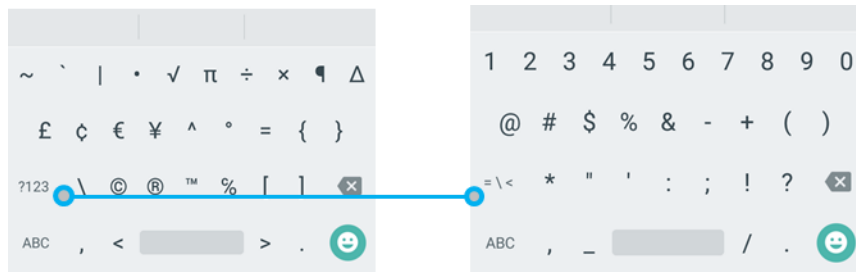


6. To close the On-Screen keyboard, press the back button  .




Editing Text

 To select text:

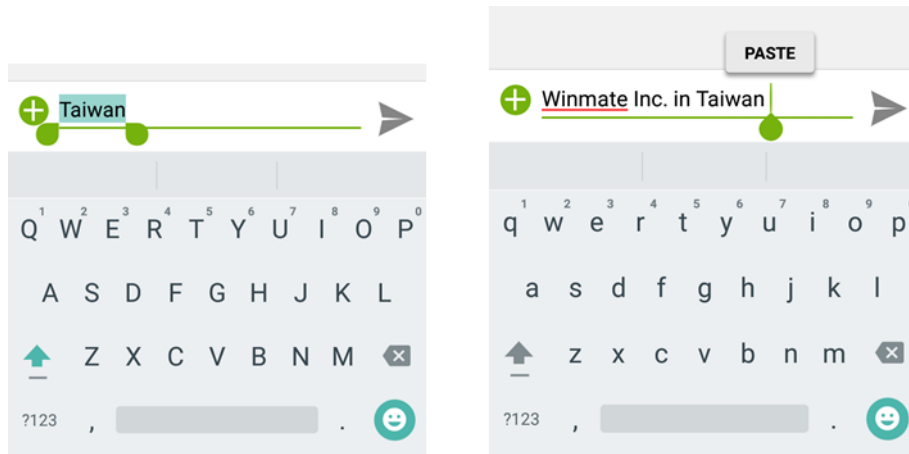1. Double-tap the text you want to select.
2. Tap  to select all the sentences in the menu that appears, the selected text is highlighted in blue, with a tab at each end of the selected word.
3. Drag selection tab to expand or reduce the range of the selected text.




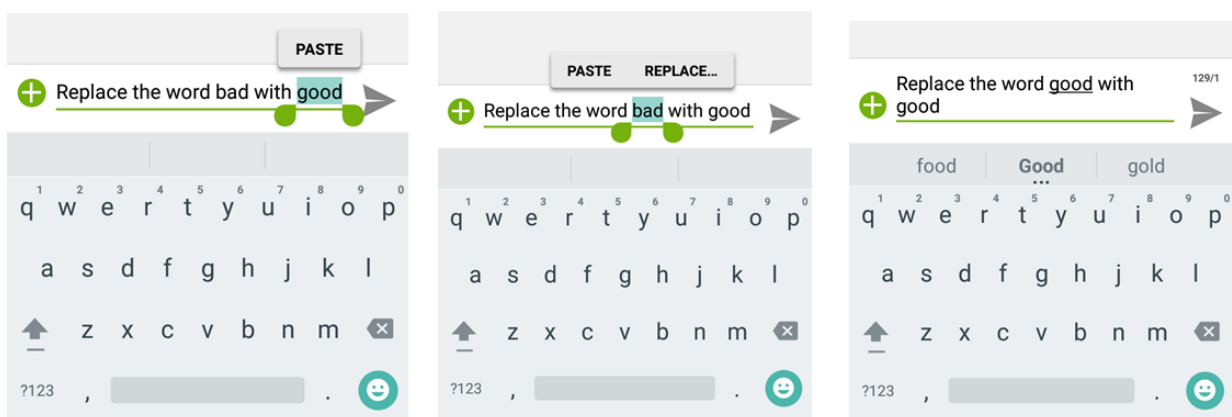 
To Cut or Copy Text:

1. Select the text to cut or copy, see the section above "To select text".
2. Tap  or  in the Edit text menu.
3. If you select , the selected text is removed from the text field; it is stored in temporary area so that you can paste it into different text field.

To Paste Text:


1. After Cut or Copy the text, see the section above "To Cut or Copy Text".
2. Place the cursor in the text field where you want to paste the text, user can paste text that you copied from one application into a text field in any application.
3. Tap and hold into the location that you want to paste. Tap **PASTE** in the menu that opens or user

 
can also tap  to replace the existing text with copied text.



Display Settings

Use the display settings to configure brightness and other screen settings.

1. Tap **MENU**  and then tap **Settings**.
2. In the **Device** tab, tap **Display**:
 - **Personalize**
 - **MiraVision™** - to display picture quality optimization options.
 - **Wallpaper**– to select wallpaper
 - **Display**
 - **Brightness level**– for adjusting the brightness of the screen.
 - **Adaptive brightness** – to optimize brightness level for available light
 - **Sleep**– to set up the device on the sleep mode after one minutes of inactivity
 - **Daydream**- to activate automatically when your device is docked or charging, keeping your screen on and displaying information. Daydream mode can give your device an always-on information display.
 - **Battery Percentage**– to control battery percentage display.
 - **Font size**– for adjusting the font in the device.
 - **When device is rotated** – for switching the orientation of the screen as user turn the device sideways or upright.
 - **Sleep**– to inactivate the device after some time.

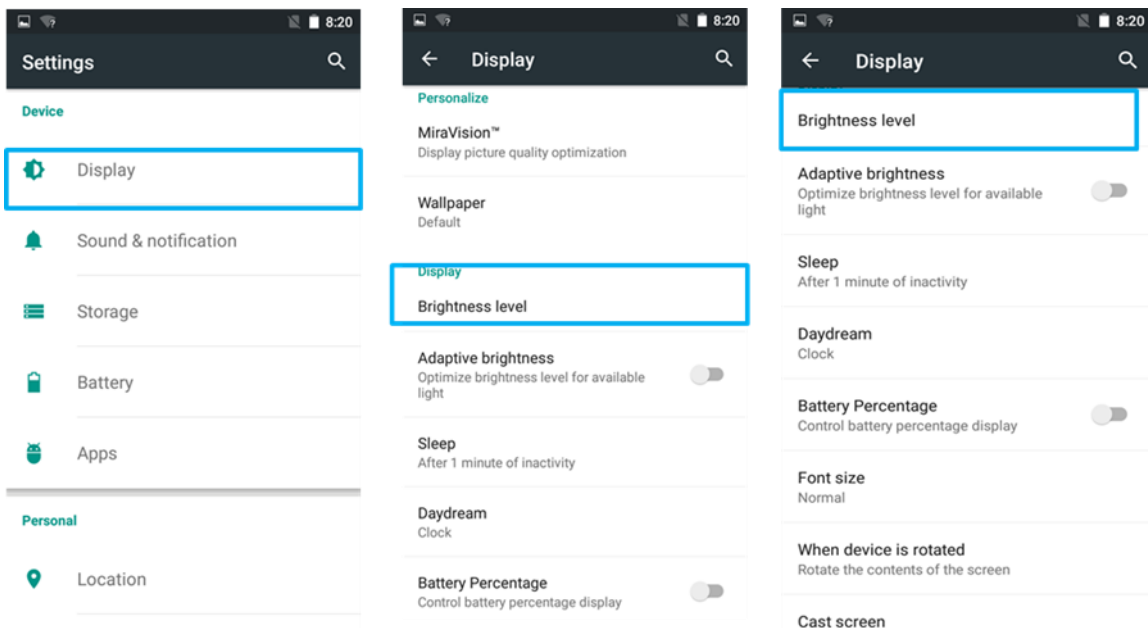


NOTE

 
For the longest battery life between charges, use the shortest Sleep time.

Audio Profile Settings

Use the sound settings to configure how and at what volume the PDA rings, vibrates or alerts user in other ways when user receive a call, receive a notification or an alarm sounds.

Sounds Settings

1. Tap **MENU**  and then tap **Settings**.
2. In the **Device** tab, tap **Sound & Notification** and then user can select General, Silent, Meeting or Outdoor profile.

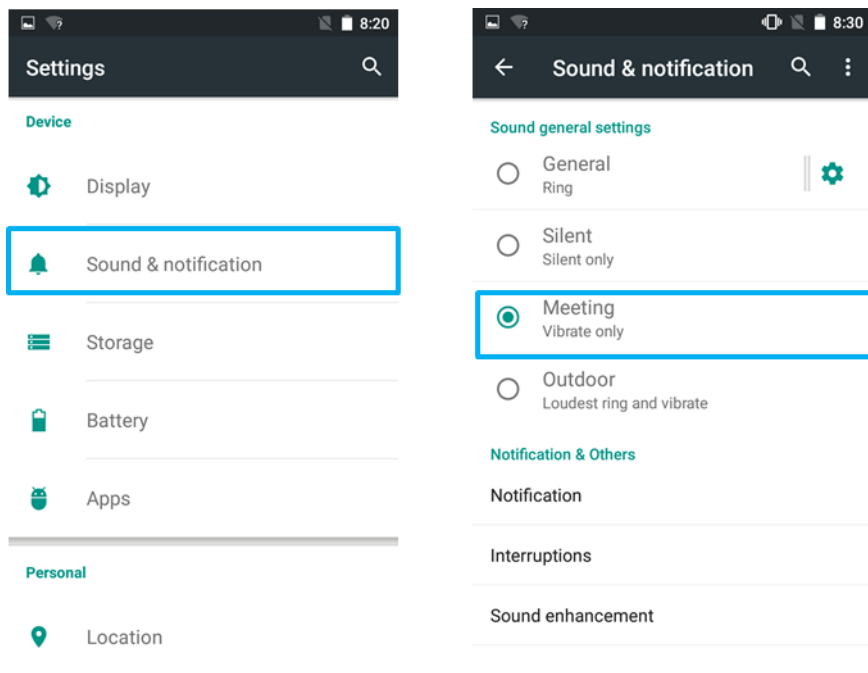

Adjusting Volume

1. Press the volume keys to change the ring volume (On Home screen) or earpiece volume (during a call).




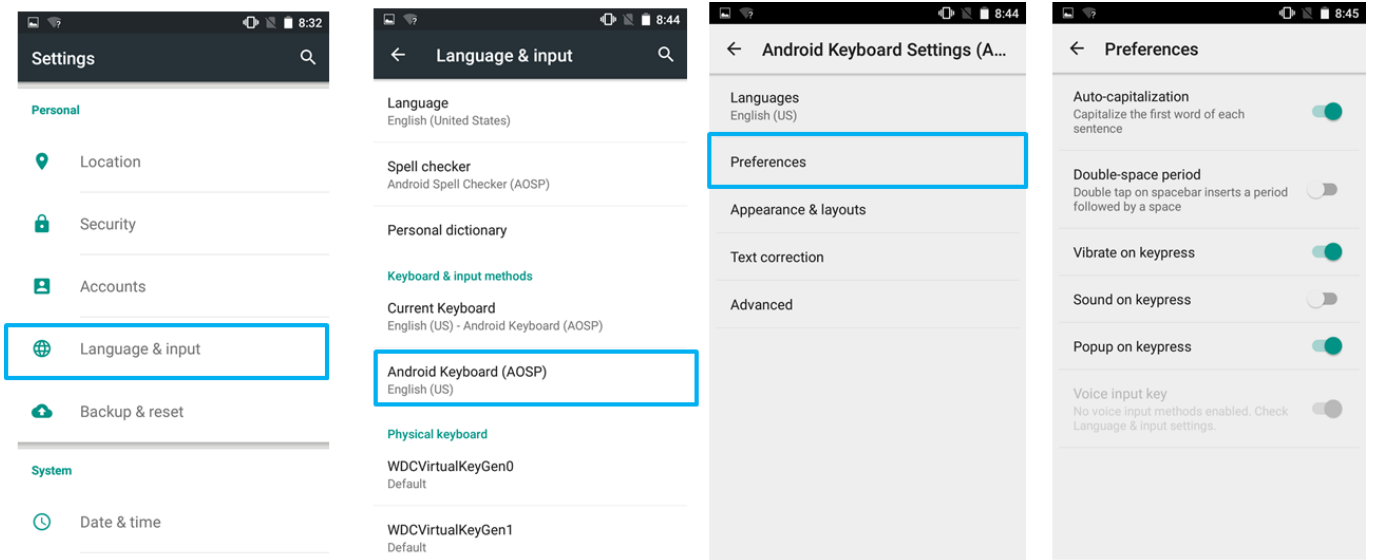 
2. Press the volume key to set up Vibration mode.



Language and Keyboard Settings

Use the Language & keyboard settings to select the language for the text on your PDA and for configuring On-Screen Keyboard, including words that you have added to its dictionary.

1. Tap **MENU**  and then tap **Settings**.
2. In the **Personal** tab, select **Language & Input**.
 - **Language** – to open the language screen, where user can select the language to use for the text on the device.
 - **Spell Checker** – to activate Android Spell Checker (AOSP) and check to correct misspelled words.
 - **Personal dictionary** – to open a personal dictionary.
 - **Keyboard & input methods**
 - **Current Keyboard** – to apply the onscreen keyboard that is included with user's device.
 - **Android Keyboard(AOSP)** – the setting screen is available only if user's device has a physical keyboard.
 - **Appearance & layouts**
 - **Theme** – to select the theme of layout
 - **Custom input styles** – user can select custom input style, such as QWERTY keyboard
 - **Text Correction**
 - **Personal dictionaries**
 - **Add-on dictionaries**
 - **Block offensive words** – disable suggesting potentially offensive words
 - **Auto-correction** – spacebar and punctuation automatically correct mistyped words.
 - **Show correction suggestions** – display suggested words while typing.
 - **Personalized suggestions** – learn from your communications and typed data to improve suggestions.
 - **Suggest contact names** – use names from Contacts for suggestions and corrections.
 - **Next-word suggestion** – use previous word in making suggestion.
 - **Advanced**
 - **Key popup dismiss delay**
 - **Keypress vibration duration**



Changing the Keyboard Language

The current keyboard language is displayed on the Space key and user can switch languages.



1. Tap and hold the space key
2. Without lifting the finger, slide it to the left or right until the language you want to use appears in the center of the small window above the Space Key.
3. Lift the finger to change the keyboard language.

 
About Phone

About Phone includes information about user's PDA.

- **System Update** — provides information regarding the local or online update of your devices.
- **Status** — opens the status screen with a list of information about battery, network, signal strength and other details.
- **Legal Information** — lists details about the model number, Android Version, Baseband version etc. this information is useful if user need to work with support team.

To access the information about the PDA:

1. Tap **MENU** 
2. Tap **Settings** 
3. Scroll down to **System**, and then tap **About phone**.

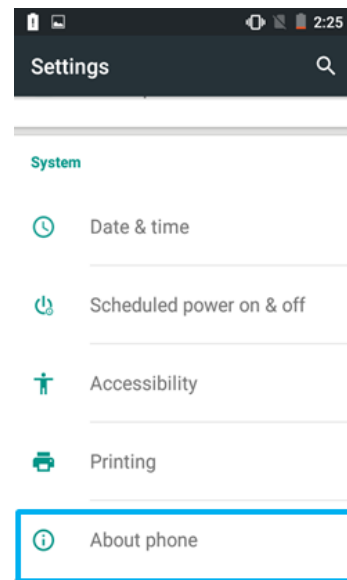


Chapter 3 Using Winmate Home Manager

Every E430RM4L series PDA comes with preinstalled APP named Winmate Home Manager (WHM). This application lets the device manager to lock the launcher. When the launcher is locked the user can only use one application assigned by the device manager.

How to Lock Applications


Step 1

 - In the main APPS window, select the Home Manager APP and enable it.
- Select Home Manager to start your settings.
- Go Password Manager and set your own password for this APP. The default password is “0000”.

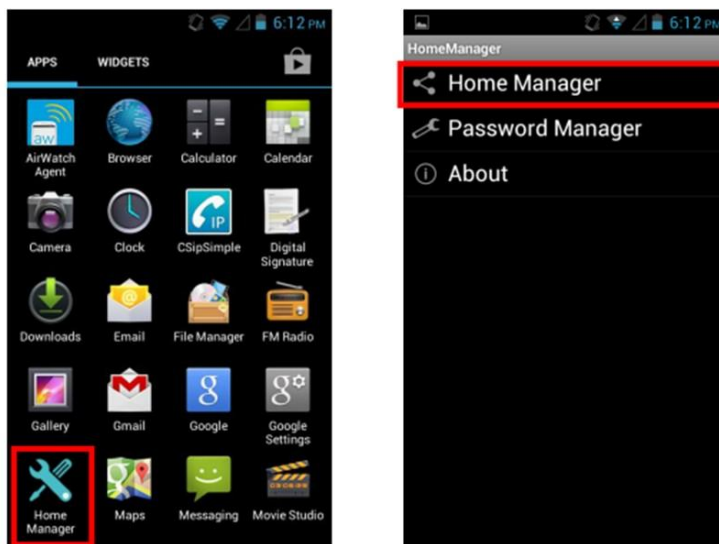


Step 2

 - Go to “**Application Selector**” and choose an Application to be locked.
Example: Select the Calendar AP.

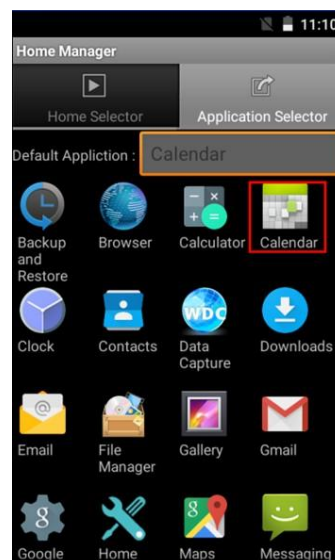


Step 3 Go back to “**Home Selector**” and press “**Clear and Reset Default Home**”.

 Step 4 Select “**Restrict Home**” , and then restart the PDA.

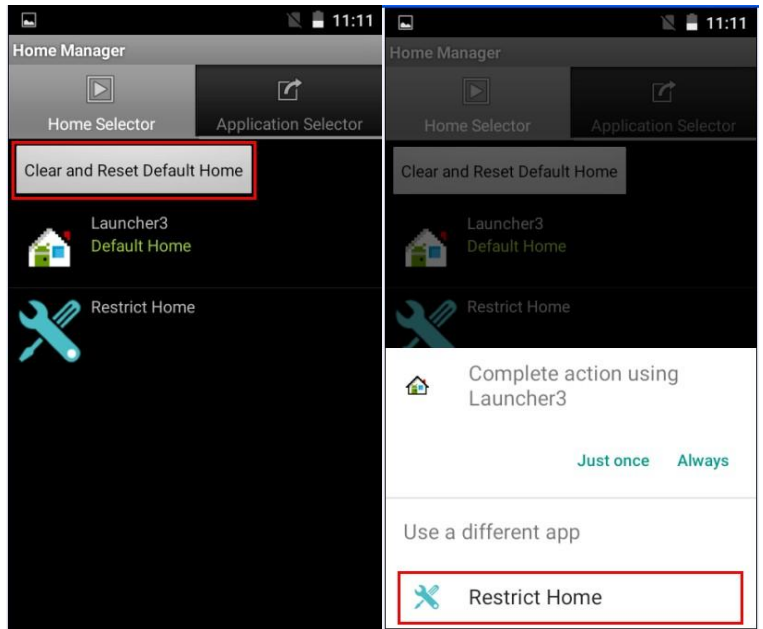


 Step 6 System will ask to select “**Just once**” or “**Always**” to use this launcher, please select “**Always**”.

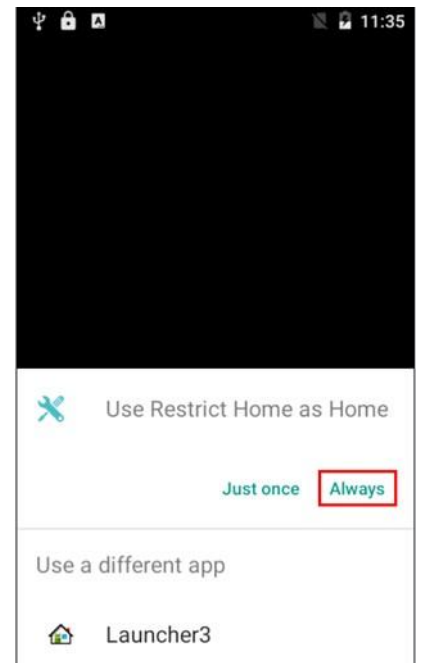


The system will automatically start the application which you selected and lock it.

 Any time you press home key or back key, the system will go back to the same application which you have selected.

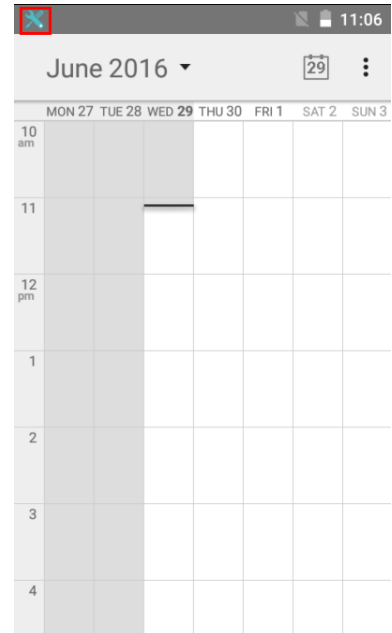


How to Unlock Applications

 Step 1 Slide down the top bar and press “**Home Manager**” icon then you can find the menu and please enter the password to login (The default password is “**0000**”).

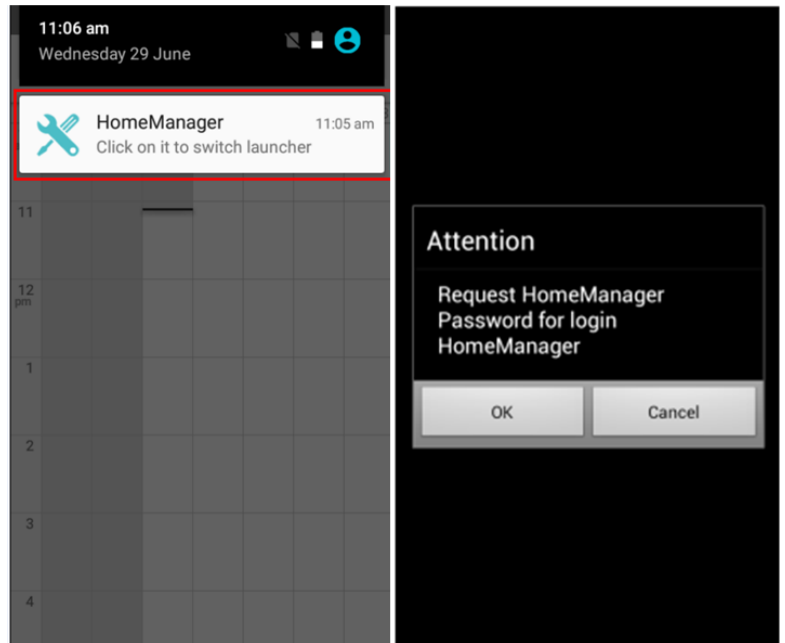

 Step 2 Go back to “**Home Selector**” and press “**Clear and Reset Default Home**”.

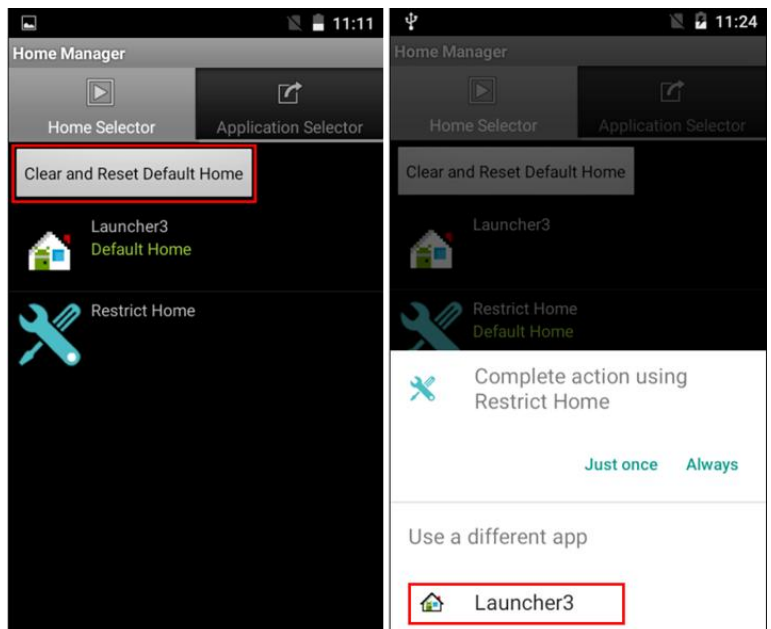

Step 3 Restart the system and you will go back to the normal Launcher.



Chapter 4 Connecting to Network and Devices

This chapter explains how to connect PDA to network and peripheral devices.

Connecting to Computer via USB


User can connect their PDA to a computer with USB cable to transfer files between PDA and computer.

 
 



IMPORTANT

 
- When connecting your PDA to a computer and inserting its USB storage or SD card, user must follow the computer's instructions for connecting and disconnecting USB device, to avoid damaging or corrupting files.
- Notice that the E430RM4L cannot be charged via USB.

USB Computer Connection

1. Connect PDA to the computer via USB connector.
2. In the notifications area **USB connected sign**  will appear.
3. Pull down the notification area to open notification panel.

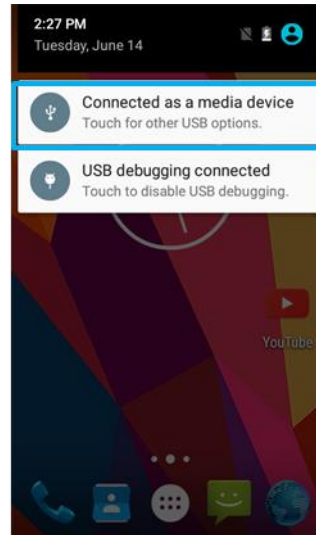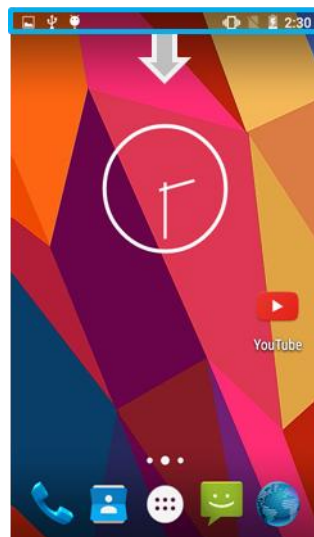


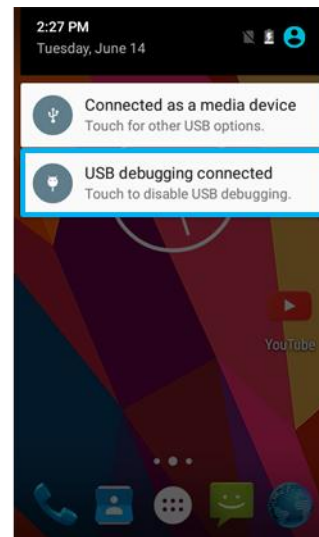 
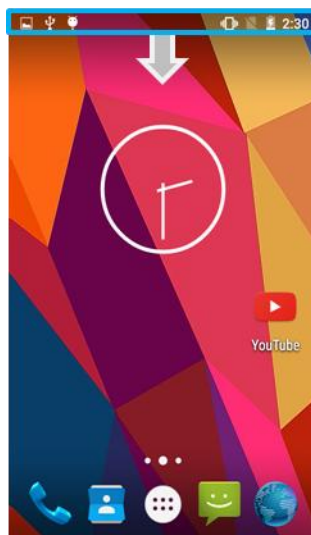 
4. Tap this icon  to choose the type of USB connection.
- **USB storage** –let user transfers files between computer and PDA.
 - **Media device (MTP)** – let users transfer media files.
 - **Camera (PTP)**–let users transfer photos using camera software, and transfer any files on computer that don't support MTP.
 - **Charge only**– stop all USB functions and let users speed up USB charging.
 - **Connect as CD-ROM**

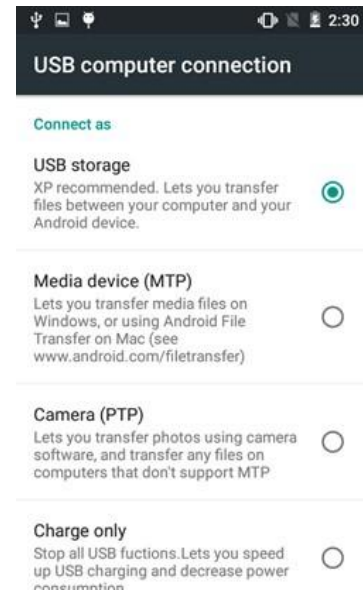


USB Debugging Settings

To permit debugging tools on a computer to communicate with User's PDA via USB Connection.

1. Connect PDA to the computer via USB cable.
2. In the notifications area **USB debugging connect** sign  will appear.
3. Pull down the screen to open notification panel.



 4. Tap **USB debugging connected**.
5. In the **Developer options** user can choose the action to perform.

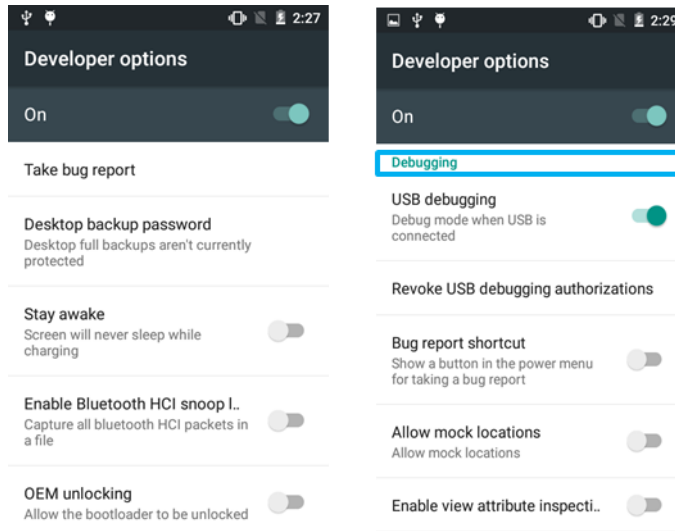

Carefully follow your computer's instructions to un-mount the USB storage or SD card. Disconnect USB device not properly can cause a loss of important data or information.

IMPORTANT


Chapter 5 Using Camera

This chapter explains how to use camera to capture photos and videos.

Capturing Photos or Video

Winmate® E430RM4Lequipped with 8 MP on the rear side and 2 MP on the front side, which user can use to capture photos or video.

Opening Camera

1. Tap the launcher and then tap **Camera** .




Camera opens in Portrait mode, ready to take a picture or shoot a video.

 


Make sure the protective lens cover is clean before taking pictures. A lens cover with smudges from fingers can cause blurry pictures.

IMPORTANT


Taking pictures

1. Adjust the exposure, flash, and other necessary settings. Or leave it automatic.
2. Frame your subject / object on screen. User can set whether user want to use the front or rare camera, by tapping . Scale the screen to zoom in or out.
3. Tap the On Screen Shutter icon .
4. The camera brings the image into focus, when the image is in focus, the focus indicators in each corner will turn green and ready to capture.
5. Tap  to change camera settings.

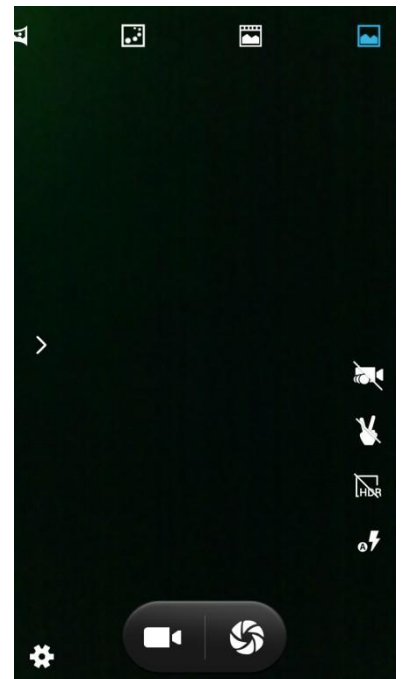

Switching between front and rear cameras

E430RM4L has both a front and rear camera, user can select which camera you want to preview and take pictures with.




1. Tap the On Screen Select Camera icon to switch between the rear camera and the front camera .
2. The preview switches to show the scene viewed from the camera you selected.




NOTE

Not all features (such as flash) are available for the front camera.

Viewing pictures

 
1. After taking a photo, a thumbnail of the picture is shown on the corner of the capture screen. Tap the thumbnail to view it.
2. Tap the onscreen button:
 -  to share a photo
 -  to delete a photo
 -  to view other photos and videos in the gallery
3. Swipe right or left to view more photos.

Shooting videos


1. Tap the  to start recording video.
3. The countdown time remaining to shoot is located on the upper left; when the time left is less than a minute, the countdown turns red.
4. Point the lens to record the scene where you want to start.

Tap the  icon again to stop shooting.

The time remaining to shoot counts down at the left; when less than a minute is left, the countdown turns red.

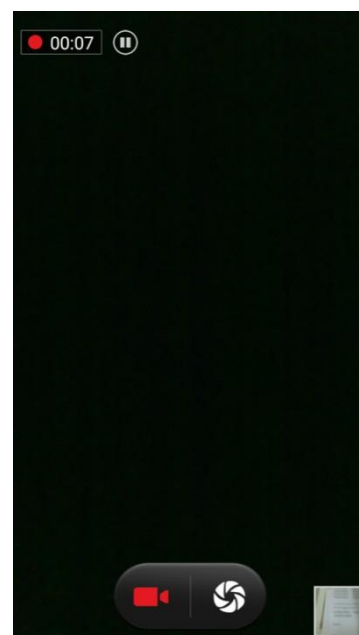

Opening the Gallery

1. Tap the launcher and then tap Gallery .
2. Tap a folder to view the pictures or video inside in full screen mode.
3. Flick the pictures left or right to view the previous or next picture.

Chapter 6 Data Capturing



This chapter explains how to use Barcode Reader with Android Winmate® Data Collection application, Smartcard Reader and Fingerprint Scanner that might be present in E430RM4L.

Android Winmate Data Collection (WDC)

Winmate® Android Device is equipped with embedded 1D/2D barcode reader. WDC, software invented by Winmate®, allow users to turn on the readers and set up the button to trigger the scan function.

Where To Find WDC?

This chapter explains how to use Barcode Reader. Notice that Barcode Reader is an optional feature for E430RM4L PDA and may not be presented in your device.

 
1. Tap application menu .
2. User can find the application **Data Capture(WDC)** on the menu screen, with the Globe mark .




3. User will be able to change the settings of the Barcode Reader through WDC application.

How to Turn On/Off the Power of Barcode Reader?

1. Go to the **WDC** application.
2. Tap **Barcode Setting**.

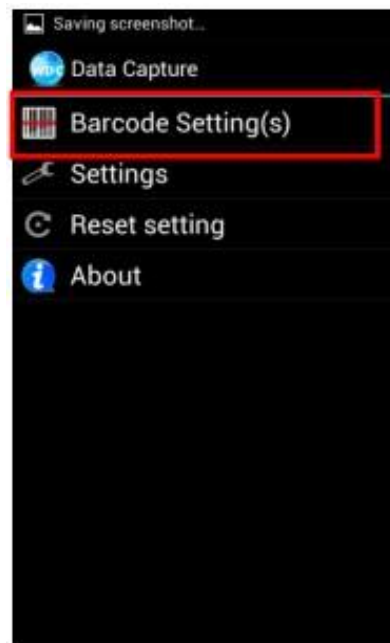


 3. Once the user entered the WDC application, the device will automatically turn on the Barcode Reader. And the user can turn off the Barcode Reader by tapping **Barcode Power Status: ON**.

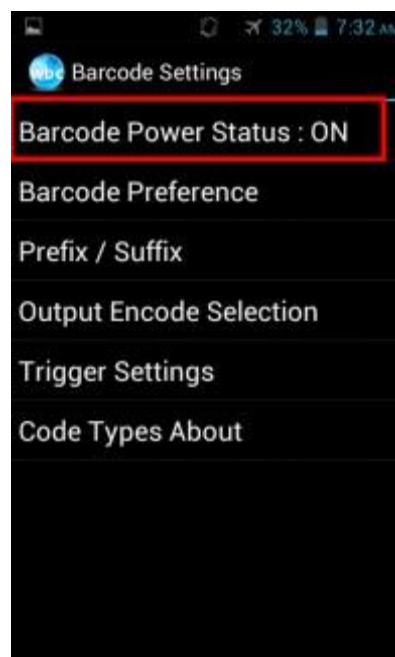


How to change the symbologies of Barcode?

 1. Go to the **WDC application**.
2. Tap **Barcode Setting**.
3. Tap **Barcode Preference**.
4. Users can change the symbologies of the barcode:
 - 1D Symbologies
 - 2DSymbologies
 - Imager Options
 - User Preference
 - Disable all symbologies.

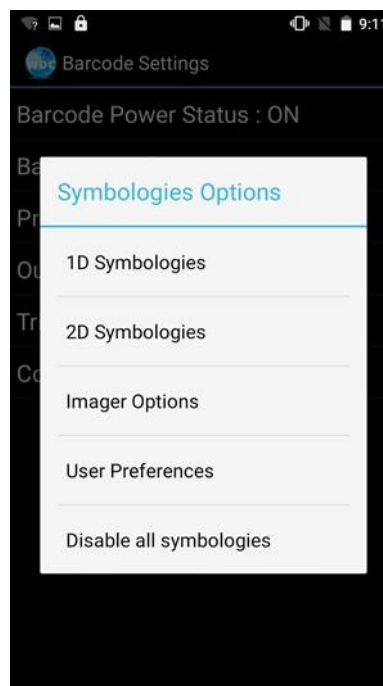

How to add command to my output of the barcode?

 
1. Go to the **WDC application**.
2. Tap **Prefix / Suffix**.
3. Enter special characters at the beginning (prefix) or end (suffix) of the scanned barcodes.
4. Tap **Set** to add into the data.

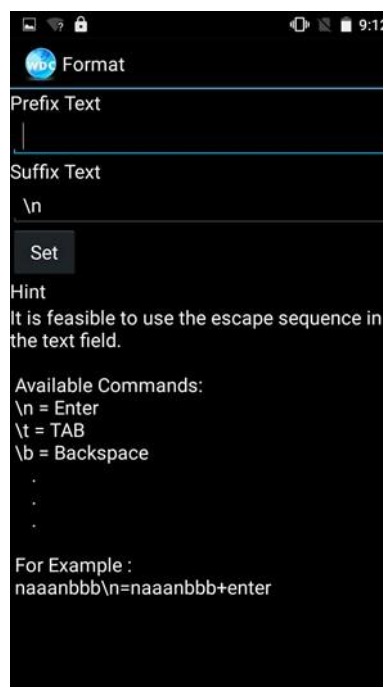

The output will show the command that you entered in the prefix or the suffix;

 
For example, if user enters “\n” in the **prefix text**, the output of the barcode reader will appear on the next line of the page. And if the user enters “\n” in the **suffix**, the **output of the barcode reader** will show the barcode and change to the start of the next line for the user. Same with the command “\t” and “\b”.

How to change the scan type for the Barcode Reader?

1. Go to the “WDC” application.
2. Go to **Barcode Settings** , tap **Trigger Settings**.
3. Select the **Scan Type** or select read time of the Barcode Reader.

To start scanning user has to leave the WDC application.

- **Auto Scan** – Barcode Reader starts auto-scanning once the user leaves the WDC application.
- **Single Scan** – Barcode Reader starts scanning only when user presses the trigger button.
- **Multiple Scan** – After pressing the trigger button Barcode Reader starts continuously scanning and reading **multiple codes** within the time duration selected in **Read time option**.
- **Continuing Scan (default)** – After pressing the trigger button Barcode Reader can only read **the single code** within time duration selected in **Read time option**.

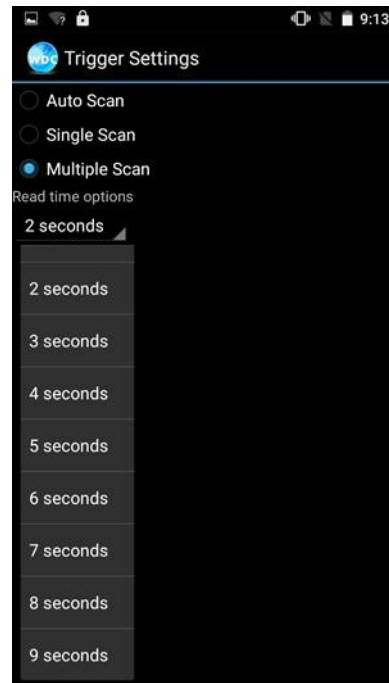


How to change the setting of the application WDC or reset the setting back to default?

1. Go to the **WDC** application.
2. Tap **Settings**.
3. Users can select the options to change the setting of the application.



 
- Users can reset to the default setting by tapping **Reset setting**.

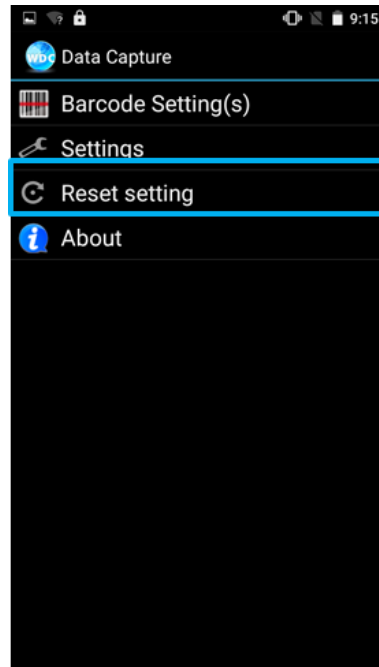

Scanning the Barcode

How to scan the barcode?

 - Press the function button to trigger the barcode.
- Aim the barcode.
- Ensure the entire barcode is within the rectangular area formed by the brackets in the laser framing.

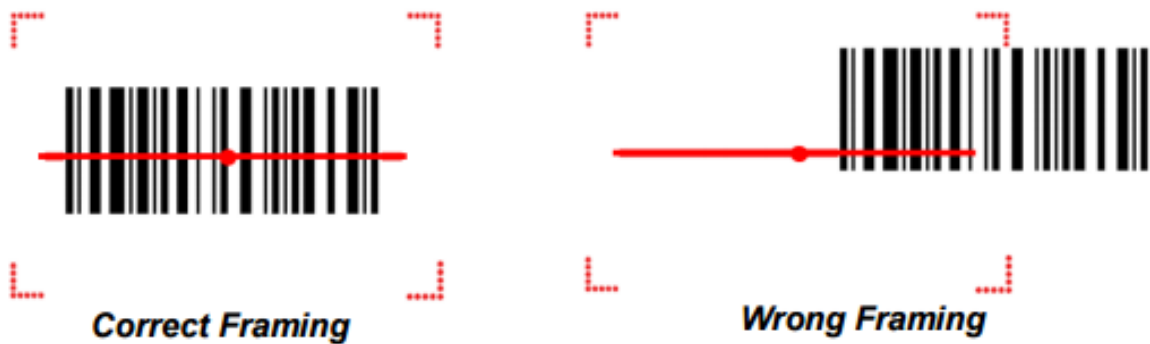

- Release the trigger.

Scanning Tips and Considerations

Distance

Scanning device will decode perfectly over a certain working range, there are minimum and maximum distance from the barcode. To specify the appropriate working range per barcode type is through a table as follows.

Symbology	Density	Min Distance	Max Distance
Code 39	0.100 mm	9.5 cm	11.5 cm
	0.125 mm	8.0 cm	14.5 cm
	0.500 mm	6.5 cm	50 cm
	1.000 mm	9.5 cm	75 cm
EAN / UPS 100%	0.33 mm	6 cm	34 cm
DataMatrix	0.18 mm	7.5 cm	16.5 cm
	0.25 mm	6.0 cm	23.0 cm
	0.38 mm	5.5 cm	34.5 cm
PDF417	0.25 mm	5.5 cm	26 cm
	0.38 mm	6.5 cm	37 cm

Angle

Scanning angle is important for promoting quick decodes.




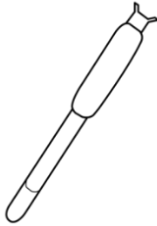
Scanning Angle	Horizontal 34.4°	34.4°
	Vertical	22.2°
Framing Angle	Horizontal	30°
	Vertical	20°

Chapter 7 Accessories

E430RM4L accessories provide a variety of product support capabilities. Some of the accessories are optional and are not included to standard packaging list.

Standard Accessories

E430RM4L Standard Accessories:

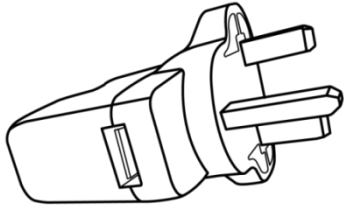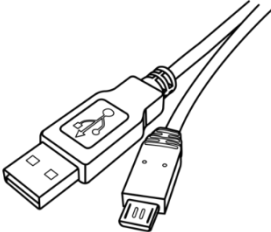	
<p>*Universal USB Adapter</p>	<p>Micro USB Cable</p>
<p>Bluetooth Manager</p>	<p>Screen Protector</p>
	
<p>Micro SD Card (4GB)</p>	<p>Hand Strap</p>

**Universal USB Adapter socket varies by country and region. E430RM4L will be shipped with the socket according to your order.*

Universal USB Adapter

Universal USB Adapter allows charging the E430RM4L from USB cable. To charge the E430RM4L connect USB cable to the E430RM4L from one side and USB Adapter from another side and plug in the socket to the power outlet.



CAUTION

 
Power Considerations:

Input: AC 100-240V 50/60 Hz

Output : 5V-1A

Micro USB Cable

Micro USB Cable provides power to the E430RM4L and USB communications with a host computer. To connect Micro USB cable to E430RM4L, open the rubber cover on the right side and insert the cable to micro USB connector.

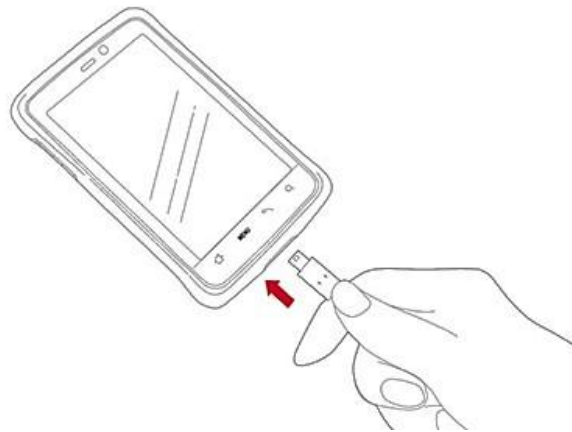


Bluetooth Manager

Provides interface for managing the Bluetooth.

Micro SD Card

 Micro USB Card slot is located on the rear side of E430RM4L. To access it press two latches up and remove the battery.

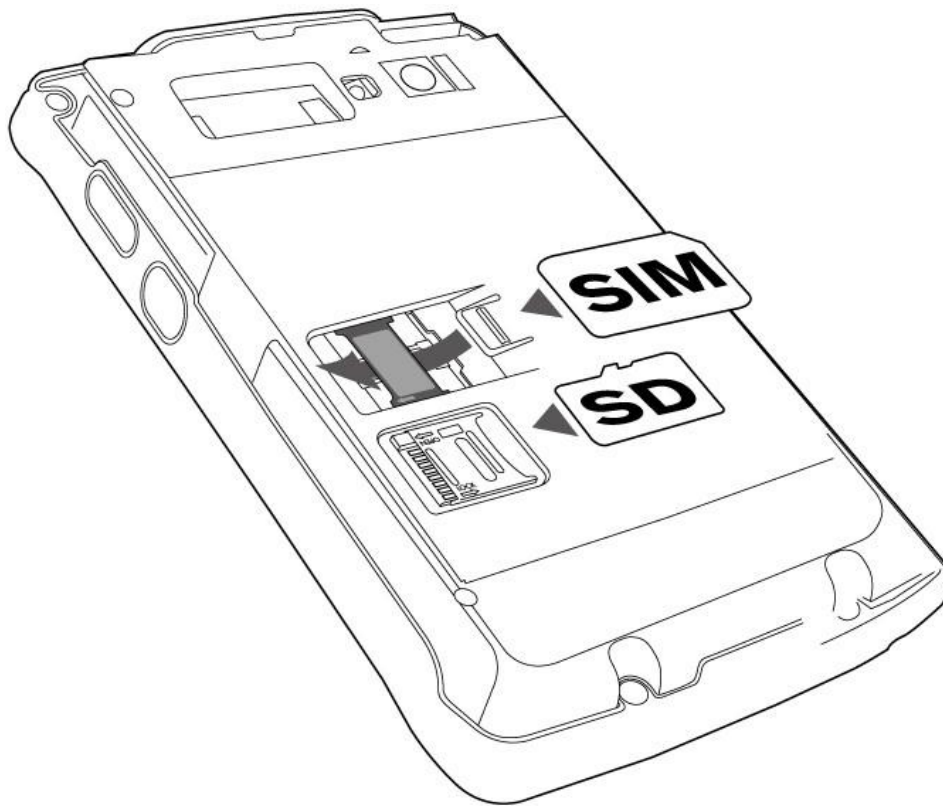

For Micro SD Card installation instructions, refer to [Chapter 1, “SIM Card and SD Card Installation”](#) of this User Guide.

Screen Protector








Protect touch screen against dirt and water.

Hand Strap

Hands strap to firmly grasp the device without having the fear of dropping it.

Optional Accessories

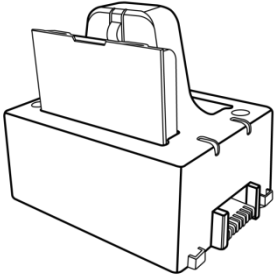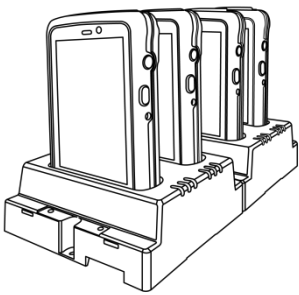
E430RM4 Optional Accessories:

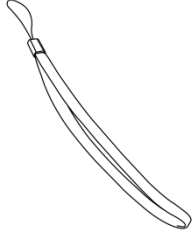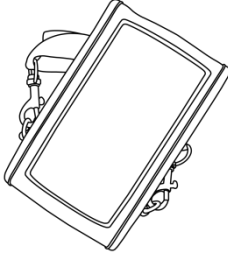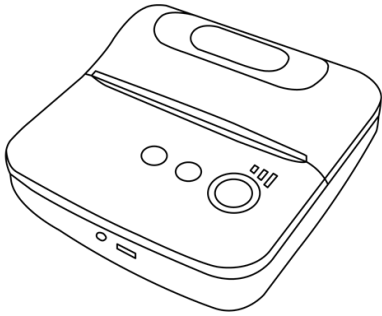	
<p>Two Slot Battery Charger Model name: BD-E430R</p>	<p>Charging Dock Model name: MD-E430R</p>
	
<p>Micro USB Host Cable (OTG Cable)</p>	<p>Battery</p>
	
<p>Lanyard</p>	<p>Soft Case Holder</p>
	
<p>Bluetooth Printer</p>	

Two Slot Battery Charger

The battery charger allows charging up to two battery units simultaneously, ensuring you will never be stuck in-between charges.

2 x charging slots	PoGo Pin type
2 x LED light	Shows current power level
1 x DC in	12V / 50W DC in
Buzzer	4-level volume control

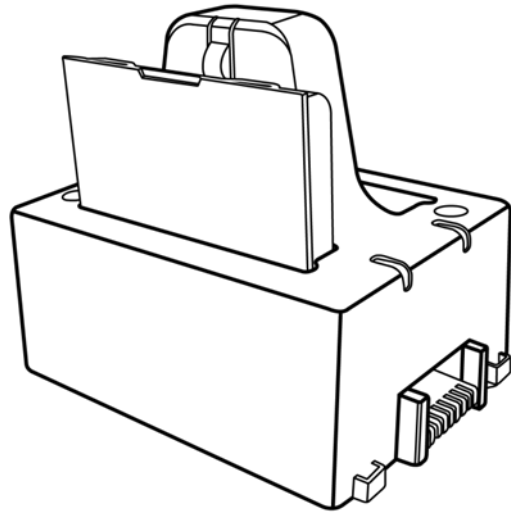 


Refer to [Chapter 2, section “Battery Charging”](#) for detailed instructions on charging the battery using docking.

Charging Dock


The charging dock is ideal solution for quick charging multiple devices at once. The design allows you to daisy chain multiple chargers together for ease of use and less power cables.

2 x charging slots	PoGo Pin type
3 x LED light	Shows current power level
1 x DC in	12V / 50W DC in

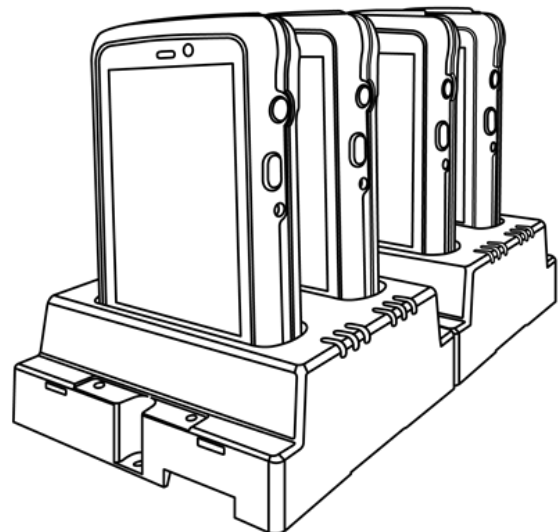 

Micro USB Host Cable (OTG Cable)

 The USB Host cable OTG (On-the-Go) function isto act as a host allowing a USB flash drive to be attached.

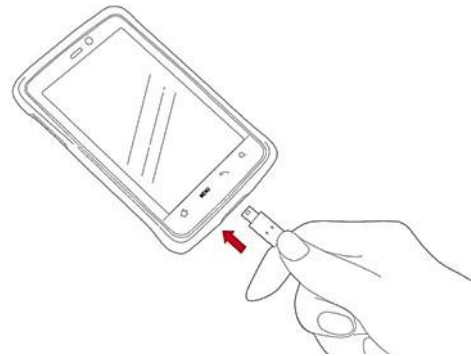


Bluetooth Printer

Mobile printer allows to print labels and stickers directly from E430RM4L.

Mobile thermal receipt printer

Features

 
- Quick and efficient printing
- Rugged design withstands drop up to 1.2m
- Long-lasting lithium-ion battery (7.2V/2, 100mAh)
- Supports a wide variety of serial and wireless communication options
- Easy to store setup parameters by setup tools

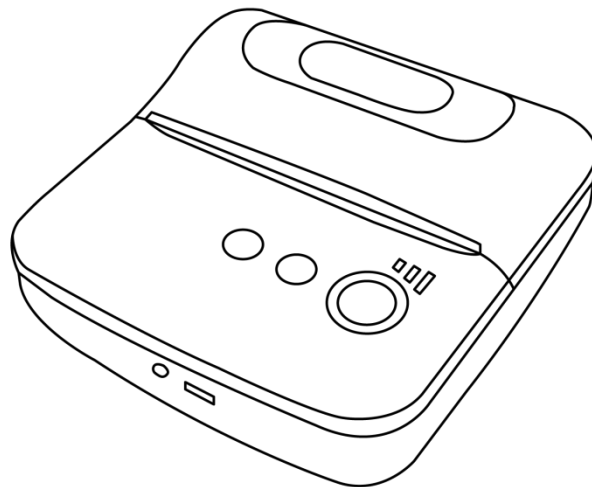

You need to use Bluetooth to pair the Mobile Printer with E430RM4L.


Soft Case Holder

 Soft Case Holder is made of leather with vinyl screen protector and shoulder strap. It keeps the device free of fingerprints and dirt.

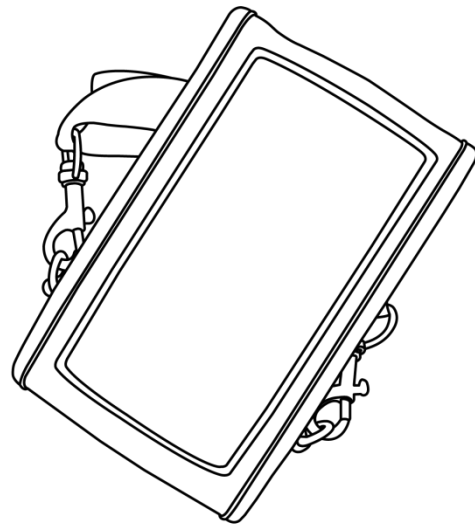

Lanyard

 Lanyard provides a secure feel when using your E430RM4L series Rugged PDA while on the move. Lanyard is only supported by E430RM4L Barcode and RFID Series.

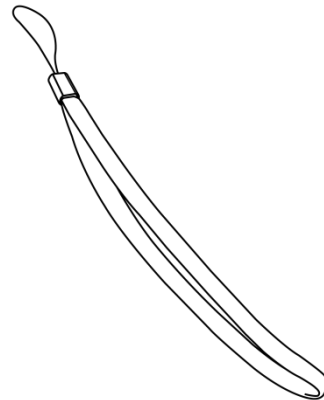

Appendix A: Product Specifications

	Model Name	
	E430RM4L	
Display Specification	Size	4.3"
	Resolution	480 x 800
	Brightness	400(typ.)
	Touch	Projective Capacitive Multi-touch
System Specification	Processor	ARM® Cortex™-A7 Quad Core 1.5GHz
	System Memory	1GB SDRAM
	Storage	<ul style="list-style-type: none"> 8GB eMMC (optional to 32GB, MOQ:1K) External Micro SD Card (up to 32GB)
	Operating System	Android 5.1
Wireless Communications	WWAN	Built-in 3G/ 4G / LTE (GSM/ GPRS/ EDGE/ HSDAP/ HSPA/ TDD-LTE/ FDD-LTE)
System I/O Buttons Indicators Sensors Security	Audio	1 x Built-in Mic 1 x Earphone 1 x 1.2W Speaker
	External I/O	1 x SIM card slots 1 x Micro SD card slot 1 x Micro USB
	Buttons	1 x Volume - + 1 x Power button 1 x Function button 4 x Capacitive buttons: Home/ Menu/ ESC/ Search
	LED Indicators	1 x LED indicator
	Sensors	Light Sensor, Proximity Sensor, G-sensor, Digital Compass
	Data Capture	Camera
Data Capture		<ul style="list-style-type: none"> Default NFC (Read / Write, Peer to Peer mode) 1D/2D Barcode Reader (Optional)
Mechanical and Environment	Dimensions W x L x H	132.57 x 81.87 x 27.4 mm
	Net Weight	0.260 kg

	Operating Temp.	-20°C ~ +60°C (AC Mode) -10°C ~ +50°C (Battery Mode)
	Shock	MIL-STD-810G Method 516.6 Procedure I
	Vibration	MIL-STD-810G Method 514.6 Procedure I
	Drop	MIL-STD-810G Method 516.6, 4 ft, Free to concrete
Power Management	Battery	3.7V 3900mAh Li-poly removable battery
	Battery Operating Time	20Hr *
	Adapter	5V 1A Adapter

** Note: measured at dimming LCD brightness. Varies depending on the usage conditions, or when an external device is attached.*

***Note: this is a simplified drawing and some components are not marked in detail. Please contact our sales representative if you need further product information.*

****Note: all specifications are subject to change without prior notice.*

Appendix B: Order Information

E430RM4L Series available in the following configurations:

Model Number	Specifications
E430RM4L	Standard
E430RM4L-3BM	1D/2D Barcode Reader
E430RM4L- 3HF	HF RFID Reader

Appendix D: WinmateSoftware Development Kit

Winmate® provides Software Development Kit (SDK). The table below lists SDK provided by Winmate.

Winmate® SDK for E430RM4L:

Item	Type	Purpose
1	SDK	Winmate Data Collection (WDC)
2	Driver	USB Driver
3	Update tool and SOP	Operating system (OS) update tool and SOP

Download SDK from Winmate Download Center or Winmate Partner Portal.

1. Winmate Download Center:

<http://www.winmate.com.tw/>>Support > Download Center >Industrial PDA>E430RM4>Development Kit

2. Winmate Partner Portal

<http://www.winmate.com.tw/>>Support>Partner Portal>Public Documents>Industrial PDA> E430RM4>Development Kit



Winmate Inc.

9F, No.111-6, Shing-De Rd., San-Chung Dist.,
Taipei 241, Taiwan, R.O.C

Tel: 886-2-8511-0288

Fax: 886-2-8511-0211

Email: sales@winmate.com.tw

Official website: <http://www.winmate.com.tw>