

**User Manual**  
**54Mbps 11g Outdoor**  
**Wireless PoE AP and Bridge**

**Professional Turbo speed - 108Mbps**



Revision : V1.0

Updated : March, 2008

## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **IMPORTANT NOTE:**

#### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

**European Union Notice:**

Radio products with the CE marking comply with the R&TTE Directive (1999/5/EC).

Compliance with these directives implies conformity to the following European Norms:

- ◆ EN 60950-1:2001+A11:2004 Product Safety
- ◆ EN 300 328 Technical requirement for radio equipment
- ◆ EN 301 489-1/-17 General EMC requirements for radio equipment
- ◆ EN 50385



---

# Contents

<b>1</b>	<b>INTRODUCTION.....</b>	<b>1</b>
	THE PRODUCT .....	1
	KEY FEATURES .....	1
<b>2</b>	<b>PACKAGE CONTENTS .....</b>	<b>2</b>
	CONTENT OF PACKAGE.....	2
	SYSTEM REQUIREMENTS FOR CONFIGURATION .....	2
<b>3</b>	<b>CONNECTION (HARDWARE) .....</b>	<b>3</b>
	FRONT/ INTERFACE VIEW .....	3
	REAR/ SIDE VIEW .....	3
<b>4</b>	<b>BASIC IP NETWORKING .....</b>	<b>10</b>
	WIRELESS LAN BASICS.....	10
<b>5</b>	<b>GETTING STARTED .....</b>	<b>12</b>
<b>6</b>	<b>CONFIGURATION MENU.....</b>	<b>12</b>
	BASIC → SITE SURVEY.....	13
	BASIC → ADMINISTRATION .....	13
	BASIC → IP CONFIGURATION .....	14
	BASIC → OPERATION MODE .....	14
	ADVANCED → SECURITY SETTING.....	16
	WPA-PSK SECURITY .....	17
	WPA SECURITY .....	17
	ADVANCED → MAC ADDRESS CONTROL .....	18
	ADVANCED → PROTOCOL FILTER .....	18
	ADVANCED → SNMP CONFIGURATION .....	19
	ADVANCED → MISCELLANEOUS .....	20
	STATUS → ASSOCIATION STATUS.....	21
	SUPER USER .....	21
	FIRMWARE UPGRADE .....	22
	FIRMWARE VERSION .....	22
<b>7</b>	<b>OUTDOOR AP UTILITY INSTALLATION .....</b>	<b>23</b>
<b>8</b>	<b>OUTDOOR AP UTILITY USER GUIDE .....</b>	<b>27</b>

---

---

# 1 INTRODUCTION

## The Product

The product is based on the IEEE 802.11b/g standard, which is the latest 54Mbps Wireless LAN (WLAN) standard. Having this wireless protocols in one product ensure that your investments are protected, while enabling you to enjoy the fastest Wireless LAN speed.


This product model – the device could operate either as a Wireless LAN Access Point or Ethernet Bridge mode.

## Key Features

- Fully compatibility with IEEE 802.11b/g WLAN standard
- Utilize OFDM (Orthogonal Frequency Division Multiplexing)
- Wireless data rate of up to 108Mbps.
- Operates in the 2.4GHz license-free frequency band
- Industrial grade IP66 Casing
- Power over UTP cable DC supply
- **WEP** (Wired Equivalent Privacy). A simple WLAN encryption standard to protect wireless data from sniffers.
- **WPA** (WiFi Protected Access), for AP mode only. An improved WLAN encryption standard where the secret key renew automatically at regular intervals.
  - ▶ **TKIP** (Temporal Key Integrity Protocol). A new encryption key will be generated by corporate RADIUS server when a authorized wireless adaptor/user associate with the Access Point. This encryption key renew automatically at regular intervals. This is normally used in high security enterprise networks.
  - ▶ **Pre Shared Key (WPA-PSK)**. A new key is generated each time a wireless adaptor connects to the Access Point. This normally used for home user without a RADIUS server.
- **Remote AP list** provides added security for AP mode.
- **Protocol Filters** provides security to the network
  - ▶ **IPX Filter**
  - ▶ **Wireless Isolation**. Each wireless user would not be able to see each other even though they are in the same subnet. This is to protect the privacy of each user.
  - ▶ **Broadcast Filter**
  - ▶ **Multicast Filter**
- User-friendly web-based interface for managing and configuring the Access Point.
- QoS features for multimedia support - voice, video and audio.

---

## 2 PACKAGE CONTENTS

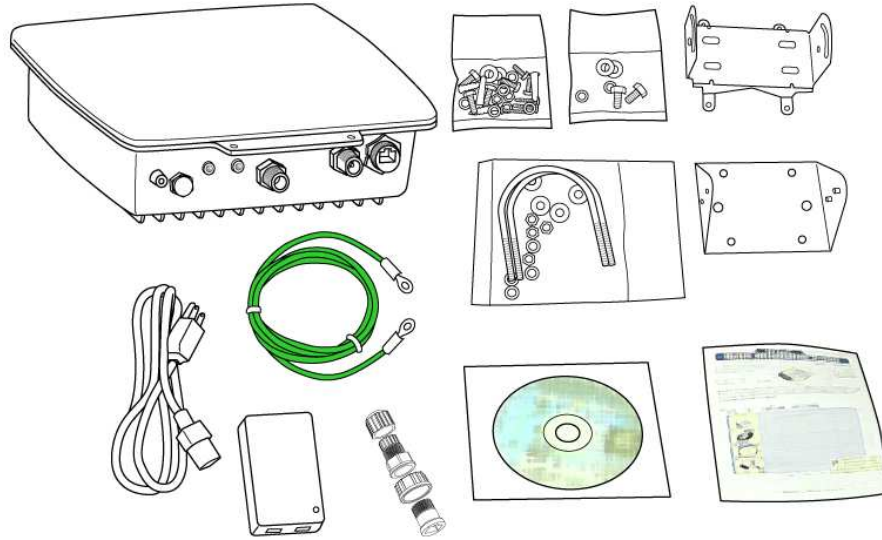

### Content of Package

1. Outdoor AP
2. 48V DC combiner adaptor (PoE)
3. Power cord
4. Screw, washers and U-Bolts
5. Mounting brackets (for walls or pole mount)
6. Grounding wire
7. RJ45 water-proof plastic plug
8. CD-Rom (Utility and user guide)
9. Quick Install Guide


*Note: Standard package may vary with model type and country. Using a combiner adaptor with a power rating other than the one included in the package will cause serious damage to the Access Point and void the warranty for this product.*

### System Requirements for Configuration

- Computers with Windows, Macintosh or Linux-based operating systems and with an Ethernet adaptor.
- Internet Explorer version 5.5 and above or Netscape Navigator that supports Java


---

### 3 CONNECTION (HARDWARE)

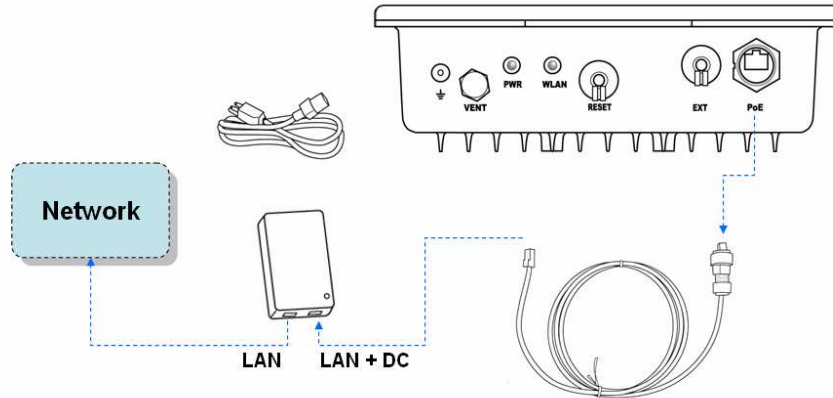

#### Front/ Interface View

The figure below shows the LED Indicator of the Wireless LAN Access Point.

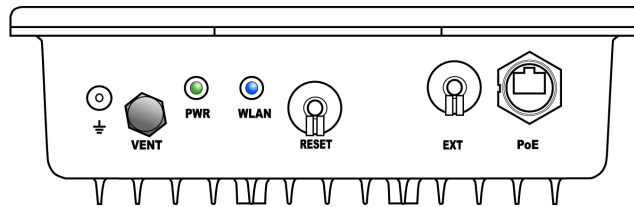

#### POWER (PWR):


This indicator lights **green** when the Access Point receives power. Otherwise, it turns off.

#### WLAN:

The indicator blinking **blue** whiles the wireless LAN activity.

#### Rear/ Side view

The figure below shows the rear panel of the Access Point

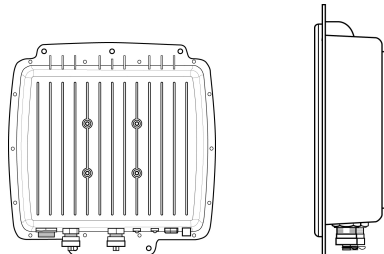


The 4 holes at the rear of the Outdoor AP are designed for mounting brackets installation, which included within every package.

---

## PoE

The PoE is to get power source over Ethernet connection, please unscrew the dust cap of the PoE outlet and plug your PoE power injector into position.

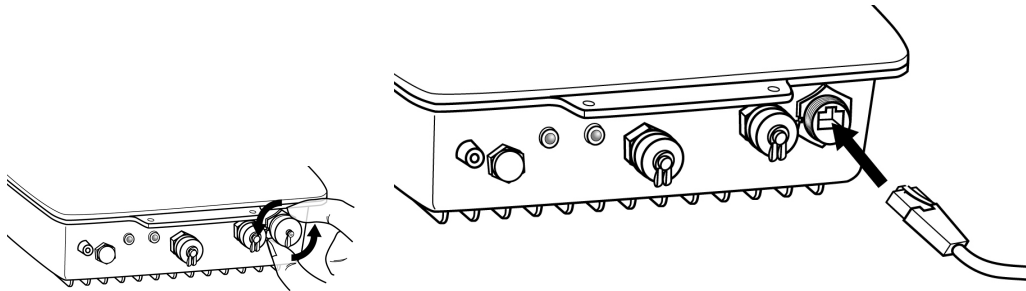


Remove the dust cap


RJ 45 Water-proof plug is included, please be advise that the Ethernet cable is not included for field installation.

### Waterproof RJ45 plug Field Installation Guide

1. Check package contents  
(\*Ethernet Cable is not included)

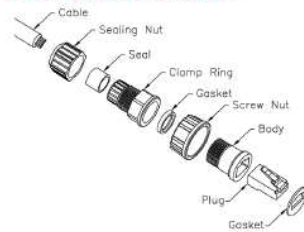

 2. Strip the cable sheath, the recommended wire gauge is 24AWG.



3. Insert the seal into the *rear* of the clamp ring. Insert the gasket into the front end of the clamp ring.





4. Insert the body, the screw nut, the sealing nut and clamp ring into stripped end of *the* cable

5. Crimp the stripped cable to the plug.

6. Insert the gasket to the front end of the connector and put the screw nut on the back.

7. Connect clamp ring and sealing nut to the *rear* of the connector and clamp ring. *Hold the assembly firmly and tighten by hand.*

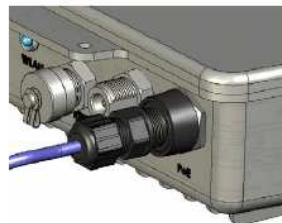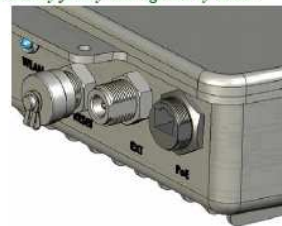




---

## EXT

The EXT outlet allows connecting to higher gain external antenna based on specific requirements.

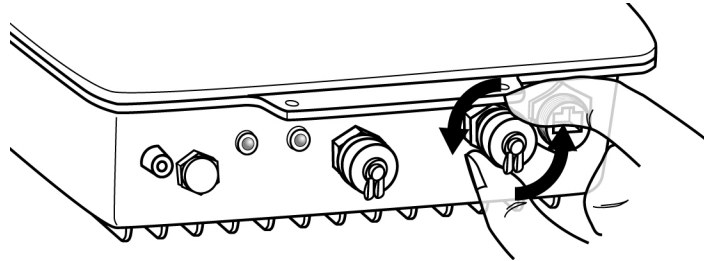


Unscrew the dust cap from the EXT outlet, and then you have to connect the cable to the EXT connector.

### About EXT connector:


The EXT connector is designed with mechanical switch function that allows upgrading to higher gain external antenna for better transmission performance.

### WARNING:

**Please do screw the cable male connector tightly to the EXT female connector, with this action, the mechanical switch will automatically disable the built-in 9dBi directional antenna and the RF signal will be guided to the chosen external antenna.**

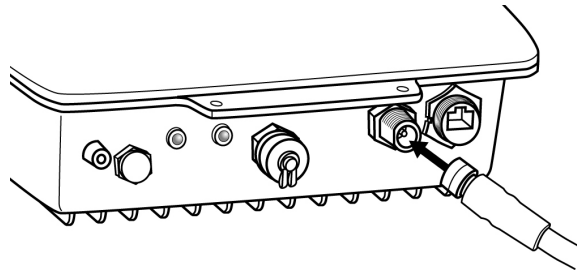


※ To complete installation between the Outdoor AP and external antenna series, an additional accessory is required and has to be purchased separately like other external antennas.

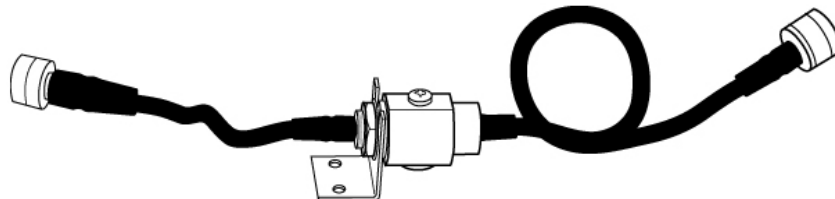


---

The optional extension cable is with built-in surge protector, comes with N-male to N-male connector interface, length 1meter long, please contact your local reseller or distributor for further product information

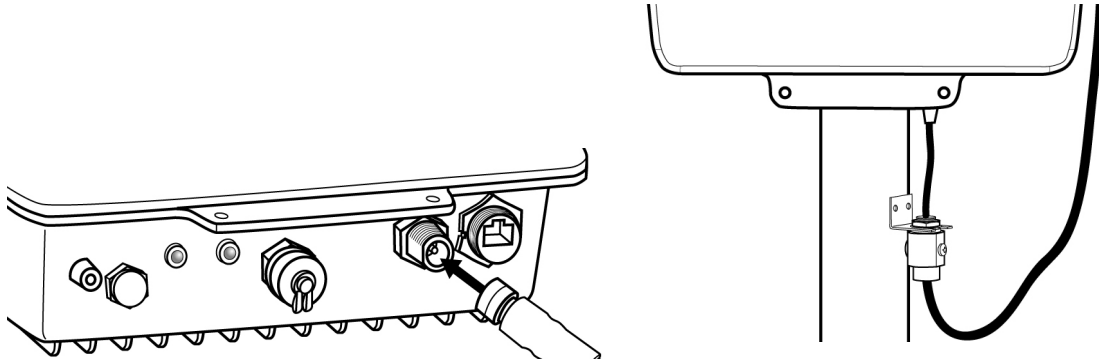

### IMPORTANT NOTICE

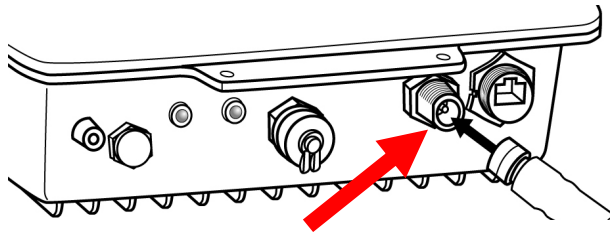


The external connector for external antenna is with sophisticated mechanical switch inside; please **DO NOT** screw any extension cables onto this EXT connector if there are no external antenna connections.

Once the EXT connector is screwed with extension cable and it will automatically transfer your RF signal from the built-in antenna to the chosen external antenna through the connected cable. Please do the signal alignment from the external antenna instead of the device side.

### RESET

The Reset function is to reset the setting back to factory default setting, once you press the “RESET” button more than 5 seconds.

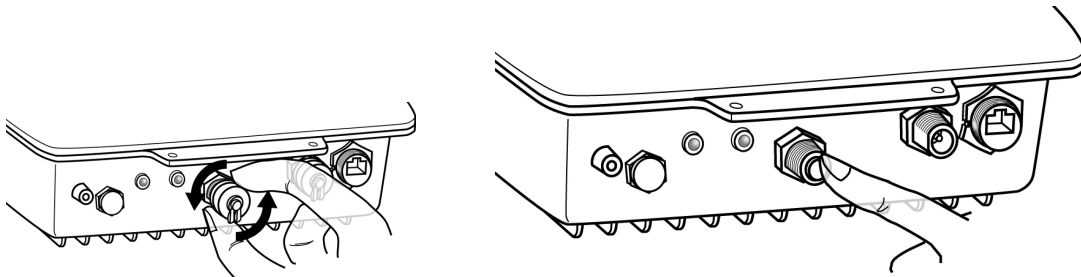


---


Unscrew the dust cap from RESET button, and you can see a rod inside the Reset button; try to push the rod and the rod inside until the feel of the touch to the reset button

## VENT

GORE Membrane Vent are used to enhance the ingress protection (IP) of gasketed enclosures

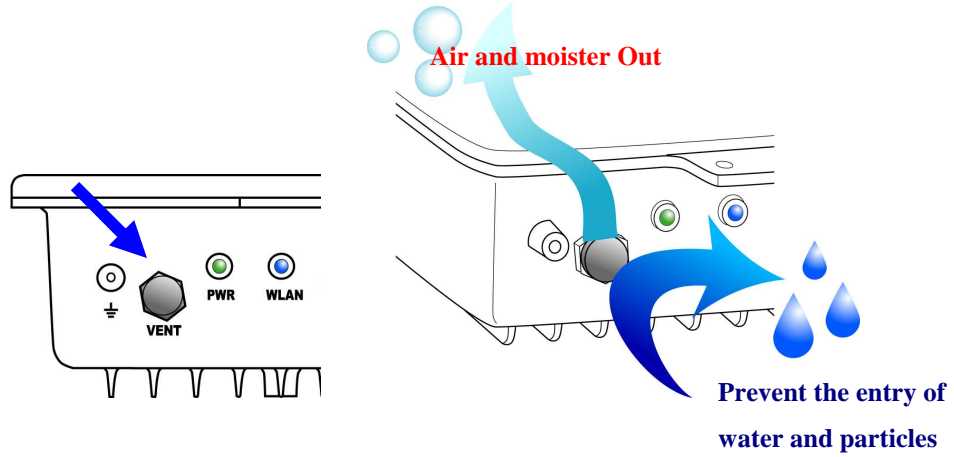


## Mounting Instructions

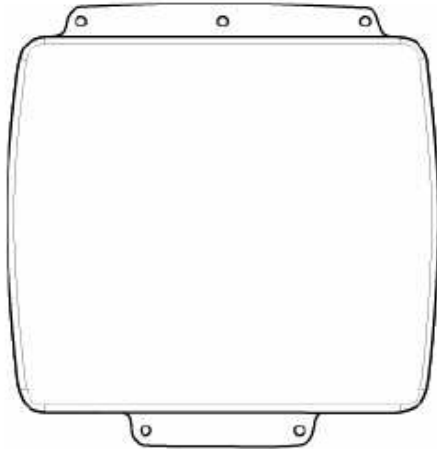


1. Check contents

Mounting package contents:


- Wall / Pole Swivel Mounting Bracket
- Fasteners
  - i. 2x Wood Screws
  - ii. 2x Wall / Gyprock Plugs
- 2x U-Clamps, 4x nuts, 4x washers

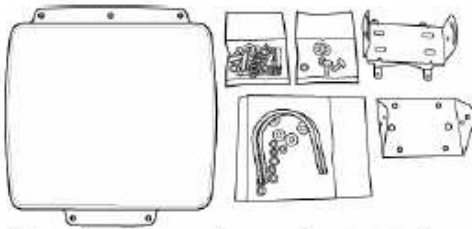


2. Place the outdoor unit mounting bracket into the seating and secure it with the screws and washers provided.

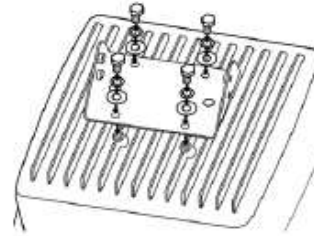


3. **For pole mounting.** (For wall mounting, please skip to step 8) slide the two (2) enclosed pole U-clamps around the pole.
4. Place the attached pole mounting bracket at desired pole elevation and position. **Note:** Please make sure that the external antenna can reach this outdoor unit given your antenna cable length.

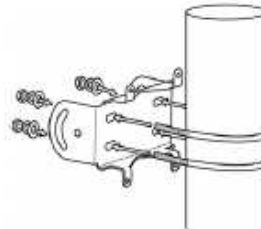


5. Secure the outdoor unit mounting bracket to the pole mounting bracket using the nuts and washers provided. Please adjust for proper orientation.

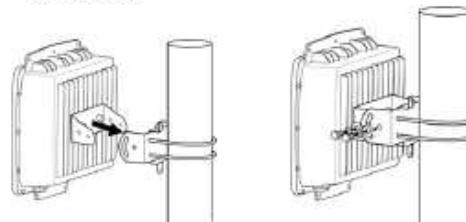


6. Adjust the outdoor unit for correct tilt / vertical orientation.

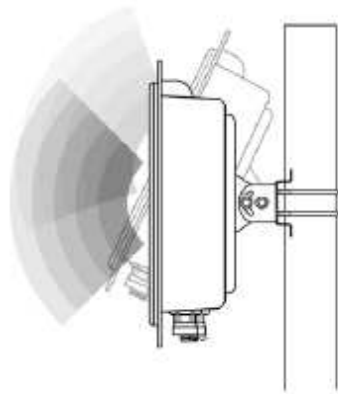


7. **For wall mounting**, use the wall bracket as a template and mark the wall for the correct screw / fastener position.
8. Drill holes for the fastener plugs at the marked positions.
9. Insert fastener plugs into the drilled holes

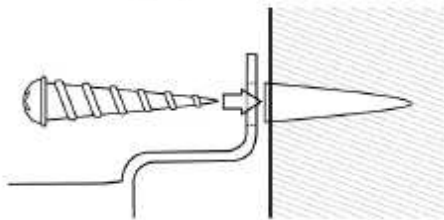


10. Using the wood screws provided, please screw the outdoor unit / swivel mounting bracket to the fastener plugs in the wall.

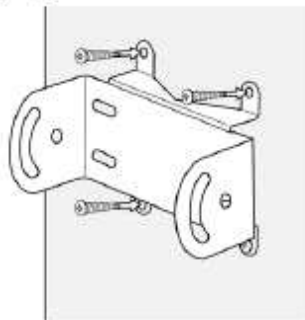

11. Insert the outdoor unit mounting bracket into the wall mounting bracket and secure with the washers and screws provided

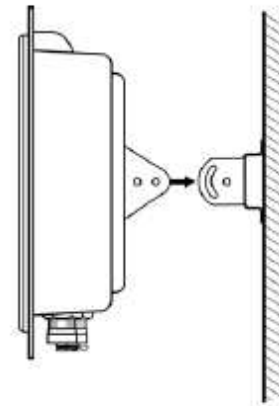

12. Adjust the antenna for correct pan / horizontal orientation.

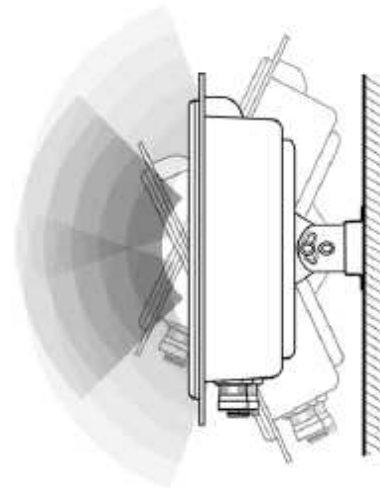

13. Once the unit is positioned correctly, please tighten all screws so that the antenna could survive high wind velocity.
14. For optional outdoor external antenna installations, and reference to antenna system components including Antennas, Cables and Surge Arrestor configuration, please reference the Common User Guide included in the box.

---

## 4 BASIC IP NETWORKING

### **IP = Internet Protocol**

IP stands for Internet Protocol. In an IP network, every device has a **unique** IP Address (For example: 192.168.10.35) to identify itself. There are two ways of assigning an IP address to a PC or Router: Static and Automatic (DHCP). Static IP addresses are keyed-in manually, while Dynamic IP's are distributed by a DHCP Server.

### **Ports**

Every packet of traffic is identified by its Source and Destination Addresses, which would ensure that the packet arrives at the correct destination. A Port Number is also embedded in each packet; to identify which software application that generated and uses that packet. Therefore, if it blocks a certain port number, it denies the particular software from using the connection.

### **Static IP Address**

Static IP addressing ensures that the device will always have the same IP address. Static addressing is commonly used for your servers.

### **Dynamic IP Address**

A dynamic IP address is one that is automatically assigned to a PC. These IP addresses are “dynamic” because they are only temporarily leased to the PC when it connects to the network. This is the most convenient and common way of managing IP addresses in a network. The Server that manages this pool of IP addresses is called the DHCP Server. The product has a DHCP Server built-in to simplify the network management.

### **DHCP (Dynamic Host Configuration Protocol)**

The PC obtaining an IP address from the Server is called the DHCP Client. If there is already a DHCP Server running on your network, you must disable one of the two DHCP servers. Running more than one DHCP server together will cause network problems!

### **Wireless LAN Basics**

A Wireless LAN (WLAN) is a computer network that transmits and receives data with radio signals instead of using cables. WLAN has become common in homes, offices, airports and public Hotspots. WLAN can support the same applications and software that run on a wired network (LAN). Besides supporting the same software and functions, WLAN brings greater convenience and eliminates the need to lay Ethernet cables in a home or office.

The AP can even support 108Mbps wireless data rate at Turbo mode. This is only applicable for user using recommended Turbo-capable Cardbus (with Atheros chipset).

WLAN networking involves a few additional parameters to be configured:

---

## SSID

The SSID is the “network name” for the WLAN network. The SSID is any name, and can be any set of characters or numbers. The Client sniffs the radio frequencies for an AP with the same SSID with itself. The client locks onto the AP and they are “**associated**”.

To enable plug-and-play convenience, most client cards can sniff the frequencies to extract the available SSID’s to let the user choose from.

## Encryption

WLAN traffic can be captured by anybody to be read! The solution is to use encryption to make the traffic appear as random characters to the eavesdropper. Both the AP and client must use the same encryption standard and key to enable them to decode the “rubbish”. If the encryption settings are mismatched, the client and AP cannot associate. WEP (Wired Equivalent Privacy) is the most common WLAN encryption standard.

## Frequency

**This device operates in** the 2.4GHz band. Depending on regulation, not all the frequencies may be available in every country. Frequency is configured on the AP only. The client searches for the AP and locks onto that AP’s channel.

## Signal Strength

Radio signals drop in power over a distance. Even if all the settings are correct, low signal strength makes association impossible. The usable distance between the AP and client can range from a few meters indoor to a few km. When setting up the client, make sure that you:

- Keep at a distance between the AP and the clients.
- Make sure that the WLAN signals do not have to pass through too many concrete walls and metal structures to reach the client.
- Make sure that clients are located far away from one another to avoid interference.
- Make sure that there is line of sight between the AP and client device.

## Interference

Interference happens when 2 clients with the same channels are placed near to one another. The speed of the network drops and the signal strength fluctuates wildly.

## Roaming

Association happens when the SSID, Encryption and MAC Address Control settings are correct between the AP and client. If 2 AP’s with these same settings are located in the same area, the client would choose to associate to the one which gives it a better signal strength. The client would roam over to the 2nd AP when he moves nearer to it. The client switches AP and frequency as he does so.

## 5 GETTING STARTED

Connect the network as shown previously.



If your PC is **wireless**, check the PC's card utility to make sure that the signal strength is good and that the bottom LED lights up on the AP.

Open a Web browser (Internet Explorer, Netscape etc.).

Type the AP LAN IP (**192.168.1.20**) address into the browser's Address field. The default LAN IP address is **192.168.1.20**.



## 6 CONFIGURATION MENU

In every Web Configuration page, the left panel is the navigation menu containing the main sections. The right-side frame is where the detailed configuration is done.

Navigation Panel

**Basic**  
Site Survey  
Administration  
IP Configuration  
Operation Mode

**Advanced**  
Radio Setting  
Security Setting  
MAC Addr Control  
Protocol Filter  
SNMP Configuration  
Miscellaneous

Status

<b>IP Mode:</b>	<b>Static IP Mode</b>
<b>IP Address:</b>	<b>192.168.1.20</b>
<b>Subnet Mask:</b>	<b>255.255.255.0</b>
<b>Gateway Address:</b>	<b>0.0.0.0</b>
<b>SSID:</b>	<b>11g</b>
<b>Wireless Mode:</b>	<b>11g</b>
<b>Radio Frequency:</b>	<b>2412 MHz (Channel 1)</b>
<b>Operation Mode:</b>	<b>Access Point</b>
<b>Security Method:</b>	<b>None</b>
<b>System MAC Address:</b>	<b>00:06:c7:01:1a:3d</b>

Configuration Panel



---

## Basic → Site Survey

<b>Basic -&gt; Site Survey</b>	<b>REBOOT AP</b>
	<input type="button" value="Refresh"/>

**Site Survey:** Displays the MAC address, RSSI, SSID and the channel of other AP.

## Basic → Administration

This page allows you to change the Username and Password for admin user/end user. The default username is admin and password is admin. After every factory reset, the Username and Password reverts to this combination. To view/upgrade firmware version, you need to close this configuration page. Then you have to login as a super user/system administrator in the configuration page again. The default username is super and password is super. After every factory reset, the Username and Password reverts to this combination. Refer to super user instructions for more info.

<b>Device Name:</b>	<input type="text"/>
<b>User Name:</b>	<input type="text" value="admin"/>
<b>Password:</b>	<input type="password" value="•••••"/>



The username and password are case sensitive.



Remember that after every configurations changed, it is necessary to update and reboot the AP for changes to take effect.

## Basic → IP Configuration

This page allows you to choose the type of IP

Basic -> IP ConfigurationUpdateREBOOT AP

**IP Mode:**  Static IP  Dynamic IP (DHCP Client)

---


**IP Address:**  .  .  .

**Subnet Mask:**  .  .  .

**Default Gateway Address:**  .  .  .

**Static IP mode:** When you boot up the AP for the first time, it is in Static mode. You assign a Static IP to the AP. The default IP address, subnet mask and gateway mask are **192.168.1.20, 255.255.255.0 and 0.0.0.0**.

**DHCP mode:** the AP will obtain an IP Address from an upstream DHCP Server.



When in DHCP client mode, these 4 columns show the IP settings obtained from the network.

## Basic → Operation Mode

Basic -> Operation ModeUpdateREBOOT AP

**Operation Mode:**  Access Point  Ethernet Bridge

**SSID:**  **Suppress SSID:**

**Wireless Mode:**  ▼

**Radio Frequency:**  ▼

**WDS:**  Enable  Disable  Disable (Multiple PCs Support)

---

**Advanced Settings:**

**Distance:**  ▼

**Remote AP MAC List:**

**Remote AP MAC 1:**

**Remote AP MAC 2:**

**Remote AP MAC 3:**

Notes: All "00:00:00:00:00:00" means allow ANY

---

**Operation Mode:** TEW-455APBOperates as **Wireless LAN Access Point or Ethernet Bridge mode.**

Wireless Bridge is used when it is not advisable to lay an Ethernet line over a distance. Two AP's can be set up to connect over this distance, acting as the wired backbone.

**SSID:** Service Set Identifier. It is a sequence of characters that uniquely names a Wireless LAN. This name allows PCs to connect to the correct Wireless Access Point when multiple Access Points operate in the same location. The default SSID is **11g**.

**Wireless Mode:** The AP or Bridge operates in the frequency of 2.4GHz for 802.11g.

**Radio Frequency:** There are different frequency channels depending on the country of use. You can choose to set the frequency channel to use or use SmartSelect for automatic channel selection.

**WDS:** Enable or disable or disable with multiple PC support. When WDS enabled, all PC connected to bridge/AP can communicate with each other. When the WDS is disabled, only PC connected to the bridge/AP can communicate with each other. When disabled with multiple PC support, all PC connected to bridge/AP can communicate with each other, even if the AP cannot support WDS.

**Advance Settings:** This is to set the distance for bridging. The default distance is 4-6km.

**Remote AP MAC List:** The Bridge will only associate with AP whose MAC address is in the list. It is essential to type in the MAC address of the AP without any spacing in front or behind it.

1. Make sure you are browsing this page through an **directly connected Ethernet** wire.
2. Please adjust the antenna until you achieve minimum of **Good** signal quality
3. For **client mode** pls **generate some traffic** between AP and Bridge, Eg: For bridge with IP "192.168.1.33", run "**ping 192.168.1.33 -t -l 10000**" at command prompt

---

<b>ID</b>	<b>MAC Address</b>	<b>Signal Quality</b>
1	00:06:C7:01:00:4F	Average(22)
2	00:06:C7:14:07:BC	Excellent(46)

---

This page shows the MAC Address and Signal Quality of the units associated to the AP. For long distance bridging, make sure that you get at least a "good" signal quality for desired performance.



Do not insert any spacing in front or behind the MAC address when using Remote AP MAC List. Failing to do so will cause the bridge unable to associate with the intended AP.

---

## Advanced → Security Setting

This section allows you to configure wireless encryption to prevent unwelcome parties from reading your traffic. Authentication can also be configured to block outsiders from accessing your network.



Advanced -> Security Setting

Security Mode:  Disabled  WEP  WPA\_PSK  WPA


**Disable:** No wireless security.

**WEP:** Select to apply WEP security.

**WPA-PSK:** Select to apply WPA-PSK security.

**WPA:** Select to apply WPA security.

## WEP Security

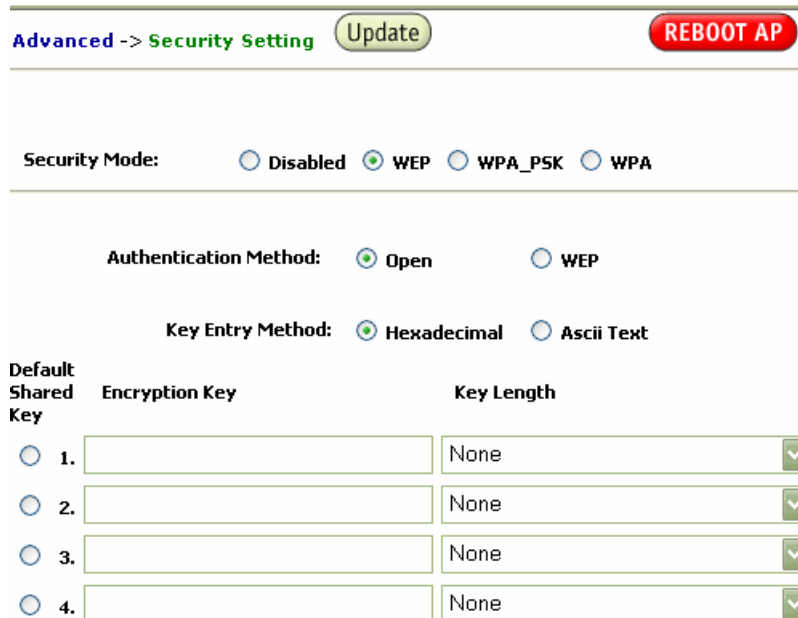

Advanced -> Security Setting

Security Mode:  Disabled  WEP  WPA\_PSK  WPA

Authentication Method:  Open  WEP


Key Entry Method:  Hexadecimal  Ascii Text

Default Shared Key	Encryption Key	Key Length
<input type="radio"/> 1.	<input type="text"/>	None
<input type="radio"/> 2.	<input type="text"/>	None
<input type="radio"/> 3.	<input type="text"/>	None
<input type="radio"/> 4.	<input type="text"/>	None

**Key Entry Method:** Choose Hexadecimal if you want to enter the Keys in hexadecimal format. Otherwise, choose ASCII Text to enter the Key in ASCII format. ASCII is also called Alphanumeric in some systems. Use the same key format for the AP and Client!

**Encryption Key:** Enter the encryption key.

**Key Length:** Choose the number of bit for the encryption key.

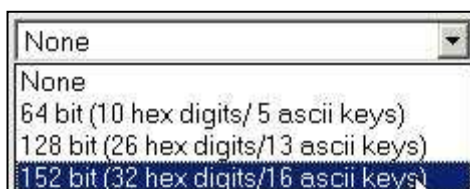


None

None

64 bit (10 hex digits/ 5 ascii keys)

128 bit (26 hex digits/13 ascii keys)

152 bit (32 hex digits/16 ascii keys)

	<p><b>Hexadecimal Characters:</b> 0,1,2,3,4,5,6,7,8,9 and a,b,c,d,e,f</p> <p><b>ASCII Characters:</b> 0,1,2,.....8,9 and a,b,c,d,.....x,y,z</p>
---	---

### WPA-PSK Security

Security Mode:  Disabled  WEP  WPA\_PSK  WPA

PassPhrase:

Cipher Type:  ▼

**PassPhrase:** Key in the 8-64 character for PSK.

**Cipher Type:** Choose Auto, TKIP or AES.

### WPA Security

Security Mode:  Disabled  WEP  WPA\_PSK  WPA

RADIUS Server IP:

RADIUS Server Port:

RADIUS Secret:

Key Update Interval:

Cipher Type:  ▼

2.4GHz Key Source: Local  Remote

**RADIUS Server IP:** Enter the IP Address of the RADIUS Server (for 802.1x authentication purposes). This is used only when you have a RADIUS Server and want to use it for authenticating the Wireless Clients. Almost all homes and many offices do not have a RADIUS Server. These settings are for advanced users only.

**RADIUS Port:** Enter the port number of the RADIUS Server.

**RADIUS Secret:** Enter the Shared Secret of the RADIUS Server. (Only if 802.1x protocol is used)

**Key Update Interval:** Specify the interval in milliseconds. The default is 1800.

**Cipher Type:** Choose Auto, TKIP or AES.

**2.4GHz Key Source:** Specify the location of the key storage. (Only if 802.1x is used.) If you are using PSK or Pre-shared key, select local.

---

## Advanced → MAC Address Control

This is only use when the AP is operating in the AP mode.

MAC Addr Control:  Enable  Disable

---

MAC Address:

---

### Allowed MAC Address List:

**MAC Address Control:** Enable or Disable MAC addresses Control.

**MAC Address:** Enter the MAC address of the client.

**Allowed MAC Address List:** Reflects the MAC addresses of the clients that are allowed to associate with the AP.

## Advanced → Protocol Filter

**Advanced -> Protocol Filter**

---

**Filter IPX Packet:**

**Wireless Isolation:**

---

**Enable Broadcast Filter:**

**Broadcast Number Allowed:**  (10-200)

**Enable Multicast Filter:**

**Multicast Number Allowed:**  (10-50)

**Enable Bandwidth (QoS):**

**Bandwidth Allowed:**  (6144 - 7077888 bytes)

---

**Filter IPX Packet:** Selecting this option will disallow all IPX packets to pass through.

**Wireless Isolation:** Selecting this option will disallow wireless clients associated with this device to communicate with each other.

**Enable Broadcast Filter:** Selecting this option will filter off out broadcast storm.

**Broadcast Number Allowed:** Select a number in between 10 to 200.

**Enable Multicast Filter:** Selecting this option will filter off out multicast storm.

**Multicast Number Allowed:** Select a number in between 10 to 50.

**Enable Bandwidth (QoS):** Selecting this option will limit the bandwidth on TCP/IP data based on the number entered in the textbox.

**Bandwidth Allowed:** Select a number in between 6144 to 7077888 bytes.

### Advanced →SNMP Configuration

---

Advanced -> SNMP Configuration

---

**Enable SNMP:**

**Read Community String:**

**Write Community String:**

**System Contact:**

**System Location:**

**Enable SNMP:** Selecting this option will enable the SNMP feature.

**Read Community String:** The SNMP Client with this “passphrase” will have “Read” access.

**Write Community String:** The SNMP Client with this “passphrase” will have “Write” access.

**System Contact:** To set the MIB2 sysContact OID value.

**System Location:** To set the MIB2 sysLocation OID value.

---

Advanced → Miscellaneous

---

Advanced -> Miscellaneous

---

Enable Telnet:

---

Save Configuration to Local Device:   
Restore Configuration from Local Device:

---

Revert to factory setting:

---

Save Configuration to Local PC:   
Configuration File on Local PC:  
   
Restore Configuration from Local PC:

**Enable Telnet:** Disable/enable Telnet access to this device.

**Save configuration to local device:** After you have successfully configured the AP, you can save this “Good Config” into device memory.

**Restore configuration from local device:** To retrieve previous “Good Config” to restore the AP back to the working setting that was previously saved.

**Revert to factory setting:** If you have even forgotten the password to get into the configuration pages, you would have to do a Factory Reset to the AP.

**Save configuration to local PC:** After successfully configured the AP, save this “Good Config” into the computer system.

**Configuration file on local PC:** Browse to the location of the saved “Good Config” in the computer system.

**Restore configuration from local PC:** Allow restoring back to the “Good Config” from the computer system.



---

## Status → System Status

This page presents a convenient overview of the overall status of the AP.

The most common configuration parameters are shown here, for a quick look

---

Status -> System Status

REBOOT AP

---

IP Mode: Static IP Mode  
IP Address: 192.168.1.20  
Subnet Mask: 255.255.255.0  
Gateway Address: 0.0.0.0

---

SSID: 11g  
Wireless Mode: 11g  
Radio Frequency: 2412 MHz (Channel 1)  
Operation Mode: Access Point

---

Security Method: None  
System MAC Address: 00:06:c7:01:1a:3d

## Status → Association Status

This page presents an overview of the MAC address and Signal Strength of all clients connected to the AP through Ethernet or wireless. The signal strength is the Signal to Noise ratio (SNR) and it is measured in dBm.

---

Status -> Association Status

REBOOT AP

---

ID	MAC Address	State	Signal Strength	Tx Num	Rx Num	Tx Rate
----	-------------	-------	-----------------	--------	--------	---------

---

## Status → Super User

This page allows you to change the Username and Password for admin user/end user. The default username is super and password is super. After every factory reset, the Username and Password reverts to this combination. The AP does not allow you to set the same Username for both admin and super users.

---

Super User -> Super User

Update

REBOOT AP

User Name:

Password:

---

## Status → Firmware Upgrade

This page allows you to update the firmware (software) in the AP. New firmware are issued to improve the performance and add features to the product.

The new firmware will be name “aping1”.

1. Save the file in your PC.

---

Super User -> Firmware Upgrade

REBOOT AP

**Attention: (Improper actions will damage the system)**

- Please upload the correct firmware
- Please DO NOT power off or disconnect during uploading
- Please DO NOT close the browser during uploading
- Please DO NOT navigate to a different location
- Uploading may take over 30 seconds depending on the bandwidth

Enter the file name you want to upload:

Browse...

Upload

2. Browse to the file with the name “aping1”.
3. Click on **Upload**.
4. **Reboot** the AP and the process is complete.
5. After reboot perform a default factory setting.



Do not change the filename of the new firmware. New firmware with filename other than “aping1” will cause the process to fail.

## Status → Firmware Version

This page presents information of the firmware version of the AP.

---

Super User -> Firmware Version

REBOOT AP

# Access Point Web Server


LOGOLESS AP software M1061-I00-C00-H00-V1.8.9B3P1

BSP 3.1.1.54

Built on Dec 19 2007, 09:47:13

**Introduction**

The Outdoor AP utility is an easy-to-use software that allows an Administrator to quickly configure the AP at first boot-up. The QS Utility only communicates with authorized Access Points and Bridge. The Utility allows the devices to be monitored and configured even if they all have the same default IP Address at first boot-up after installation.

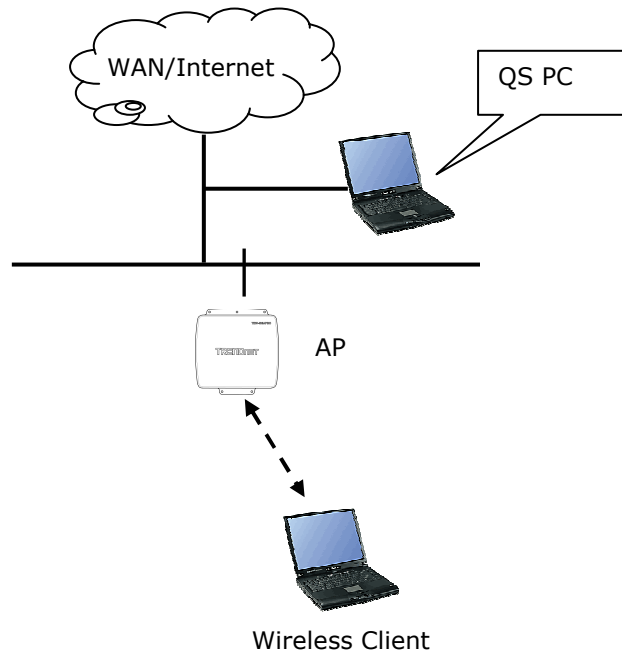**PC Requirement**

- X86 based CPU, 600Mhz & above
- 128 MB RAM
- 1.5 MB hard disk space
- Ethernet port / Wireless LAN adapter
- Windows 2000 and above


**Installation****Step one**

Double click on the file *setup.exe* and click **Next** to continue.




*Step two*

Click **Next** to accept the default installation directory. If you wish to change the installation directory, click on the **Change** button to select a new directory.

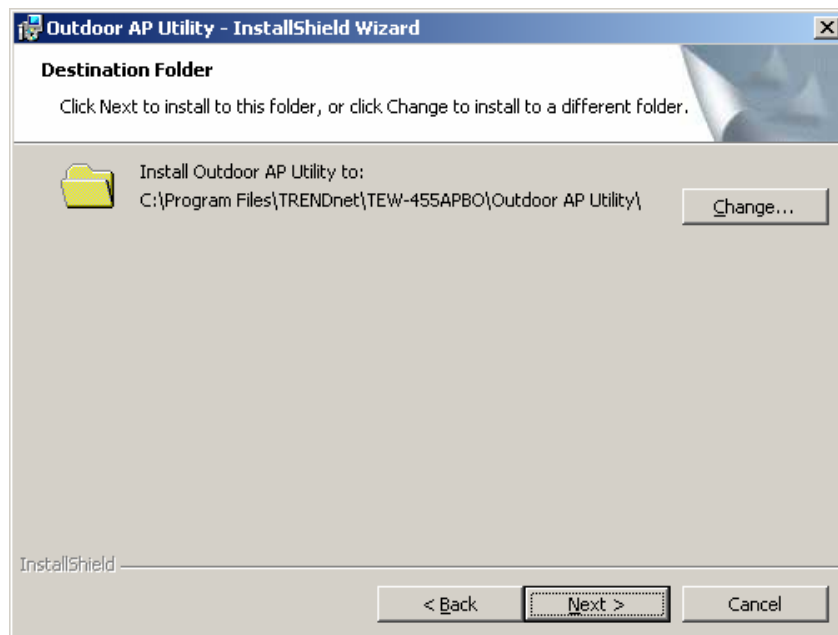


---

*Step three*

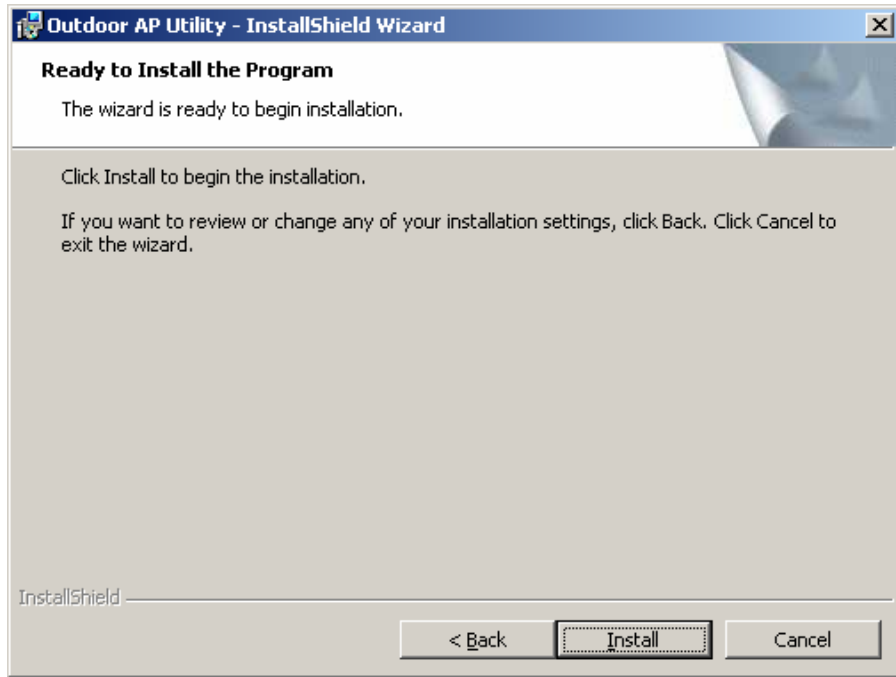


Click **Install** to do the actual installation

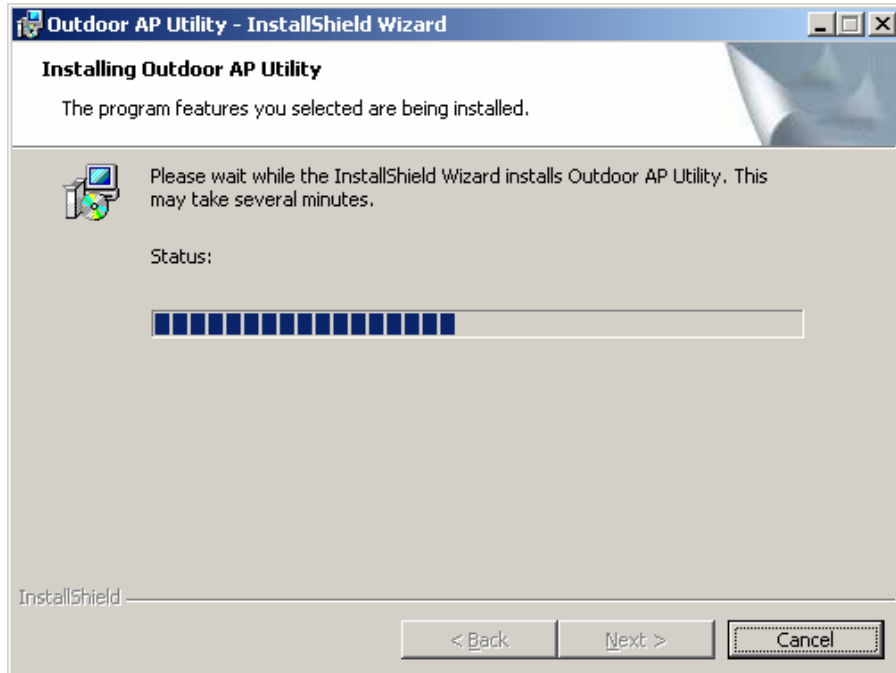

---

*Step four*

Click **Finish** to exit the installation wizard.

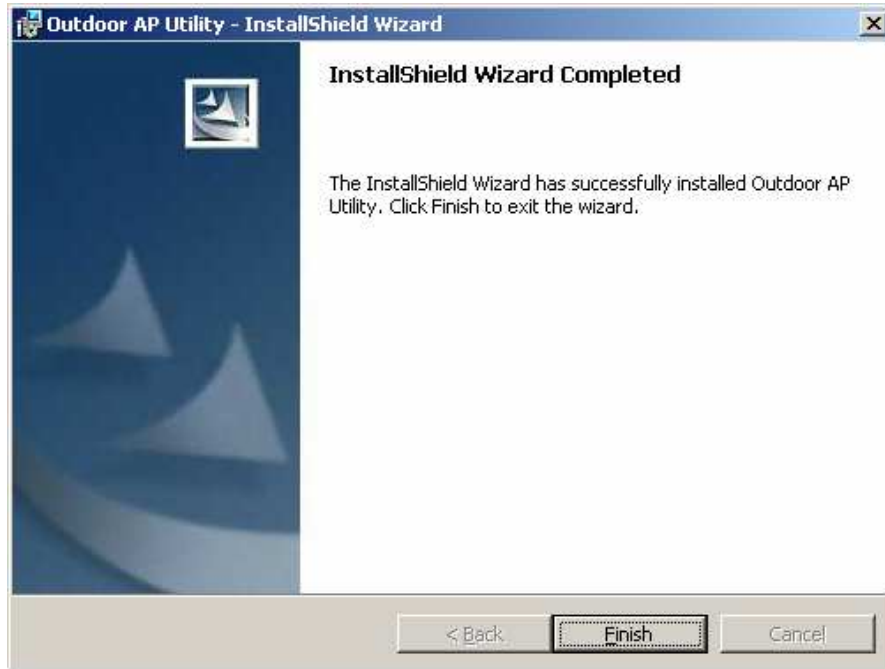


---

## 8 OUTDOOR AP UTILITY USER GUIDE

### Outdoor AP Utility Icon

Click on the desktop icon **Outdoor AP Utility** to start the application.

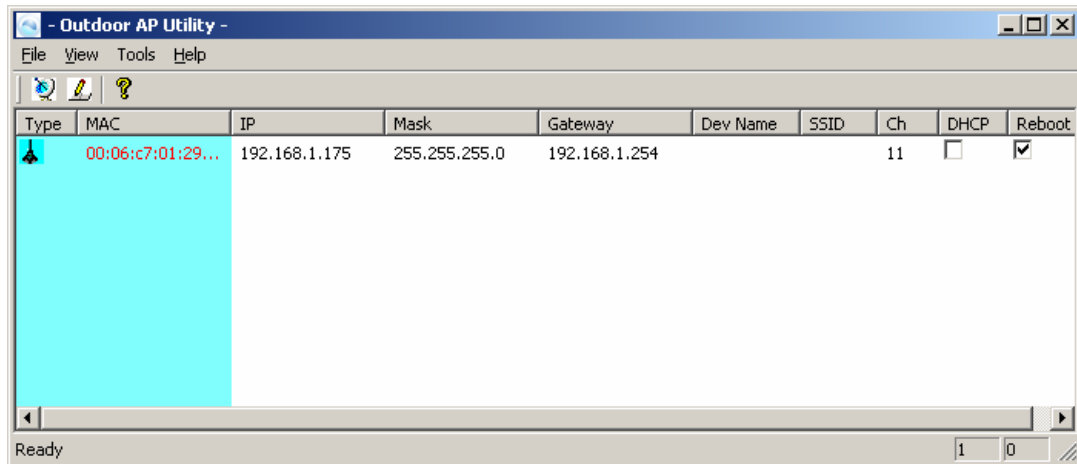


### Parameters Display in Utility

The Utility displays the following parameters that can be changed.

1. IP Address
2. Subnet Mask
3. Gateway
4. Device Name
5. Channel
6. DHCP/Static IP

### Username and Password of Utility

If the username/password of the Devices have been changed, the QS Utility has to be updated with the correct username and password. If the username/password of the QS Utility and the Device is different, QS Utility will not operate as desired.

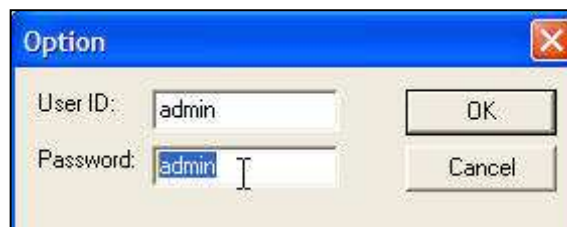

---


## Making Changes

The changes are directly applied in the Utility.

IP	Mask	Gateway
10.0.0.160	255.255.255.0	10.0.0


Dev Name	Ch	DHCP
	8	<input type="checkbox"/>
	7	<input type="checkbox"/>
	8	<input type="checkbox"/>
	9	<input type="checkbox"/>
	10	<input type="checkbox"/>
	11	<input type="checkbox"/>

It does not matter if all the devices have the same IP Address. The QS Utility identifies them uniquely by their MAC Addresses.

Type	MAC
	00:06:c7:14:08:73

## Updating Changes

After the necessary changes have been made, the Administrator can apply the changes to the AP. Check on the **Reboot** Checkbox and click on the **Update** button to reboot the device.

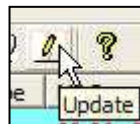



Multiple devices can be updated all at once. Use ctrl-left click to select multiple entries or type ctrl-A to select all entries. Click on Update button to begin the update process.



To refresh the view, use the **Find** button.

## Pinging the Device

The QS Utility can also be used to ping a selected Device to check the connectivity.

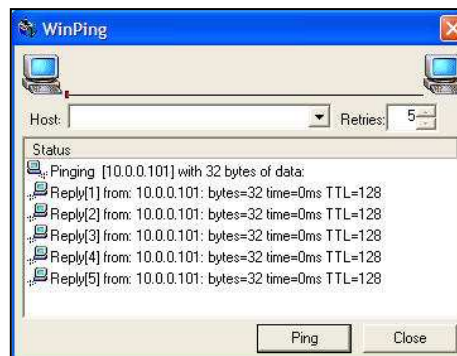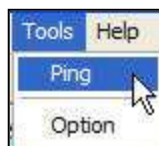



---

## Professional installation instruction

### 1. Installation personal

This product is designed for specific application and needs to be installed by a qualified personal who has RF and related rule knowledge. The general user shall not attempt to install or change the setting.

### 2. Installation location

The product shall be installed at a location where the radiating antenna can be kept 20 cm from nearby person in normal operation condition to meet regulatory RF exposure requirement.

### 4. Installation procedure

Please refer to user's manual for the detail.

### 3. External antenna,

Use only the antennas which have been approved by RFNet Technologies Pte Ltd. The non-approved antenna(s) may produce unwanted spurious or excessive RF transmitting power which may lead to the violation of FCC limit and is prohibited.

### 5. Warning

Please carefully select the installation position and make sure that the final output power does not exceed the limit set force in US Rule CFR 47 part 15 section 15.247. The violation of the rule could lead to serious federal penal.