

- 1 Charging/Notification light
- 2 NFC
- 3 Power key
- 4 Fingerprint sensor
- 5 Volume/Zoom key
- 6 USB port/Charger

2 Wait a moment for the device to start.


To activate the screen

- Briefly press the power key.

Transferring content


For transferring content from an old device to your new device, log in with your Google account and sync your data using services provided by Google. For details visit support.google.com.

For more information

Visit support.sonymobile.com or tap  to launch the Support app.

- ! The Support app is not available in all countries and regions.

To insert SIM and memory cards

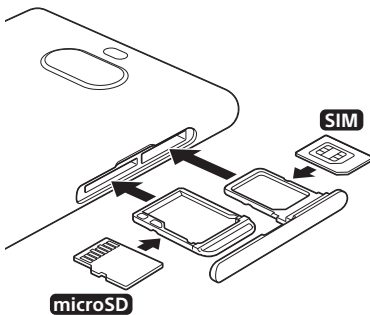


- 1 Drag out the SIM and memory card trays.
- 2 Place the SIM card securely in the SIM card tray.
- 3 Place the memory card securely in the memory card tray.
- 4 Gently push the trays back into the slots until they fit into place.

To turn on your device

- 1 Long press the power key until the device vibrates.

To view the CE marking and the FCC ID

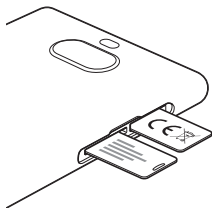

- 1 Drag out the SIM and memory card trays.
- 2 Drag out the label strips simultaneously, as shown in the illustration. To see the full text of the EU declaration of conformity, visit: <http://www.compliance.sony.de/>.
- 3 To view the FCC ID, turn over your device. The FCC ID is displayed on the other side of the label strips.

To view the regulatory compliance mark

- Open the phone dialer, then enter *#07#.

Warranty, SAR and usage guidelines

For information about warranty, SAR (Specific Absorption Rate) and safety guidelines, please read the important information provided under **Settings > System > About phone > Legal information** on your device.

Legal information

Publication number: 1318-0211.1

This Startup guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device.

See regulatory information such as the device CE marking in the relevant label strip in the device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. Visit <https://www.sonymobile.com/global-en/legal/> for more information.

Manufacturer: Sony Mobile Communications Inc., 4-12-3 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002, Japan. For EU product compliance: Sony Belgium, Bijkantoor van Sony Europe Limited, Da Vincilaan 7-D1, 1935 Zaventem, Belgium.

©2019 Sony Mobile Communications Inc. All rights reserved.

Supported frequency bands

Some frequency bands might be turned off in certain markets or by certain operators.

You can find your model number under **Settings > System > About phone**.

I3113

UMTS HSPA+ (Bands 1, 2, 5, 8) GSM GPRS/EDGE 850, 900, 1800, 1900 LTE (Bands 1, 2, 3, 5, 7, 8, 20, 28, 32, 38) WLAN, 2.4G/5G, NFC

I3123

UMTS HSPA+ (Bands 1, 2, 4, 5, 8) GSM GPRS/EDGE 850, 900, 1800, 1900 LTE (Bands 1, 2, 3, 4, 5, 7, 8, 12, 13, 17, 25, 28, 29, 66) WLAN, 2.4G/5G, NFC
GSM 850/900 : Power Class 4, DCS(1800)/PCS(1900) : Power Class 1, UMTS : Power Class 3, LTE : Power Class 3, 2.4GHz<100mW, 5.15-5.35GHz<200mW, 5.47-5.725GHz<200mW, NFC 13.56MHz

SONY®

Startup guide

Xperia 10

I3113/I3123

XPERIA

CE



1318-0211.1

Printed in XXX (Printers logotype)