

Accessing Instructions on Handset

 
For those unfamiliar with handset operation, handset includes an application for learning touch operation and checking how to make settings.

↓ [Launching Guide](#)


Launching Guide

1

In Home Screen,   (SoftBank)   (Guide)

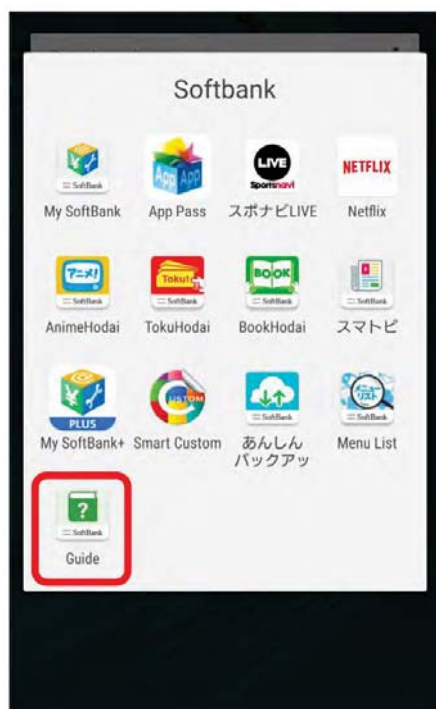

 Guide top screen opens.

- Information on usage of  (Guide) appears at initial startup. Follow onscreen instructions.

 
Parts & Functions


↓ Handset


↓ Handset Keys

↓ CE mark and FCC ID


Handset

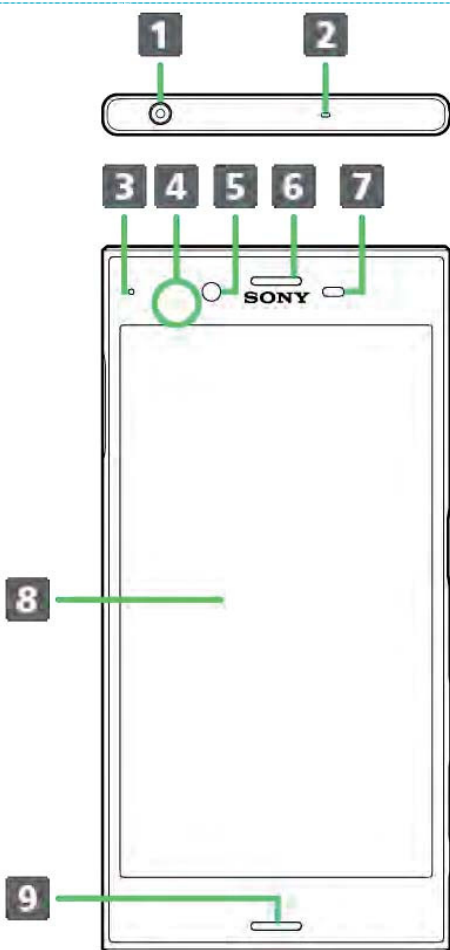

Part	Description
1 Headphone Port	Connect commercially available headphones. This port supports tetrapolar headset that conforms to the CTIA standard.
2 Second Mic	Reduces noise for calling.
3 Notification Lamp	Flashes for incoming transmissions. Lights while charging.
4 NFC/Osaifu-Keitai Detection Area	 sticker is attached at time of purchase.
5 Front Camera	Use to shoot still images or videos of yourself.
6 Earpiece/Speaker	Hear the other party's voice here. Also, hear sound (music, videos, TV, etc.) from here.
7 Proximity/Light Sensor	Detects surrounding brightness to automatically adjust Display or backlight and prevent Touchscreen

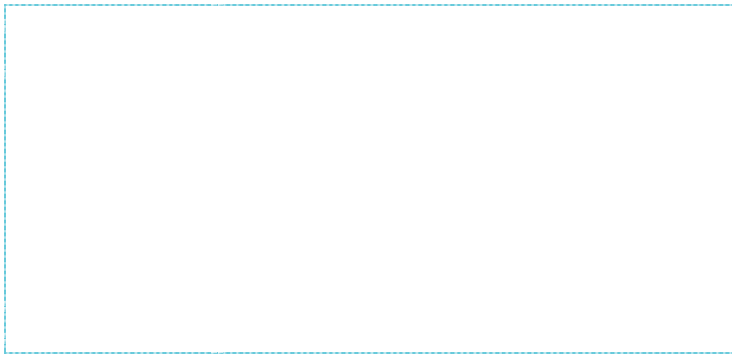 

  

 

 

	misoperation during a call.
8 Display	Touchscreen-type display, operate with your fingers on Display.
9 Speaker	Speak here.

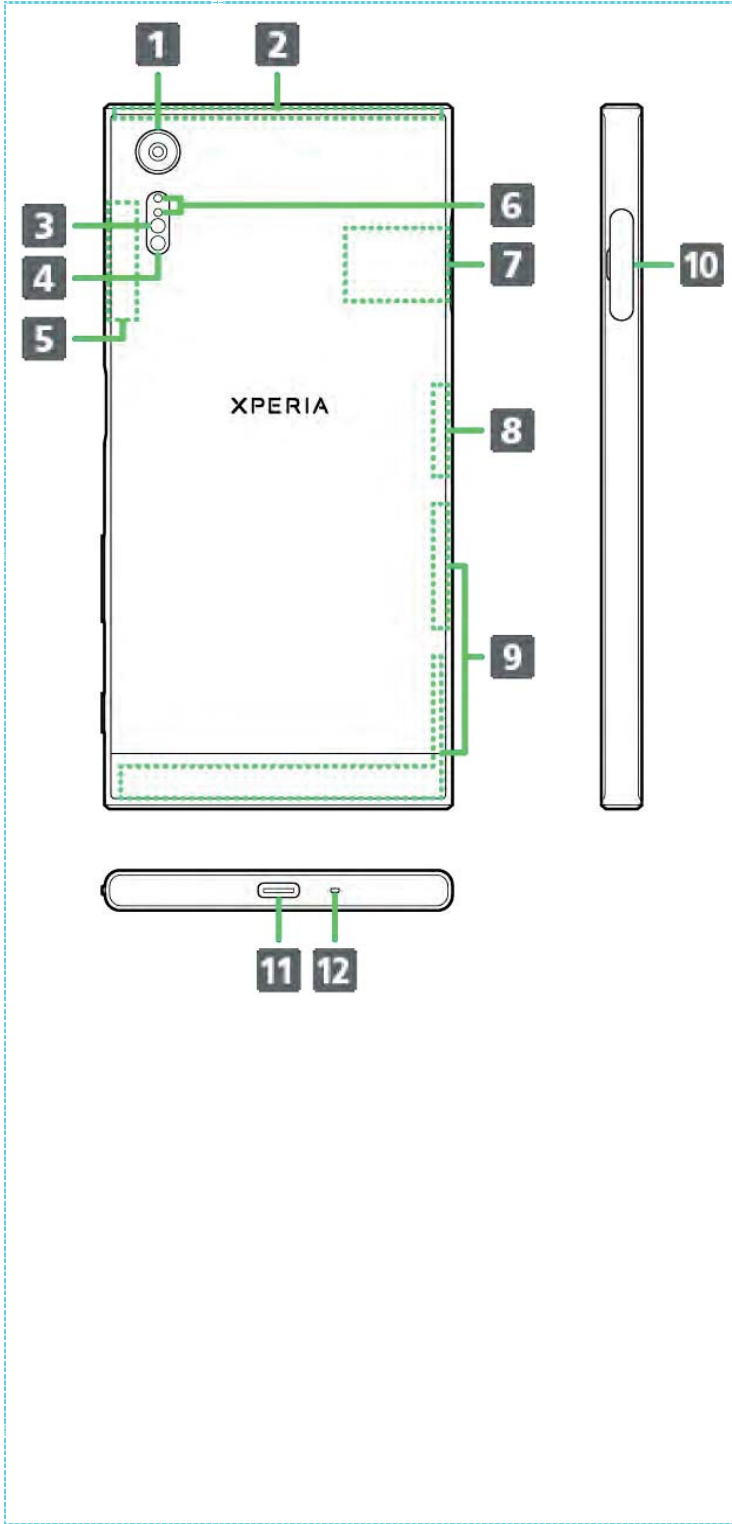

Part	Description
1 Camera	Capture still images and videos.
2 Internal Antenna/GPS Antenna Area	Internal Antenna for calls, data communication and GPS.
3 RGB-IR Sensor	RGB-IR Sensor
4 Flash/Photo Light	Use as camera flash when taking photos, etc.
5 Wi-Fi®/Bluetooth® Antenna Area	Internal Antenna for Wi-Fi and Bluetooth® feature.
6 LaserAF Sensor	LaserAF Sensor
7 Nameplate	CE mark, FCC ID, IMEI information printed sticker is attached. Do not remove nameplate.
8 Wi-Fi Antenna Area	Internal Antenna for Wi-Fi.
9 Internal Antenna Area	Internal Antenna for call and data communication.
10 SIM Card/SD Card Slot	Insert SIM Card/SD Card. If SIM Card/SD Card Slot Cover is pulled out, handset reboots.
11 USB Type-C Port	Connect commercially

	available USB Type-C Cable, etc.
12 Mic	Speak here.


Handset Keys

	<table border="1"> <thead> <tr> <th>Part</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1 Power Key/Screen Lock Key/Fingerprint Sensor ()</td> <td>Long Press for power on/off. Press for sleep mode on/off. Or, use Fingerprint authentication.</td> </tr> <tr> <td>2 Volume/Zoom Up/Down Key</td> <td>Adjust Volume. Adjust Zoom while using Camera.</td> </tr> <tr> <td>3 Camera Key ()</td> <td>Use as Camera shutter. Long Press to launch Camera.</td> </tr> </tbody> </table>	Part	Description	1 Power Key/Screen Lock Key/Fingerprint Sensor ()	Long Press for power on/off. Press for sleep mode on/off. Or, use Fingerprint authentication.	2 Volume/Zoom Up/Down Key	Adjust Volume. Adjust Zoom while using Camera.	3 Camera Key ()	Use as Camera shutter. Long Press to launch Camera.
	Part	Description							
	1 Power Key/Screen Lock Key/Fingerprint Sensor ()	Long Press for power on/off. Press for sleep mode on/off. Or, use Fingerprint authentication.							
2 Volume/Zoom Up/Down Key	Adjust Volume. Adjust Zoom while using Camera.								
3 Camera Key ()	Use as Camera shutter. Long Press to launch Camera.								

CE mark and FCC ID

1

 Open the slot cover, and insert a fingernail into the hook at the edge of the label tray, then pull it out straight.

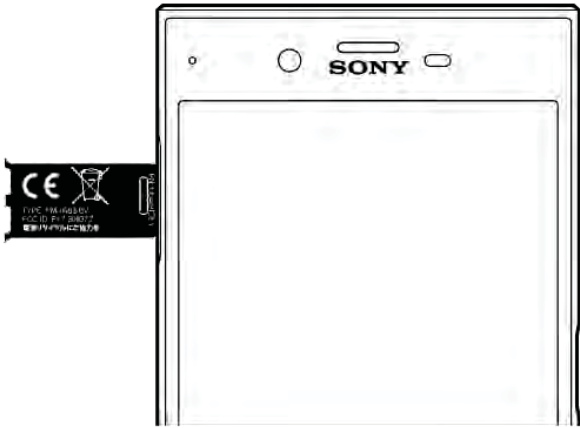

SIM Card

SIM Card is an IC card containing phone number and other customer information.

↓ [Inserting SIM Card](#)

↓ [Removing SIM Card](#)

↓ [SIM-Unlocking Handset](#)

Inserting SIM Card

Always unmount SD Card beforehand. For details, see "[Unmounting SD Card](#)."

1

Draw SIM Card/SD Card Slot Cover out using groove



Sample
(イラスト)

2

Draw Tray out straight from handset

Sample
(イラスト)

3

Set SIM Card into Tray with IC chip facing up

Sample
(イラスト)

- Check SIM Card orientation by notch.
- Firmly set SIM Card so as not to come off from Tray.

4

Insert Tray with SIM Card straight into handset

Sample
(イラスト)

- Check Tray orientation.

5

Push Tray all the way and press it down where indicated ○, and make sure there are no gaps

Sample
(イラスト)

Removing SIM Card

Always unmount SD Card beforehand. For details, see "[Unmounting SD Card.](#)"

1

Draw SIM Card/SD Card Slot Cover out using groove

Sample
(イラスト)

2

Draw Tray out straight from handset

Sample
(イラスト)

3

Remove SIM Card from Tray

Sample
(イラスト)

4

Insert Tray straight into handset

Sample
(イラスト)

- Check Tray orientation.

5

Push Tray all the way and press it down where indicated ○, and make sure there are no gaps

Sample

(イラスト)

SIM-Unlocking Handset

Handset can be SIM-unlocked. SIM-unlocking handset allows other-carrier SIM cards to be used with it.

- Some services, functions, etc. may have restrictions when an other-carrier SIM card is used.
SoftBank Corp. does not guarantee operation whatsoever.
- For details, see SoftBank Website.

SD Card

Save data to handset memory or SD Card.

Handset supports SD Cards up to 200 GB. Some SD Cards may not operate properly.

↓ [Inserting SD Card](#)

↓ [Unmounting SD Card](#)

↓ [Removing SD Card](#)

↓ [Formatting SD Card](#)

SD Card Cautions

Data

Information stored on SD Card can become lost or changed accidentally or as a result of damage. It is recommended that you keep a separate copy of important data. SoftBank Corp. is not responsible for damages from data that is lost or changed.

Reading/Writing Data

Never power off while reading or writing data.

Battery Level

A low battery charge may prevent reading/writing to SD Card.

Handling SD Card

Use/keep SD Cards away from the reach of infants. May cause choking if swallowed.

Inserting SD Card

1

Draw SIM Card/SD Card Slot Cover out using groove

Sample
(イラスト)

2

Draw Tray out straight from handset

Sample
(イラスト)

3

Set SD Card into Tray with the metal terminals facing up

Sample
(イラスト)

- Firmly set SIM Card so as not to come off from Tray.

4

Insert Tray straight into handset

Sample
(イラスト)

- Check Tray orientation.

5

Push Tray all the way and press it down where indicated ○, and make sure there are no gaps

Sample

 
(イラスト)

Unmounting SD Card

Always unmount SD Card before removing.

1

In Home Screen,    (Settings)

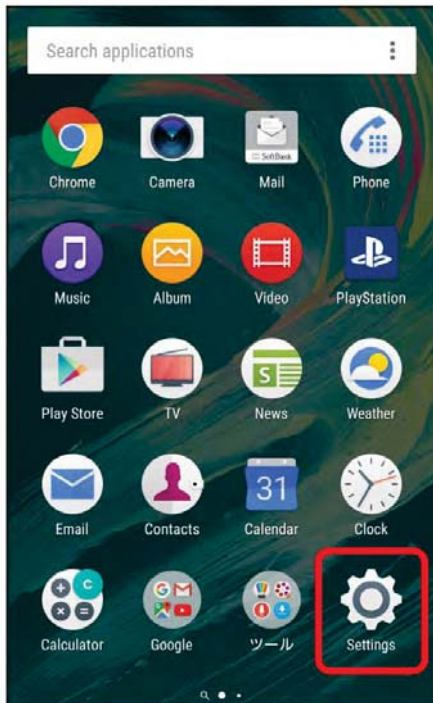


2

Storage & memory



3

 ⋮ → Advanced → Storage → ▲ for "SD Card"

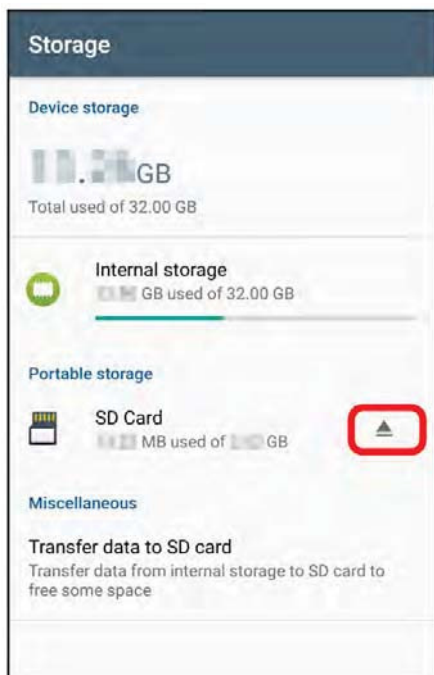

🚫 "SD Card is safely ejected" appears and SD Card is unmounted.

Removing SD Card

Always unmount SD Card beforehand.

1

Draw SIM Card/SD Card Slot Cover out using groove



Sample
(イラスト)

2

Draw Tray out straight from handset



Sample
(イラスト)

3

Remove SD Card from Tray



4

Insert Tray straight into handset



- Check Tray orientation.

5

Push Tray all the way in and press it down where indicated ○, and make sure there are no gaps

Sample

(イラスト)

 
Formatting SD Card

When using a new SD Card for the first time, always format it on handset.

- Formatting erases all data on SD Card. Carefully check any SD Card that was used on another device before formatting.
- Charge Battery while formatting, or format with adequate battery charge.

1

In Home Screen,    (Settings)

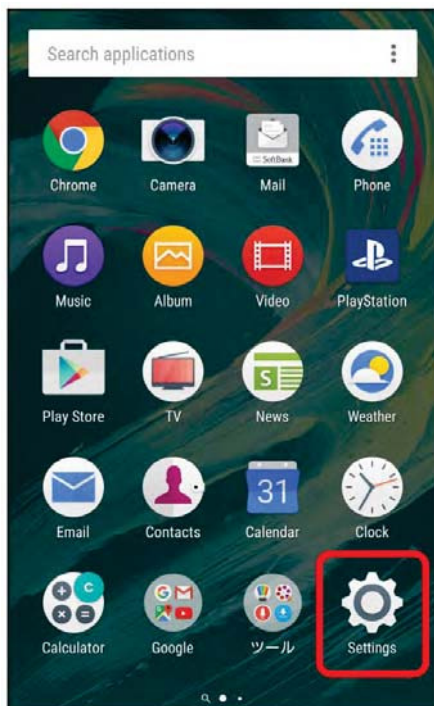


2

Storage & memory




3

 ⋮ → Advanced → Storage → SD Card → ⋮ → Settings → Format

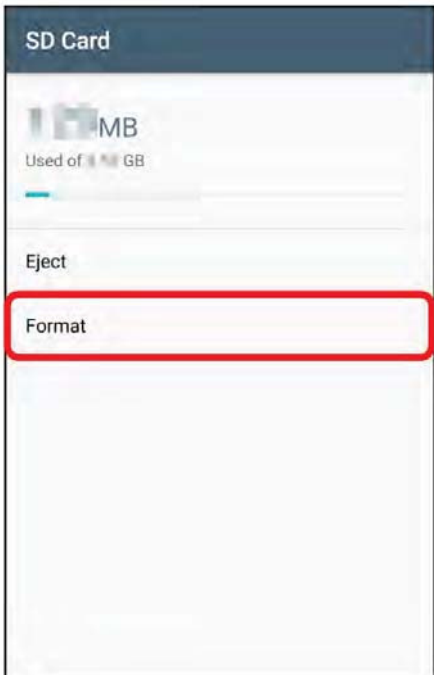

ERASE & FORMAT

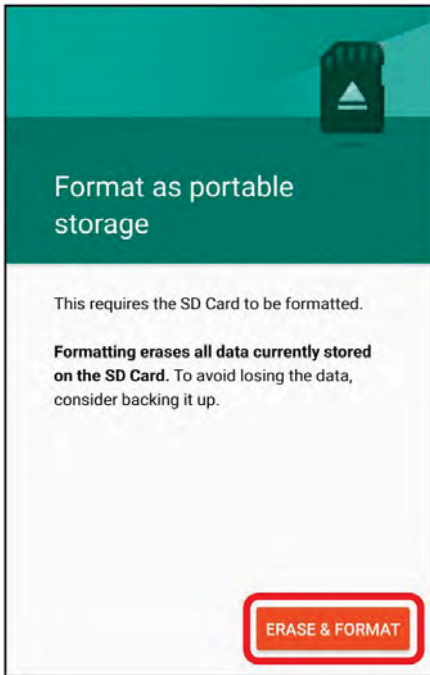 

 All data on SD Card is erased.

Charging Battery

↓ [Charging with AC Charger](#)

Charging with AC Charger

For details, see SoftBank Website.

Operation using SoftBank SELECTION AC Adapter (Micro USB) 1.0A for smartphones (SB-AC13-HDMU) is explained here.

- See instructions included with AC Charger.
- Never connect Micro USB plug while handset or AC Charger is wet.

1

Insert Micro USB connector of AC Charger straight into External Device Port

 


Sample
(イラスト)

- Check connector orientation. Forcible connection may cause damage.

2

Unfold power plug of AC Charger and plug into household AC

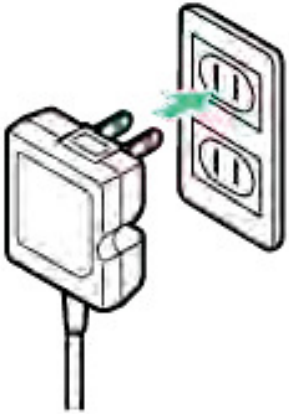

 Charging start sound sounds and Notification Lamp on handset lights up when charging starts.

3

When charging is complete, unplug AC Charger and remove Micro USB connector of AC Charger straight from handset


Power On/Off

↓ Powering On


↓ Powering Off


Powering On

1

 (Long Press)




 Lock screen appears.

- See "[Unlocking Screen](#)" to unlock the screen.
- Startup wizard appears for the first time handset is powered on. Follow onscreen instructions.
- Battery level is not sufficient if Notification Lamp flashes several times in red or low battery indicator appears when  is Pressed with handset powered off. Charge the battery.

Powering Off

 
1


 (Long Press)



2

Power off

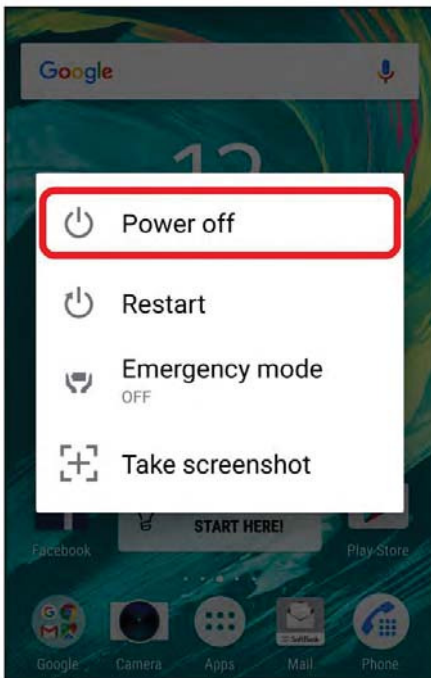

 Handset powers off.

 
Using Touchscreen

Handset uses a touchscreen-type Display. Operate with your fingers on Display.

- ↓ Tap
- ↓ Touch & Hold
- ↓ Drag
- ↓ Swipe/Flick
- ↓ Pinch/Spread


Tap

Contact Display lightly and briefly.

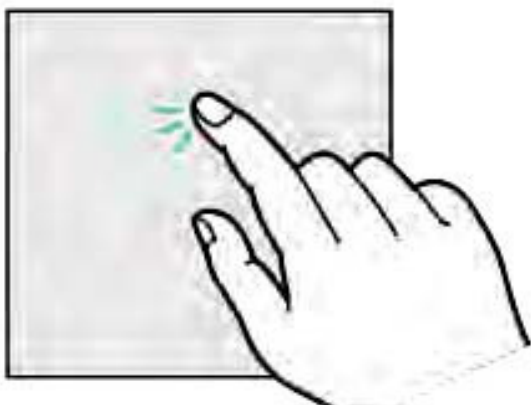


Touch & Hold

 Touch screen lightly and hold it for a while. When the screen changes, release finger.

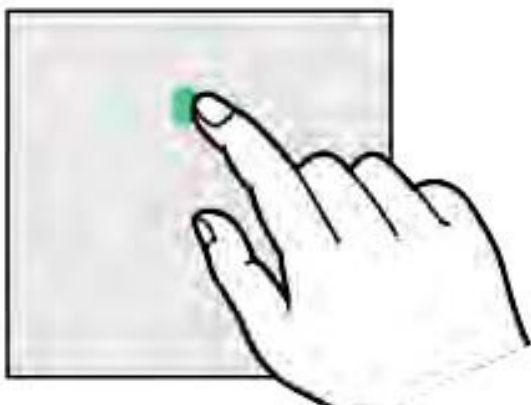


Drag

 Touch icon or other item lightly, move it where desired, and release finger.

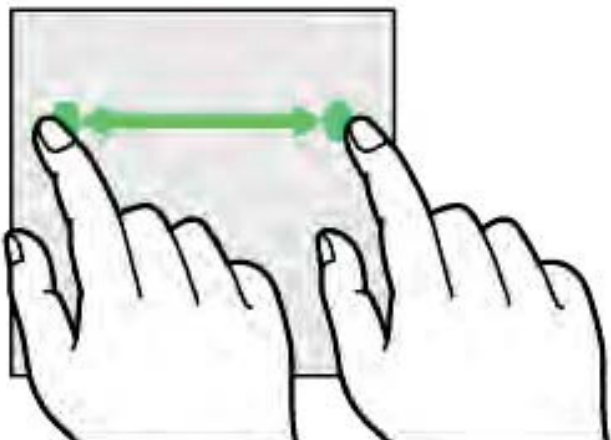


Swipe/Flick

 Contact Display lightly, then brush screen up/down or left/right.

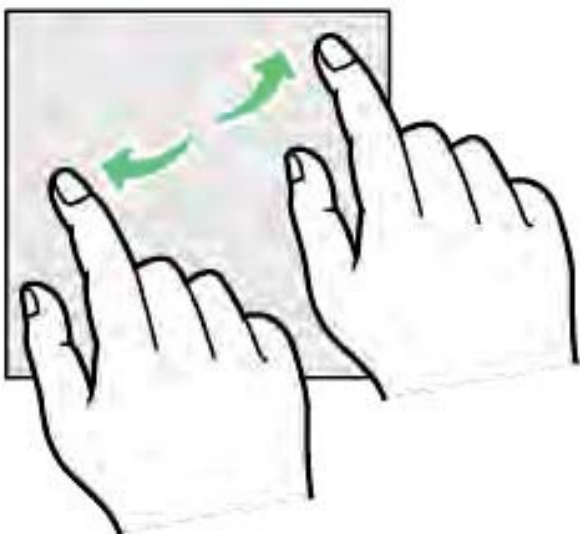

Pinch/Spread

 Contact Display lightly, then close/widen fingers.

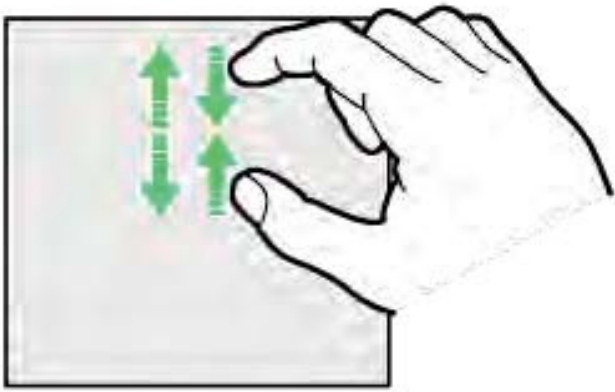

Basic Operation

- ↓ Home Screen & Applications List
- ↓ Navigation Bar
- ↓ Selecting Options and Navigating Screens
- ↓ Menu Operations
- ↓ Handset Settings and Making Settings
- ↓ Portrait Orientation & Landscape Orientation

Home Screen & Applications List

Most handset operations start in Home Screen (appears at power on) or in applications list.



Navigation Bar

Tap icons on Navigation Bar (Display bottom) for the following functions/operations.