

- 1 Charging/Notification light
- 2 NFC
- 3 Power key
- 4 Fingerprint sensor
- 5 Volume/Zoom key
- 6 USB port/Charger

## To turn on your device

- 1 Long press the power key until the device vibrates.
- 2 Wait a moment for the device to start.


## To activate the screen

- Briefly press the power key.

## Transferring content


For transferring content from an old device to your new device, log in with your Google account and sync your data using services provided by Google. For details visit [support.google.com](https://support.google.com).

## For more information

Visit [support.sonymobile.com](https://support.sonymobile.com) or tap  to launch the Support app.


- ! The Support app is not available in all countries and regions.

## To insert SIM and memory cards

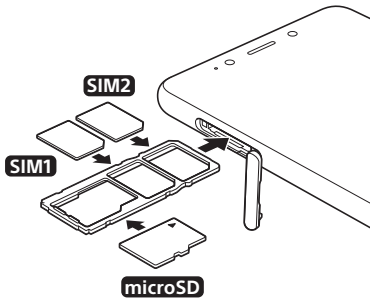

- 1 Open the slot cover.
- 2 Drag out the card tray.
- 3 Place the main SIM card (SIM1) securely in the SIM card tray.
- 4 Place the second SIM card (SIM2) securely in the SIM card tray.
- 5 Place the memory card securely in the memory card tray.
- 6 Gently push the card tray back into the slot until it fits into place.
- 7 Close the slot cover.

## To view the FCC ID and the CE marking

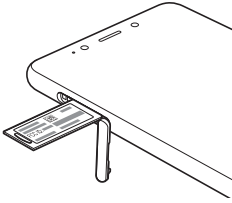

- 1 Open the slot cover.
- 2 Drag out the card tray.
- 3 Drag out the label strip in the same way. The FCC ID is displayed on the label strip.
- 4 To view the CE marking, turn over your device. The CE marking is displayed on the other side of the label strip. To see the full text of the EU declaration of conformity, visit: <http://www.compliance.sony.de/>.

## To view the regulatory compliance mark

- Open the phone dialer, then enter \*#07#.

## Warranty, SAR and usage guidelines

For information about warranty, SAR (Specific Absorption Rate) and safety guidelines, please read the Important information provided under **Settings > System > About phone > Legal information** on your device.

## Legal information

Publication number: 1317-5726.1

This Startup guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty, improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device.

See regulatory information such as the device CE marking in the relevant label strip in the device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. Visit <https://www.sonymobile.com/global-en/legal/> for more information.

Manufacturer: Sony Mobile Communications Inc., 4-12-3 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002, Japan. For EU product compliance: Sony Belgium, bijkantoor van Sony Europe Limited, Da Vincilaan 7-D1, 1935 Zaventem, Belgium.

Note: Sony Mobile advises users to backup their personal data and information.

Some services are network- or subscription-dependent. Please contact your network operator or our call centre for details.

©2019 Sony Mobile Communications Inc. All rights reserved.

## Supported frequency bands

Some frequency bands might be turned off in certain markets or by certain operators.

You can find your model number under **Settings > System > About phone**.

### I4312

UMTS HSPA+ (Bands 1, 2, 5, 8) GSM GPRS/EDGE 850, 900, 1800, 1900 LTE (Bands 1, 2, 3, 5, 7, 8, 20, 38) WLAN, 2.4G/5G, NFC

### I4332

UMTS HSPA+ (Bands 1, 2, 5, 8) GSM GPRS/EDGE 850, 900, 1800, 1900 LTE (Bands 1, 2, 3, 5, 7, 8, 28, 38, 39, 40, 41(CH40340-CH41140)) WLAN, 2.4G/5G, NFC

GSM 850/900 : Power Class 4, DC(S1800)/PCS(1900) : Power Class 1, UMTS : Power Class 3, LTE : Power Class 3, 2.4GHz<math>\leq</math>100mW, 5.15-5.35GHz<math>\leq</math>200mW, 5.47-5.725GHz<math>\leq</math>200mW, NFC 13.56MHz

# SONY®

## Startup guide

# Xperia L3

I4312/I4332

# XPERIA

# CE



1317-5726.1

Printed in XXX (Printers logotype)