

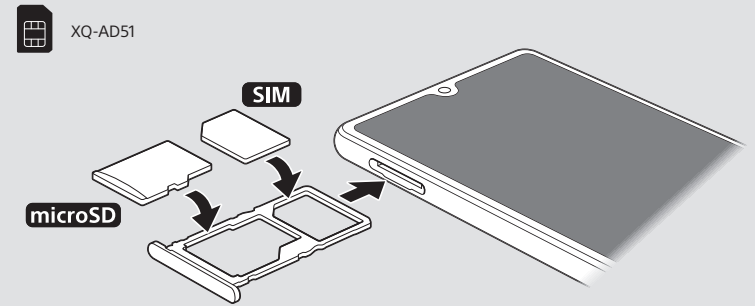


XPERIA  
SONY®




# 1 SIM

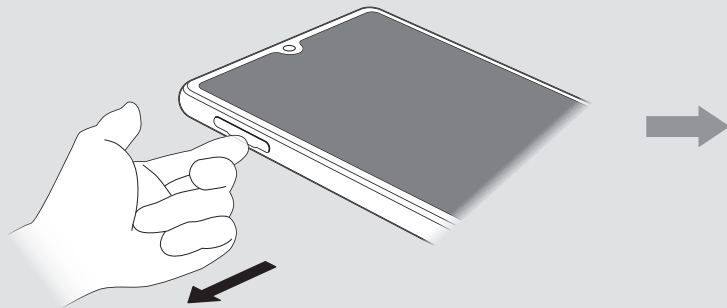

OR



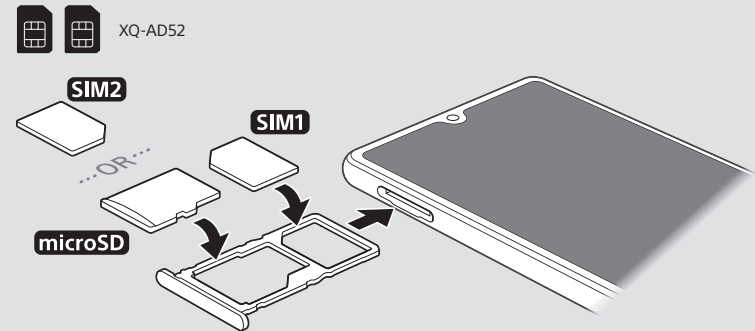


# 2 PWR ON

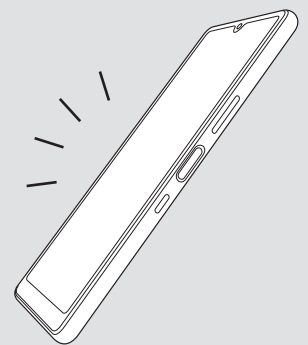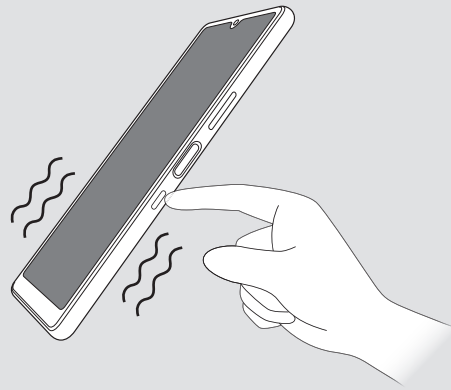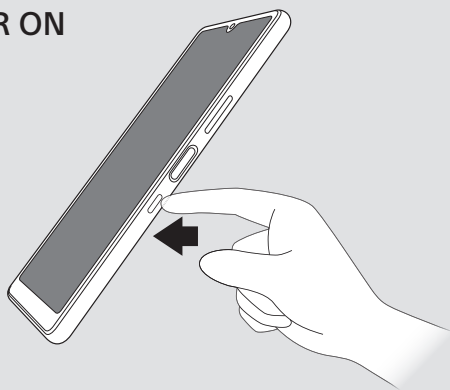

## Startup guide

- Ръководство „Бърз старт“
- Úvodní příručka
- Kurzanleitung
- Installationsvejledning
- Alustusjuhend
- Guía de inicio
- Aloitusopas
- Guide de démarrage
- Οδηγός εκκίνησης
- Priručnik
- Használatbavételi útmutató
- Ræsihandbók
- Guida introduttiva
- Palesties vadovas
- Sākšanas ceļvedis
- Opstartgids
- Oppstartsveiviser
- Instrukcja obsługi
- Manual de Iniciação
- Ghid de pornire
- Starthandbok
- Vodič za začetek uporabe
- Úvodná príručka
- Руководство по запуску
- Посібник з запуску
- Бастапқы нұсқаулық
- คู่มือเริ่มต้นการใช้งาน
- 用戶指南

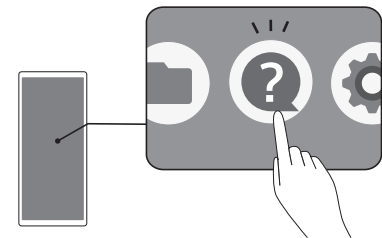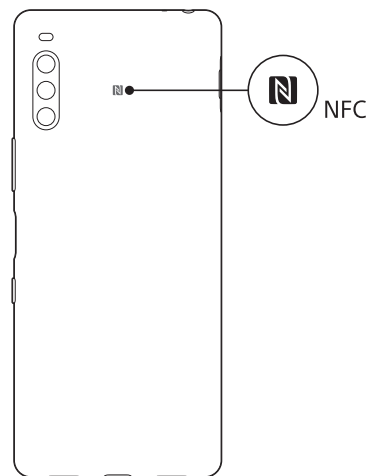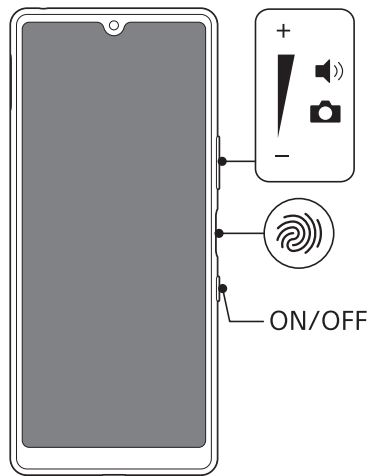

OR



support.sonymobile.com

XQ-AD51/XQ-AD52



Printed in XXX (Printers logotype)

