

Handset (Front)

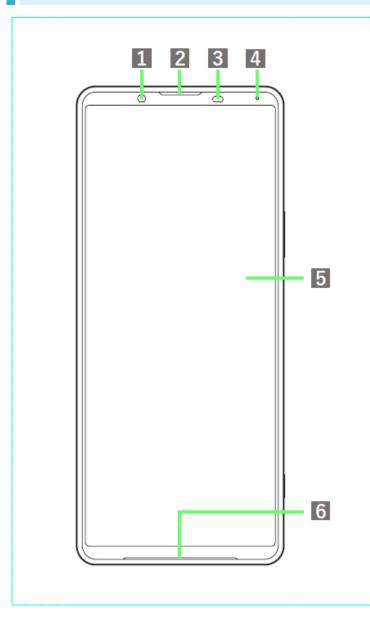


Do-ut	Danadatian
Part	Description
II Front Camera	Use to shoot still
	images, videos of
	yourself, etc.
2 Earpiece/Speaker	Hear the other party's
	voice here.
3 Proximity/Light	Detects surrounding
Sensor	brightness to
	automatically adjust
	Display or backlight
	and prevent
	Touchscreen
	misoperation during a
	call.
4 Notification Lamp	Flashes for
	notifications while
	Display is off. Lights
	while charging.
5 Display	Touchscreen-type
	display, operate with
	your fingers on
	Display.
6 Speaker	Listen to music as well
-	as video, etc. audio.

Handset (Back/Side)

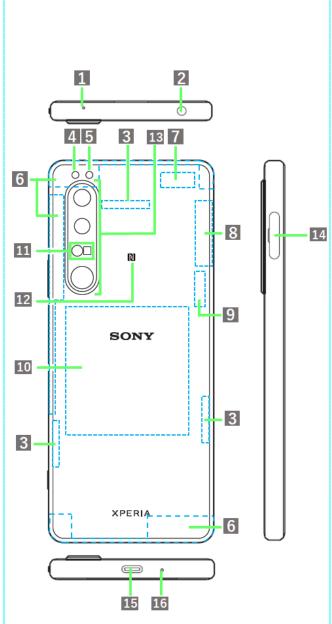

Part	Description
1 Second Mic	Reduces noise for calling.
2 Headphone Port	Connect commercially
Ticadphone Fort	available headphones.
3 5G Antenna	Internal Antenna for
	data communication.
4 Flash/Photo Light	Use as camera flash when
	taking photos, etc.
5 RGBC-IR Sensor	Automatically adjusts white
	balance based for shooting
	based on the light source.
5G/4G antenna	Internal Antenna for calls and
	data communication.
7 5G/4G antenna/	Internal Antennas for calls,
Wi-Fi [®] antenna	data communication, and
	Wi-Fi.
8 5G/4G antenna/	Internal Antennas for data
GPS/Wi-Fi®/	communication, and Wi-Fi,
Bluetooth® antenna	GPS, and Bluetooth features.
9 5G antenna/Wi-Fi®/	Internal Antennas for data
Bluetooth® antenna	communication, Wi-Fi and
	Bluetooth features.
Wireless charging antenna	Internal antenna for charging.
111 Laser AF sensor	When shooting, it detects
	distance to a subject and
	focus on automatically.
12 NFC/Osaifu-Keitai®	Hold up to a reader/writer to
Detection Area	use NFC / Osaifu-Keitai [®] .
13 Main Camera	Capture still images and
	videos.
14 SIM Card/SD	Insert SIM Card/SD Card.
Card Slot	
15 USB Type-C™ Port	Connect USB Type-C cable
	(commercially available), etc.
16 Mic	Speak here.

Handset Keys

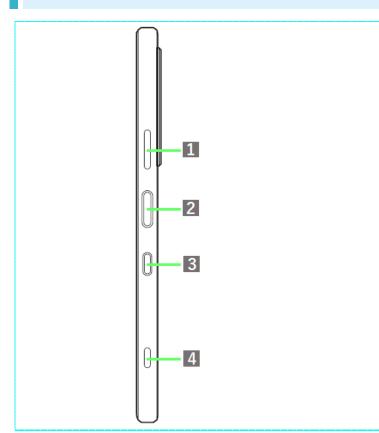

Part	Description
1 Volume/Zoom	Adjust Volume.
Up/Down Key	Adjust Zoom while
	using Camera.
2 Power Key/	Long Press for power
Fingerprint Sensor	on/off.
	Turn Display on/off.
	Or, use Fingerprint
	authentication.
3 Google Assistant	Launch the Google
Key	Assistant.
4 Camera Key	Use as Camera
	shutter.
	Long Press to launch
	Camera.

Inserting SIM Card

SIM Card is an IC card containing phone number and other customer information. Always unmount SD Card beforehand.



Pull Tray out from handset

■ Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.

Set SIM Card into Tray with IC chip facing down

- Check SIM Card orientation by notch.
- Make sure SIM Card is in Tray securely.



Holding handset held level, press Tray in straight



SIM Card is inserted

- Check Tray orientation.
- Press firmly where circled o, and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.

Handling SIM Card

For SIM Card handling, see following items.

IC chip

For SIM Card handling, see SoftBank Website.

https://www.softbank.jp/mobile/support/protect/usim/ (Japanese)

- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage SIM Card.

SIM Card Cautions

Observe the following when using SIM Card.

- Customer is responsible for any damage caused by inserting SIM Card in an otherbrand IC card reader, etc. SoftBank Corp. is not responsible in such case.
- SIM Card is the property of SoftBank Corp.
- SIM is replaceable (at cost) in case of loss/damage.
- Return SIM Card to SoftBank Corp. when cancelling subscription.
- Returned SIM Cards are recycled for environmental purposes.
- Note that SIM Card specifications and performance may change without notice.

- It is recommended that you keep a separate copy of information that is stored on SIM Card. SoftBank Corp. is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your SIM Card or handset (SIM Card inserted) is lost/stolen. For details, contact <u>Customer Service</u>.

Powering On



Long Press Power Key until handset vibrates once



- Startup wizard appears for the first time handset is powered on. Follow onscreen instructions.
- Battery level is not sufficient if low battery indicator appears when Power Key is Pressed with handset powered off. Charge Internal Battery.

FCC ID

To view the regulatory compliance mark

■ Find and tap Settings → About phone → Certificates

Regulatory compliance mark such as FCC ID is displayed on the screen.