


Handset (Front)

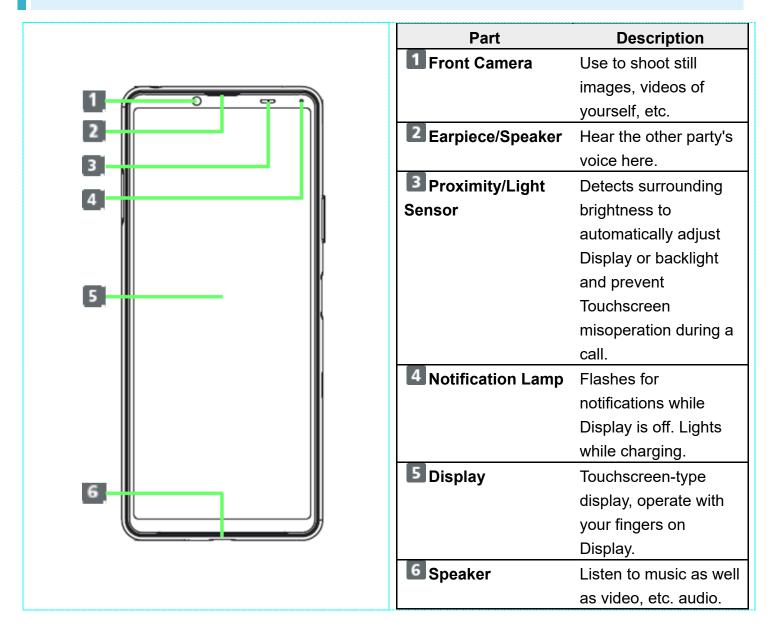

Handset (Back/Side)

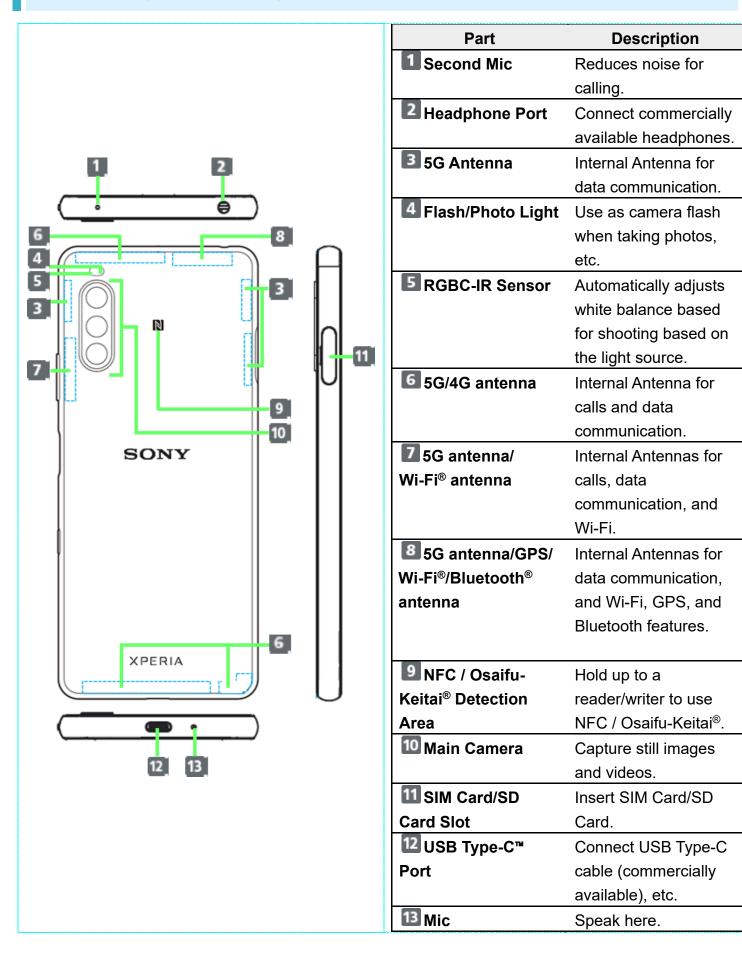

Handset Keys

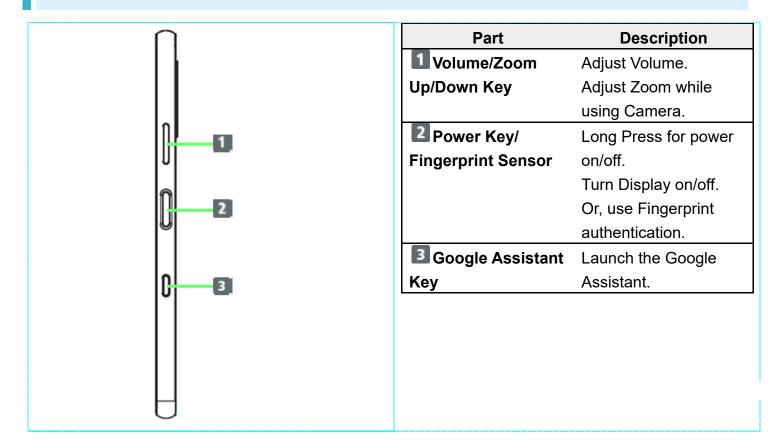

Inserting SIM Card

SIM Card is an IC card containing phone number and other customer information. Always unmount SD Card beforehand.

1

Pull Tray out from handset

■ Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.

Set SIM Card into Tray with IC chip facing down

- Check SIM Card orientation by notch.
- Make sure SIM Card is in Tray securely.

3

Holding handset held level, press Tray in straight

SIM Card is inserted.

- Check Tray orientation.
- Press firmly where circled o, and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.

Handling SIM Card

For SIM Card handling, see following items.

(1) IC chip

For SIM Card handling, see SoftBank Website. https://www.softbank.jp/mobile/support/protect/usim/ (Japanese)

- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage SIM Card.

SIM Card Cautions

Observe the following when using SIM Card.

- Customer is responsible for any damage caused by inserting SIM Card in an otherbrand IC card reader, etc. SoftBank Corp. is not responsible in such case.
- SIM Card is the property of SoftBank Corp.
- SIM is replaceable (at cost) in case of loss/damage.
- Return SIM Card to SoftBank Corp. when cancelling subscription.
- Returned SIM Cards are recycled for environmental purposes.
- Note that SIM Card specifications and performance may change without notice.

- It is recommended that you keep a separate copy of information that is stored on SIM Card. SoftBank Corp. is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your SIM Card or handset (SIM Card inserted) is lost/stolen. For details, contact Customer Service.

Powering On

1

Long Press Power Key until handset vibrates once

Lock Screen appears.

- Startup wizard appears for the first time handset is powered on. Follow onscreen instructions.
- Battery level is not sufficient if low battery indicator appears when Power Key is Pressed with handset powered off. Charge Internal Battery.

FCC ID

To view the regulatory compliance mark

Find and tap Settings About phone Certificates Regulatory compliance mark such as FCC ID is displayed on the screen.