



1. External Photograph of EUT

Brand Name: Sony / Model Name: F3113





Brand Name: Sony / Model Name: F3113






2. Photograph of Accessory

Brand Name: Sony / Model Name: F3113

Specification of Accessory		
AC Adapter 1	Brand Name	Sony
	Model Name	UCH20
	Type Number	AC-0060-US
AC Adapter 2	Brand Name	Sony
	Model Name	UCH20
	Type Number	AC-0061-US
Car Charger	Brand Name	Sony
	Model Name	AN400
	Type Number	AC-0110 DC
Battery 1	Brand Name	Sony
	Model Name	LIS1618ERPC
Battery 2	Brand Name	Sony
	Model Name	GB-S10-385871-010H
Earphone	Brand Name	Sony
	Model Name	MH410c
USB Cable 1	Brand Name	Sony
	Model Name	EC803
USB Cable 2	Brand Name	Sony
	Model Name	UCB16

Remark: For accessories equipped with this EUT, please refer to the following photos.

Brand Name: Sony / Model Name: F3113

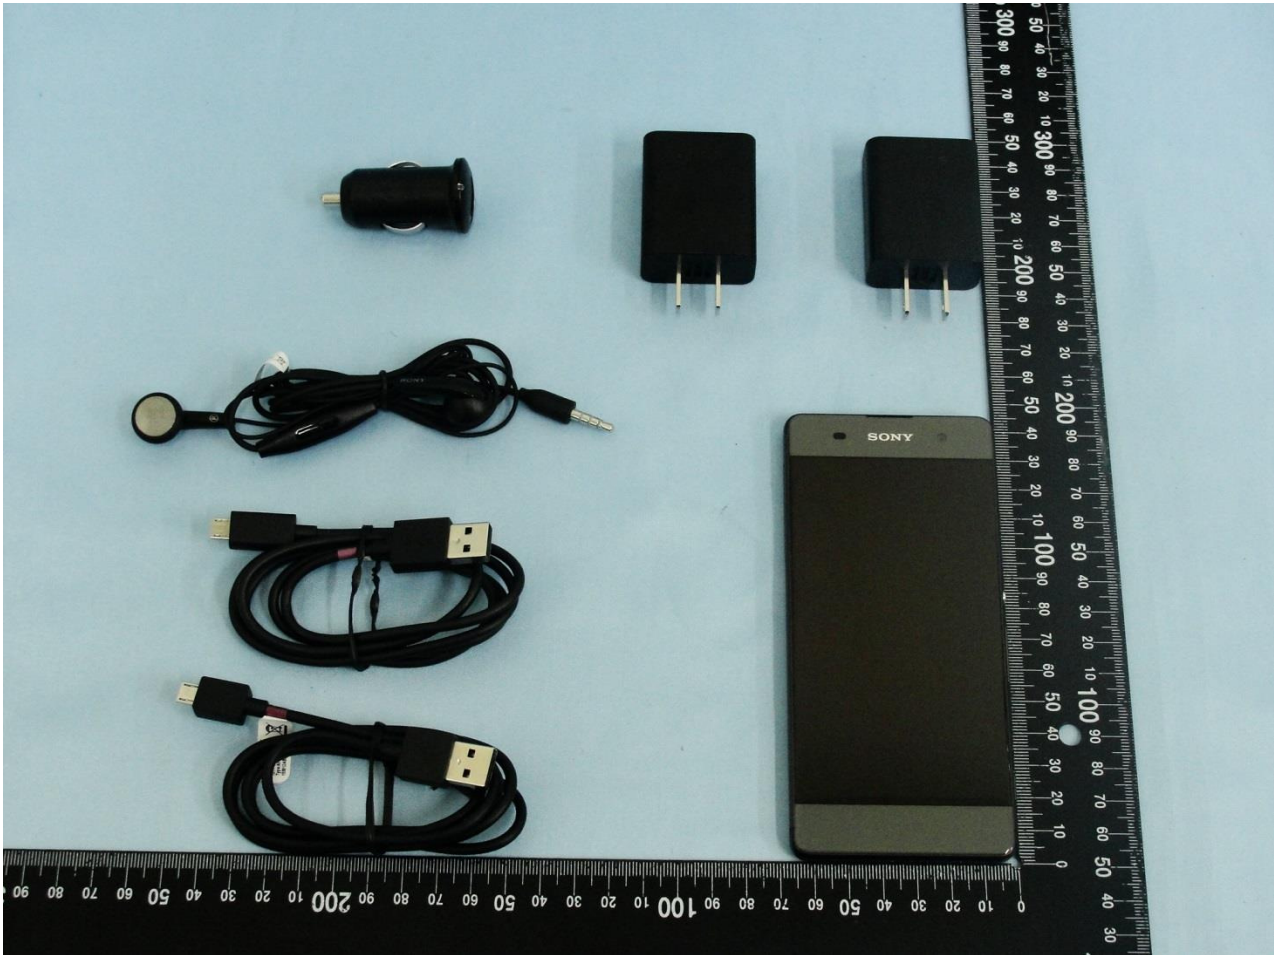

Brand Name: Sony / Model Name: F3113

AC Adapter 1



Brand Name: Sony / Model Name: F3113

AC Adapter 2



Brand Name: Sony / Model Name: F3113

Car Charger



Brand Name: Sony / Model Name: F3113

Battery 1



Brand Name: Sony / Model Name: F3113

Battery 2

