

SONY

## Startup guide

Xperia™ XXXX  
XXXXXX/XXXXXX  
Model: F3115


CE 0682

XPERIA

Sony Mobile Communications Inc.  
1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan

XXXX-XXXX.1

### To activate the screen

- Briefly press the power key .

### To find your model number

- From your Home screen, tap  > **Settings** > **About phone**.


### Legal information

Publication number: XXXX-XXXX.1  
 This Startup guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device.

See regulatory information such as the device CE mark in the relevant label tray in the device.  
 All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. Visit [www.sonymobile.com/global-en/legal/](http://www.sonymobile.com/global-en/legal/) for more information.

Product compliance: This product has been manufactured by or on behalf of Sony Mobile Communications Inc., 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan. Inquiries related to product compliance based on national legislation shall be addressed to Sony Mobile Quality Office, Sony Mobile Communications Inc., 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan. Should your device need warranty service, please return it to the dealer from whom it was purchased or visit [support.sonymobile.com/contact](http://support.sonymobile.com/contact) to contact your local Sony Mobile repair partner (national rates may apply).  
 © 2015 Sony Mobile Communications Inc. All rights reserved.

### To activate the screen

- Briefly press the power key .

### Screen protection

- ! Before using your device, remove the transparent protection film by pulling up on the protruding tab.

The use of non Sony-branded screen protection accessories may prevent your device from working properly by covering sensors, lenses, speakers, or microphones and can also invalidate the warranty.

### Warranty, SAR and usage guidelines

For information about warranty, SAR (Specific Absorption Rate) and safety guidelines, please read the **Important information** provided under **Settings** > **About phone** > **Legal information** in your device.

### Support for you

Access our support website directly in your device or visit [support.sonymobile.com](http://support.sonymobile.com) from any supported browser. Support options include User guides, downloads, troubleshooting tips and contact information.

- ! Even if you don't have a network connection, you can access support contact information in your device. Depending on the country or region where you purchased your device, you can find this information directly in the Support application, or by searching your contacts for **Xperia™ Care**.

### To access the Support application

 
- 1 From your Home screen, tap .
- 2 Find and tap .

- ! For best support available, we recommend connecting to the Internet when using the Support application.

### Transferring contacts and content


If you need help to transfer contacts, messages, photos and other data from an old device to your new device, we recommend that you use the Xperia™ Transfer application. Visit [www.sonymobile.com/xperiatransfer](http://www.sonymobile.com/xperiatransfer) for more information.

### To view the CE mark

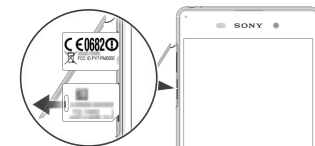


- 1 Open the nano SIM/Memory card slot cover.
- 2 Using your fingernail or a similar object, drag out the nano SIM card holder.
- 3 Drag out the label tray in the same way. The CE mark and FCC ID are displayed on the label tray.

### Device basics

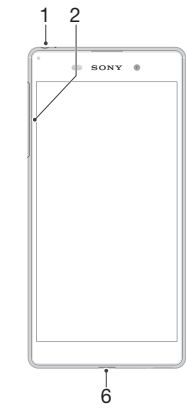 

 - 1 Charging/Notification light
- 2 Nano SIM/Memory card slot cover
- 3 Power key/Fingerprint sensor
- 4 Volume/Zoom key
- 5 Camera key
- 6 Charger/USB cable port

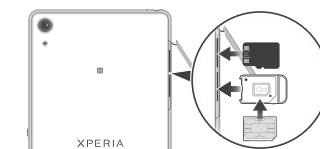

### To insert a memory card

- 1 Open the nano SIM/Memory card slot cover.
- 2 Place the memory card in the memory card slot in the correct orientation as shown in the illustration.
- 3 Close the cover.

### To insert the nano SIM card

 
- ! If you drag out the nano SIM card holder while the device is powered on, the device restarts automatically.

- 1 Open the nano SIM/Memory card slot cover.
- 2 Using your fingernail or a similar object, drag out the nano SIM card holder.
- 3 Place the nano SIM card in the holder, then insert the holder into to the slot.
- 4 Close the cover.

- ! Make sure you insert the nano SIM card and the holder in the correct orientation as shown in the illustration.

### To turn on the device

- ! Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.

- 1 Press and hold down the power key  until the notification light flashes once.
- 2 Wait a while for the device to start.