

Prepare the phone

Congratulations on your purchase of the Sony Ericsson T280a. For additional phone content, go to www.sonyericsson.com/fun. Register now to get free online storage and special offers at www.sonyericsson.com/myphone. For product support, go to www.sonyericsson.com/support.

Instruction symbols

The following instruction symbols appear in this User guide:

➤ Use the navigation key to scroll and select.

Press the navigation key up.

Press the navigation key down.

Press the navigation key to the left.

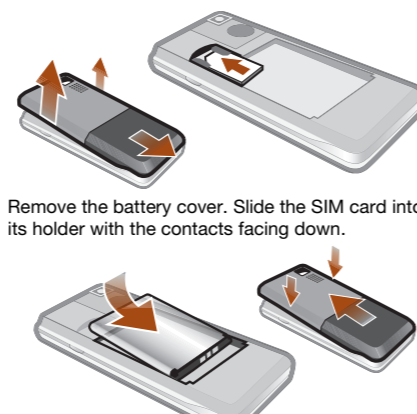 
Press the navigation key to the right.

Note

Tip

Warning

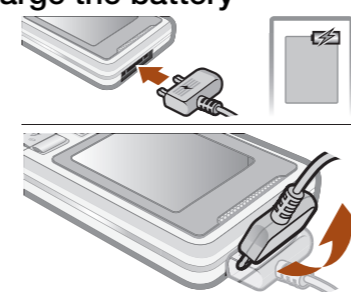 
Indicates that a service or function is network- or subscription-dependent. All menus or functions may not be available in your phone. Consult your network operator for more information.

To insert the SIM card and battery

1 Remove the battery cover. Slide the SIM card into its holder with the contacts facing down.

2 Insert the battery with the label side up and the connectors facing each other. Replace the battery cover as shown in the picture.

Do not force the battery cover into place. Slide the battery cover carefully onto the phone and close it.

Charge the battery

1 The phone battery is partly charged when you buy it. Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to illuminate the screen.

2 To remove the charger, tilt the plug upwards.

You can use the phone during charging. You can charge the battery for more or less than 2.5 hours. Interrupted charging will not damage the battery.

Turn the phone on

1 Press and hold down .

2 Enter your PIN if requested. To correct mistakes, select **Delete**.

3 Select **OK**.

4 Select a language.

5 Enter the time and date and select **Save**.



To turn the phone off

- Press and hold down .

Standby

After you have turned the phone on and entered your PIN, the name of your operator appears on the screen. This is called standby. You can now make and receive calls.

SIM and PIN

SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.



You can save contacts on the SIM card before removing it from your phone. Contacts may also be saved in the phone memory. See **Contacts on page 17**.

PIN code

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.

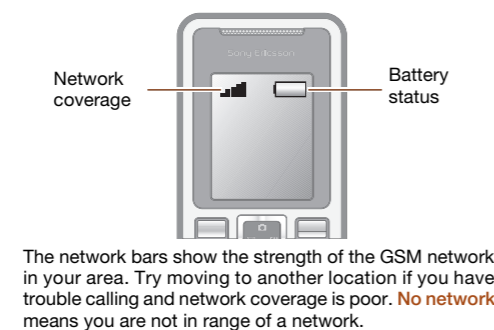 
If you enter the wrong PIN three times in a row, PIN blocked. Enter PUK provided by your operator. To unblock it, you need to enter your PUK (Personal Unblocking Key).

Menu overview

	Calendar, Timer, Stopwatch, Calculator, Games, My files
	Homepage, Bookmarks, Go to URL, View, Advanced
	Take pic., Camera pics, Slide show, Settings
	Write new, Inbox, Call voicemail, Drafts, Sent messages, Saved msgs, Templates, Delete messages, Settings, Memory status
	Call list, Time and cost, Call settings
	View contacts, Find contact, Add contact, My number, Voicemail, Delete contacts, Speed dial, Copy contacts, Send contacts, Settings
	Sound & alerts, Wallpaper, Theme, Time and date, Language, Bluetooth, Select network, Internet settings, Advanced, Phone status

Some menus and icons in this document may vary depending on operator, network or subscription.

Phone overview

**Network coverage**

The network bars show the strength of the GSM network in your area. Try moving to another location if you have trouble calling and network coverage is poor. **No network** means you are not in range of a network.

= Good network coverage

= Average network coverage

Battery status

= The phone battery is fully charged

= The phone battery is empty

Screen icons

These icons may appear on the screen.

Icon	Description
	Battery icon. A completely green icon means that the battery is fully charged
	You have missed a call
	Divert calls is activated
	The phone is set to silent
	The keypad is locked
	You have received a text message
	You have received a picture message
	An alarm is activated
	Ongoing call
	The loudspeaker is on
	The FM radio is playing
	The Bluetooth function is activated

Shortcuts

From standby you can use the navigation keys to go directly to a function:

- Press to write a text or picture message.
- Press to go to the camera.
- Press to play the FM radio.
- Press to go to your contacts.

To navigate the menus

- 1 From standby select **Menu**.
- 2 Press , , and select a menu.

To go back one step in the menu

- Select **Back**.

To return to standby

- Press .

To lock the keypad

- Press and select **Lock keys**.

To unlock the keypad

- Press and select **Unlock**.

To set the phone to silent

- Press and hold down .

To call your voicemail service

- Press and hold down .



Calling

You must turn on the phone and be within range of a network.

To make a call

- 1 From standby enter the area code and phone number.
- 2 Press .

To end a call

- Press .

To answer a call

- Press .

To reject a call

- Press .

To turn off the ringtone when receiving a call

- Select **Silent** to turn off the ringtone without answering the call.

To turn the loudspeaker on during a call

- Select **Options** > **Turn on speaker**.

Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.

To change the ear speaker volume during a call

- Press or .



Camera

Your phone has a digital camera to take pictures to save or send. Pictures taken with the camera are saved in **Menu** > **Camera** > **Camera pics**. The format is JPEG.

Pictures downloaded using picture messages, Internet or Bluetooth are saved in **Extras** > **My files** > **My pictures**.

To start the camera and take a picture

- 1 From standby press . You can see the subject on the phone screen.
- 2 Select **Take pic.** to take the picture.
- 3 Select **Save** or **Delete**.

To delete a picture

- 1 From standby select **Menu** > **Camera** > **Camera pics**.
- 2 Scroll to a picture and select **View**.
- 3 Select **Options** > **Delete** > **Yes**.

To send a camera picture as picture message

- 1 From standby select **Menu** > **Camera** > **Camera pics**.
- 2 Scroll to a picture and select **View**.
- 3 Select **Options** > **Send message** > **Options** > **Send message** > **To..**.
- 4 Select **Enter phone no.** or **Email address**.
- 5 Select **OK** > **Options** > **Send message**.

See **To send an item using Bluetooth on page 31**.

Calls to the international emergency number 112 can still be made, even when the keypad is locked.

Messaging

Text messages (SMS)

You must have a service centre number, which is supplied by your service provider and saved on the SIM card. You may have to enter the number yourself. See **Troubleshooting on page 36**.

See **Entering text on page 23**.

To write and send a text message

- 1 From standby press .
- 2 Select **Text message**. Write the message and select **Options** > **Send message**.
- 3 Select an option.
- 4 Select **Send**.

To view a received text message

- 1 **new message Read now?** appears. Select **View**.
- 2 Select the unread message.

To view messages saved in the inbox

- Select **Menu** > **Messaging** > **Inbox**.

To get delivery status of a sent message

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Delivery report**.
- 2 Select **On**. You will be notified when a message has been successfully delivered.

Picture messages (MMS)

Picture messages can contain text, sound and images. They are sent using MMS to a mobile phone. You need the correct Internet settings in your phone to use this function. See **Internet on page 32**.

To create a picture message

- 1 From standby press .
- 2 Select **Picture messages** > **Options** and select among the options to create the message.

To send a picture message

- 1 When the message is ready, select **Options** > **Send message** > **To..**.
- 2 Select **Enter phone no.** or **Email address**.
- 3 Select **OK** > **Options** > **Send message**.

Sending and receiving phones must have subscriptions that support picture messaging.

Contacts

You can save contacts in the phone memory or on the SIM card. You can copy contacts from the phone memory to the SIM card or from the SIM card to the phone memory.

See **Entering text on page 23**.

To add a contact

- 1 From standby select **Contacts** > **Add contact**.
- 2 Select **Save on SIM** or **Save in phone**.
- 3 Enter the name and select **Options** > **OK**.
- 4 Scroll to the icon below the name.
- 5 Enter the number and select **OK**.
- 6 Select **Save contact**.

You can enter the + sign and country code with all phonebook numbers. They can then be used abroad or at home. See **To make international calls on page 13**.

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in the phone. If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

To select contacts view

- 1 From standby select **Menu** > **Contacts** > **Settings** > **View Contacts**.
- 2 Select an option.

To call a contact

- 1 From standby press .
- 2 Scroll to, or enter the first few letters of the contact.
- 3 Press .

To edit a contact

- 1 From standby press .
- 2 Select a contact.
- 3 Select **Options** > **Edit**.
- 4 Edit the information and select **Options** > **Save contact**.

To delete a contact

- 1 From standby press .
- 2 Select a contact.
- 3 Select **Options** > **Delete contact**.

To copy all contacts to the SIM card

- From standby select **Menu** > **Contacts** > **Copy contacts** > **Copy all to SIM**.

To view your own phone number

- From standby select **Menu** > **Contacts** > **My number**.

Contacts memory

The number of entries you can save in **Contacts** depends on the capacity of your SIM card.

To check the Contacts memory status

- From standby select **Menu** > **Contacts** > **Settings** > **Memory status**.

Speed dialling

Speed dialling lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 2-9.

Position 1 is set to voicemail number.

To add contacts to speed dial numbers

- 1 From standby select **Contacts** > **Speed dial**.
- 2 Select a position number.
- 3 Select a contact.

To speed dial

- From standby enter the position number and press .

FM radio

To listen to the FM radio

- 1 Connect the handsfree to the phone.
- 2 From standby press .

To control the radio

- Press or to search for FM radio channels.
- Press or to change the volume.

To save an FM radio channel

- Press and hold down - . The FM radio channel is saved in **Options** > **Channels**. You can save up to 20 preset channels.

To listen to a saved FM radio channel

- When the FM radio is on, press - .

To exit the FM radio

- Select **Back** or press .

To minimize the FM radio on the screen

- Select **Options** > **Minimize**.
- Press to restore the FM radio on the screen.

To turn the FM radio off when minimized

- Press and select **Back**.

To view FM radio options

- When you play the FM radio, select **Options**.

Calendar

To add an appointment in the Calendar

- 1 From standby select **Menu** > **Extras** > **Calendar**.
- 2 Scroll to a date and select **Options** > **Add a note**.
- 3 Enter your details and select **Options** > **OK**.
- 4 To confirm the date and time, select **OK**.
- 5 Select if you want a reminder signal:
 - **Reminder** – a reminder signal will sound in immediate connection with the note.
 - **Deactivate** – no reminder signal.

To edit or delete a note

- 1 From standby select **Menu** > **Extras** > **Calendar**.
- 2 Scroll to the day for the note and select **Options** > **View today**. If there is more than one note, scroll to the desired note.
- 3 Select **Options**.
- 4 Select to **Delete** or **Edit** the note.

More functions

Alarm

The alarm rings even if the phone is set to silent or turned off.

To set the alarm

- From standby select **Menu** > **Alarms**.
 - Enter the time and select **Save**.
 - Select an option.
- If **Alarm** is selected, select an alarm signal.
 - If **Recurrent alarm** is selected, select what day or days the alarm is going to sound. Scroll to the check boxes and select **Mark** or **Unmark**, then select **Done** and select an alarm signal.

! You need to keep a handsfree inserted when you select radio as an alarm signal. The radio will sound through the loudspeaker.

To turn the alarm off

- When the alarm sounds, select **Snooze** or **Stop**.

To set the alarm signal

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Alarm sound** and select an option.

Entering text

There are two methods you can use to enter text: multitap or T9™ text input.

To change text input methods

- When you write the message, press and hold down **(↵)**.

To enter text using multitap

- Press **(2)** – **(9)** until the desired character appears.
- Press **(↵)** to add a space.
- Press **(123)** to enter full stops and commas.
- Press **(↵)** to shift between upper case and lower case letters.
- Press **(+)** to enter the + sign.
- Press and hold down **(0)** – **(9)** to enter numbers.

To enter text using T9™ text input

- For example, if you want to write the word “Jane”, press **(5)**, **(2)**, **(6)**, **(3)**.
- If the word shown is the one you want, press **(↵)** to accept and add a space. To accept a word without adding a space, press **(↵)**. If the word shown is not the one you want, press **(⬅)** or **(➡)** repeatedly to view alternative words. To accept a word and add a space, press **(↵)**. To enter full stops and commas, press **(123)** and then **(⬅)** or **(➡)** repeatedly.

To add items in a text message

- When you write the message, select **Options** > **Add item**.

To add symbols in a text message

- When you write the message, select **Options** > **Add symbol**.

To delete characters

- Select **Clear**.

To change writing language

- When you write the message, press and hold down **(↵)**.

Emergency calls

Your phone supports international emergency numbers, for example, 112 and 911. These numbers can normally be used to make emergency calls in any country, with or without the SIM card inserted, if a GSM network is within range.

To make an emergency call

- From standby enter 112 (the international emergency number) and press **(↵)**.

To view your local emergency numbers

- From standby select **Menu** > **Calls** > **Call settings** > **Emergency nos.**

Diverting calls

You can divert calls, for example, to an answering service.

To divert calls

- From standby select **Menu** > **Calls** > **Call settings** > **Divert all calls** and select an option.
- Select **Activate**.

To cancel a call divert

- From standby select **Menu** > **Calls** > **Call settings** > **Divert all calls** > **Deactivate all**.

Multiple calls

Call waiting

When call waiting is used, you hear a beep if you receive a second call.

To activate call waiting

- From standby select **Menu** > **Calls** > **Call settings** > **Call waiting** > **Activate**.

To answer a second call

- During the call, select **Answer**. Your ongoing call is put on hold.

To reject a second call

- During the call, select **Busy** and continue with the ongoing call.

To make a second call

- During the call, select **Options** > **Hold call** > **Options** > **Call contact**. Your ongoing call is put on hold.
- Select **View contacts**.
- Scroll to the contact and select **Options** > **Call**.

To switch between two calls

- During the call, select **Switch**.

To join two calls

- During the call, select **Options** > **Join calls**.

To end both calls

- Press **(⏏)** twice.

Call time and cost

To check the call time and the call cost

- From standby select **Menu** > **Calls** > **Time and cost**.

Voicemail

Callers can leave a voicemail message when you cannot answer. You can get your voicemail number from your network operator.

To enter your voicemail number

- From standby select **Menu** > **Calls** > **Call settings** > **Set up voicem.** > **OK**.
- Select **Voicemail no.** and enter the voicemail number that you get from your service provider.
- Select **Save**.

To call your voicemail service

- From standby press and hold down **(123)**.

To check your voicemail number

- From standby select **Menu** > **Contacts** > **Voicemail**.

Ringtones and themes

Themes are used to change the appearance of the screen.

To select a ringtone

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Ringtone** and select a ringtone.

To set the ring volume

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Ring volume** and select an option.

To set the vibrating alert

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Vibration** and select an option.

To select a key sound

- From standby select **Menu** > **Settings** > **Sound & alerts** > **Key sound** and select an option.

To select a theme

- From standby select **Menu** > **Settings** > **Theme** and select a theme.

To use a picture taken with the camera as wallpaper

- From standby select **Menu** > **Camera** > **Camera pics**.
- Scroll to a picture and select **View**.
- Select **Options** > **Set wallpaper**.

Time and date

To set the time

- From standby select **Menu** > **Settings** > **Time and date** > **Time** > **Set time**.
- Enter the time and select **Save**.

To set the time format

- From standby select **Menu** > **Settings** > **Time and date** > **Time** > **Time format** and select an option.

22

23

24

25

26

27

28

Locks

To set the date

- From standby select **Menu** > **Settings** > **Time and date** > **Date** > **Set date**.
- Enter the date and select **Save**.

To set the date format

- From standby select **Menu** > **Settings** > **Time and date** > **Date** > **Date format** and select an option.

Language

You can select the language for the phone menus.

To change the phone language

- From standby select **Menu** > **Settings** > **Language**.
- Select an option.

Bluetooth™ wireless technology

Bluetooth™ wireless technology makes wireless connection to other Bluetooth devices, for example, a Bluetooth headset possible. You can:

- connect to several devices at the same time.
- exchange items.

! The recommended maximum distance between two Bluetooth devices is 10 metres (33 feet), with no solid objects in between.

To turn the Bluetooth function on

- From standby select **Menu** > **Settings** > **Bluetooth** > **Turn on**.

! Please check if local laws or regulations restrict the use of Bluetooth wireless technology. If it is not allowed, you must ensure that the Bluetooth function is turned off.

To show or hide your phone

- From standby select **Menu** > **Settings** > **Bluetooth** > **Visibility** > **Show phone** or **Hide phone**.

! If set to hide, other devices will not be able to identify your phone using Bluetooth wireless technology.

To pair a device with your phone

- From standby select **Menu** > **Settings** > **Bluetooth** > **My devices** > **New device** to search for available devices.
- Select a device from the list. Enter a passcode, if required.

To pair your phone with a Bluetooth handsfree

- From standby select **Menu** > **Settings** > **Bluetooth** > **Handsfree**.
- Select **Yes** if you are adding a Bluetooth handsfree for the first time or select **Handsfree** > **My handsfree** > **New handsfree** if you are pairing with another Bluetooth handsfree. Make sure that your handsfree is ready to be paired.

To receive an item

- From standby select **Menu** > **Settings** > **Bluetooth** > **Visibility** > **Show phone**.
- When you receive an item follow the instructions that appear.

To send an item using Bluetooth

- From standby select, for example, **Menu** > **Camera** > **Camera pics**.
- Scroll to a picture and select **View**.
- Select **Options** > **Via Bluetooth**.

Internet

You need the correct Internet settings in your phone.

- If settings are not in your phone, you can:
 - Get them in a text message from the network operator.
 - On a computer, go to www.sonyericsson.com/support and request a text message with the settings.

To select an Internet profile

- From standby select **Menu** > **Settings** > **Internet settings** > **Internet profile**. Select a profile.

To start browsing

- From standby select **Menu** > **Internet** and select an option:
 - Homepage** – go to the predefined homepage.
 - Bookmarks** – go directly to a saved Web page.
 - Go to URL** – go to predefined pages or bookmarks, enter a Web address or show previously visited pages.
 - View** – select full content or text only.
 - Advanced** – select options such as show pictures, allow cookies, clear cookies, clear cache and Internet status.

To stop browsing

- When you browse, press and hold down **Back**.

SIM card lock

The SIM card lock protects your subscription, but not your phone itself, from unauthorized use. If you change SIM cards, the phone still works with the new SIM card. Most SIM cards are locked at the time of purchase. If the SIM card lock is on, you have to enter a PIN (Personal Identity Number) every time you turn on your phone. If you enter your PIN incorrectly three times in a row, the SIM card is blocked. This is indicated by the message **PIN blocked**. Enter PUK provided by your operator. To unblock it, enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator.

! If the message **Wrong code. Attempts remaining:** appears when you edit your PIN, you entered the PIN or PIN2 incorrectly.

To unblock your SIM card

- When **PIN blocked**, enter PUK provided by your operator. is displayed, enter your PUK and select **OK**.
- Enter a new PIN and select **OK**.
- Re-enter the new PIN to confirm and select **OK**.

To turn the SIM card lock on

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **SIM lock** > **Protection** > **On**.
- Enter your PIN and select **OK**.

To edit your PIN

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **SIM lock** > **Change PIN**.
- Enter your PIN and select **OK**.
- Enter a new PIN and select **OK**.
- Re-enter the new PIN to confirm and select **OK**.

To edit your PIN2

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **SIM lock** > **Change PIN2**.
- Enter your PIN2 and select **OK**.
- Enter a new PIN2 and select **OK**.
- Re-enter the new PIN2 to confirm and select **OK**.

Phone lock

The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged. You can change the phone lock code (which is 0000 by default) to any four-digit personal code.

If the phone lock is set to **Automatic**, you do not need to enter your phone lock code until a different SIM card is inserted in the phone.

To turn the phone lock on

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **Phone lock** > **Protection** > **On**.
- Enter the phone lock code and select **OK**.

To edit your phone lock code

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **Phone lock** > **Change code**.
- Enter the current code and select **OK**.
- Enter a new code and select **OK**.
- Re-enter the new code to confirm and select **OK**.

! If you forget your new code, you have to take your phone to your local Sony Ericsson retailer.

To unlock the phone

- From standby select **Menu** > **Settings** > **Advanced** > **Security** > **Phone lock** > **Protection** > **Off**.
- Enter your phone lock code and select **OK**.

Troubleshooting

Some problems require that you call your service provider, but you can correct most problems yourself. Remove the SIM card before handing your phone in for repair.

Memory capacity and speed

If you have not restarted the phone for a while, you may experience problems with its memory capacity and speed. You can restart the phone to improve its capacity.

- Turn the phone off and remove the battery cover.
- Remove the phone battery and then put it back in place.
- Replace the battery cover and turn the phone on.

Master reset

If you experience problems with your phone such as screen flickering or freezing and navigation problems you should reset the phone.

- From standby select **Menu** > **Settings** > **Advanced** > **Master reset** and select an option.

! Reset settings will reset all changes that you have made in your phone to default.

Reset all will delete all user data such as contacts, messages, pictures and sounds in your phone.

The phone turns itself off

If your phone turns itself off when being transported, something in your pocket or bag has activated the on/off key. You need to turn the automatic keylock on.

- From standby select **Menu** > **Settings** > **Advanced** > **Auto keylock** > **On**.

I cannot turn the phone on, what should I do?

Try charging the phone until it has finished charging. Attach the charger (make sure the power icon on the charger is facing upwards) and charge the phone for 2.5 hours. The battery icon on the screen may not appear until the phone has charged for 30 minutes.

What is my phone lock code?

A phone lock protects your phone against unauthorized use. If a different SIM card is inserted in the phone, the phone lock code has to be entered. The default phone lock code is 0000.

I cannot send text messages (SMS)

Make sure you have a valid service centre number in your phone.

- From standby select **Menu** > **Messaging** > **Settings** > **Text message** > **Service centre**. The number is shown if it is saved on the SIM card.
- If there is no number shown, enter the service centre number, including the international “+” sign and country code.
- Select **OK**.

I cannot use Internet or MMS

Make sure you have a phone subscription that supports data transmission, and also the correct settings in your phone.

What do these error messages mean?

PIN blocked

You have entered the wrong PIN code three times. Your SIM is now locked. Unlock your SIM with your PUK code, which is provided together with your PIN code by your network operator.

- Enter your PUK code and select **OK**.
- Enter a new PIN and select **OK**.
- Re-enter the new PIN to confirm and select **OK**.

Insert SIM card

Your SIM card is not inserted correctly or may be damaged or dirty. Try one or more of the following:

- Remove the SIM card and insert it correctly.
- Clean the connectors on the SIM card and phone with a soft brush, a cloth or a cotton bud.
- Check if the SIM card is damaged.
- Contact your network operator to get a new SIM card.

Invalid SIM

- This error message is shown in two cases:
 - The phone only works with certain SIM cards. Insert the correct SIM card.
 - You entered your personal unblocking key code (PUK) incorrectly 10 times in a row. Contact your operator.
- To unblock, see *SIM card lock* on page 33.

Codes do not match

You have entered your PIN or PIN2 incorrectly. Enter the correct PIN or PIN2 and select **OK**.

See *Locks* on page 33.

Phone locked

The phone is locked. To unlock the phone, enter your code (which is 0000 if you have not changed it) and select **OK**.

! Go to www.sonyericsson.com/support for more information.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Sony Ericsson T280a
GSM 850/1900
This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.
© Sony Ericsson Mobile Communications AB, 2008
Publication number: EN/LZT 108 9707 R1A.
Please note: Some of the services in this User guide are not supported by all networks. This also applies to the GSM International Emergency Number 112. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not. Please read the *Important information* before you use your mobile phone. All illustrations are for illustration only and may not accurately depict the actual phone.
Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content. T9™ Text Input is a trademark or a registered trademark of Tegic Communications. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Ericsson is under license.

29

30</

Sony Ericsson

Important Information

Sony Ericsson Consumer Web Site

On www.sonyericsson.com/support there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and Support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners
- A warranty period. Learn more about the warranty conditions in this User guide.

On www.sonyericsson.com, you will find the latest support tools and information. For operator-specific services and features, please contact your network operator. You can also contact our Call Centers in your country/region (not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes, unless the phone number is a toll-free number.) If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.

Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- Warning! May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +40°F (+4°C).
- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices or disable the radio transmitting functionality of the device where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in any car.
- Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with this Product.

7 Tampering with any of the seals on the Product will void the warranty.
8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitation or exclusions may not apply to you. The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

* Geographical scope of the warranty

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorized Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

*** In some countries/regions additional information (such as a valid warranty card) may be requested.

8

9

3 Esta garantía no cubre fallas en el producto ocasionadas por el desgaste y uso normales o el uso incorrecto, incluido entre otros el uso en condiciones distintas a las normales y habituales, en conformidad con las instrucciones de Sony Ericsson acerca del uso y mantenimiento del producto. Tampoco cubre fallas del producto causadas por accidentes, mal uso de menús o ajustes del software o hardware, fuerza mayor o daños por derrame de líquidos. Una batería recargable se puede cargar y descargar más de cien veces. Sin embargo, ésta se desgastará finalmente; esto no es un defecto y corresponde al uso y desgaste normal. Cuando el tiempo de conversación o el tiempo de espera se reducen en forma notoria, es momento de reemplazar la batería. Sony Ericsson le recomienda que utilice sólo baterías y cargadores aprobados por Sony Ericsson. Puede haber variaciones menores en el brillo y el color de la pantalla entre los teléfonos. Puede que la pantalla tenga pequeños píxeles brillantes u oscuros. Estos puntos se denominan píxeles defectuosos y se producen cuando hay puntos individuales que no funcionan correctamente y no se pueden ajustar. Dos píxeles defectuosos se considera aceptable. Puede haber variaciones menores en la apariencia de la imagen en la cámara entre los teléfonos. Esto no es un hecho poco frecuente y no se considera como un módulo de cámara defectuoso.

4 Dado que el sistema celular en el cual operará el producto es proporcionado por una compañía portadora independiente de Sony Ericsson, Sony Ericsson no será responsable de la operación, disponibilidad, cobertura, servicios o alcance de dicho sistema.

5 Esta garantía no cubre fallas del producto causadas por instalaciones, modificaciones, o reparos no autorizados por Sony Ericsson.

6 La garantía no cubre fallas del producto causadas por el uso de accesorios u otros dispositivos periféricos que no sean originales de Sony Ericsson diseñados para su uso con el producto.
7 La alteración de cualquiera de los sellos del producto anulará la garantía.
8 ESTE PRODUCTO NO DISPONE DE NINGUNA OTRA GARANTÍA EXPRESA, NI ESCRITA NI ORAL, EXCEPTO ESTA GARANTÍA LIMITADA POR ESCRITO. TODAS LAS GARANTÍAS IMPLÍCITAS, INCLUIDAS, ENTRE OTRAS, LAS GARANTÍAS IMPLÍCITAS DE FACTIBILIDAD DE COMERCIALIZACIÓN O ADECUACIÓN A UN PROPOSITO PARTICULAR, ESTÁN LIMITADAS A LA DURACION DE ESTA GARANTÍA LIMITADA. EN NINGUN CASO, SONY ERICSSON O SUS AGENTES SERÁN RESPONSABLES DE DAÑOS IMPREVISTOS O DERIVADOS DE NINGUNA NATURALEZA, INCLUIDOS, ENTRE OTRAS, UTILIDADES NO PERCIBIDAS O PERDIDAS COMERCIALES, EN LA MEDIDA EN QUE ESTE LEGALMENTE PERMITIDO DENEGARLOS. Algunos países o estados no permiten la exclusión o limitación de los daños imprevistos o derivados o la limitación de la duración de las garantías implícitas, por lo que es posible que las limitaciones o exclusiones anteriores no se apliquen en su caso. Esta garantía no afecta los derechos regulatorios del consumidor según la legislación aplicable en vigencia, ni los derechos del consumidor con respecto al distribuidor que surjan del contrato de compra y venta.

8 Este producto necesita el servicio contemplado en el producto de cuando el producto no reserve el derecho de cobrar dinero si se considera que el producto de cuando el producto puede perder parte de sus ajustes personales, descargas y otra información cuando reparen o reemplazan su producto Sony Ericsson. Al presente, puede que la legislación vigente, otras normativas o restricciones técnicas, le impidan a Sony Ericsson realizar copias de respaldo de ciertas descargas. Sony Ericsson no se hace responsable por ningún tipo de pérdida de información y no realizará reembolso alguno por dicha pérdida.

Usted siempre debe efectuar copias de respaldo de toda la información almacenada en su producto Sony Ericsson, tales como descargas, calendario y contactos, antes de entregar su producto Sony Ericsson para reparaciones o reemplazo.
Condiciones
1 Esta Garantía limitada es válida sólo si se presenta junto con el Producto que se debe reparar o reemplazar, la factura de compra original emitida por un distribuidor autorizado, en la cual se especifica la garantía original, o noventa (90) días desde la fecha de reparación, dependiendo del que sea más prolongado. La reparación o el reemplazo pueden efectuarse con piezas de repuesto reconicionadas cuyo funcionamiento es equivalente al de las piezas originales. Las partes o los componentes reemplazados serán propiedad de Sony Ericsson.

2 Si Sony Ericsson repara o reemplaza el producto, la reparación del defecto correspondiente o el Producto reemplazado estará garantizado por el tiempo restante del período de la garantía original, o noventa (90) días desde la fecha de reparación, dependiendo del que sea más prolongado. La reparación o el reemplazo pueden efectuarse con piezas de repuesto reconicionadas cuyo funcionamiento es equivalente al de las piezas originales. Las partes o los componentes reemplazados serán propiedad de Sony Ericsson.

Children

Warning! Keep out of the reach of children. Do not allow children to play with phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before clearing it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may impose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. (Use for intended purposes only. Charge the battery in temperatures between +11°F (+5°C) and +113°F (+45°C). Do not put the battery into your mouth.) Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks.

Personal medical devices

Phones may affect certain medical equipment. Reduce risk of interference by keeping a minimum distance of 6 inches (15 cm) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with your vehicle manufacturer's representative to be sure that your phone or Bluetooth handsfree kit will not affect the electronic systems in your vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults." Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service providers. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

Caution: Do not use GPS functionality in a manner which causes distraction from driving.

6

7

8

9

• Precaución: Pantallas trizadas o quebradas pueden crear bordes afilados o astillas que puedan ser dañinas al tacto.

• No use el Audífono Bluetooth en posiciones que no sean cómodas o donde esté sujeto a presión.

Niños

¡Advertencia! Manténgalo fuera del alcance de los niños. No permita que los niños jueguen con los teléfonos móviles o sus accesorios. Podían lastimarse o lastimar a otras personas. Los productos pueden contener piezas pequeñas que podrían desprenderse del producto.

Fuente de alimentación (Cargador)

Conecte el cargador a fuentes de alimentación según se indica en el producto. No use en la intemperie ni en zonas húmedas. No modifique ni exponga el cable a daños o tensión. Desenchufe la unidad antes de limpiarla. Nunca altere el enchufe. Si no se ajusta a la toma de corriente, pídale que un electricista instale una toma adecuada. Cuando conecta la fuente de alimentación, se produce una pequeña pérdida de energía. Para evitarla, desconecte la fuente de alimentación cuando el producto está totalmente cargado. El uso de dispositivos de carga que no son Sony Ericsson puede traducirse en un aumento de los riesgos de seguridad.

Batería
Las baterías nuevas o inactivas pueden tener una capacidad reducida en el corto plazo. Antes del primer uso, cargue completamente la batería. Utilízala sólo para el propósito indicado. Cargue la batería cuando la temperatura está entre +5°C (+41°F) y +45°C (+113°F). No se lleve la batería a la boca. No permita que los contactos de la batería toquen otro objeto de metal. Apague el producto antes de retirar la batería. El rendimiento depende de la temperatura, la intensidad de la señal, los patrones de uso, las funciones seleccionadas y las transmisiones de voz o datos. Sólo los socios de servicio de Sony Ericsson pueden sacar y cambiar las baterías inoperadas. El uso de baterías que no son Sony Ericsson puede traducirse en un aumento de los riesgos de seguridad.

Dispositivos médicos personales
Los teléfonos móviles pueden afectar equipos médicos implantados. Mantenga una distancia mínima de 15 cm (6 pulgadas) entre el teléfono y el dispositivo para reducir el riesgo de interferencia. Use el teléfono en la oreja derecha. No lleve el teléfono en el bolsillo de la camisa. Apague el teléfono cuando sospeche que existe interferencia. Para todos los dispositivos médicos, consulte a un médico y al fabricante.

Conducción
Algunos fabricantes de vehículos prohíben el uso de teléfonos móviles en sus vehículos, a menos que un equipo manos libres con antena externa admita la instalación. Verifique con el representante del fabricante del vehículo para asegurarse de que el teléfono móvil no interfiera con los sistemas de seguridad para impedir dichos problemas. Sony Ericsson no garantiza ni declara que el dispositivo sea impenetrable por el ingreso de malware. Sin embargo, para reducir el riesgo de ataques de malware puede tener cuidado cuando descarga contenido o acepta aplicaciones, evitar abrir o responder mensajes de origen desconocido, utilizar servicios seguros para acceder a Internet y descargar en el teléfono solamente contenido de fuentes confiables y confiables.

• Manipule el producto con cuidado y guárdelo en un lugar limpio y sin polvo.
• ¡Advertencia! La batería puede explotar si la arroja al fuego.
• No exponga el producto a líquidos o a exceso de humedad.
• No exponga el producto a temperaturas extremas. No exponga la batería a temperaturas sobre +60°C (+140°F).
• No exponga a llamas o cigarrillos encendidos.
• No deje caer ni bote ni intente doblar el producto.
• No pinte ni intente desarmar o modificar el producto. Sólo personal autorizado por Sony Ericsson puede realizar servicios de mantenimiento.
• Consulte a personal médico autorizado y las instrucciones del fabricante del dispositivo médico antes de utilizar el producto cerca de marcapasos u otros dispositivos o equipos médicos.
• Descontinúe el uso de dispositivos electrónicos o desactive la función de transmisión de radio del dispositivo donde sea necesario o se lo indique hácerlo.
• No use donde exista una atmósfera potencialmente explosiva.
• No coloque el producto ni instale equipos inalámbricos encima del área de un air bag de su automóvil.

• Cobertura geográfica de la garantía
Si adquirió su producto en un país miembro de la Comunidad Económica Europea (CEE) o en Suiza o en la República de Turquía y dicho producto estaba destinado para la venta en la CEE o en Suiza o en Turquía, el Producto puede recibir mantenimiento por accidentes, mal uso de menús o ajustes del software o hardware, fuerza mayor o daños por derrame de líquidos. Una batería recargable se puede cargar y descargar más de cien veces. Sin embargo, ésta se desgastará finalmente; esto no es un defecto y corresponde al uso y desgaste normal. Cuando el tiempo de conversación o el tiempo de espera se reducen en forma notoria, es momento de reemplazar la batería. Sony Ericsson le recomienda que utilice sólo baterías y cargadores aprobados por Sony Ericsson. Puede haber variaciones menores en el brillo y el color de la pantalla entre los teléfonos. Puede que la pantalla tenga pequeños píxeles brillantes u oscuros. Estos puntos se denominan píxeles defectuosos y se producen cuando hay puntos individuales que no funcionan correctamente y no se pueden ajustar. Dos píxeles defectuosos se considera aceptable. Puede haber variaciones menores en la apariencia de la imagen en la cámara entre los teléfonos. Esto no es un hecho poco frecuente y no se considera como un módulo de cámara defectuoso.

4 Dado que el sistema celular en el cual operará el producto es proporcionado por una compañía portadora independiente de Sony Ericsson, Sony Ericsson no será responsable de la operación, disponibilidad, cobertura, servicios o alcance de dicho sistema.

5 Esta garantía no cubre fallas del producto causadas por instalaciones, modificaciones, o reparos no autorizados por Sony Ericsson.

6 La garantía no cubre fallas del producto causadas por el uso de accesorios u otros dispositivos periféricos que no sean originales de Sony Ericsson diseñados para su uso con el producto.

7 La alteración de cualquiera de los sellos del producto anulará la garantía.
8 ESTE PRODUCTO NO DISPONE DE NINGUNA OTRA GARANTÍA EXPRESA, NI ESCRITA NI ORAL, EXCEPTO ESTA GARANTÍA LIMITADA POR ESCRITO. TODAS LAS GARANTÍAS IMPLÍCITAS, INCLUIDAS, ENTRE OTRAS, LAS GARANTÍAS IMPLÍCITAS DE FACTIBILIDAD DE COMERCIALIZACIÓN O ADECUACIÓN A UN PROPOSITO PARTICULAR, ESTÁN LIMITADAS A LA DURACION DE ESTA GARANTÍA LIMITADA. EN NINGUN CASO, SONY ERICSSON O SUS AGENTES SERÁN RESPONSABLES DE DAÑOS IMPREVISTOS O DERIVADOS DE NINGUNA NATURALEZA, INCLUIDOS, ENTRE OTRAS, UTILIDADES NO PERCIBIDAS O PERDIDAS COMERCIALES, EN LA MEDIDA EN QUE ESTE LEGALMENTE PERMITIDO DENEGARLOS. Algunos países o estados no permiten la exclusión o limitación de los daños imprevistos o derivados o la limitación de la duración de las garantías implícitas, por lo que es posible que las limitaciones o exclusiones anteriores no se apliquen en su caso. Esta garantía no afecta los derechos regulatorios del consumidor según la legislación aplicable en vigencia, ni los derechos del consumidor con respecto al distribuidor que surjan del contrato de compra y venta.

8 Este producto necesita el servicio contemplado en el producto de cuando el producto no reserve el derecho de cobrar dinero si se considera que el producto de cuando el producto puede perder parte de sus ajustes personales, descargas y otra información cuando reparen o reemplazan su producto Sony Ericsson. Al presente, puede que la legislación vigente, otras normativas o restricciones técnicas, le impidan a Sony Ericsson realizar copias de respaldo de ciertas descargas. Sony Ericsson no se hace responsable por ningún tipo de pérdida de información y no realizará reembolso alguno por dicha pérdida.

Usted siempre debe efectuar copias de respaldo de toda la información almacenada en su producto Sony Ericsson, tales como descargas, calendario y contactos, antes de entregar su producto Sony Ericsson para reparaciones o reemplazo.
Condiciones
1 Esta Garantía limitada es válida sólo si se presenta junto con el Producto que se debe reparar o reemplazar, la factura de compra original emitida por un distribuidor autorizado, en la cual se especifica la garantía original, o noventa (90) días desde la fecha de reparación, dependiendo del que sea más prolongado. La reparación o el reemplazo pueden efectuarse con piezas de repuesto reconicionadas cuyo funcionamiento es equivalente al de las piezas originales. Las partes o los componentes reemplazados serán propiedad de Sony Ericsson.

Emergency calls

Calls can be guaranteed under all conditions. Never rely solely upon phones for essential communications. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage your phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)
When your phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements. Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body. For more information about SAR and radio frequency exposure go to: www.sonyericsson.com/health.

Malware

Malware (short for malicious software) is software that can harm your phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While your device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that your device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to your phone from known, reliable sources.

Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF Exposure, radio performance, sound loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessories). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment

Electrical equipment and cables should not be discarded as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city or county, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Call Center.

Disposing of the battery

Check local regulations or call a Sony Ericsson Call Center for information.

Never dispose of in open waste.

Memory Card

If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

The memory card is formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

WARNING:
• If your device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not insert the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, or turn off the power while formatting, reading or writing data, or when you use the memory card in locations subject to static electricity or high electrical field emissions.

6

7

8

9

10

Es posible que la información basada en la ubicación del dispositivo se interrumpa o presente errores y/o admida, depender de la disponibilidad del servicio de Geolocalización en las zonas donde se encuentran los dispositivos. Los accesos pueden afectar la exposición a RF, la radio, el volumen del sonido, la seguridad eléctrica y otras áreas. Los accesorios y las piezas de reemplazo pueden suponer un riesgo a su salud o seguridad o una disminución del rendimiento.
Soluciones accesibles/Necesidades especiales
En EE. UU., los teléfonos Sony Ericsson compatibles pueden ofrecer compatibilidad con las terminales TTY (con los accesorios necesarios). Para obtener más información, llame al Sony Ericsson Special Needs Center al 877 878 1996 (TTY) o al 877 207 2056 (voz), o visite www.sonyericsson-snc.com.

Antena
El uso de dispositivos con antena no comercializados por Sony Ericsson puede dañar el teléfono, reducir su rendimiento y producir niveles SAR superiores a los límites establecidos. No cubra la antena con la mano ya que esto afecta la calidad de la señal. Evite el nivel de potencia y reduce los tiempos de conversación y espera.
Exposición a las señales de radiofrecuencia (RF) y Tasa específica de absorción (SAR)
Cuando el teléfono o el manos libres Bluetooth está encendido, emite bajas niveles de energía de radiofrecuencia. Se han desarrollado especificaciones internacionales de seguridad a través de evaluaciones periódicas y minuciosas de estudios científicos. Estas especificaciones establecen los niveles permitidos de exposición a ondas de radio. Las especificaciones incluyen un margen de seguridad destinado a garantizar la seguridad de todas las personas y representar las variaciones en las mediciones. La Tasa específica de absorción (SAR) se utiliza para medir la energía de radiofrecuencia que absorbe el cuerpo al utilizar un teléfono móvil. El valor de SAR correspondiente al nivel más alto registrado en condiciones de laboratorio, pero ya que el teléfono está diseñado para utilizar el mínimo de potencia necesario para acceder a la red eléctrica, el nivel real de SAR puede estar muy por debajo de dicho valor. No existe evidencia de diferencia en los niveles de seguridad cuando el valor de SAR es distinto.
Los productos con radiotransmisores vendidos en los EE. UU. deben estar certificados por la Federal Communications Commission (FCC). Cuando se requieren pruebas de seguridad se realizarán con el teléfono en la oreja y cuando se lleve cerca del cuerpo. Para su uso cerca del cuerpo, este teléfono ha sido probado para su funcionamiento a una distancia mínima de 15 mm del cuerpo, sin que haya piezas metálicas cerca del teléfono o cuando se utiliza correctamente con el accesorio adecuado Sony Ericsson. Para obtener más información acerca de SAR y la exposición a la radiofrecuencia, visite: www.sonyericsson.com/health.

Malware
Malware (forma abreviada de “malicious software”, en inglés) es un software que puede dañar el teléfono móvil u otros computadores. El malware o las aplicaciones perjudiciales pueden incluir virus, gusanos, spyware y otros programas no deseados. Si bien el dispositivo emplea medidas de seguridad para impedir dichos problemas, Sony Ericsson no garantiza ni declara que el dispositivo sea impenetrable por el ingreso de malware. Sin embargo, para reducir el riesgo de ataques de malware puede tener cuidado cuando descarga contenido o acepta aplicaciones, evitar abrir o responder mensajes de origen desconocido, utilizar servicios seguros para acceder a Internet y descargar en el teléfono solamente contenido de fuentes confiables y confiables.

6

• **Manusee-os con cuidado**, manténdo-os em ambientes limpos e sem poeira.
• **Atenção** Pode explodir se descartada no fogo.
• Não exponha o produto a líquidos ou a umidade excessiva.
• Não exponha o produto a temperaturas extremas. Não exponha a bateria a temperaturas acima +60°C (+140°F).
• Não exponha o produto a chamas ou derivados de tabaco secos.
• Não derrube, jogue ou tente dobrar o produto.
• Não pinte ou tente desmontar ou modificar o produto. Somente profissionais autorizados pela Sony Ericsson devem prestar serviços.
• Consulte uma equipe médica autorizada e obtenha instruções do fabricante do dispositivo médico antes de usar o produto perto de marca-passos ou outros dispositivos ou equipamentos médicos.
• Interrompa a utilização de dispositivos eletrônicos ou desative a funcionalidade de transmissão por rádio do dispositivo onde for obrigatório ou solicitado.
• Não utilize em áreas que tenham uma atmosfera explosiva em potencial.
• Não coloque ou instale equipamentos sem fio na área acima air bag do seu carro.
• Cuidado: Displays rachados ou quebrados podem criar bordas afiladas o lascas que podem machucar.
• Não use o Fone de ouvido Bluetooth em posições onde seja desconfortável ou sujeito a pressão.

Crianças
Avise! Mantenha fora do alcance de crianças. Não permita que uma criança brinque com celulares ou com seus acessórios. Eles podem se machucar ou ferir outros pessoas. Os produtos podem conter pequenos componentes que podem ser desconectados e provocar riscos de asfixia.

Fonte de energia (Carregador)

Conecte o carregador somente às fontes de energia indicadas no produto. Não use ao ar livre ou em áreas úmidas. Não altere ou sujite o cabo a danos, nem o estique. Desenchufe a unidade antes de limpá-la. Nunca altere o plugue. Se ele não se encaixar na tomada, chame um electricista qualificado para instalar uma tomada adequada. Quando a fonte estiver conectada, haverá uma pequena perda de energia. Para evitar essa perda, desconecte a fonte de energia quando o produto estiver totalmente carregado. A utilização de dispositivos de carregamento que não são da marca Sony Ericsson pode acarretar maiores riscos de segurança.

Baterias
Baterias novas o ociosas podem ter su capacidade reduzida em curto prazo. Carregue totalmente a bateria antes da primeira utilização. Use a bateria somente para o propósito a que ela se destina. Carregue-a quando a temperatura estiver entre +5°C (+41°F) e +45°C (+113°F). Não permita que ninguém coloque a bateria na boca. Não deixe os contatos metálicos da bateria tocarem em outro objeto de metal. Desligue o produto antes de retirar a bateria. O rendimento depende de temperaturas, força de sinal, padrões de uso, dos recursos selecionados e das transmissões de voz e de dados. Somente os parceiros de serviço Sony Ericsson devem remover ou substituir baterias internas. A utilização de baterias que não sejam da marca Sony Ericsson pode acarretar maiores riscos de segurança.

Proteção de personal information
Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!
Avoid volume levels that may be harmful to your hearing.

End User License Agreement

This wireless device, including without limitation any media delivered with the device, (“Device”) contains software owned by Sony Ericsson Mobile Communications AB and its affiliated companies (“Sony Ericsson”) and its third party suppliers and licensors (“Software”). As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable license to use the Software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device. You shall not reproduce, modify, distribute, retransmit, engage in decompilation, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules. You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect. Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms and conditions, including this performance. This license shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

Limited Warranty
Sony Ericsson Mobile Communications AB, Nyå Vattentornet, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your phone, original accessory delivered with your phone, and/or your mobile computing product (hereinafter referred to as “Product”). This Limited Warranty does not apply to any accessories, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com to get further information.

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product.

6

7

8

9

• Eliminação de equipamentos eletrônicos antigos
O equipamento eletrônico y las baterías no deben incluirse como desechos domésticos, pero deben dejarse en el punto de recolección correspondiente para que sean reciclados. Esto ayuda a evitar posibles consecuencias negativas para el medioambiente y la salud de las personas. Para conocer las normas locales, comuníquese con su municipalidad, el servicio de desechos domésticos, la tienda donde compró el producto o llame al Sony Ericsson Call Center.

Eliminación de la batería

Revisé las disposiciones locales o llame al Sony Ericsson Call Center local para obtener información. No utilice nunca vertederos municipales.

Eliminación de la memoria
Si el producto incluye una tarjeta de memoria extraíble, normalmente es compatible con el teléfono que adquirió, pero puede que no sea compatible con otros dispositivos o con las capacidades de las tarjetas de memoria. Verifique la compatibilidad de otros dispositivos antes de comprar

Appareils médicaux personnels
Os cellules podem afetar a operação de equipamentos médicos implantados. Reduza o risco de interferência mantendo uma distância mínima de 15 cm (6 polegadas) entre o celular e o dispositivo. Use o telefone no ouvido direito. Não carregue o telefone no bolso na altura de seu peito. Desligue o telefone se suspeitar de alguma interferência. Para todos os equipamentos médicos, entre em contato com um médico e com o fabricante.

Atenção
Alguns fabricantes de carros permitem o uso de celulares nos respectivos veículos, exceto se o kit handsfree tiver uma antena externa instalada. Consulte o representante do fabricante do seu veículo para verificar se o celular ou se o handsfree Bluetooth não afetará os sistemas eletrônicos do carro. Esteja sempre atento ao dirigir e conheça as leis e regulamentos locais que restringem o uso de dispositivos sem fio com o carro em movimento.
GPS/funções com base em locais

Alguns produtos oferecem GPS/funções com base em locais. A funcionalidade de determinação da localização é fornecida “No estado em que se encontra” e “Com todas as falhas”. A Sony Ericsson não garante a precisão dessas informações de localização. O uso das informações baseadas na localização pelo dispositivo talvez não seja interrompido ou livre de erros e, além disso, pode depender da disponibilidade do serviço de rede. Essa funcionalidade pode ser reduzida ou não funcionar em alguns ambientes, como dentro ou ao redor de edifícios.

Aviso: não use a funcionalidade GPS enquanto estiver dirigindo para não se distrair.

Chamadas de emergência

As chamadas não podem ser garantidas sob todas as condições. Nunca dependa somente de celulares para comunicações essenciais. Pode não ser possível fazer chamadas de emergência em todas as áreas, em todas as redes de telefonia celular ou quando determinados serviços da operadora e/ou os recursos do celular estiverem em uso.

Antena

O uso de antenas não comercializadas pela Sony Ericsson especificamente para este modelo pode danificar o celular, reduzir o desempenho e gerar níveis de SAR acima dos limites estabelecidos. Não toque na antena com os mãos, isso afeta a qualidade da chamada, os níveis de energia e pode diminuir o tempo de conversação e espera.

Exposição à radiofrecência (RF) e taxa de absorção específica (SAR)
A taxa de absorção específica é usada para medir a quantidade de energia de radiofrecência absorvida pelo corpo durante o uso de um celular. O valor da SAR é determinado no nível certificado de energia mais alto em condições de laboratório, mas como o telefone foi projetado para usar o mínimo de energia necessário para acessar a rede escolhida, o nível real de SAR do celular em operação pode estar bem abaixo desse valor. Não há evidências de diferença em segurança com base na diferença em valor SAR.

Vous trouverez les outils et les renseignements de soutien les plus récents sur le site www.sonyericsson.com. Veuillez communiquer avec votre exploitant de réseau pour les services et caractéristiques spécifiques à votre exploitant. Vous pouvez également communiquer avec nos centres d'appels. Si votre pays ou votre région ne sont pas indiqués dans la liste ci-dessous, veuillez communiquer avec votre distributeur local. (L'appel sera facturé au tarif national en vigueur, toutes taxes locales comprises, sauf s'il s'agit d'un numéro sans frais.) Si votre appareil doit être réparé, veuillez communiquer avec le distributeur auquel vous l'avez acheté ou avec l'un de nos partenaires de service. Conservez votre preuve d'achat pour toute réclamation couverte par la garantie.

Directives pour une utilisation efficace et sans danger
Veuillez suivre ces directives. Le fait de ne pas observer cette mise en garde pourrait entraîner des risques pour votre santé ou un dysfonctionnement du produit. Si vous avez des doutes sur le fonctionnement adéquat de l'appareil, faites-le vérifier par un partenaire de service agréé avant de le charger ou de l'utiliser.

Recommandations pour l'entretien et l'utilisation sans risque de nos produits

- Manipulez l'appareil avec précaution et rangez-le dans un endroit propre et sans poussière.
- Attention! Cet appareil peut exposer s'il est jeté au feu.
- N'exposez pas ce produit à des liquides ou à de l'humidité excessive.
- N'exposez pas le produit à des températures extrêmes. N'exposez pas la batterie à des températures supérieures à 60 °C (140 °F).
- N'exposez pas le produit à des flammes ou à des produits de combustion de tabac allumés.
- N'échappez pas, ne lancez pas et ne tentez pas de tordez l'appareil.
- N'appuyez pas de peinture sur le produit et évitez de le démonter ou de le modifier. Seul le personnel autorisé de Sony Ericsson peut effectuer les réparations.
- Avant d'utiliser votre produit à proximité d'un simulateur cardiaque ou de tout autre équipement médical, consultez un professionnel de la santé autorisé et lisez les instructions du fabricant de l'équipement médical.
- Cessez l'utilisation des appareils électroniques ou désactivez la fonction d'émetteur radio de l'appareil, au besoin.
- N'utilisez pas l'appareil dans des zones où il y a risque d'explosion.
- Ne placez pas l'appareil et n'installez aucun équipement sans fil dans les zones situées au-dessus des sacs gonflables d'un véhicule.
- Attention : Un affichage flou ou broué peut présenter des aspérités ou des éclats susceptibles de causer des blessures au toucher.
- N'utilisez pas votre casque Bluetooth dans une position inconfortable ou dans laquelle il serait soumis à une pression.

Sécurité des enfants

Avertissement! Gardez l'appareil hors de la portée des enfants. Ne laissez pas les enfants jouer avec le téléphone mobile ou ses accessoires, car ils pourraient se blesser ou blesser autrui. Les produits contiennent des petites pièces qui peuvent se détacher et présenter des risques d'étouffement.

Conditions générales

1 La garantie limitée n'est valide que sur présentation d'une preuve d'achat d'origine de ce Produit, émise par un distributeur Sony Ericsson autorisé et spécifiant la date de l'achat et le numéro de série**, accompagnant le Produit à réparer ou à remplacer. Sony Ericsson se réserve le droit de refuser le service sous garantie si ces renseignements ont été supprimés ou modifiés après l'achat initial du Produit. 2 Si Sony Ericsson répare ou remplace le Produit, la réparation de la défaectuosité ou le Produit remplacé sera couvert pendant la durée restante de la garantie initiale accordée au moment de l'achat ou pour une période de quatre-vingt-dix (90) jours à compter de la date de réparation, selon la durée la plus longue. La réparation et le remplacement peuvent être effectués au moyen d'unités équivalentes au plan fonctionnel et remises à neuf. Les pièces ou éléments qui sont remplacés deviennent la propriété de Sony Ericsson.

3 La présente garantie ne couvre pas une défectuosité du Produit attribuable à l'usure normale ou à une mauvaise utilisation, notamment une utilisation ou un entretien non conformes aux instructions de Sony Ericsson pour l'utilisation et l'entretien du Produit. Cette garantie ne couvre également pas les défaillances du Produit à la suite d'un accident, d'une modification ou d'un ajustement de logiciel ou de matériel, d'une catastrophe ou de dommages causés par des liquidés. Une batterie rechargeable peut être chargée et déchargée plus de cent fois. Toutefois, elle finira par s'user – il ne s'agit pas d'une défaectuosité, mais plutôt d'un phénomène d'usure normal. Lorsque le temps de conversation ou le temps de veille est significativement plus court, il faut remplacer la batterie. Sony Ericsson recommande d'utiliser uniquement des batteries et des chargeurs approuvés par Sony Ericsson. La luminosité et le couleur d'affichage peuvent varier légèrement d'un téléphone à l'autre. L'écran peut également comporter de minuscules points brillants ou sombres. C'est ce qu'on appelle des pixels défectueux; ils ne peuvent pas être réglés. Deux pixels défectueux constituent un écart acceptable. L'image de la caméra peut varier légèrement d'un téléphone à l'autre. Ce type de différence est assez courant et n'est pas considéré comme une défaectuosité. 4 Étant donné que le réseau cellulaire sur lequel le Produit sera utilisé est fourni par un exploitant indépendant, Sony Ericsson n'est pas responsable de l'exploitation, de la disponibilité, de la couverture, des services et de la portée de ce réseau. 5 La présente garantie ne s'applique pas dans le cas de défaectuosité du Produit causées par l'installation d'autres produits, ou par la modification, la réparation ou l'ouverture du produit effectué par des personnes non autorisées par Sony Ericsson. 6 Cette garantie ne couvre pas les défaillances du Produit causées par l'utilisation d'accessoires ou de périphériques autres que les accessoires authentiques Sony Ericsson conçus pour votre Produit. 7 Toute modification des sceaux sur le Produit entraînera l'annulation de la garantie. 8 CETTE GARANTIE LIMITÉE ÉCRITE EST LA SEULE OFFERTE PAR ERICSSON. AUCUNE AUTRE GARANTIE EXPRESSE, ÉCRITE OU VERBALE N'EST DONNÉE. TOUTES LES GARANTIES IMPLICITES, NOTAMMENT LES GARANTIES IMPLICITES DE QUALITÉ MARCHANDE ET D'ADAPTION À UN USAGE PARTICULIER, SONT LIMITÉES À LA DURÉE DE LA PRÉSENTE GARANTIE. NI SONY ERICSSON NI SES

Os produtos com transmissores de rádio vendidos nos EUA devem ser certificados pela FCC (Federal Communications Commission). Quando solicitado, serão executados testes com o telefone em certas posições, como no ouvido ou no corpo. O telefone foi testado com o aparelho junto ao corpo a uma distância mínima de 15 mm sem contato com qualquer peça metálica do telefone ou quando utilizado adequadamente com o acessório original da Sony Ericsson para este telefone. Para obter mais informações sobre SAR e exposição à radiofrequência, visite: www.sonyericsson.com/health.

Malware

O malware (abreviação de malicious software, software malicioso) é um software que pode danificar o telefone celular ou outros computadores. Entre malware ou aplicativos prejudiciais, podemos incluir vírus, worms, spyware e outros programas indesejáveis. Embora este dispositivo empague medidas de segurança para resistir a esses esforços, a Sony Ericsson não garante que o seu dispositivo será imune à introdução de malware. No entanto, você pode reduzir o risco de ataques de malware tomando cuidado ao fazer download de conteúdo e ao aceitar aplicativos, evitando abrir e responder mensagens de fonte desconhecida, usando serviços confiáveis para acessar a Internet e só fazendo download de conteúdo para o seu telefone celular a partir de fontes confiáveis.

Assessório

Utilize somente acessórios e parceiros de serviço certificados pela marca Sony Ericsson. A Sony Ericsson não testa acessórios de terceiros. Os acessórios podem influenciar a exposição à radiofrequência, o desempenho do rádio, a altura do som, a segurança elétrica e outras áreas. A utilização de acessórios e de partes de terceiros pode representar um risco à sua saúde ou segurança ou diminuir o desempenho.

Soluções acessíveis/necessidades especiais

Nos Estados Unidos, os telefones Sony Ericsson podem oferecer compatibilidade com aparelhos TTY (com o acessório necessário). Para obter mais informações, entre em contato com o Sony Ericsson Special Needs Center, pelo número 877 878 1996 (TTY) ou 877 207 2056 (voz), ou visite www.sonyericsson-snc.com.

Descarte de equipamentos eletrônicos e eletrônicos antigos

O equipamento eletrônico e as baterias não devem ser considerados lixo doméstico, mas devem ser levados ao local de coleta aplicável para a reciclagem. Isso ajuda a evitar potenciais consequências negativas para meio-ambiente e para a saúde humana. Consulte os regulamentos locais ao entrar em contato com o escritório local, com o serviço de descarte de lixo doméstico, com a loja onde adquiriu o produto ou com a Central de atendimento Sony Ericsson local.

Descarte de bateria

Consulte as regulamentações locais ou telefone para uma Central de atendimento Sony Ericsson local para obter informações. Nunca utilize o depósito de lixo municipal.

Cartão de memória

Se o produto vier completo com um cartão de memória removível, ele geralmente será compatível com o fone de ouvido adquirido, mas poderá não ser compatível com outros dispositivos ou recursos dos cartões de memória. Verifique a compatibilidade dos outros

Alimentation (chargeur)

Branchez le chargeur aux sources d'alimentation indiquées sur le produit. N'utilisez pas le chargeur à l'intérieur ou dans des endroits humides. Ne modifiez pas le fil et évitez de l'endommager ou de lui faire subir des contraintes. Débranchez le chargeur avant de le nettoyer. Ne modifiez jamais la fiche. Si elle n'entre pas dans la prise, faites installer une prise adéquate par un électricien. Lorsque le chargeur est branché, il consomme une petite quantité d'énergie. Afin d'éviter cette faible perte d'énergie, débranchez le chargeur une fois l'appareil complètement chargé. L'utilisation d'un chargeur d'une autre marque que Sony Ericsson peut augmenter les risques liés à la sécurité.

Batterie

La capacité d'une batterie neuve ou inutilisée peut être réduite à court terme. Chargez complètement la batterie avant d'utiliser l'appareil pour la première fois. Utilisez la batterie uniquement pour l'usage recommandé. La batterie doit être chargée à une température entre plus 5 °C (41 °F) et 45 °C (113 °F). Ne mettez pas la batterie dans votre bouche. Ne chargez la batterie que dans le chargeur prévu à cet effet. Mettez l'appareil hors tension avant de retirer la batterie. Le rendement de la batterie varie en fonction de la température, de l'intensité du signal, des habitudes d'utilisation, des fonctions choisies et des transmissions vocales et de données. Seuls les partenaires de service Sony Ericsson devraient retirer ou remplacer les batteries intégrées. L'utilisation d'une batterie d'une autre marque que Sony Ericsson peut augmenter les risques liés à la sécurité.

Dispositifs médicaux personnels

Les téléphones mobiles peuvent nuire au bon fonctionnement de certaines prothèses médicales. Le risque d'interférence est moindre si l'orne garde une distance de 15 cm (6 pouces) entre le téléphone et le dispositif médical. Portez le téléphone à l'oreille droit. Ne placez pas le téléphone dans la poche de poitrine de votre chemise. Si vous croyez qu'il y a interférence, mettez le téléphone hors tension. Pour tous les types de dispositifs médicaux, consultez un médecin et le fabricant du dispositif.

Sécurité routière

Certains constructeurs d'automobiles proscrivent l'utilisation de téléphones mobiles dans leurs véhicules, à moins qu'une trousse mains libres comprenant une antenne extérieure soit utilisée. Vérifiez auprès de votre concessionnaire automobile que votre téléphone mobile ou votre dispositif mains libres Bluetooth n'affectera pas les systèmes électroniques de votre véhicule. Maintenez toujours toute votre attention sur la route et respectez les lois et règlements locaux qui restreignent l'utilisation d'appareils sans fil au volant.

Fonctions de repérage par GPS

Certains produits comportent des fonctions de repérage par GPS. Les fonctions de repérage d'un emplacement sont fournies « En l'état ». Sony Ericsson n'offre aucune représentation ou garantie quant à leur exactitude.

Rien ne garantit que l'utilisation par l'appareil des données de repérage ne sera pas interrompue, ni que ces données sont exemptes d'erreurs. En outre, l'accès aux données de repérage peut varier selon la disponibilité du service de réseau. Veuillez prendre note que la fonctionnalité peut être restreinte dans certains environnements, tels qu'à l'intérieur ou à proximité d'un bâtiment.

Attention: N'utilisez pas les fonctions GPS dans des conditions qui peuvent rendre la conduite dangereuse.

CONCÉDANTS NE POURRONT EN AUCUN CAS ÊTRE TENUS RESPONSABLES DES DOMMAGES ACCESSOIRES OU CONSÉCUTIFS DE TOUTE NATURE, INCLUANT, SANS S'Y LIMITER, LES MANQUES À GAGNER ET LES PRÉJUDICES COMMERCIAUX, DANS LA MESURE OÙ CES DOMMAGES PEUVENT ÊTRE EXEMPTÉS PAR LA LOI.

Certains pays ou certaines régions n'autorisent pas l'exclusion ou la limitation des dommages accessoires ou indirects, ou la limitation de la durée des garanties implicites. Les limitations et exclusions qui précèdent peuvent donc ne pas s'appliquer dans votre cas. Cette garantie ne nuit en rien aux droits accordés au consommateur en vertu de la loi en vigueur, ni aux droits du consommateur face au détaillant découlant de leur contrat d'achat ou de vente.

* Portée géographique de la garantie

Si vous avez acheté votre Produit dans un pays membre de l'Espace économique européen (EEE), ou en Suisse ou en République de Turquie, et que ce Produit visit à être vendu dans l'EEE, ou en Suisse ou en Turquie, vous pouvez faire réparer ce Produit dans l'EEE, ou en Suisse ou en Turquie, en fonction des termes de la garantie existants dans le pays où vous demandez la réparation, à la condition que le produit défekitif y soit vendu par un détaillant Sony Ericsson autorisé. Pour savoir si votre Produit est vendu dans le pays ou vous vous trouvez, veuillez appeler le centre d'appels Sony Ericsson local. Veuillez prendre note qu'il est possible que certains services ne soient offerts que dans le pays d'achat, par exemple, dans les cas où l'intérieur ou l'extérieur de votre Produit diffèrent des modèles équivalents vendus dans d'autres pays. Veuillez prendre note qu'il est possible que les produits à verrouillage SIM ne puissent être réparés.

** Dans certains pays ou certaines régions, des renseignements supplémentaires sont requis (par exemple une carte de garantie valide).

Support/Soporte/Suporte/Soutien technique

Argentina	800-333-7427
questions.AR@support.sonyericsson.com	
Australia	1-300650-600
questions.AU@support.sonyericsson.com	
Belgique/België	02-7451611
questions.BE@support.sonyericsson.com	
Brasil	4001-04444
questions.BR@support.sonyericsson.com	
Canada	1-866-766-9374
questions.CA@support.sonyericsson.com	
Central Africa	+27 112589023
questions.CF@support.sonyericsson.com	
Chile	123-0020-0656
questions.CL@support.sonyericsson.com	
Colombia	18009122135
questions.CO@support.sonyericsson.com	
Česká republika	844550 065
questions.CZ@support.sonyericsson.com	

dispositivos antes de comprá-los ou usá-los. Se o produto está equipado com um leitor de cartão de memória, verifique a compatibilidade dele antes de comprá-lo ou usá-lo. O cartão de memória é formatado antes do envio. Para reformatar o cartão de memória, use um dispositivo compatível. Não use o formato padrão do sistema operacional na formatação do cartão de memória em um computador. Para obter detalhes, consulte as instruções de operação do dispositivo ou entre em contato com o suporte ao cliente.

Aviso!

• O seu dispositivo precisará de um adaptador para inserção no fone de ouvido ou outro dispositivo, não insira o cartão diretamente, sem o adaptador necessário.

Precauções sobre a utilização do cartão de memória

- Não exponha o cartão de memória à umidade.
- Não toque nas conexões terminais com as mãos ou com qualquer objeto de metal.
- Não bata, dobre ou deixe o cartão de memória cair.
- Não tente desmontar ou modificar o cartão de memória.
- Não use o armazem o cartão de memória em locais úmidos ou corrosivos, ou onde haja calor em excesso, como carro fechado no verão, luz solar direta, perto de um aquecedor etc.
- Não pressione ou dobre a extremidade do adaptador MZ com muita força.
- Não deixe poeira, sujeira ou objetos estranhos entrarem na porta de inserção de nenhum