

Draft for Sony Ericsson Internal Use Only

To select channels saved in positions 1 to 10

- When the radio is playing, press **(G+)** - **(G)**.



PlayNow™

You can listen to music before you purchase and download it to your phone.

- ! *This service is not available in all countries. In some countries you can purchase music from some of the world's top musical artists.*

Before you use PlayNow™

You must have the required settings in your phone. See *Settings* on page 48.

To listen to PlayNow™ music

- 1 From standby select **Menu** > **PlayNow™**.
- 2 Select music from a list.

Downloading from PlayNow™

The price appears when you select to download and save a music file. Your phone bill or prepay card is debited when a purchase is accepted.

To download a music file

- 1 When you have listened to a music file preview, you can agree to accept the conditions.

- 2 Select **Yes** to download.
- 3 A text message is sent to confirm payment and the file is made available to download.

Ringtones and melodies

To set a ringtone

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Ringtone**.
- 2 Find and select a ringtone.

To set the ringtone volume

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Ring volume**.
- 2 Press **(V-)** or **(V+)** to change the volume.
- 3 Select **Save**.

To turn the ringtone off

- From standby press and hold down **(#-3)**.

- ! *All signals except the alarm signal are affected.*

To set the vibrating alert

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Vibrating alert**.
- 2 Select an option.

Draft for Sony Ericsson Internal Use Only


To send a ringtone

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Scroll to **Music** and select **Open**.
- 3 Scroll to a ringtone and select **Options** > **Send**.
- 4 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

To receive a ringtone




 
- Follow the instructions that appear.

- ! *You are not allowed to exchange some copyright-protected material. A protected file has a  icon.*

MusicDJ™

You can compose and edit your own melodies to use as ringtones. A melody consists of four types of tracks – **Drums**, **Basses**, **Chords**, and **Accents**. A track contains a number of music blocks. The blocks consist of pre-arranged sounds with different characteristics. The blocks are grouped into **Intro**, **Verse**, **Chorus**, and **Break**. You compose a melody by adding music blocks to the tracks.

To compose a melody

- 1 From standby select **Menu** > **Entertainment** > **MusicDJ™**.
- 2 Select to **Insert**, **Copy** or **Paste** blocks.
- 3 Use , ,  or  to scroll between the blocks.
- 4 Select **Options** > **Save melody**.

To send a melody

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Scroll to **Music** and select **Open**.
- 3 Scroll to a melody and select **Options** > **Send**.
- 4 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

To receive a melody

- Follow the instructions that appear.

- ! *You cannot send a polyphonic melody or MP3 file in a text message.*

Sound recorder

You can record a voice memo or a call. Recorded sounds can also be set as ringtones.

- ! *In some countries or states it is required by law that you inform the other person before recording the call.*

Draft for Sony Ericsson Internal Use Only

To record a sound

- From standby select [Menu](#) > [Entertainment](#) > [Record sound](#).

To listen to a recording

- 1 From standby select [Menu](#) > [Organizer](#) > [File manager](#).
- 2 Scroll to [Music](#) and select [Open](#).
- 3 Scroll to a recording and select [Play](#).

Games

Your phone contains several games. You can also download games. Help texts are available for most games.

To start a game

- 1 From standby select [Menu](#) > [Entertainment](#) > [Games](#).
- 2 Select a game.

To end a game

- Press .

Applications

You can download and run Java applications. You can also view information or set different permissions.

Before you use Java™ applications

If settings are not already entered in your phone, see *Settings* on page 48.

To select a Java application

- 1 From standby select [Menu](#) > [Organizer](#) > [Applications](#).
- 2 Select an application.

To view information about a Java application

- 1 From standby select [Menu](#) > [Organizer](#) > [Applications](#).
- 2 Scroll to an application and select [Options](#) > [Information](#).

To set permissions for a Java application

- 1 From standby select [Menu](#) > [Organizer](#) > [Applications](#).
- 2 Scroll to an application and select [Options](#) > [Permissions](#).
- 3 Set permissions.

Java application screen size

Some Java applications are designed for a specific screen size. For more information, contact the application vendor.

To set the screen size for a Java application

- 1 From standby select [Menu](#) > [Organizer](#) > [Applications](#).
- 2 Scroll to an application and select [Options](#) > [Screen size](#).
- 3 Select an option.

Draft for Sony Ericsson Internal Use Only

Internet profiles for Java applications

Some Java applications need to connect to the Internet to receive information. Most Java applications use the same Internet settings as your Web browser.

Connectivity


Settings

Before you synchronize with an Internet service, use the Internet, PlayNow™, My friends, Java, picture messaging, email and picture blog you need to have settings in your phone.

If settings are not already entered, you can download settings using the setup wizard or by going to www.sonyericsson.com/support.

To download settings using the Setup wizard

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Setup wizard** > **Settings download**.
- 2 Follow the instructions that appear.

 *Contact your network operator or service provider for more information.*

To download settings using a computer

- 1 Go to www.sonyericsson.com/support.
- 2 Follow the instructions on the screen.

Phone name

You can enter a name for your phone to be shown to other devices.

Draft for Sony Ericsson Internal Use Only

To enter a phone name

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Phone name**.
- 2 Enter the phone name and select **OK**.

Using the Internet

To start browsing

- 1 From standby select **Menu** > **Internet**.
- 2 Select **Options** > **Go to**.
- 3 Select an option.

To exit the browser

- When you browse the Internet, select **Options** > **Exit browser**.

Using bookmarks

You can create and edit bookmarks as quick links to your favourite Web pages.

To create a bookmark

- 1 When you browse the Internet, select **Options** > **Tools** > **Add bookmark**.
- 2 Enter a title and an address. Select **Save**.

To select a bookmark

- 1 From standby select **Menu** > **Internet**.
- 2 Select **Options** > **Go to** > **Bookmarks**.
- 3 Scroll to a bookmark and select **Go to**.

To send a bookmark

- 1 From standby select **Menu** > **Internet** > **Options** > **Go to** > **Bookmarks**.
- 2 Scroll to a bookmark.
- 3 Select **Options** > **Send** and select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

To send a link

- 1 When you browse the Internet, select **Options** > **Tools** > **Send link**.
- 2 Select an option.

 
 
History pages

You can view Web pages you have browsed.

To view history pages

- From standby select **Menu** > **Internet** > **Options** > **Go to** > **History**.

To use pan and zoom on a Web page

- 1 *When you browse the Internet, press* .
- 2 Use the navigation key to move the frame.
- 3 Press **Zoom**.
- 4 To switch back to pan, press .

- ! *To use pan and zoom, you need to turn off Smart-fit: Options > Advanced > Smart-Fit > Off.*

Draft for Sony Ericsson Internal Use Only

To exit pan and zoom mode

 

 


 
- Select Back.

Internet keypad shortcuts


You can use the keypad to go directly to an Internet browser function.

To select Internet keypad shortcuts

- 1 From standby select **Menu** > **Internet**.
- 2 Select **Options** > **Advanced** > **Keypad mode** > **Shortcuts**.

Key	Shortcut
	Bookmarks
 - 	Enter address, Search Internet or search in Bookmarks.
	Zoom
	Pan & zoom (when Smart-Fit is off).
	Fullscreen or Landscape or Normal screen.

To make a call while browsing

- When you browse the Internet press .

To save a picture from a Web page

- 1 When you browse the Internet, select **Options** > **Tools** > **Save picture**.
- 2 Select a picture.

To find text on a Web page

- 1 When you browse the Internet, select **Options** > **Tools** > **Find on page**.
- 2 Enter text and press **Find**.

To copy and paste text while browsing

- 1 When you browse the Internet, select **Options** > **Tools** > **Mark & copy**.
- 2 Scroll to where you want to start copying and select **Mark**.
- 3 Scroll to mark text.
- 4 Select **Copy**.
- 5 Navigate to where you want to insert the text and select **Options** > **Copy & paste** > **Paste**.

To save a Web page

- When you browse the Internet, select **Options** > **Tools** > **Save page**.

To view saved Web pages

- 1 From standby select **Menu** > **Organizer** > **File manager** > **Web pages** > **Saved pages**.
- 2 Scroll to an item and select **View**.

Internet security and certificates

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already


Draft for Sony Ericsson Internal Use Only

contain certificates when you buy it or you can download new certificates.

To view certificates in the phone

- From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Certificates**.

Web feeds

You can receive frequently updated content, such as podcasts or news headlines, as Web feeds. You can add feeds for a page, if it has the  icon.

To add new feeds for a Web page

- When you browse a page on the Internet that has Web feeds, select **Options** > **Web feeds**.

To search for Web feeds on the Internet

- 1 From standby select **Menu** > **Messaging** > **Web feeds** > **Options** > **New feed**.
- 2 Enter a search phrase and select **Cont..**
- 3 When Web feeds are found, select a feed and select **Yes** to schedule an update.

Updating Web feeds

You can manually update your feeds, or schedule the update. When there

are updates,  appears on the screen.

To schedule Web feeds updates

- 1 From standby select **Menu** > **Messaging** > **Web feeds**.
- 2 Scroll to a feed and select **Options** > **Schedule update**.
- 3 Select an option.

To update Web feeds manually

- 1 From standby select **Menu** > **Messaging** > **Web feeds**.
- 2 Scroll to a feed and select **Options** > **Update**.
- 3 Select an option.


 
Web feeds in standby

You can show news updates on the standby screen.

To show Web feeds in standby

- From standby select **Menu** > **Messaging** > **Web feeds** > **Options** > **Settings** > **Standby ticker** > **Show in standby**.

To access Web feeds from standby


- 1 From standby select **Ticker**.
- 2 To read more about a feed, press  or  to scroll to a headline and select **Go to**.

Draft for Sony Ericsson Internal Use Only

Bluetooth™ wireless technology

The Bluetooth function makes wireless connection to other Bluetooth devices possible. You can, for example:

- Connect to handsfree devices.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Exchange items and play multiplayer games.


 *We recommend a range within 10 metres (33 feet), with no solid objects in between, for Bluetooth communication.*

Before you use Bluetooth wireless technology

You must turn on the Bluetooth function to communicate with other devices. You must also pair your phone with other Bluetooth devices.

To turn the Bluetooth function on

- From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Turn on.**

 *Make sure that the device you want to pair your phone with has the Bluetooth function activated and is made visible.*

To receive an item

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Turn on.**
- 2 When you receive an item, follow the instructions that appear.

To pair the phone with a device

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > My devices.**
- 2 Scroll to **New device** and select **Add** to search for available devices.
- 3 Select a device.
- 4 Enter a passcode, if required.

To allow connection to the phone

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > My devices.**
- 2 Select a device from the list.
- 3 Select **Options > Allow connection.**

To pair the phone with a Bluetooth handsfree for the first time

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Handsfree.**
- 2 Select **Yes.**
- 3 Enter a passcode, if required.

Draft for Sony Ericsson Internal Use Only

To pair the phone with more than one Bluetooth handsfree

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Handsfree > My handsfree > New handsfree**.
- 2 Scroll to a device and select **Add**.

Power saving

You can save battery power with the Power save function. You can only connect with a single Bluetooth device. You must turn this function off if you want to connect with more than one Bluetooth device at the same time.

To turn powersave on

- From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Powersave > On**.

Transferring sound to and from a Bluetooth handsfree

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

To transfer sound

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Handsfree > Incoming call**.

- 2 Select an option. **In phone** transfers sound to the phone. **In handsfree** transfers sound to the handsfree.

To transfer sound during a call

- 1 During a call, select **Sound**.
- 2 Select from the list.

File transfer

You can synchronize and transfer files using Bluetooth wireless technology. See *Synchronization using a computer* on page 55.

Using a USB cable

You can connect your phone to a computer with a USB cable to transfer files using **Mass storage** or **Media transfer**. You can also synchronize, transfer files and use your phone as a modem using **Phone mode**. For more information go to the Getting started section at www.sonyericsson.com/support.

Before you use a USB cable

You need one of these operating systems to transfer files using a USB cable:

- Windows® 2000
- Windows XP (Pro and Home)

Draft for Sony Ericsson Internal Use Only

- Windows Vista™ (32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic)

Media transfer and Mass storage

If you have Windows Media Player 11 or higher installed on your PC you can drag and drop files between your phone or memory card and a computer in *Microsoft Windows Explorer*.

- ! *Only use a USB cable supported by your phone. Do not remove a USB cable from your phone or computer during file transfer as this may corrupt the phone memory or the memory card.*

To use media transfer and mass storage mode



- 💡 *Before transferring files you must install the Sony Ericsson PC Suite software on your computer. You can download the Sony Ericsson PC Suite from www.sonyericsson.com/support.*

- 1 Connect a USB cable to the phone and the computer.
- 2 **Phone:** Select **Mass storage**. The phone will shut down in this mode and restart when disconnected from the USB cable.
- 3 **Phone:** Select **Media transfer** and the phone will remain activated during file transfer.
- 4 **Computer:** Wait until the phone memory and memory card appear as external disks in *Windows Explorer*.
- 5 Drag and drop selected files between the phone and the computer.

Draft for Sony Ericsson Internal Use Only

To disconnect a USB cable safely


- 1 Right-click the removable disk icon in *Windows Explorer*.
- 2 Select *Eject*.
- 3 Disconnect the USB cable when the following message is shown in the phone: **Mass storage session ended. It is now safe to remove the USB cable..**

Phone mode

Before synchronizing or using your phone as a modem you must install *the Sony Ericsson PC Suite software* on your computer.

To use phone mode


- 1 **Computer:** Start *PC Suite* from *Start/Programs/Sony Ericsson/PC Suite*.
- 2 Connect a USB cable to the phone and the computer.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** When you are notified that *the Sony Ericsson PC Suite* has found your phone, you can start using the phone mode applications.

 For usage details, see the *Sony Ericsson PC Suite Help* section once the software has been installed on your computer.

Synchronizing

You can use a USB cable or Bluetooth wireless technology to synchronize

phone contacts, appointments, bookmarks, tasks and notes with a computer program such as Microsoft Outlook. You can also synchronize with an Internet service using SyncML™ or a Microsoft® Exchange Server using Microsoft Exchange ActiveSync. For more information go to the Getting started section at www.sonyericsson.com/support.

 Use only one of the synchronization methods at a time with your phone.

Synchronization using a computer

Before synchronizing you need to install *the Sony Ericsson PC Suite*. The software includes help information. You can go to www.sonyericsson.com/support to download the software.

You need one of these operating systems to use the PC Suite on your computer:

- Windows XP (Pro and Home), Service Pack 2 or higher
- Windows Vista (32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic)

Draft for Sony Ericsson Internal Use Only

Synchronization using an Internet service

You can synchronize online using an Internet service with your phone. If Internet settings are not in your phone, see *Settings* on page 48.

Before you start to synchronize

You must enter settings for SyncML synchronization and register a synchronization account online with a service provider. Settings that are required are:

- **Server address** – server URL
- **Database name** – database to synchronize with

To enter settings for SyncML

- 1 From standby select **Menu > Organizer > Synchronization**.
- 2 Scroll to **New account** and select **Add > SyncML**.
- 3 Enter a name for the new account and select **Cont.**
- 4 Select **Server address**. Enter the required information and select **OK**.
- 5 Enter **Username** and **Password**, if required.
- 6 Scroll to the **Applications** tab and mark applications to synchronize.
- 7 Select **Database name** and enter the required information.

- 8 Scroll to the **Advanced** tab to enter additional settings for synchronizing.
- 9 Select **Save**.

To delete an account


- 1 From standby select **Menu > Organizer > Synchronization**.
- 2 Scroll to an account and press **(C)**.

To start synchronization

- 1 From standby select **Menu > Organizer > Synchronization**.
- 2 Scroll to an account and select **Start**.

Synchronization using a Microsoft® Exchange Server

You can access and synchronize corporate exchange information such as email, contacts and calendar entries with a Microsoft® Exchange Server using your phone.

 For more information on synchronization settings, contact your IT administrator.

Before you start to synchronize

You must enter settings for Microsoft Exchange ActiveSync to access a Microsoft Exchange Server. Settings that are required are:

- **Server address** – server URL
- **Domain** – server domain
- **Username** – account username

Draft for Sony Ericsson Internal Use Only

- **Password** – account password

! *Before you start to synchronize with Exchange ActiveSync you must enter the correct time zone in your phone.*

To enter settings for Microsoft Exchange ActiveSync

- 1 From standby select **Menu > Organizer > Synchronization**.
- 2 Scroll to **New account** and select **Add > Exchange ActiveSync**.
- 3 Enter a name for the new account and select **Cont..**
- 4 Enter the required settings.
- 5 Scroll between the tabs to enter additional settings.
- 6 Select **Save**.

To start synchronization

- 1 From standby select **Menu > Organizer > Synchronization**.
- 2 Scroll to an account and select **Start**.



Update service

You can update your phone with the latest software. You do not lose personal or phone information.

There are two ways to update your phone:

- Over the air using your phone

- Using a USB cable and an Internet-connected computer

! *Update service requires data access such as GPRS, 3G or HSDPA.*

Before you use the Update service
If settings are not in your phone see *Settings* on page 48.

To view the current software in the phone

- 1 From standby select **Menu > Settings > the General tab > Update service**.
- 2 Select **Software version**.

To use Update service using the phone

- 1 From standby select **Menu > Settings > the General tab > Update service**.
- 2 Select **Search for update** and follow the instructions that appear.

To use Update service using a USB cable

- 1 Go to www.sonyericsson.com/support or click *the Sony Ericsson Update service in the PC Suite software* if installed on your computer.
- 2 Select a region and country.
- 3 Follow the instructions on the screen.

Draft for Sony Ericsson Internal Use Only

To set a reminder to use Update service

- 1 From standby select **Menu > Settings** > the **General** tab > **Update service** > **Settings** > **Reminder**.
- 2 Select an option.


More features

Flight mode

In **Flight mode** the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- **Normal mode** – full functionality.
- **Flight mode** – limited functionality.

 You can use the Bluetooth™ function in **Flight mode**.

To activate the flight mode menu

- From standby select **Menu > Settings** > the **General** tab > **Flight mode** > **Show at startup**.


To select flight mode


- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select **Flight mode**.

Draft for Sony Ericsson Internal Use Only

Location services

You can get help to find your way, view your approximate location and save your favourite locations.

 With the accessory GPS Enabler HGE-100 you can get more exact information about your current location.

 Some features of Location services use the Internet.

Google Maps™ for mobile

Google Maps™ lets you view maps and satellite imagery, find locations and calculate routes.

To use Google Maps

- From standby select [Menu](#) > [Entertainment](#) > [Location services](#) > [Google Maps](#).

To view help about Google Maps

- When you use Google Maps, select [Options](#) > [Help](#).


Saved locations

All locations you save are found in [My favourites](#).

To view a saved location

- 1 From standby select [Menu](#) > [Entertainment](#) > [Location services](#) > [My favourites](#).

- 2 Scroll to a location and select [Go to](#).

 When you use Google Maps you can press [\(*aA\)](#) to access your favourites.

Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.

To set the alarm

- 1 From standby select [Menu](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to [Time:](#) and select [Edit](#).
- 4 Enter a time and select [OK](#) > [Save](#).

To set the recurrent alarm

- 1 From standby select [Menu](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to [Recurrent:](#) and select [Edit](#).
- 4 Scroll to a day and select [Mark](#).
- 5 To select another day, scroll to the day and select [Mark](#).
- 6 Select [Done](#) > [Save](#).

To set the alarm signal

- 1 From standby select [Menu](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to [Alarm signal:](#) and select [Edit](#).

Draft for Sony Ericsson Internal Use Only

- 4 Find and select an alarm signal. Select [Save](#).

To silence the alarm

- When the alarm sounds, press any key.
- To repeat the alarm, select [Snooze](#).

To turn off an alarm

- When the alarm sounds, select [Turn off](#).


To cancel the alarm

- 1 From standby select [Menu](#) > [Alarms](#).
- 2 Scroll to an alarm and select [TurnOff](#).

The alarm in silent mode

You can set the alarm not to sound when the phone is in silent mode.

To set an alarm to sound or not in silent mode

- 1 From standby select [Menu](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to the  tab.
- 4 Scroll to [Silent mode](#) and select [Edit](#).
- 5 Select an option.

Calendar

The calendar can be synchronized with a computer calendar, with a calendar on the Web or with a Microsoft® Exchange Server

(Microsoft® Outlook®). For more information see *Synchronizing* on page 55.

Default view

You can choose whether month, week or day view will appear first when you open the calendar.

To set default view

- 1 From standby select [Menu](#) > [Organizer](#) > [Calendar](#).
- 2 Select [Options](#) > [Advanced](#) > [Default view](#).
- 3 Select an option.

Appointments

You can add new appointments or reuse existing appointments.

To add an appointment

- 1 From standby select [Menu](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Scroll to [New appointment](#) and select [Add](#).
- 4 Enter the information and confirm each entry.
- 5 Select [Save](#).

To view an appointment

- 1 From standby select [Menu](#) > [Organizer](#) > [Calendar](#).

Draft for Sony Ericsson Internal Use Only

- 2 Select a date.
- 3 Scroll to an appointment and select [View](#).

To edit an appointment

- 1 From standby select [Menu](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Scroll to an appointment and select [View](#).
- 4 Select [Options](#) > [Edit](#).
- 5 Edit the appointment and confirm each entry.
- 6 Select [Save](#).

To send an appointment

- 1 From standby select [Menu](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Scroll to an appointment and select [Options](#) > [Send](#).
- 4 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

To view a calendar week

- 1 From standby select [Menu](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Select [Options](#) > [View week](#).

To set when reminders should sound

- 1 From standby select [Menu](#) > [Organizer](#) > [Calendar](#).
- 2 Select a date.
- 3 Select [Options](#) > [Advanced](#) > [Reminders](#).
- 4 Select an option.

- ! *A reminders option set in calendar affects a reminders option set in tasks.*

Notes

You can make notes and save them. You can also show a note in standby.

To add a note

- 1 From standby select [Menu](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to [New note](#) and select [Add](#).
- 3 Write a note and select [Save](#).

To show a note in standby

- 1 From standby select [Menu](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to a note and select [Options](#) > [Show in standby](#).

To hide a note from standby

- 1 From standby select [Menu](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to a note and select [Options](#) > [Hide in standby](#).

Draft for Sony Ericsson Internal Use Only

Tasks

You can add new tasks or reuse existing tasks.

To add a task

- 1 From standby select **Menu > Organizer > Tasks**.
- 2 Select **New task** and select **Add**.
- 3 Select an option.
- 4 Enter details and confirm each entry.

To view a task

- 1 From standby select **Menu > Organizer > Tasks**.
- 2 Scroll to a task and select **View**.

To reuse an existing task

- 1 From standby select **Menu > Organizer > Tasks**.
- 2 Scroll to a task and select **View**.
- 3 Select **Options > Edit**.
- 4 Edit the task and select **Cont.**
- 5 Choose to set a reminder.

To send a task

- 1 From standby select **Menu > Organizer > Tasks**.
- 2 Scroll to a task and select **Options > Send**.
- 3 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

To set when reminders should sound

- 1 From standby select **Menu > Organizer > Tasks**.
- 2 Scroll to a task and select **Options > Reminders**.
- 3 Select an option.

- ! *A reminders option set in tasks affects a reminders option set in calendar.*

Timer, stopwatch and calculator

To use the timer

- 1 From standby select **Menu > Organizer > Timer**.
- 2 Enter the hours, minutes and seconds.
- 3 Select **Start**.

To use the stopwatch

- 1 From standby select **Menu > Organizer > Stopwatch > Start**.
- 2 To view a new lap time, select **Lap**.

To use the calculator

- 1 From standby select **Menu > Organizer > Calculator**.
- 2 Press \leftarrow or \rightarrow to select \div \times $-$ $+$ $\%$ $=$ $.$

Code memo

You can save security codes, for example, for credit cards. You must

Draft for Sony Ericsson Internal Use Only

set a passcode to open the code memo.

Checkword

The checkword confirms that you have entered the correct passcode. If the passcode is correct, the correct codes are shown. If the passcode is incorrect, the checkword and the codes shown are also incorrect.

To open code memo for the first time

- 1 From standby select **Menu > Organizer > Code memo**.
- 2 Follow the instructions that appear and select **Cont.**
- 3 Enter a passcode and select **Cont.**
- 4 Confirm the passcode and select **Cont.**
- 5 Enter a checkword and select **Done**.

To add a code

- 1 From standby select **Menu > Organizer > Code memo**.
- 2 Enter a passcode and select **Cont.**
- 3 Scroll to **New code** and select **Add**.
- 4 Enter a name associated with the code and select **Cont.**
- 5 Enter the code and select **Done**.

To change a passcode

- 1 From standby select **Menu > Organizer > Code memo**.

- 2 Enter your passcode and select **Cont.**
- 3 Select **Options > Change passcode**.
- 4 Enter your new passcode and select **Cont.**
- 5 Re-enter the new passcode and select **Cont.**
- 6 Enter a checkword and select **Done**.

Forget your passcode?

If you forget your passcode, you must reset the code memo. This means that all entries in the code memo are deleted. The next time you enter the code memo, you must proceed as if you are opening it for the first time. See *To open code memo for the first time* on page 63.

To reset code memo

- 1 From standby select **Menu > Organizer > Code memo**.
- 2 Enter any passcode to access the code memo. The checkword and codes that are then shown are incorrect.
- 3 Select **Options > Reset**.
- 4 **Reset code memo?** appears.
- 5 Select **Yes**.

Profiles

You can change settings such as the ring volume and vibrating alert to suit

Draft for Sony Ericsson Internal Use Only

different locations. You can reset all profiles to the phone's original settings.

To select a profile

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Select a profile.

To view and edit a profile

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Scroll to a profile and select **Options** > **View and edit**.

! You cannot rename the *Normal* profile.

To reset all profiles

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Select **Options** > **Reset profiles**.

Time and date

To set the time

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Time**.
- 2 Enter the time and select **Save**.

To set the date

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Date**.

- 2 Enter the date and select **Save**.

To set the time zone

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **My time zone**.
- 2 Select the time zone you are in.

! If you select a city, My time zone also updates the time when daylight saving time changes.

Locks

SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator.

To unblock the SIM card

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

Draft for Sony Ericsson Internal Use Only

To edit the PIN

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Locks** > **SIM protection** > **Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.
- 4 Re-enter the new PIN and select **OK**.

- ! If Codes do not match appears, you entered the new PIN incorrectly. If Wrong PIN appears, followed by Old PIN:, you entered your old PIN incorrectly.

To use the SIM card lock

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Locks** > **SIM protection** > **Protection**.
- 2 Select an option.
- 3 Enter your PIN and select **OK**.

Phone lock

You can stop unauthorized use of your phone. Change the phone lock code (0000) to any four-to-eight-digit personal code..

- ! It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.

To use the phone lock

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Locks** > **Phone protection** > **Protection**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

To unlock the phone

- Enter your code and select **OK**.

To change the phone lock code

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Locks** > **Phone protection** > **Change code**.
- 2 Enter the old code and select **OK**.
- 3 Enter the new code and select **OK**.
- 4 Repeat the code and select **OK**.

IMEI number

Keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone is stolen.

To view your IMEI number

- From standby press ***#06#**, **#*#06#**, **0+**, **6**, **#*#06#**.

Draft for Sony Ericsson Internal Use Only

Troubleshooting

Some problems will require you to call your network operator.

For more support go to www.sonyericsson.com/support.

Common questions

I have problems with memory capacity or the phone is working slowly

Restart your phone every day to free memory or do a [Master reset](#).

Master reset

If you select [Reset settings](#), the changes that you have made to settings will be deleted.

If you select [Reset all](#), in addition to your changes to settings, all contacts, messages, personal data, and content that you have downloaded, received or edited will also be deleted.

To reset the phone

- 1 From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Master reset](#).
- 2 Select an option.
- 3 Follow the instructions that appear.

I cannot charge the phone or battery capacity is low

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 7.

No battery icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

Some menu options appear in grey

A service is not activated. Contact your network operator.

I cannot use SMS/text messages on my phone

Settings are missing or incorrect. Contact your network operator to find out the correct SMS service centre setting. See *Text messages* on page 29.

 

I cannot use picture messages on my phone

Your subscription does not include data capability. Settings are missing or incorrect. Please contact your network operator.

Draft for Sony Ericsson Internal Use Only

See *Help in your phone* on page 7 or go to www.sonyericsson.com/support to order settings and follow the instructions on the screen. See *Settings* on page 48.

How do I turn on and off T9 Text Input when writing?

When you enter text, press and hold down . You will see  at the top of the screen when T9 Text Input is activated.

How do I change phone language?

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Language** > **Phone language**.
- 2 Select an option.

I cannot use the Internet

Your subscription does not include data capability. Internet settings are missing or incorrect. Please contact your network operator.

See *Help in your phone* on page 7 or go to www.sonyericsson.com/support to order Internet settings, and follow the instructions on the screen. See *Settings* on page 48.

I cannot use keypad shortcuts while browsing

Make sure your **Keypad mode** is set as **Shortcuts**. See *To select Internet keypad shortcuts* on page 50.

I have set Web feeds to show in standby, but no web feeds appear in standby

Check if a note is shown in standby. If so, hide it. See *To hide a note from standby* on page 61.

The phone does not ring or rings too softly

Make sure that **Silent mode** has not been set to **On**. See *To turn the ringtone off* on page 45.

Check the ringtone volume. See *To set the ringtone volume* on page 45.

Check the profile. See *To select a profile* on page 64.

Check the Divert call options. See *To divert calls* on page 25.

The phone cannot be detected by other devices using Bluetooth wireless technology

You have not turned the Bluetooth function on. Make sure that the visibility is set to show phone. See *To*

Draft for Sony Ericsson Internal Use Only

turn the Bluetooth function on on page 52.

I cannot synchronize or transfer data between my phone and my computer, when using a USB cable.

The cable or software has not been properly installed. Go to www.sonyericsson.com/support to read Getting started guides which contain detailed installation instructions and troubleshooting guides.

Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?



Error messages

Insert SIM

There is no SIM card in your phone or you may have inserted it incorrectly.

See *Charging the battery* on page 7.

The SIM card connectors need cleaning. If the card is damaged, contact your network operator.

Insert correct SIM card

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

Draft for Sony Ericsson Internal Use Only

Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select **Yes**. See *To insert the SIM card* on page 5.

PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 64.

Codes do not match

Codes that you have entered do not match. When you want to change a security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 64.

No netw. coverage

Your phone is in flight mode. See *Flight mode* on page 58.

Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone

that is causing the problem. Please contact the nearest Sony Ericsson service location.

Emerg. calls only

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 17.

PUK blocked. Contact operator.

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

Charging, alien battery

The battery that you are using is not a Sony Ericsson-approved battery. See *Battery* on page 72.

Draft for Sony Ericsson Internal Use Only

Important information

Sony Ericsson Consumer Web site

On www.sonyericsson.com/support is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

From now on you will have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support.
- A global network of Call Centers.
- An extensive network of Sony Ericsson service partners.
- A warranty period. Learn more about the warranty conditions in this User guide.

On www.sonyericsson.com, under the support section in the language of your choice, you will find the latest support tools and information, such as

software updates, Knowledge base, phone setup and additional help when you require it.

For operator-specific services and features, please contact your network operator for more information.

You can also contact our Call Centers. Use the phone number for the nearest Call Center in the list below. If your country/region is not represented in the list, please contact your local dealer. (The phone numbers below were correct at the time of going to print. On www.sonyericsson.com you can always find the latest updates.)

In the unlikely event that your product needs service please contact the dealer from whom it was purchased, or one of our service partners. Save your original proof of purchase, you will need it if you need to claim warranty.

You will be charged for a call to one of our Call Centers according to national rates, including local taxes, unless the phone number is a toll-free number.

Draft for Sony Ericsson Internal Use Only

Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.

These instructions are intended for your safety. Please follow these guidelines. If the product has been subject to any of the conditions listed below or you have any doubt as to its proper function make sure you have the product checked by a certified service partner before charging or using it. Failure to do so might entail a risk of product malfunction or even a potential hazard to your health.



Recommendations for safe use of product (mobile phone, battery, charger and other accessories)

- Always treat your product with care and keep it in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extremely high or low temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint your product.



- Do not attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Do not close your product with an object inserted between keypad and display if you have a clamshell phone; this may damage your product.
- Do not use your product near medical equipment without requesting permission from your treating physician or authorized medical staff.
- Do not use your product when in, or around aircraft, or areas showing the sign "turn off two-way radio".
- Do not use your product in an area where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.
- **Caution:** Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.



CHILDREN

KEEP OUT OF CHILDRENS REACH. DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BECOME DETACHED AND CREATE A CHOKING HAZARD.



Draft for Sony Ericsson Internal Use Only

Power supply (Charger)

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug does not fit into the outlet, have a proper outlet installed by a qualified electrician.

Use only Sony Ericsson branded original chargers intended for use with your mobile phone. Other chargers may not be designed to the same safety and performance standards.

Battery

We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery should only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F).

Use only Sony Ericsson branded original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous.

Talk and standby times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when the mobile phone is being used.

Turn off your mobile phone before removing the battery. Do not put the battery into your mouth. Battery electrolytes may be toxic if swallowed. Do not let the metal contacts on the battery touch another metal object. Doing this could short-circuit and damage the battery. Use the battery for the intended purpose only.

Personal medical devices

Mobile phones may affect the operation of pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, use it at the ear on the opposite side of the body to the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult your physician and the manufacturer of the device.

Driving

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Sony Ericsson handsfree solutions intended for use with your product.

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna has been installed.

Always pay full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "AS IS" and "WITH ALL FAULTS". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service

Draft for Sony Ericsson Internal Use Only

availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings. Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. You should therefore never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Antenna

This phone contains a built-in antenna. Use of antenna devices not marketed by Sony Ericsson specifically for this model could damage your mobile phone, reduce performance, and produce SAR levels above the established limits (see below).

Efficient use

Hold your mobile phone as you would any other phone. Do not cover the top of the phone when it is in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP

(International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while it is operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

For phones sold in the US, before a phone model is available for sale to the public, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when used with the original Sony Ericsson accessory intended for this phone and worn on the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Draft for Sony Ericsson Internal Use Only

A separate leaflet with SAR information about this mobile phone model is included with the material accompanying this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on: www.sonyericsson.com/health.

Accessible Solutions/Special Needs

For phones sold in the US, you can use your TTY terminal with your Sony Ericsson mobile phone (with the necessary accessory). For information on Accessible Solutions for individuals with special needs call the Sony Ericsson Special Needs Center on 877-878-1996 (TTY) or 877-207-2056 (voice), or visit the Sony Ericsson Special Needs Center at www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment

This symbol indicates that all electrical and electronic equipment included shall not be treated as household waste. Instead it shall be left at the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Disposing of the battery

Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.



The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Memory Card

If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

WARNING:

If your device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.

Draft for Sony Ericsson Internal Use Only

- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

To safeguard your privacy and prevent information being accessible to a third party, you should erase all personal data before selling or disposing of the product. To delete personal data, perform a master reset, remove the memory card or format the media memory. DELETION OF MATERIAL FROM THE PHONE AND MEDIA MEMORIES DOES NOT ENSURE THAT SAID INFORMATION CANNOT BE RECOVERED BY A SUBSEQUENT USER. SONY ERICSSON DOES NOT WARRANT AGAINST A SUBSEQUENT USER OF THE DEVICE ACCESSING YOUR INFORMATION AND DOES NOT ASSUME ANY RESPONSIBILITY FOR SUBSEQUENT DISCLOSURE OF SAID INFORMATION EVEN IF A MASTER RESET AND A MEDIA MEMORY FORMAT HAS BEEN PERFORMED. If you are concerned about such potential disclosure retain your device or secure its permanent destruction.

Accessories

Sony Ericsson recommends use of Sony Ericsson original accessories for safe and efficient use of its products. Use of third-party accessories may

decrease performance or pose a risk to your health or safety.

LOUDNESS WARNING:

Please adjust the audio volume cautiously when using third-party audio accessories to avoid volume levels that may be harmful to your hearing. Sony Ericsson does not test use of third-party audio accessories with this mobile phone. Sony Ericsson recommends using only Sony Ericsson original audio accessories.

End User Licence Agreement

This wireless device, including without limitation any media delivered with the device, ("Device") contains software owned by Sony Ericsson Mobile Communications AB and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software").

As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable license to use the Software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms

Draft for Sony Ericsson Internal Use Only

and conditions set out in this license, it will terminate with immediate effect.

Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.

The validity, construction and performance of this license shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

Limited Warranty

Sony Ericsson Mobile Communications AB, Nya Vattentorget SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.SonyEricsson.com to get further information.

OUR WARRANTY

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product.

WHAT WE WILL DO

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

CONDITIONS

- 1 This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorized dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- 2 If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time

Draft for Sony Ericsson Internal Use Only

of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.

- 3 This warranty does not cover any failure of the Product due to normal tear and wear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and colour may occur between the phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.

- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.

6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.

7 Tampering with any of the seals on the Product will void the warranty.

8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

***GEOGRAPHICAL SCOPE OF THE WARRANTY**

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in

Draft for Sony Ericsson Internal Use Only

Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



Declaration of Conformity for Z770i

We, Sony Ericsson Mobile Communications AB of Nya Vattentorget SE-221 88 Lund, Sweden declare under our sole responsibility that our product

Sony Ericsson type AAD-3052051-BV and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 908-1:V2.2.1, EN 301 908-2:V2.2.1, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V1.2.1, EN 301 489-24:V1.3.1, EN 60 950-1:2006 following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive 1999/5/EC.

Lund, November 2007

CE 0682

A handwritten signature in black ink, appearing to read 'Shoji Nemoto', written over a horizontal line.

Shoji Nemoto,
Head of Product Business Group GSM/UMTS

We fulfil the requirements of the R&TTE Directive (1999/5/EC).

Draft for Sony Ericsson Internal Use Only

A		call list	22
activity menu	13	call numbers in message	29
adding		call time	27
notes	61	caller-specific ringtones	19
alarms	59	calls	
answering service	22	accepting	26
applications	47	answering and rejecting	17
appointments	60	emergency	17
assembly	5	handling two calls	25
		international	16
		making and receiving	16
		putting on hold	25
		recording	46
B		camera	
battery		settings	37
charging	7	code memo	62
inserting	5	conference calls	26
use and care	72	contacts	
blog		adding phone contacts	18
video	38	default contacts	18
Bluetooth™ wireless technology	52	groups of	21
bookmarks		synchronizing	55
creating	49	copy and paste	
select	49	while browsing	50
sending	49		
browsing			
copy and paste	50		
business cards	21		
		D	
C		date	64
calculator	62	declaration of conformity	78
calendar	60-61	downloading music	45
call divert	24		

Draft for Sony Ericsson Internal Use Only

E		J	
email	32	Java™	47
emergency numbers	17		
entering text	15	K	
		keys	8
F		L	
file manager	13	language	15
fixed dialling	27	Limited Warranty	76
flight mode	58	location services	59
		lock	
G		phone	65
games	47	SIM card	64
Google Maps™	59		
groups	21	M	
		magic word	23
H		master reset	66
handsfree	23, 41	Media Manager	43
Bluetooth technology	52	memory card	13
help	7	memory status	20
hiding number	28	menu overview	10
history		menus	12
Web pages	49	messages	
		area and cell information	35
I		email	32
IMEI number	65	picture	30
Internet		text	29
bookmarks	49	voice	32
security and certificates	50	microphone	17
settings	48	MMS See picture messages	

Draft for Sony Ericsson Internal Use Only

music player	41	PlayNow™	45
MusicDJ™	46	profiles	63–64
My friends	34	PUK	6, 64
my numbers	26	push email	34
N			
navigating menus	12	R	
notes	61	ringtones	45–46
adding	61	RSS feeds See Web feeds	51
showing in standby	61	RSS ticker	51
P			
pan and zoom		S	
Web pages	49	safety guidelines	71
phone name	48	saved Web pages	
photo fix	37	viewing	50
photo tags	39	saving	
PhotoDJ™	39	Web pages	50
photos		search	
improving	37	on Web pages	50
photo fix	37	selection keys	12
picture messages	30	sending	
pictures	39	appointments and tasks	61
edit	39	bookmarks	49
improving	37	business cards	21
photo fix	37	melodies and ringtones	46
PIN code		music	43
changing	65	pictures	38
unblocking	6	settings	
playlists	42	Internet	48
		Java™	48
		shortcuts	12

Draft for Sony Ericsson Internal Use Only

SIM card		sound	53
copying to/from	19	turning on/off	
lock and unblock	64	Bluetooth	52
SMS See text messages		phone lock	65
SOS See emergency numbers		SIM lock protection	65
sound recorder	46	U	
speed dialling	22	unblock SIM card	64
standby	7	update	
notes	61	Web feeds	51
startup screen	6	Update service	57
stopwatch	62	V	
submenus	12	video	
synchronizing	55–57	blog	38
T		edit	39
T9™ Text Input	15	video player	41
tasks	62	video recorder	36
templates	31	VideoDJ™	39
text messages	29	viewing	
themes	40–46	saved Web pages	50
time	64	voice answering	24
time zone	64	voice control	22
timer	62	voice messages	32
transfer method		voicemail	22
Bluetooth technology	52	volume	
USB	53	ear speaker	17
transferring		ringtone	45
camera pictures	37		
files	53		
music	43		

Draft for Sony Ericsson Internal Use Only

W

Web

search	50
Web feeds	51
showing in standby	51
update	51
Web pages	
history	49
pan and zoom	49
saving	50

Z

zoom	36
------------	----