

To turn on or off Smart-Fit Rendering™

- 1 When you browse the Internet, select **Options > Advanced > Smart-Fit**.
- 2 Select an option.

To make a call when you browse

- Press .

To save a picture from a Web page

- 1 When you browse the Internet, select **Options > Tools > Save picture**.
- 2 Select a picture.

To find text on a Web page

- 1 When you browse the Internet, select **Options > Tools > Find on page**.
- 2 Enter text and press **Find**.

To copy and paste text while browsing

- 1 When browsing the Internet, select **Options > Tools > Mark & Copy**.
- 2 Scroll to where you want to start copying and select **Mark**.
- 3 Scroll to mark text and select **Copy**.
- 4 Navigate to where you want to insert the text and select **Options > Copy & paste > Paste**.

To save a Web page

- When browsing the Internet, select **Options > Tools > Save page**.

To view saved Web pages

- 1 From Homescreen select **Menu > Organiser > Media Album > Web pages > Saved pages**.
- 2 Scroll to an item and select **View**.

To send a link

- 1 When you browse the Internet, select **Options > Tools > Send link**.
- 2 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

Internet keypad shortcuts


You can use the keypad to go directly to an Internet browser function.

Key Shortcut

 **Enter address, Search Internet or search in Bookmarks**

 **Bookmarks**

 **Homepage**

 **Pan & zoom (when Smart-Fit is off)**

To select Internet keypad shortcuts

- 1 From Homescreen select **Menu > Orange World**.

- 2 Select **Options** > **Advanced** > **Keypad mode** > **Shortcuts**.

Internet security and certificates

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.


To view certificates in the phone

- From Homescreen select **Menu** > **Settings** > the **General** tab > **Security** > **Certificates**.

Web feeds

You can subscribe to and download frequently updated content, such as news, podcasts or photos, using Web feeds.






To add new feeds for a Web page


- 1 When you browse a page on the Internet that has Web feeds, indicated by , select **Options** > **Web feeds**.
- 2 For each feed you want to add, scroll to the feed and select **Mark**.
- 3 Select **Options** > **Continue**.

To search for Web feeds


- 1 From Homescreen select **Menu** > **Media** > **Web feeds**.
- 2 Select **New feed** and enter a Web address.

To download content via feeds

- 1 From Homescreen select **Menu** > **Media** > **Web feeds**.
- 2 Scroll to an updated feed and select **View** or .
- 3 Select a heading to expand.
- 4 Select an icon depending on content,  to open a Web page,  to download an audio podcast,  to download a video podcast or  to download a photo.

 You can also subscribe to and download content to a computer via feeds using Sony Ericsson Media Manager. You can then transfer the content to your phone. See *Transferring content to and from a computer* on page 47.

Updating Web feeds

You can manually update your feeds, or schedule updates. When there are updates,  appears on the screen.

To schedule Web feed updates

- 1 From Homescreen select **Menu** > **Media** > **Web feeds**.

- 2 Scroll to a feed and select **Options** > **Schedule update**.
- 3 Select an option.

! *Frequent updates may be costly.*

Web feeds in Homescreen

You can show news updates on the Homescreen.

To show Web feeds in Homescreen

- 1 From Homescreen select **Menu** > **Media** > **Web feeds**.
- 2 Scroll to a feed and select **Options** > **Settings** > **Standby ticker** > **Show in standby**.

To access Web feeds from Homescreen

- 1 From Homescreen select **Ticker**.
- 2 To read more about a feed, press **⬇️** or **⬆️** to scroll to a headline and select **Go to**.

Podcasts

Podcasts are files, for example, radio programmes or video content, that you can download and play. You subscribe to and download podcasts using Web feeds.

To access audio podcasts

- From Homescreen select **Menu** > **Media** > **My music** > **Podcasts**.

To access video podcasts

- From Homescreen select **Menu** > **Media** > **Video** > **Podcasts**.

Photo feeds

You can subscribe to Photo feeds and download photos. To start using Photo feeds, see *Web feeds* on page 22.

To access photo feeds

- From Homescreen select **Menu** > **Media** > **Photo** > **Photo feeds**.

Wi-Fi™

Using Wi-Fi™ you can access the Internet wirelessly with your phone. You can browse the Internet at home (personal networks) or in public access zones (hot spots):



- Personal networks – usually protected. A pass phrase or a key is required from the owner.
- Hot spots – usually non-protected but often requires you to log on to the operator's service before you get Internet access.

Using Wi-Fi

To be able to browse the Internet using Wi-Fi you need to search for and connect to an available network and then open the Internet browser.

To turn on or off Wi-Fi


- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Wi-Fi**.
- 2 Select an option.


 For quick access press  and select **Wi-Fi**.

To connect to a network

- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Wi-Fi**.
- 2 Scroll to a network and select **Connect**.


To start browsing using Wi-Fi

- 1 Make sure  is showing in the status bar.
- 2 From Homescreen select **Menu** > **Orange World**.

 Often used networks can be saved as favourites. These will connect automatically when you are within range if you turn on **Auto connect**.

Unique

With a Unique phone your calls automatically and seamlessly switch

between the mobile network or your home Wi-Fi network depending on your location. Unique is available when  appears in the status bar.

To set up your Unique phone

- From Homescreen select **Unique** and follow the Unique wizard.

To view the Unique wizard


- From Homescreen select **Menu** > **Settings** > the **General** tab > **Setup wizard**.


Calling

Making and receiving calls

You need to turn on your phone and be within range of a network.

To make a call

 

- 1 From Homescreen enter a phone number (with international country code and area code, if applicable).
- 2 Press .

 You can call numbers from your Address Book and Call History. See Address Book on page 27, and Call History on page 26. You can also use your voice to make calls. See Voice control on page 30.

To end a call


- Press .

To make international calls

- 1 From Homescreen press and hold down  until a “+” sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

To re-dial a number

- When **Retry?** appears select **Yes**.

 Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

To answer a call

- Press .



To reject a call

- Press .

To change the ear speaker volume during a call


- Press the volume key up or down.

To mute the microphone during a call

- 1 Press and hold down .
- 2 Press and hold down  again to resume.

To turn on the loudspeaker during a call

- Press **SpkrOn**.

 Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

Networks

Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability. Some network operators allow you to switch networks manually.

To switch networks manually


- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Mobile networks** > **GSM/3G networks**.
- 2 Select an option.

Emergency calls

Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

- ! *In some countries, other emergency numbers may also be promoted. Orange may therefore have saved additional local emergency numbers on the SIM card.*

To make an emergency call

- From Homescreen enter 112 (the international emergency number) and press .


To view your local emergency numbers

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Special numbers** > **Emergency nos..**

Video call

You can share experiences with friends and family as they happen or save them to share later. You see the person you are talking to on your screen. The other person sees you or what is on your camera.



Before making video calls

3G (UMTS) service is available when  appears. To make a video call, both parties on the call must have a 3G (UMTS) phone subscription that supports 3G (UMTS) service and 3G (UMTS) coverage.

To make a video call

- 1 From Homescreen enter a phone number (with international country code and area code, if applicable).
- 2 Select **Options** > **Make video call**.

To use the zoom with an outgoing video call

- Press  or .



To view video call options

- During the call, select **Options**.

Call History


You can view information about recent calls.

To call a number from the Call History

- 1 From Homescreen press  and scroll to a tab.
- 2 Scroll to a name or a number and press .

Address Book

You can save names, phone numbers and personal information in [Address Book](#). Information can be saved in the phone memory or on the SIM card.

 You can synchronise your contacts using the Sony Ericsson PC Suite.

Default contacts

You can choose which contact information is shown as default. If [Phone contacts](#) is selected as default, your contacts show all the information saved in [Address Book](#). If you select [SIM contacts](#) as default, your contacts show names and numbers saved on the SIM card.

To select default contacts

- 1 From Homescreen select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Advanced](#) > [Default contacts](#).
- 3 Select an option.

Phone contacts


Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.

To add a phone contact


 
- 1 From Homescreen select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Add](#).
- 3 Enter the name and select [OK](#).
- 4 Scroll to [New number:](#) and select [Add](#).
- 5 Enter the number and select [OK](#).
- 6 Select a number option.
- 7 Scroll between the tabs and add information to the fields.
- 8 Select [Save](#).

Calling contacts



To call a contact


- 1 From Homescreen select [Menu](#) > [Address Book](#).
- 2 Scroll to a contact and press .

To go directly to the contacts list

- From Homescreen press and hold down  - .

To call with Smart search

- 1 From Homescreen press  -  to enter a sequence of (at least two) digits. All entries which match the sequence

- of digits or corresponding letters are shown in a list.
- 2 Scroll to a contact or a phone number and press .

To turn on or off Smart search

- 1 From Homescreen select **Menu** > **Settings** > the **Calls** tab > **Smart search**.
- 2 Select an option.

Editing contacts

To add information to a phone contact

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to a contact and select **Options** > **Edit contact**.
- 3 Scroll between the tabs and select **Add** or **Edit**.
- 4 Select an option and an item to add or edit.
- 5 Select **Save**.

- If your subscription supports **Calling Line Identification (CLI)** service, you can assign *personal ringtones and pictures to contacts*.

To copy names and numbers to phone contacts

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Copy from SIM**.

- 3 Select an option.

To copy names and numbers to the SIM card

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Copy to SIM**.
- 3 Select an option.

- ! When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.

To automatically save names and phone numbers on the SIM card

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Auto save on SIM**.
- 3 Select an option.

To save contacts on a memory card

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Back up to m. card**.

SIM contacts

SIM contacts can contain names and numbers only. They are saved on the SIM card.

To add a SIM contact

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Enter the number and select **OK**.
- 5 Select a number option and add more information, if available.
- 6 Select **Save**.

Deleting contacts

To delete all contacts

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Delete all contacts**.
- 3 Select an option.

Contact memory status

The number of contacts you can save in your phone or on the SIM card depends on available memory.

To view contact memory status

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Memory status**.

Myself

You can enter information about yourself and, for example, send your business card.

To enter Myself information

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to an option and edit the information.
- 4 Select **Save**.

To add your own business card

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to **My contact info** and select **Add** > **Create new**.
- 4 Scroll between the tabs and add information to the fields.
- 5 Enter the information and select **Save**.

Groups

You can create a group of phone numbers and email addresses from **Phone contacts** to send messages to. See *Messaging* on page 34. You can also use groups (with phone numbers) when you create accepted callers lists. See *Accept calls* on page 33.

To create a group of numbers and email addresses

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Groups**.
- 3 Scroll to **New group** and select **Add**.
- 4 Enter a name for the group and select **Continue**.
- 5 Scroll to **New** and select **Add**.
- 6 For each contact phone number or email address you want to mark, scroll to it and select **Mark**.
- 7 Select **Continue** > **Done**.


Speed dial

Speed dialling lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 1-9.

To add contacts to speed dial numbers

- 1 From Homescreen select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Speed dial**.
- 3 Scroll to a position number and select **Add**.
- 4 Select a contact.

To speed dial

- From Homescreen enter the position number and press .

More calling features



 
Answer phone service

If your subscription includes an answering service, callers can leave a message when you cannot answer a call.

To enter your answer phone number

- 1 From Homescreen select **Menu** > **Messaging** > **Messages** > **Settings** > **Answer Phone no..**
- 2 Enter the number and select **OK**.

To call your answer phone service

- From Homescreen press and hold down .

Voice control

By creating voice commands you can:

- Voice dial – call someone by saying their name
- Answer and reject calls when you use a handsfree

To record a voice command using voice dialling

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Voice control** > **Voice dialling** > **Activate**.
- 2 Select **Yes** > **New voice command** and select a contact. If the contact has more than one number, select the number to add the voice command to.
- 3 Record a voice command such as “John mobile.”
- 4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
- 5 If the recording sounds OK, select **Yes**. If not, select **No** and repeat steps 3 and 4.

! *Voice commands are saved in the phone memory only. They cannot be used in another phone.*

To voice dial

- 1 From Homescreen press and hold down a volume key.
- 2 Wait for the tone and say a recorded name, for example “John mobile.” The phone plays the name back to you and connects the call.



Diverting calls

You can divert calls, for example, to an answering service.



*When **Restrict calls** is used, some divert call options are not available. See **Restricted dialling** on page 33.*

To divert calls

- 1 From Homescreen select **Menu** > **Settings** > the **Calls** tab > **Divert calls**.
- 2 Select a call type and a divert option.
- 3 Select **Activate**.
- 4 Enter the number to divert calls to and select **OK**.



More than one call

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.



Call waiting

You will hear a beep if you receive a second call while call waiting is active.


To activate call waiting

- From Homescreen select **Menu** > **Settings** > the **Calls** tab > **Manage calls** > **Call waiting** > **Activate**.


To make a second call

- 1 During the call, press . This puts the ongoing call on hold.
- 2 Select **Options > Add call**.
- 3 Enter the number to call and press .

To answer a second call

- During the call, press . This puts the ongoing call on hold.

To reject a second call

- During the call, press  and continue with the ongoing call.

To end an ongoing call and answer a second call

- During the call, select **Replace active call**.

Handling two voice calls

You can have calls ongoing and on hold at the same time.

To switch between two calls

- During the call, press .

To join two calls

- During the call, select **Options > Join calls**.

To connect two calls

- During the call, select **Options > Transfer call**. You are disconnected from both calls.

To end an ongoing call and return to the call on hold



- First press  and then .



Conference calls

With a conference call, you can have a joint conversation with up to five people.

To add a new participant

- 1 During the call, press . This puts the joined calls on hold.
- 2 Select **Options > Add call**.
- 3 Enter the number to call and press .
- 4 Select **Options > Join calls** to add the new participant.
- 5 Repeat this task to add more participants.

To release a participant

- 1 Select **Options > Release party**.
- 2 Select the participant to release.

To have a private conversation

- 1 During the call, select **Options > Talk to** and select the participant to talk to.

- 2 To resume the conference call, select [Options](#) > [Join calls](#).

My numbers

You can view, add and edit your own phone numbers.

To check your phone numbers

- 1 From Homescreen select [Menu](#) > [Address Book](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Special numbers](#) > [My numbers](#).
- 3 Select an option.

Accept calls

You can choose to receive calls from certain phone numbers only.

To add numbers to the accepted callers list

- 1 From Homescreen select [Menu](#) > [Settings](#) > the [Calls](#) tab > [Manage calls](#) > [Accept calls](#) > [Only from list](#).
- 2 Scroll to [New](#) and select [Add](#).
- 3 Select a contact or [Groups](#).

 See [Groups on page 29](#).

To accept all calls

- From Homescreen select [Menu](#) > [Settings](#) > the [Calls](#) tab > [Manage calls](#) > [Accept calls](#) > [All callers](#).

Restricted dialling

You can restrict outgoing and incoming calls. A password from your service provider is required.

- ! *If you divert incoming calls, you cannot use some restrict calls options.*

Restrict calls options

Standard options are:

- [All outgoing](#) – all outgoing calls
- [Outgoing intl](#) – all outgoing international calls
- [Outgoing intl roam](#) – all outgoing international calls except to your home country
- [All incoming](#) – all incoming calls
- [Inc. when roaming](#) – all incoming calls when you are abroad

To restrict calls

- 1 From Homescreen select [Menu](#) > [Settings](#) > the [Calls](#) tab > [Manage calls](#) > [Restrict calls](#).
- 2 Select an option.
- 3 Select [Activate](#).
- 4 Enter your password and select [OK](#).

Call time and cost

During a call, the phone shows how long you have been talking. You can also check on the duration of your last

call, your outgoing calls and the total time of all your calls.

To check the call time

- From Homescreen select **Menu** > **Settings** > the **Calls** tab > **Time & cost** > **Call timers**.



Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

To hide your phone number

- 1 From Homescreen select **Menu** > **Settings** > the **Call History** tab > **Show/hide my no..**
- 2 Select **Hide number**.

Messaging

Text and multimedia messages

Messages can contain text, pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.

When sending messages, the phone automatically selects the most suitable method (as a text or multimedia message) for sending the message.

If you cannot use multimedia messages, see *I cannot use Internet-based services* on page 66.

Sending messages

You can send messages from your phone.

To create and send a message

- 1 From Homescreen select **Menu** > **Messaging** > **Write message** > **Message**.
- 2 Enter text. To add items to the message, press **⊕**, scroll **⬇** and select an item.
- 3 Select **Continue** > **Addr. Book look-up**.

- 4 Select a recipient and select **Send**.

💡 *If you send a message to a group, you will be charged for each member. See Groups on page 29.*

To copy and paste text in a message

- 1 When you write the message, select **Options > Copy & paste**.
- 2 Select **Copy all** or **Mark & copy**. Scroll to and mark text in the message.
- 3 Select **Options > Copy & paste > Paste**.

Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

To save an incoming message on a memory card

- From Homescreen select **Menu > Messaging > Messages > Settings > Save to > Memory card**.


To save a message on the SIM card

- 1 From Homescreen select **Menu > Messaging > Messages** and select a folder.
- 2 Scroll to a message and select **Options > Save message**.

To view a message from the inbox

- 1 From Homescreen select **Menu > Messaging > Inbox**.
- 2 Select the **Inbox** tab.
- 3 Scroll to the message and select **View**.



To call a number in a message

- When you view the message, scroll to the phone number and press .

Templates

If you often use the same phrases and pictures in a message, you can save the message as a template.

To add a message template

- 1 From Homescreen select **Menu > Messaging > Messages > Templates > New template > Add**.
- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select **Save**.
- 4 Enter a title and select **OK**.

To save a message as a template

- 1 From Homescreen select **Menu > Messaging > Inbox**.
- 2 Scroll to the message and select **View > Options > Save as template**.

Message options

You can set some options, such as the Message alert and default storage location, to apply to all messages. You can set other options, such as the Delivery priority and Delivery time, for each message you send.

To set options for all messages

- 1 From Homescreen select **Menu** > **Messaging** > **Messages** > **Settings**.
- 2 Scroll to an option and choose **Select**.

To set options for a specific message

- 1 When the message is ready and a recipient is selected, select **Options** > **Advanced**.
- 2 Scroll to an option and select **Edit**.



Voice messages

You can send and receive a sound recording as a voice message.

! *The sender and recipient must have a subscription supporting picture messaging.*

To record and send a voice message

- 1 From Homescreen select **Menu** > **Messaging** > **Write message** > **Voice message**.
- 2 Record the message and select **Stop** > **Send** > **Addr. Book look-up**.

- 3 Select a recipient and select **Send**.



Email

You can use standard email functions and your computer email address in your phone.



You can synchronise your email using Microsoft® Exchange ActiveSync®.

Before using email

You can use the setup wizard to check if settings are available for your email account or you can enter them manually. You can also receive settings at www.sonyericsson.com/support.

To create an email account

- 1 From Homescreen select **Menu** > **Messaging** > **Email** to start the setup wizard.
- 2 Follow the prompts to create the account.



If you enter settings manually, you can contact your email provider for more information. An email provider could be the company that supplied your email address.

To create additional email accounts

- 1 From Homescreen select **Menu** > **Messaging** > **Email** > **Accounts**.
- 2 Scroll to **New account** and select **Add**.

To write and send an email message

- 1 From Homescreen select **Menu** > **Messaging** > **Email** > **Write message**.
- 2 Select **Add** > **Enter email address**. Enter the email address and select **OK**.
- 3 To add more recipients, scroll to **To:** and select **Edit**.
- 4 Scroll to an option and select **Add** > **Enter email address**. Enter the email address and select **OK**. When you are ready, select **Done**.
- 5 Select **Edit** and enter a subject. Select **OK**.
- 6 Select **Edit** and enter the text. Select **OK**.
- 7 Select **Add** and choose a file to attach.
- 8 Select **Continue** > **Send**.

To receive and read an email message

- 1 From Homescreen select **Menu** > **Messaging** > **Email** > **Inbox** > **Options** > **Check new email**.
- 2 Scroll to the message and select **View**.

To reply to an email message

- 1 From Homescreen select **Menu** > **Messaging** > **Email** > **Inbox**.
- 2 Scroll to the message and select **Options** > **Reply**.
- 3 Write the reply and select **OK**.
- 4 Select **Continue** > **Send**.

To view an attachment in an email message

- When you view the message, select **Options** > **Attachments** > **Use** > **View**.

Active email account

If you have several email accounts, you can change which one is active.

To change the active email account


- 1 From Homescreen select **Menu** > **Messaging** > **Email** > **Accounts**.
- 2 Select an account.

Push email

You can receive notification in your phone from your email server that you have new email messages.

To turn on push email notification

- From Homescreen select **Menu** > **Messaging** > **Email** > **Settings** > **Push email**.

 When using push email, the phone stays connected to the email server and normal traffic rates apply. Contact Orange for details.

Orange Messenger

You can connect and log in to the Orange Messenger server to communicate online with chat

messages. If you cannot use Orange Messenger, see *I cannot use Internet-based services* on page 66.

Before using Orange Messenger

If you do not have an existing Orange Messenger account, you need to register one.

To register an Orange Messenger account

- From Homescreen select **Menu** > **Messaging** > **Messenger** > **Reg. new account**.

To enter Orange Messenger server settings

- 1 From Homescreen select **Menu** > **Messaging** > **Messenger** > **Configure**.
- 2 Scroll to a setting and select **Add**.

To log in to the Orange Messenger server

- From Homescreen select **Menu** > **Messaging** > **Messenger** > **Sign In**.

To log out of the Orange Messenger server

- Select **Options** > **Log out**.

To add a chat contact

- 1 From Homescreen select **Menu** > **Messaging** > **Messenger** > the **Contacts** tab.
- 2 Select **Options** > **Add contact**.

To send a chat message

- 1 From Homescreen select **Menu** > **Messaging** > **Messenger** > the **Contacts** tab.
- 2 Scroll to a contact and select **Send IM**.
- 3 Write the message and select **Send**.

My Status

You can show your status, for example, **Online**, **Busy** or **Appear Offline**.

To set your status

- 1 From Homescreen select **Menu** > **Messaging** > **Messenger** > the **My status** tab.
- 2 Scroll to **Availability** and select **Edit**.

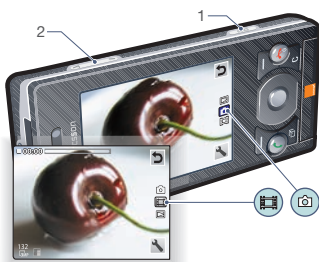 
To update your status

- 1 From Homescreen select **Menu** > **Messaging** > **Messenger** > the **My status** tab.
- 2 Edit the information.
- 3 Select **Options** > **Save**.

Imaging

You can take photos and record video clips to view, save or send. You find saved photos and video clips in [Media](#) and in [Media Album](#).

Using the camera





-
- 1 Take photos/Record video
-
- 2 Zoom in or out
-




To activate the camera

- From Homescreen select [Menu](#) > [Camera](#).

To take a photo

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press  to take a photo. The photo is automatically saved.

To record a video clip


- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press  fully down to start recording.
- 3 To stop recording, press  fully down. The video clip is automatically saved.

To use zoom


- Press the volume key up or down.

- ! When taking a photo, zoom is available only in VGA mode.


To adjust brightness

- Press the navigation key. The amount of brightness is shown beside the .

To view photos

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Scroll through the photos.

To view video clips


- 1 Activate the camera and press the navigation key to scroll to .

- 2 Scroll to a video clip and press the centre selection key.

More camera features

You can improve an underexposed photo with Photo fix.

To improve a photo with Photo fix

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Make sure **Review** is set to **On**. Select **Options > Review > On**.
- 3 Take a photo.
- 4 During review, select **Options > Photo fix**.

Camera icons and settings

Icons on the screen inform what the current setting is. More camera settings are available in **Options**.

To change settings

 
- Activate the camera and select .

To view information about settings

- Scroll to a setting and select .

Camera shortcuts

Key	Shortcut
Volume key	Zoom

Navigation key	Brightness
	Camera key guide


Viewing and tagging photos

You can view and tag your photos in **Media**.

To view photos in a slide show

- 1 From **Homescreen** select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options > Slide show**.
- 5 Select a mood.

Geo tagging

When  appears on the screen, your geographical position is saved with the photos you take. This is called geo tagging, and it shows the approximate location of where a photo was taken.

To change the geo tagging setting


- 1 From **Homescreen** select **Menu > Camera >  > Settings > Add position**.
- 2 Select an option.

Photo tags

You can tag photos to categorise them in **Photo tags**. For example, you can

create a tag called vacation and add it to all your vacation photos.

To create a new photo tag

- 1 From Homescreen select **Menu** > **Media** > **Photo** > **Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Press **⌘** and select **Options** > **New tag**.
- 5 Enter a name and select **OK**.
- 6 Select an icon.
- 7 To tag the photo, select **Options** > **Tag this photo**.

To tag photos

- 1 From Homescreen select **Menu** > **Media** > **Photo** > **Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Press **⌘** and scroll to a tag.
- 5 Select **Options** > **Tag this photo**.
- 6 For each photo you want to tag, scroll to the photo and select **Options** > **Tag this photo**.

Using photos

You can add a photo to a contact, use it as a wallpaper or as a screen saver.

To use photos

- 1 From Homescreen select **Menu** > **Media** > **Photo** > **Camera album**.
- 2 Select a month.

- 3 Scroll to a photo and select **View**.
- 4 Select **Options** > **Use as**.
- 5 Select an option.

To set a Java™ application as a wallpaper

- 1 From Homescreen select **Menu** > **Settings** > the **Display** tab.
- 2 Select **Wallpaper** > **Application**.
- 3 Select a Java application.

! You can only see the Java applications that have support for wallpaper.

Working with photos

You can view, enhance and organise your photos and video clips on your computer by installing the **Adobe™ Photoshop™ Album Starter Edition**. It is included on the CD that comes with your phone and available for download at www.sonyericsson.com/support.

Use **Sony Ericsson Media Manager** to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 47.

PhotoDJ™ and VideoDJ™

You can edit photos and video clips.

Printing photos

You can print photos using the USB cable connected to a compatible printer.

- 💡 You can also print using a Bluetooth compatible printer that supports the Object Push Profile.

To print photos using the USB cable

- 1 Connect the USB cable to the phone.
- 2 Connect the USB cable to the printer.
- 3 Wait for feedback in the phone and select **OK**.
- 4 Enter printer settings (if required) and select **Print**.
- 5 From Homescreen select **Menu** > **Media** > **Photo** > **Camera album**.
- 6 Select a month.
- 7 Scroll to a photo and select **Options** > **Print**.

- 💡 You should disconnect and re-connect the USB cable if there is a printer error.

Music

You can listen to music, audio books and podcasts. Use *Sony Ericsson Media Manager* to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 47.

Stereo portable handsfree



To use the handsfree

- Connect the portable handsfree. Music stops when you receive a call and resumes when the call has ended.

Music player

To play music

- 1 From Homescreen select **Menu** > **Media** > **My music**.
- 2 Browse by category using the navigation key.
- 3 Scroll to a title and select **Play**.



To stop playing music

- Press .

To fast forward and rewind

- Press and hold down  or .

To move between tracks

- Press  or .

To change the volume

- Press the volume key up or down.

To minimise the player


- Select **Options** > **Minimise**.

To return to the player

- From Homescreen select **Menu** > **Media**.

To start playing music in minimised mode

- Press .

- !  turns on the last used music application, the music player or the radio.

Playlists

You can create playlists to organise your music. You can add tracks to more than one playlist.

Deleting a playlist, or a track from a playlist, does not delete the track from the memory, just the reference to the track in that list.

- ! It may take a few minutes for the phone to create a playlist.

To create a playlist

- 1 From Homescreen select **Menu** > **Media** > **My music** > **Playlists**.
- 2 Scroll to **New playlist** and select **Add**.
- 3 Enter a name and select **OK**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the marked tracks to the playlist.

To add tracks to a playlist

- 1 From Homescreen select **Menu** > **Media** > **My music** > **Playlists**.
- 2 Select a playlist.
- 3 Scroll to **Add music** and select **Add**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the marked tracks to the playlist.

Audio books

You can listen to audio books you have transferred to your phone from a computer using *Sony Ericsson Media Manager*.

- 💡 *It may take a few minutes before a transferred audio book appears in the list of available audio books.*

To access audio books

- From Homescreen select [Menu](#) > [Media](#) > [My music](#) > [Audio books](#).
- 💡 *You can find audio books in formats other than M4B and those that do not have ID3v2 chapter tags in the [Tracks](#) folder.*

TrackID™

TrackID™ is a music recognition service. You can search for title, artist and album name for a track you hear playing through a loudspeaker or on the radio. If you cannot use TrackID™, see *I cannot use Internet-based services* on page 66.

To search for track information

- When you hear a track through a loudspeaker, from Homescreen select [Menu](#) > [Entertainment](#) > [TrackID™](#) > [Start](#).

- When the radio is playing select [Options](#) > [TrackID™](#).

- 💡 *For best results, use TrackID™ in a quiet area.*

Online music and video clips

You can view video clips and listen to music by streaming them to your phone from the Internet. If you cannot use the Internet, see *I cannot use Internet-based services* on page 66.

To select a data account for streaming

- 1 From Homescreen select [Menu](#) > [Settings](#) > the [Connectivity](#) tab > [Streaming settings](#) > [Connect using](#).
- 2 Select the data account to use.
- 3 Select [Save](#).

To stream music and video clips

- 1 From Homescreen select [Menu](#) > [Orange World](#).
- 2 Select [Options](#) > [Go to](#) > [Bookmarks](#).
- 3 Select a link to stream from.

Video player

To play videos

- 1 From Homescreen select [Menu](#) > [Media](#) > [Video](#) > [Videos](#).
- 2 Scroll to a title and select [Play](#).

To stop playing videos

- Press the centre selection key.

Radio

- ! Do not use your phone as a radio in places where this is prohibited.

To turn on the radio

- 1 Connect a handsfree to the phone.
- 2 From Homescreen select **Menu** > **Entertainment** > **Radio**.

To search for channels automatically

- Select **Search**.

To search for channels manually

- Press  or .

To change the volume

- Press the volume key up or down.

To minimise the radio


- Select **Options** > **Minimise**.

To return to the radio


- From Homescreen select **Menu** > **Entertainment** > **Radio**.

To turn on the radio in minimised mode

- Press .

- ! A handsfree must be attached to the phone for the radio to start.  turns on the last used music application, the radio or the music player.

To turn off the radio

- Press .

Saving channels

You can save up to 20 preset channels.

To save channels

- 1 When you have found a radio channel, select **Options** > **Save**.
- 2 Scroll to a position and select **Insert**.

To select saved channels

- 1 Select **Options** > **Channels**.
- 2 Select a radio channel.

To switch between saved channels





- Press  or .

MusicDJ™

You can compose and edit your own melodies to use as ringtones. Pre-arranged sounds with different characteristics are available.

To compose a melody

- 1 From Homescreen select **Menu** > **Entertainment** > **MusicDJ™**.
- 2 Select to **Insert**, **Copy** or **Paste** sounds.

- 3 Use , ,  or  to scroll between the sounds.
- 4 Select **Options** > **Save melody**.

Record sound

You can record a voice memo or a call. Recorded sounds can also be set as ringtones.

- ! *In some countries or states it is required by law that you inform the other person before recording the call.*

To record a sound

- From Homescreen select **Menu** > **Entertainment** > **Record sound** > **Record**.

To record a call


- 1 During an ongoing call, select **Options** > **Record**.
- 2 Select **Save** to save the recording.

To listen to a recording

- 1 From Homescreen select **Menu** > **Organiser** > **Media Album**.
- 2 Scroll to **My music** and select **Open**.
- 3 Scroll to a recording and select **Play**.

Transferring and handling content

You can transfer and handle content such as pictures and music.

- ! *You are not allowed to exchange some copyright-protected material.  identifies a protected item.*

Handling content in the phone

You can use **Media Album** to handle content saved in the phone memory or on a memory card. Tabs and icons in **Media Album** show where the content is saved. If the memory is full, delete some content to create space.

To view memory status

- 1 From Homescreen select **Menu** > **Organiser** > **Media Album**.
- 2 Select **Options** > **Memory status**.
- 3 Select **Memory card** or **Phone**.

To select more than one item in a folder

- 1 From Homescreen select **Menu** > **Organiser** > **Media Album**.
- 2 Scroll to a folder and select **Open**.
- 3 Select **Options** > **Mark** > **Mark several**.
- 4 For each item you want to mark, scroll to the item and select **Mark**.

To move items between the phone memory and the memory card

- 1 From Homescreen select **Menu** > **Organiser** > **Media Album**.
- 2 Find an item and select **Options** > **Manage file** > **Move**.
- 3 Select **Memory card** or **Phone**.
- 4 Scroll to a folder and select **Open**.
- 5 Select **Paste**.

To view information about content

- 1 From Homescreen select **Menu** > **Organiser** > **Media Album**.
- 2 Find an item and select **Options** > **Information**.

Sending content to another phone

You can send content, for example, in messages or using Bluetooth™ wireless technology.

To send content

- 1 Scroll to an item and select **Options** > **Send**.
- 2 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

Transferring content to and from a computer

You can use *Sony Ericsson Media Manager* to transfer content between your phone and a computer.

- 💡 *Sony Ericsson Media Manager software is included on the CD that comes with your phone and available for download at www.sonyericsson.com/support.*

When you move or copy content from a computer to your phone unrecognised content is saved in the **Other** folder in **Media Album**.

Required operating systems

You need one of these operating systems to use the software included on the CD:

- Microsoft® Windows Vista™ (32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic)
- Microsoft® Windows XP (Pro or Home), Service Pack 2 or higher

To install Sony Ericsson Media Manager

- 1 Turn on your computer and insert the CD. The CD starts automatically and the installation window opens.
- 2 Select a language and click **OK**.

- 3 Click *Install Sony Ericsson Media Manager* and follow the instructions.

To transfer content using Sony Ericsson Media Manager

- 1 Connect the phone to a computer with a USB cable supported by your phone.
- 2 **Computer:** *Start/Programs/Sony Ericsson/Sony Ericsson Media Manager*.
- 3 **Phone:** Select **Media transfer**.
- 4 **Computer:** Select *Portable device* and click **OK**.
- 5 Wait until the phone appears in *Sony Ericsson Media Manager*.
- 6 Move files between your phone and the computer in *Sony Ericsson Media Manager*.

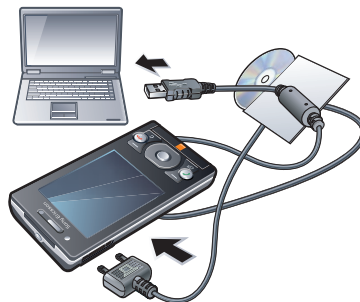 
! *Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.*

! *For details on transferring music, click (?) in the top right corner of the Sony Ericsson Media Manager window.*

Using the USB cable

You can connect your phone to a computer with the USB cable to synchronise, transfer and back up phone content and use your phone as a modem. For more information, go to

www.sonyericsson.com/support to read Feature guides.



Before using the USB cable

See *Required operating systems* on page 47.

! *Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.*

To disconnect the USB cable safely

- 1 **Computer:** Close any software that you are using with your phone.
- 2 Disconnect the USB cable.

Drag and drop content

You can drag and drop content between your phone, a memory card and a computer in *Microsoft Windows Explorer*.

To drag and drop content

- 1 Connect your phone to a computer using the USB cable.
- 2 **Phone:** Select [Media transfer](#). The phone will remain activated during file transfer.
- 3 **Computer:** Wait until the phone memory and memory card appear as external disks in *Windows Explorer*.
- 4 Drag and drop selected files between the phone and the computer.

Phone name

You can enter a name for your phone that is shown to other devices when using, for example, Bluetooth™ wireless technology.

To enter a phone name

- 1 From Homescreen select [Menu](#) > [Settings](#) > the [Connectivity](#) tab > [Phone name](#).
- 2 Enter the phone name and select [OK](#).

Using Bluetooth™ wireless technology

The Bluetooth™ function is free of charge and makes wireless connection to other Bluetooth devices possible. You can, for example:

- Connect to handsfree devices.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Exchange items.
- Play multiplayer games.

! *A range within 10 metres (33 feet), with no solid objects in between, is recommended for Bluetooth communication.*

Before using Bluetooth wireless technology

You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices.

To turn on the Bluetooth function

- From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Turn on**.

! *Make sure that the device you want to pair your phone with has the Bluetooth function activated and Bluetooth visibility turned on.*

To pair the phone with a device

- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **My devices**.
- 2 Scroll to **New device** and select **Add** to search for available devices.
- 3 Select a device.
- 4 Enter a passcode, if required.

To allow connection to the phone

- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **My devices**.
- 2 Select a device from the list.
- 3 Select **Options** > **Allow connection**.
- 4 Select **Always ask** or **Always allow**.

! *This is only possible with devices that require access to a secure service.*

To pair the phone with a Bluetooth handsfree for the first time

- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Handsfree**.
- 2 Select a device.
- 3 Enter a passcode, if required.

Power saving

You can save battery power with the Power save function. In Power save mode you can only connect with a single Bluetooth device. If you want to connect with more than one Bluetooth device at the same time you must turn this function off.

To turn on power save

- From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Power save** > **On**.

Transferring sound to and from a Bluetooth handsfree

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

To transfer sound

- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Handsfree** > **Incoming call**.

- 2 Select an option. In **phone** transfers sound to the phone. In **handsfree** transfers sound to the handsfree.


To transfer sound during a call

- 1 During a call, select **Sound**.
- 2 Select from the list.

Backing up and restoring

You can backup and restore contacts, the calendar, tasks, notes and bookmarks using the *Sony Ericsson PC Suite*. You can backup and restore content such as music, pictures and video clips using the *Sony Ericsson Media Manager*.

Before backing up and restoring, you need to install the *Sony Ericsson PC Suite* and the *Sony Ericsson Media Manager*.


 *Back up your phone content regularly to make sure you do not lose it.*

To make a backup using the Sony Ericsson PC Suite

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.

- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and make a backup.

To restore phone content using the Sony Ericsson PC Suite

 *The Sony Ericsson PC Suite will overwrite all the phone content during the restore process. You may damage your phone if you interrupt the process.*

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and restore your phone.

To make a backup using the Sony Ericsson Media Manager

- 1 Connect your phone to the computer using a USB cable.
- 2 **Phone:** Select **Media transfer mode**.

- 3 **Computer:** Start *Sony Ericsson Media Manager* from *Start/Programs/Sony Ericsson/Sony Ericsson Media Manager*.
- 4 Go to the backup section in the *Sony Ericsson Media Manager*.
- 5 Select the files you want to back up and make a backup.

! You can also connect your phone to a computer using Bluetooth.

To restore phone content using the Sony Ericsson Media Manager

! The *Sony Ericsson Media Manager* will compare your phone content with your computer backup and then restore files missing in your phone. You may damage your phone if you interrupt the process.

- 1 Connect your phone to the computer.
- 2 **Phone:** Select **Media transfer** mode.
- 3 **Computer:** Start *Sony Ericsson Media Manager* from *Start/Programs/Sony Ericsson/Sony Ericsson Media Manager*.
- 4 Go to the backup section in the *Sony Ericsson Media Manager*.
- 5 Select the files you want to restore and restore them.

! For more information on backing up and restoring in *Sony Ericsson Media Manager* see the *Sony Ericsson Media*

Manager Feature guide at www.sonyericsson.com/support.

GPS

Your phone has a GPS receiver that uses satellite signals to calculate your location.

- ! *If you cannot use some GPS features, see I cannot use Internet-based services on page 66.*

Using GPS

Your location can be found when you have a clear view of the sky. If your location is not found after a few minutes, move to another location. To help the search, stand still and do not cover the GPS antenna.



Assisted start

With **Assisted start** your location is calculated more quickly. If not turned off, **Assisted start** will automatically be used to find your location when

Assisted GPS (A-GPS) technology is available.

To set when to use Assisted start

- 1 From Homescreen select **Menu** > **Location services** > **Settings** > **Assisted start**.
- 2 Select an option.



Driving directions

Orange Local offers you a map of the area for your current location. You can find everything from the nearest cash point to a place to eat with just a couple of clicks.

- ! *Sony Ericsson does not warrant the accuracy of any directional services including but not limited to turn-by-turn navigational services.*

To start Orange Local

- From Homescreen select **Menu** > **Location services** > **Orange Local**.

More GPS features

Save locations

You can find all saved locations in **My favourites**.

To save your current location

- 1 From Homescreen select **Menu** > **Location services** > **My favourites** > **Add new place**.
- 2 Select **Edit** and enter the title. Select **OK**.
- 3 Scroll to **Description**; and select **Add**. Enter the description and select **OK**.
- 4 Scroll to **Position**; and select **Add** > **Current position**.
- 5 Select **Save**.

To view a saved location on a map

- 1 From Homescreen select **Menu** > **Location services** > **My favourites**.
- 2 Scroll to a location and select **Go to**.

Location requests

External services may ask for your location.

To change access for external services

- 1 From Homescreen select **Menu** > **Location services** > **Settings** > **Privacy**.
- 2 Select an option.

Turn off GPS

The GPS receiver turns off automatically when it is not in use. You can also turn the GPS receiver off manually. This saves battery power when you use features that do not


require the GPS receiver to find your location.

To turn on or off GPS manually

- 1 From Homescreen select **Menu** > **Location services** > **Settings**.
- 2 Select **Enable GPS** or **Disable GPS**.

Synchronising

You can synchronise in two different ways. You can synchronise your phone using a computer program or you can synchronise using an Internet service.


 Use only one of the synchronisation methods at a time with your phone.

For more information, go to www.sonyericsson.com/support to read the *Synchronisation Feature* guide.

Synchronising using a computer

You can use the USB cable or Bluetooth wireless technology to synchronise phone contacts, appointments, bookmarks, tasks and notes with a computer program such as Microsoft Outlook®.

Before synchronising, you need to install the *Sony Ericsson PC Suite*.

 *Sony Ericsson PC Suite* software is included on the CD with your phone and available for download at www.sonyericsson.com/support.


See *Required operating systems* on page 47.

To install the Sony Ericsson PC Suite

- 1 Turn on your computer and insert the CD. The CD starts automatically and the installation window opens.
- 2 Select a language and click *OK*.
- 3 Click *Install Sony Ericsson PC suite* and follow the instructions on the screen.

To synchronise using the Sony Ericsson PC Suite

- 1 **Computer:** Start *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select *Phone mode*.
- 4 **Computer:** When you are notified that the *Sony Ericsson PC Suite* has found your phone, you can start synchronising.

 For usage details, see the *Sony Ericsson PC Suite Help* section once the software has been installed on your computer.

Synchronising using an Internet service

You can synchronise with an Internet service using SyncML™ or a Microsoft® Exchange Server using Microsoft Exchange ActiveSync. For

more information, go to www.sonyericsson.com/support to read the *Synchronisation* Feature guide.

More features

Flight mode

In *Flight mode* the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- *Normal mode* – full functionality
- *Flight mode* – limited functionality

To activate the flight mode menu

- From Homescreen select *Menu* > *Settings* > the *General* tab > *Flight mode* > *Continue* > *Show at startup*.

To select flight mode

- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select *Flight mode*.



Update Service


You can update your phone with the latest software using your phone or a PC.

To view the current software in the phone

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Update service**.
- 2 Select **Software version**.

Update Service using the phone

You can update your phone over the air using your phone. You do not lose personal or phone information.

-  *Update Service using your phone requires data access such as GPRS, 3G or HSDPA.*

To select settings for Update Service


- From Homescreen select **Menu** > **Settings** > the **General** tab > **Update service** > **Settings** > **Internet settings**.

To use Update Service using the phone

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Update service**.
- 2 Select **Search for update** and follow the instructions that appear.

Update Service using a PC

You can update your phone using the provided USB cable and an Internet connected PC.

-  *Make sure all personal data on your phone's memory is backed up before you perform an update using a PC.*

To use Update Service using a PC

- Go to www.sonyericsson.com/updateservice.

Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.


To set the alarm

- 1 From Homescreen select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Time:** and select **Edit**.
- 4 Enter a time and select **OK** > **Save**.

To set the recurrent alarm

- 1 From Homescreen select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Recurrent:** and select **Edit**.
- 4 Scroll to a day and select **Mark**.
- 5 To select another day, scroll to the day and select **Mark**.
- 6 Select **Done** > **Save**.

To set the alarm signal

- 1 From Homescreen select [Menu](#) > [Organiser](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to the  tab.
- 4 Scroll to [Alarm signal:](#) and select [Edit](#).
- 5 Find and select an alarm signal. Select [Save](#).

To silence the alarm

- When the alarm sounds, press any key.
- To repeat the alarm, select [Snooze](#).

To turn off the alarm

- When the alarm sounds, press any key, then select [Turn off](#).


To cancel the alarm

- 1 From Homescreen select [Menu](#) > [Organiser](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Turn off](#).

The alarm in silent mode

You can set the alarm not to sound when the phone is in silent mode.

To set an alarm to sound or not in silent mode


- 1 From Homescreen select [Menu](#) > [Organiser](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to the  tab.
- 4 Scroll to [Silent mode:](#) and select [Edit](#).

- 5 Select an option.

To set the snooze duration

- 1 From Homescreen select [Menu](#) > [Organiser](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to [Snooze duration:](#) and select [Edit](#).
- 4 Select an option.

Calendar

 You can synchronise your calendar with a computer calendar, with a calendar on the Web or with a Microsoft® Exchange Server (Microsoft® Outlook®).

Appointments

You can add new appointments or reuse existing appointments.

To add an appointment

- 1 From Homescreen select [Menu](#) > [Organiser](#) > [Calendar](#).
- 2 Select a date.
- 3 Scroll to [New appointment](#) and select [Add](#).
- 4 Enter the information and confirm each entry.
- 5 Select [Save](#).

To view an appointment

- 1 From Homescreen select **Menu** > **Organiser** > **Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.

To edit an appointment

- 1 From Homescreen select **Menu** > **Organiser** > **Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.
- 4 Select **Options** > **Edit**.
- 5 Edit the appointment and confirm each entry.
- 6 Select **Save**.

To set when reminders should sound

- 1 From Homescreen select **Menu** > **Organiser** > **Calendar**.
- 2 Select a date.
- 3 Select **Options** > **Advanced** > **Reminders**.
- 4 Select an option.

- ! *A reminders option set in calendar affects a reminders option set in tasks.*

Notes

You can make notes and save them. You can also show a note in Homescreen.

To add a note

- 1 From Homescreen select **Menu** > **Organiser** > **Notes**.
- 2 Scroll to **New note** and select **Add**.
- 3 Write a note and select **Save**.

To show a note in Homescreen

- 1 From Homescreen select **Menu** > **Organiser** > **Notes**.
- 2 Scroll to a note and select **Options** > **Show in standby**.

- ! *This is only available if Homescreen is set to Sony Ericsson.*

To hide a note from Homescreen

- 1 From Homescreen select **Menu** > **Organiser** > **Notes**.
- 2 Scroll to the note shown in Homescreen. This is marked with an icon. Select **Options** > **Hide in standby**.

- ! *This is only available if Homescreen is set to Sony Ericsson.*

Tasks

You can add new tasks or reuse existing tasks.

To add a task

- 1 From Homescreen select **Menu** > **Organiser** > **Tasks**.
- 2 Select **New task** and select **Add**.

- 3 Select an option.
- 4 Enter details and confirm each entry.

To set when reminders should sound

- 1 From Homescreen select **Menu** > **Organiser** > **Tasks**.
- 2 Scroll to a task and select **Options** > **Reminders**.
- 3 Select an option.

- ! *A reminders option set in tasks affects a reminders option set in calendar.*

Profiles

You can change settings such as the ring volume and vibrating alert to suit different locations. You can reset all profiles to the phone's original settings.

To select a profile

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Select a profile.

To view and edit a profile

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Scroll to a profile and select **Options** > **View and edit**.

- ! *You cannot rename the **Normal** profile.*

Time and date

To set the time

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Time & date** > **Time**.
- 2 Enter the time and select **Save**.

To set the date

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Time & date** > **Date**.
- 2 Enter the date and select **Save**.

To set the time zone

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Time & date** > **My time zone**.
- 2 Select the time zone you are in.

- ! *If you select a city, **My time zone** also updates the time when daylight saving time changes.*

Theme

You can change the appearance of the screen through items such as colours and wallpaper. You can also create new themes and download them. For more information, go to www.sonyericsson.com/fun.

To set a theme

- 1 From Homescreen select **Menu** > **Settings** > the **Display** tab > **Theme**.
- 2 Scroll to a theme and select **Set**.

Main menu layout

You can change the layout of the icons in the main menu.

To change the main menu layout

- 1 From Homescreen select **Menu** > **Options** > **Main menu layout**.
- 2 Select an option.

Ringtones

To set a ringtone

- 1 From Homescreen select **Menu** > **Settings** > the **Sounds & alerts** tab > **Ringtone**.
- 2 Find and select a ringtone.

To set the ringtone volume

- 1 From Homescreen select **Menu** > **Settings** > the **Sounds & alerts** tab > **Ring volume**.
- 2 Press **⏮** or **⏭** to change the volume.
- 3 Select **Save**.

To turn off the ringtone

- From Homescreen press and hold down **(#-*)**.

! *The alarm signal is not affected.*

To set the vibrating alert

- 1 From Homescreen select **Menu** > **Settings** > the **Sounds & alerts** tab > **Vibrating alert**.
- 2 Select an option.

Screen orientation

You can change between landscape and portrait orientation, or select **Auto rotate** to have the orientation change when you rotate the phone.

To change screen orientation in the browser

- 1 From Homescreen select **Menu** > **Orange World**.
- 2 Select **Options** > **Advanced** > **Orientation**.
- 3 Select an option.

To change screen orientation in Media

- 1 From Homescreen select **Menu** > **Media** > **Settings** > **Orientation**.
- 2 Select an option.

Games

Your phone contains preloaded games. You can also download games.

Help texts are available for most games.

To start a game

- 1 From Homescreen select **Menu** > **Media** > **Games**.
- 2 Select a game.

To end a game

- Press .

Applications

You can download and run Java applications. You can also view information or set different permissions. If you cannot use Java applications, see *I cannot use Internet-based services* on page 66.

To select a Java application

- 1 From Homescreen select **Menu** > **Organiser** > **My applications**.
- 2 Select an application.

To set permissions for a Java application

- 1 From Homescreen select **Menu** > **Organiser** > **My applications**.
- 2 Scroll to an application and select **Options** > **Permissions**.
- 3 Set permissions.

Java application screen size

Some Java applications are designed for a specific screen size. For more information, contact the application vendor.

To set the screen size for a Java application

- 1 From Homescreen select **Menu** > **Organiser** > **My applications**.
- 2 Scroll to an application and select **Options** > **Screen size**.
- 3 Select an option.



Orange applications

- ! *The Orange applications are not available in all countries. Contact Orange for information about your subscription.*

Orange Mail

Orange Mail is the email service from Orange that gives you the ability to send and receive email messages from your mobile phone over SMS, WAP/ GPRS or Web. You will be notified by a text message as soon as an email reaches your Inbox.

TV Player

You can watch your favourite shows. You can also keep yourself updated

with breaking news and sports all the time.

Traffic TV

Traffic TV gives you a comprehensive picture of traffic conditions on motorways and trunk roads and direct access to video of road conditions from selected motorway CCTV cameras across the country.

Music Store

You can listen to music before you purchase and download it to your phone.

Downloads

You can preview photos and listen to ringtones before you purchase and download them to your phone.

Orange Photo

Within moments of taking a photo, you can upload it to your online album, where you can save it safely and share it with friends and family. It is also possible to order prints to be sent to your home.

Orange Games

Orange Games is an easy-to-access catalogue where you can view the extensive selection of games available

for download. You can find information about the games, their star ranking by previous players and download a free demo to try before you purchase the game. You can also play multiplayer games in real time or enter a competition and put your scores to the test.

Locks

SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by Orange.

To unblock the SIM card

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

To edit the PIN

- 1 From Homescreen select **Menu** > **Settings** > the **General tab** > **Security** > **Locks** > **SIM protection** > **Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.
- 4 Re-enter the new PIN and select **OK**.

❗ *If **Codes do not match** appears, you entered the new PIN incorrectly. If **Wrong PIN** appears, followed by **Old PIN**;, you entered your old PIN incorrectly.*

To use the SIM card lock

- 1 From Homescreen select **Menu** > **Settings** > the **General tab** > **Security** > **Locks** > **SIM protection** > **Protection**.
- 2 Select an option.
- 3 Enter your PIN and select **OK**.

Phone lock

You can stop unauthorised use of your phone. Change the phone lock code (0000) to any four-to-eight-digit personal code.

❗ *It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.*

To use the phone lock

- 1 From Homescreen select **Menu** > **Settings** > the **General tab** > **Security** > **Locks** > **Phone protection** > **Protection**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

To unlock the phone

- Enter your code and select **OK**.

To change the phone lock code

- 1 From Homescreen select **Menu** > **Settings** > the **General tab** > **Security** > **Locks** > **Phone protection** > **Change code**.
- 2 Enter the old code and select **OK**.
- 3 Enter the new code and select **OK**.
- 4 Repeat the code and select **OK**.

Keypad lock

You can set this lock to avoid accidental dialling. Incoming calls can be answered without unlocking the keypad.

❗ *Calls to the international emergency number 112 can still be made.*

To use the automatic keylock

- 1 From Homescreen select **Menu** > **Settings** > the **General tab** > **Security** > **Automatic keylock**.

- 2 Select an option.

To unlock the keypad manually

- From Homescreen press any key and select **Unlock** > **OK**.

IMEI number

Keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone is stolen.

To view your IMEI number

- From Homescreen press **(*) 0673**, **(#) 0673**, **(0) +**, **(6)**, **(#) 0673**.

Troubleshooting

Some problems will require you to call Orange.

For more support go to www.sonyericsson.com/support.

Common questions

I have problems with memory capacity or the phone is working slowly

Restart your phone every day to free memory or do a **Master reset**.

Master reset

If you select **Reset settings**, the changes that you have made to settings will be deleted.

If you select **Reset all**, your settings and content, such as contacts, messages, pictures, sounds and downloaded games, will be deleted. You may also lose content that was in the phone at purchase.

To reset the phone

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Master reset**.
- 2 Select an option.
- 3 Follow the instructions that appear.

I cannot charge the phone or battery capacity is low

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 9.

No battery icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

Some menu options appear in grey

A service is not activated. Contact Orange.


I cannot use Internet-based services

Your subscription does not include data capability. Settings are missing or incorrect.

You can download settings using the setup wizard or by going to www.sonyericsson.com/support.

To download settings using the Setup wizard

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Setup wizard** > **Settings download**.
- 2 Follow the instructions that appear.

 **Contact Orange or your service provider for more information.**

I cannot send messages from my phone

Most messages require a service centre number to send them. The number is supplied by Orange and is usually saved on the SIM card. If the number to your service centre is not saved on your SIM card, you must enter the number yourself.

To send most multimedia messages, you must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from Orange or at www.sonyericsson.com/support.

To enter a service centre number

- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Message settings** > **Text message** and

scroll to **Service centre**. The number is shown if it is saved on the SIM card.

- 2 If there is no number shown, select **Edit**.
- 3 Scroll to **New ServiceCentre** and select **Add**.
- 4 Enter the number, including the international “+” sign and country code.
- 5 Select **Save**.

To select an MMS profile

- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Message settings** > **Multimedia msg.**
- 2 Select an existing profile or create a new one.

To set the message server address

- 1 From Homescreen select **Menu** > **Settings** > the **Connectivity** tab > **Message settings** > **Multimedia msg.**
- 2 Scroll to a profile and select **Options** > **Edit**.
- 3 Scroll to **Message server** and select **Edit**.
- 4 Enter the address and select **OK** > **Save**.

The phone does not ring or rings too softly

Make sure that **Silent mode** has not been set to **On**. See *To turn off the ringtone* on page 61.

Check the ringtone volume. See *To set the ringtone volume* on page 61.

Check the profile. See *To select a profile* on page 60.

Check the divert call options. See *To divert calls* on page 31.

The phone cannot be detected by other devices using Bluetooth wireless technology

You have not turned the Bluetooth function on. Make sure that the visibility is set to show phone. See *To turn on the Bluetooth function* on page 50.

I cannot synchronise or transfer content between my phone and my computer, when using the USB cable.

The cable or software that came with your phone has not been properly installed. Go to www.sonyericsson.com/support to read Feature guides which contain detailed installation instructions and troubleshooting guides.

I have forgotten my code memo passcode

If you forget your passcode, you must reset the code memo. This means that all entries in the code memo are deleted. The next time you enter the code memo, you must proceed as if you are opening it for the first time.

To reset code memo

- 1 From Homescreen select **Menu** > **Organiser** > **Code memo**.
- 2 Enter an incorrect passcode 3 times.
- 3 **Reset Code memo and delete all items?** appears.
- 4 Select **Yes**.

Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?



Error messages

Insert SIM

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 6.

The SIM card connectors need cleaning. If the card is damaged, contact Orange.

Insert correct SIM card

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select **Yes**.

PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 63.

Codes do not match

Codes that you have entered do not match. When you want to change a

security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 63.

No netw. coverage

Your phone is in flight mode. See *Flight mode* on page 56.

Your phone is not receiving any network signal, or the received signal is too weak. Contact Orange and make sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

Emerg. calls only

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 26.

PUK blocked. Contact operator.

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

Important information

Sony Ericsson Consumer Web site

At www.sonyericsson.com/support there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support.
- A global network of call centres.
- An extensive network of Sony Ericsson service partners.
- A warranty period. Learn more about the warranty conditions in the Important information.

At www.sonyericsson.com/support, you can find the latest support tools and information. For operator-specific services and features, please contact Orange.

You can also contact our call centres. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes, unless the phone number is a toll-free number.)

If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

Anguilla	1-800-080-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Antigua and Barbuda	1-800-081-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Argentina	0800-333-7427 (número gratuito)	questions.CO@support.sonyericsson.com
Australia	1300 650-050 (Toll Free)	questions.AU@support.sonyericsson.com
The Bahamas	1-800-205-6062 (Toll Free)	questions.CO@support.sonyericsson.com
Barbados	1-800-082-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Belgique/België	02-0745 1611	questions.BE@support.sonyericsson.com
Belize	AN 815, PIN 5597 (Toll Free)	questions.CO@support.sonyericsson.com
Bermuda	1-800-083-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Bolivia	800-100-542 (número gratuito)	questions.CO@support.sonyericsson.com
Brasil	4001-0444 (ligação gratuita)	questions.BR@support.sonyericsson.com
Canada	1 866 766 9374 (Toll free)	questions.CA@support.sonyericsson.com
Cayman Islands	1-800-084-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Central and Southern Africa	+27 11 506 0123	questions.CF@support.sonyericsson.com
Česká republika	0844 550 055	questions.CZ@support.sonyericsson.com
Chile	1230-020-0656 (número gratuito)	questions.CO@support.sonyericsson.com
Colombia	01800-0966-080 (número gratuito)	questions.CO@support.sonyericsson.com
Costa Rica	0 800 011 0400 (número gratuito)	questions.CO@support.sonyericsson.com
Danmark	3331 2828	questions.DK@support.sonyericsson.com
Deutschland	0180 534 2020 (ortsübliche Gebühren)	questions.DE@support.sonyericsson.com
Dominica	1-800-085-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Ecuador	1-800-0102-50 (número gratuito)	questions.CO@support.sonyericsson.com
Eesti	06 032 032	questions.EE@support.sonyericsson.com
Egypt/مصر	16727	questions.EG@support.sonyericsson.com
Ελλάδα	801 11 810 810 +30 210 899 19 19 (from mobile phone)	questions.GR@support.sonyericsson.com
El Salvador	800-6323 (número gratuito)	questions.CO@support.sonyericsson.com
España	902 180 576 (tarifa local)	questions.ES@support.sonyericsson.com
France	0825 383 383	questions.FR@support.sonyericsson.com
Guatemala	1-800-300-0057 (número gratuito)	questions.CO@support.sonyericsson.com

Haiti/Ayiti	AN 193, PIN 5598 (numéro gratuit / nimewo gratis)	questions.CO@support.sonyericsson.com
Honduras	AN 8000122, PIN 5599 (número gratuito)	questions.CO@support.sonyericsson.com
Hong Kong/香港	+852 8203 8863	questions.HK@support.sonyericsson.com
Hrvatska	062 000 000	questions.HR@support.sonyericsson.com
India/भारत	1800 11 1800 (Toll Free) +91 (011) 39011111	questions.IN@support.sonyericsson.com
Indonesia	021 2701388	questions.ID@support.sonyericsson.com
Ireland	1850 545 888 (Local rate)	questions.IE@support.sonyericsson.com
Italia	06 48895206 (tariffa locale)	questions.IT@support.sonyericsson.com
Jamaica	1-800-442-3471 (Toll Free)	questions.CO@support.sonyericsson.com
Kύπρος/Kypros	0800 90 909	questions.CY@support.sonyericsson.com
Latvija	67 21 43 01	questions.LV@support.sonyericsson.com
Lietuva	8 700 55030	questions.LT@support.sonyericsson.com
Magyarország	01 880 47 47	questions.HU@support.sonyericsson.com
Malaysia	1800-88-9900 (Toll Free / bebas tol)	questions.MY@support.sonyericsson.com
Maroc/المغرب	+212 2 2958 344	questions.MA@support.sonyericsson.com
México	0 1800 000 4722 (número gratuito)	questions.MX@support.sonyericsson.com
Nederland	0900 8998318	questions.NL@support.sonyericsson.com
Nederlandse Antillen	001-866-509-8660 (gratis nummer)	questions.CO@support.sonyericsson.com
New Zealand	0800-100-150 (Toll free)	questions.NZ@support.sonyericsson.com
Nicaragua	AN 1800-0166, PIN 5600 (número gratuito)	questions.CO@support.sonyericsson.com
Norge	815 00 840 (local rate)	questions.NO@support.sonyericsson.com
Österreich	0810 200 245	questions.AT@support.sonyericsson.com
Pakistan/پاکستان	021 - 111 22 55 73	questions.PK@support.sonyericsson.com
Panamá	00800-787-0009 (número gratuito)	questions.CO@support.sonyericsson.com
Paraguay	009 800 54 20032 (número gratuito)	questions.CO@support.sonyericsson.com
Perú	0800-532-38 (número gratuito)	questions.CO@support.sonyericsson.com
Philippines/Pilipinas	+63 2 7891860	questions.PH@support.sonyericsson.com
Polska	+48 22 691 6200	questions.PL@support.sonyericsson.com

Portugal	808 204 466 (chamada local)	questions.PT@support.sonyericsson.com
República Dominicana	1-800-751-3370 (número gratuito)	questions.CO@support.sonyericsson.com
România	+40 21 401 0401	questions.RO@support.sonyericsson.com
Saint Kitts and Nevis	1-800-087-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Saint Vincent and the Grenadines	1-800-088-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Schweiz/Suisse/ Svizzera	0848 824 040	questions.CH@support.sonyericsson.com
Singapore	+65 6744 0733	questions.SG@support.sonyericsson.com
Slovensko	02 5443 6443	questions.SK@support.sonyericsson.com
South Africa	0861 632222	questions.ZA@support.sonyericsson.com
Suomi	09 299 2000	questions.FI@support.sonyericsson.com
Sverige	013 24 45 00 (local rate)	questions.SE@support.sonyericsson.com
Trinidad and Tobago	1-800-080-9521 (Toll Free)	questions.CO@support.sonyericsson.com
Türkiye	+90 212 473 77 77	questions.TR@support.sonyericsson.com
United Kingdom	08705 237 237 (Local rate)	questions.GB@support.sonyericsson.com
United States	1 866 766 9374	questions.US@support.sonyericsson.com
Uruguay	000-401-787-013 (número gratuito)	questions.CO@support.sonyericsson.com
Venezuela	0-800-1-00-2250 (número gratuito)	questions.CO@support.sonyericsson.com
Việt Nam	1900 1525 (miễn phí)	questions.VN@support.sonyericsson.com
Беларусь	8 82 00 361 0001	questions.BY@support.sonyericsson.com
България	0800 1 8778	questions.BG@support.sonyericsson.com
Россия	+7 (495) 7870986	questions.RU@support.sonyericsson.com
Україна	(+380) 44 590 1515	questions.UA@support.sonyericsson.com
الإمارات العربية المتحدة	+971 4 3919 880 (UAE)	questions.AE@support.sonyericsson.com
الأردن	+971 4 3919 880	questions.JO@support.sonyericsson.com
الكويت	+971 4 3919 880	questions.KW@support.sonyericsson.com
المملكة العربية السعودية	800-8200-727	questions.SA@support.sonyericsson.com
中国	+86 400 810 0000	questions.CN@support.sonyericsson.com
台灣	+886 2 25625511	questions.TW@support.sonyericsson.com

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.



Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose to liquid or moisture or excess humidity.
- For optimum performance, the product should not be operated in temperatures below $-10^{\circ}\text{C}(+14^{\circ}\text{F})$ or above $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Do not expose the battery to temperatures above $+60^{\circ}\text{C}(+140^{\circ}\text{F})$.
- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend the product.
- Do not paint or attempt to



disassemble or modify the product. Only

Sony Ericsson authorised personnel should perform service.

- Consult with authorised medical staff and the instructions of the medical device manufacturer before using the product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices, or disable the radio transmitting functionality of the device, where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place the product, or install wireless equipment, in the area above an air bag in a car.
- **Caution:** Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use the Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

Children

Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.



Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When a power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the

power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may pose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for the intended purpose only. Charge the battery in temperatures between +5°C(+41°F) and +45°C(+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks. Replace the battery only with another Sony Ericsson battery that has been qualified with the product per the standard IEEE-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm(6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with the vehicle manufacturer's representative to be sure that the mobile phone or Bluetooth handsfree

will not affect the electronic systems in the vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings. Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communication. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage the phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When the phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure, go to:
www.sonyericsson.com/health.

Flight mode

Bluetooth and WLAN functionality, if available in the device, can be enabled in Flight mode but may be prohibited onboard aircraft or in other areas where radio transmissions are prohibited. In such environments, please seek proper authorisation

before enabling Bluetooth or WLAN functionality even in Flight mode.

Malware

Malware (short for malicious software) is software that can harm the mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While the device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that the device will be impervious to the introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to the mobile phone from known, reliable sources.

Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF exposure, radio performance, loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessory). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment

Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson call centre.



Disposing of the battery

Check local regulations or call a Sony Ericsson call centre for information. Never use municipal waste.



Memory card

If the product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If the product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

Warning!

If the device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on memory card use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not

warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

End User Licence Agreement

Software delivered with this device and its media is owned by Sony Ericsson Mobile Communications AB, and/or its affiliated companies and its suppliers and licensors.

Sony Ericsson grants you a non-exclusive limited licence to use the Software solely in conjunction with the Device on which it is installed or delivered. Ownership of the Software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the Software, reproduce and distribute the Software, or modify the Software. You are entitled to transfer rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided the third party agrees in writing to be bound by the terms of this Licence.

This licence exists throughout the useful life of this Device. It can be terminated by transferring your rights to the Device to a third party in writing.

Failure to comply with any of these terms and conditions will terminate the licence immediately.

Sony Ericsson and its third party suppliers and licensors retain all rights, title and interest in and to the Software. To the extent that the Software contains material or code of a third party, such third parties shall be beneficiaries of these terms.

This licence is governed by the laws of Sweden. When applicable, the foregoing applies to statutory consumer rights.

In the event Software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the Software.

Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of two (2) years as from the original date of purchase of the Product for your mobile phone, and for a period of one (1) year following the original purchase date of the Product for all original accessories (such as the battery, charger or handsfree kit) which may be delivered with your mobile phone.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either

repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present, Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid. A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson. Minor variations in display brightness and colour may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable. Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.
4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.

Sony Ericsson disclaims any and all warranties, whether express or implied, for failures caused to

the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony Ericsson strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony Ericsson disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose.

7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

*Geographical scope of the warranty

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

Downloads Terms and Conditions

If you are an Orange France subscriber, for more information on the Downloads service, please refer to your Orange User Guide.

The Downloads application is a service provided by Sony Ericsson Mobile Communications AB, a company incorporated under the laws of Sweden with corporate identity number 556615-6658, VAT registration number SE-5566156658-01 and with address Nya Vattentornet SE-221 88 Lund, or its subsidiaries or branch offices (together "Sony Ericsson") which allows you to access and purchase e.g. music tones ("Content") for download to your Sony Ericsson product. If you want to get in contact with Sony Ericsson, please go to the Contact Us section at the general Sony Ericsson web page (www.SonyEricsson.com) or call our local customer care centre.

Please note that Sony Ericsson may use an agent or partner for the purposes of billing, ordering and delivering Content.

Right to access and purchase the Content will give you the right to download and use the Content exclusively for your own personal use. No license is granted to you with respect to the human-readable source code for any Content and no rights are sold, transferred or otherwise conveyed with respect to any Sony Ericsson or its content providers patents, copyrights, trade marks, trade secrets or other intellectual property rights.

User Requirements

To use Downloads you must be at least 18 years old or receive your parent's or guardian's consent. When using Downloads, you hereby accept and agree to the following: (i) You will follow the user instructions you have been and will be presented with during the entire use of Downloads; (ii) Your Sony Ericsson product must support the technical requirements, if applicable; (iii) You may not initiate the Downloads client without the Sony Ericsson product being sufficiently charged; and (iv) To the fullest extent permitted by law, neither Sony Ericsson nor its content providers can be held responsible for any damage or loss of other software or hardware of your Sony Ericsson product resulting from the use of Downloads.

Payment Terms

You hereby agree and accept to use Downloads and purchase the Content for which you will be charged the amount appearing in your phone display and, when applicable, a charge for sending a text message. The total cost for the Premium SMS (a payment mechanism automatically generating one or more text message(s) once you have accepted the purchase) will be charged to your Orange pay monthly bill or against your pay as you go credit. Further payment terms will be determined by your

subscription agreement with Orange. The cost for your connection to the Downloads client via GPRS to download the Content is incremental and not included in the approximate price quoted in the phone display.

Cancellation and withdrawal

Once you have accepted the price quoted in the phone display along with these terms and conditions you have confirmed your purchase and cancellation is not possible. Please note that by accepting the purchase in the phone display you have implicitly consented that your order for services will be performed by Sony Ericsson prior to the end of the usual period for the right for withdrawal and since the services by their nature can not be returned to Sony Ericsson, you will not be entitled to exercise your right to withdraw.

Content

The Content is owned by Sony Ericsson or its content providers. You may download the content exclusively for your own, personal use. Content may not be modified, altered or distributed.

Warranty Disclaimer and Limitation of Liability

CONTENT IS PROVIDED "AS IS" AND TO THE FULLEST EXTENT PERMITTED BY LAW SONY ERICSSON AND ITS CONTENT PROVIDERS SPECIFICALLY DISCLAIM ANY WARRANTY OR CONDITION WHATSOEVER REGARDING MERCHANTABILITY, FITNESS FOR A SPECIFIC PURPOSE, TITLE OR NON-INFRINGEMENT. TO THE FULLEST EXTENT PERMITTED BY LAW SONY ERICSSON ALSO DISCLAIMS ALL WARRANTIES WITH REGARD TO WHETHER THE CONTENT WILL MEET YOUR INDIVIDUAL REQUIREMENTS, WORK IN COMBINATION WITH ANY HARDWARE OR SOFTWARE OR OPERATE

ON AN UNINTERRUPTED OR ERROR FREE BASIS. IN NO EVENT WILL SONY ERICSSON'S LIABILITY FOR ANY CLAIM RELATING TO THE CONTENT OR ITS USE, WHETHER IN CONTRACT, TORT, OR OTHERWISE, EXCEED THE AMOUNTS PAID BY YOU FOR SUCH CONTENT. IN NO EVENT WILL SONY ERICSSON BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL, PUNITIVE, EXEMPLARY OR STATUTORILY MULTIPLE DAMAGES OF ANY KIND ARISING OUT OF YOUR PURCHASE. ATTEMPTED USE OR USE OF THE CONTENT. THE ABOVE LIMITATIONS ONLY APPLY TO THE GREATEST EXTENT PERMITTED BY LAW. NOTHING IN THESE TERMS AND CONDITIONS LIMIT YOUR STATUTORY RIGHTS AS A CONSUMER. PLEASE NOTE THAT YOUR PERSONAL SETTINGS AND/ OR DOWNLOADS MAY BE LOST WHEN YOUR SONY ERICSSON PRODUCT IS REPAIRED OR REPLACED.

Support - Orange

Sony Ericsson and its agents or representatives hereby reserve the right to refer the consumer to Orange if the reason for the error is exclusively due to non-availability or non-functionality of Orange's services. If it is impossible for Sony Ericsson support organization to remedy an error within a reasonable time, Sony Ericsson will in compliance with statutory law refund your payment for the Content.

In such event Sony Ericsson will inform you on how such a refund is performed and you hereby accept and agree to provide Sony Ericsson or its service partners with all information necessary, including personal information, to make such a refund possible. Sony Ericsson reserves the right to charge you a reasonable handling fee where the error may be attributed to you and/or your non compliance with all instructions applicable to Downloads, including without limitation what is stated herein and in the phone display.

Access to Downloads and Limitation

Sony Ericsson may change, modify or withdraw access to Downloads at any time, including its services, without prior notice, and without any liability whatsoever. Sony Ericsson is not liable for the temporary non-availability of Downloads, or for any delay or damage during the transmission. To the fullest extent permitted by law, no warranty of any kind is made in relation to the condition, suitability, availability, accuracy, reliability, merchantability and/or non-infringement of Downloads or Content provided through the service, the user's own equipment, any public communication and/or operator networks or that provision of the services will be uninterrupted or error-free.

Downloads may not be available when you are using another network than your local network - a message will appear to inform you about this when selecting the Downloads icon.

Export

The Content may be subject to applicable export control laws. You agree to obey all such laws and regulations with respect to your possession and use of the Content.

Dispute Resolution

Any controversy arising out of this agreement, Sony Ericsson's provision of the Content or your use or attempted use of such Content shall be fully and finally resolved by the courts of your home country. The laws of Sweden shall, to the extent possible, apply.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and



(2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for G705u

We, **Sony Ericsson Mobile Communications AB** of
Nya Vattentornet
SE-221 88 Lund, Sweden
declare under our sole responsibility that our
product

Sony Ericsson type AAD-3352031-BV
and in combination with our accessories, to which
this declaration relates is in conformity with the
appropriate standards EN 301 511:V9.0.2, EN 301
908-1:V2.2.1, EN 301 908-2:V2.2.1, EN 300
328:V1.7.1, EN 300 440-1:V1.7.1, EN 300
440-2:V1.1.2, EN 301 489-7:V1.3.1, EN 301
489-17:V1.2.1, EN 301 489-24:V1.3.1, EN 301
489-3:V1.4.1, EN 60 950-1:2006 following the
provisions of, Radio Equipment and
Telecommunication Terminal Equipment directive
1999/5/EC.

Lund, August
2008

CE 0682



Rikko Sakaguchi,
Head of Creation & Development
We fulfil the requirements of the R&TTE Directive
(1999/5/EC).

Index

A

alarms	57
answer phone service	30
answering service	30
applications	62
appointments	58
assembly	6
audio book	44
auto rotate	61

B

backing up and restoring	51
battery	
charging	9
inserting	7
use and care	74
Bluetooth™ wireless technology	49
bookmarks	20
business card	29

C

calendar	58
call divert	31
call list	26
call numbers in message	35
call time	33
caller-specific ringtones	28

calls

accepting	33
answering and rejecting	25
emergency	26
handling two calls	32
international	25
making and receiving	25
putting on hold	31
recording	46
video	26

camera

activating	39
overview	39
printing	42
settings	40
shortcuts	40

code memo

conference calls	32
------------------------	----

contacts

adding phone contacts	27
default contacts	27
groups of	29

costs

8

D

date	60
declaration of conformity	83

E			
email	36	screen orientation	61
emergency numbers	26	security and certificates	22
end user licence agreement	77	settings	66
entering text	18		
F		K	
flight mode	56	keypad lock	64
		keys	11
G		L	
games	61	language	18
geo tagging	40	location services	53
GPS	53	lock	
groups	29	keypad	64
		phone	64
H		SIM card	63
handsfree	30, 42		
Bluetooth™ wireless		M	
technology	50	master reset	65
help	8	media album	46
hiding number	34	Media Manager	47
homescreen	8	media transfer	48
notes	59	memory	17
homescreen overview	13	memory card	17
		memory status	29
I		menu overview	14
imaging	39	messages	
IMEI number	65	email	36
Internet		text and picture	34
bookmarks	20	voice	36
		microphone	25

MMS See multimedia messages	
multimedia messages	34
multitasking	17
music player	42, 43
MusicDJ™	45
my numbers	33

N

navigating menus	16
notes	59

O

online music and video clips	44
Orange applications	62
Orange Messenger	37

P

pan and zoom, Web pages	20
PC Suite	55
phone memory	17
phone mode	55
phone name	49
phone, turning on	7
photo fix	40
PhotoDJ™	41
photos	40
editing	41
feeds	23
geo tagging	40

improving	40
tags	40
pictures	40
PIN	8, 64
playlists	43
podcasts	23
power saving	50
profiles	60
PUK	63
push email	37

R

radio	45
recording, listen to	46
restricted dialling	33
ringtones	61
roaming	8
RSS feeds See Web feeds	

S

safety guidelines	73
screen orientation	61
search, on Web pages	21
selection keys	16
settings, Internet	66
shortcuts	16
SIM card	
copying to/from	28
inserting	6
lock and unblock	63

Smart-Fit Rendering™	21
SMS See text messages	
SOS See emergency numbers	
sound recorder	46
speed dialling	30
support	69
synchronising	55

T

T9™ Text Input	19
tagging photos	40
tasks	59
templates	35
text messages	34
theme	60
time	60
time zone	60
TrackID™	44
transfer method	
Bluetooth™ wireless	
technology	49
USB cable	48
transferring	
music	47
photos	47
sound	50
turning on/off	
Bluetooth™ function	50

phone lock	64
SIM lock protection	64

U

Unique	24
Update Service	56
USB cable	48

V

video editing	41
video player	44
video recorder	39
VideoDJ™	41
voice control	30
voice messages	36
volume	
ear speaker	25
ringtone	61

W

warranty	77
Web feeds	22
Web pages, history	20
Wi-Fi™	23

Z

zoom	39
------------	----

