

Contents

Getting started.....5

Assembly.....	5
Turning on the phone.....	6
Help.....	7
Charging the battery.....	8
Phone overview.....	9
Menu overview*.....	12
Navigation.....	14
Memory.....	15
Phone language.....	16
Entering text.....	16

Walkman™17

Stereo portable handsfree.....	17
Walkman™ player.....	18
PlayNow™.....	21
TrackID™	22
Online music and video clips.....	22
Video player.....	23
Radio	23
MusicDJ™.....	24
Record sound	24

Transferring and handling content.....25

Handling content in the phone.....	25
Sending content to another phone.....	26
Using a USB cable.....	26
Transferring content to and from a computer.....	27
Phone name.....	28
Using Bluetooth™ wireless technology.....	28
Backing up and restoring.....	29

Calling.....31

Making and receiving calls.....	31
Contacts.....	33
Speed dial.....	36
More calling features.....	36

Messaging.....40

Text and picture messages.....	40
Conversations.....	41
Voice messages.....	42
Email.....	42
Instant messaging	43

Imaging45

Using the camera.....45
More camera features.....47
Viewing and tagging photos.....47
Using photos.....48
Working with photos.....48
Sending content to a Web site.....49
Printing photos.....50

Internet51

Bookmarks.....51
History pages.....51
More browser features.....51
Internet security and certificates.....52
Web feeds.....52
YouTube™.....54

Synchronising.....54

Synchronising using a computer.....54
Synchronising using an Internet service.....55

More features.....56

Flight mode.....56
Update Service.....56
Gesture control.....57
Location services.....57
Alarms.....57

Calendar.....58
Notes.....59
Tasks.....59
Profiles.....60
Time and date.....60
Theme.....60
Main menu layout.....61
Ringtones.....61
Screen orientation.....61
Games.....61
Applications.....62
Locks.....63
IMEI number.....64
Style-Up™ covers.....64
Using the flip.....65

Troubleshooting.....65

Common questions.....65
Error messages.....68

Index.....70

Sony Ericsson W508 Walkman™

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2009
Publication number: xxxx-xxxx.1

Attention: Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

Please read the *Important information* before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, SensMe, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

WALKMAN, WALKMAN logo, Sony, Memory Stick Micro™, M2™ and Media Go are trademarks or registered trademarks of Sony Corporation. PictBridge is a trademark or registered trademark of Canon Kabushiki Kaisha Corporation.

Style-Up is a trademark or registered trademark of Sony Ericsson Mobile Communications AB. Google™, Google Maps™, YouTube and the YouTube logo are trademarks or registered trademarks of Google, Inc.

SyncML is a trademark or registered trademark of Open Mobile Alliance LTD.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Microsoft, ActiveSync, Windows, Outlook, Windows Media and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No.

1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Java, JavaScript and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

End-user license agreement for Sun Java Platform, Micro Edition.

1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

2. Export Regulations: Software including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders. 3. Restricted rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) and FAR 52.227-19(c) (2) as applicable.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS

252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone.

Instruction symbols

These symbols may appear in the User guide.

! Note

💡 Tip

⚠ Warning


> Use a selection or navigation key to scroll and select. See *Navigation* on page 14.

Getting started

Assembly

Before you start using your phone, you need to insert a SIM card and the battery.


To insert the SIM card

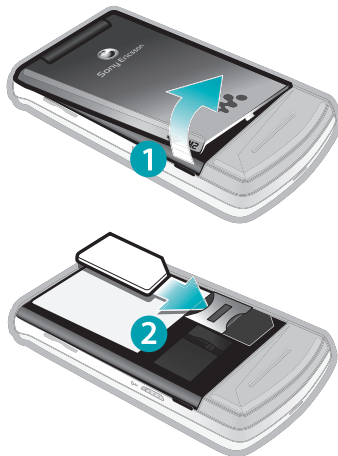

1 Remove the battery cover.

- Slide the SIM card into its holder with the gold-coloured contacts facing down.


To insert the battery

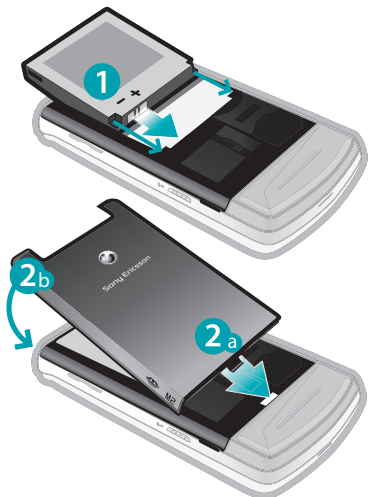

- Insert the battery with the label side up and the connectors facing each other.
- Attach the battery cover.

Turning on the phone

To turn on the phone

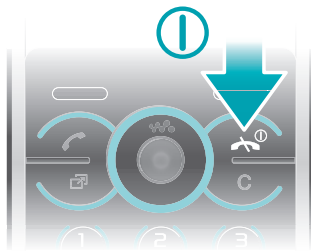


- Press and hold down ①.
- Enter your SIM card PIN, if requested, and select **OK**.
- Select a language.
- Follow the instructions to use the setup wizard for basic settings and useful tips.

💡 *If you want to correct a mistake when you enter your PIN, press **C**.*

SIM card


The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your

phone and detach the charger before you insert or remove the SIM card.

-  You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 34.*

PIN

You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

-  If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock on page 63.*

Standby

After you have turned on your phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready for use.

Using other networks

Making and receiving calls, using messaging, and data transfer, for example, Internet-based services,

outside your home network (roaming), may incur additional costs. Contact your operator for more information.

Help

In addition to this User guide, Feature guides and more information are available at www.sonyericsson.com/support.

Help and information are also available in your phone.

To access the User guide

- Select Menu > Settings > User help > User guide.

To view tips and tricks

- Select Menu > Settings > User help > Tips and tricks.


To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.

To view the phone demonstration

- Select Menu > Entertainment > Demo tour.


To view the phone status

- Press  and then press the volume key. Phone, memory and battery information is shown.

Charging the battery

The phone battery is partly charged when you buy it.


To charge the battery

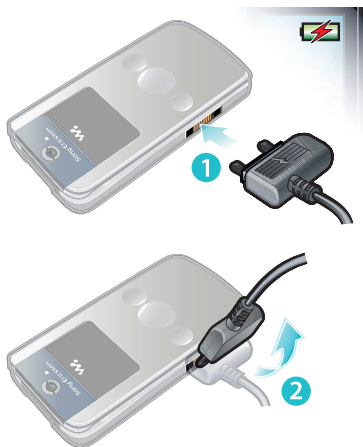

- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully


charge the battery. Press a key to view the screen.

- 2 Remove the charger by tilting the plug upwards.


 You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.

Phone overview

- 1 Video call camera*
- 2 Ear speaker
- 3 Screen
- 4 Selection keys
- 5 Call key
- 6 Activity menu key
- 7 Microphone
- 8 Connector for charger, handsfree and USB cable
- 9 End key, On/off key
- 10 C key (Clear)
- 11 Navigation key
- 12 Silent key

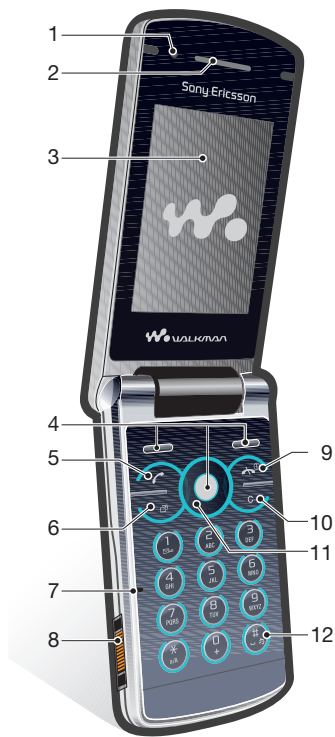

- 13 Media player key - play/stop
- 14 Media player key - next/fast forward
- 15 Screen light sensor
- 16 Volume, digital zoom keys
- 17 Battery cover
- 18 Keylock switch
- 19 Memory Stick Micro™ (M2™) slot
- 20 Loudspeaker
- 21 Media player key - previous/rewind
- 22 External display
- 23 Main camera

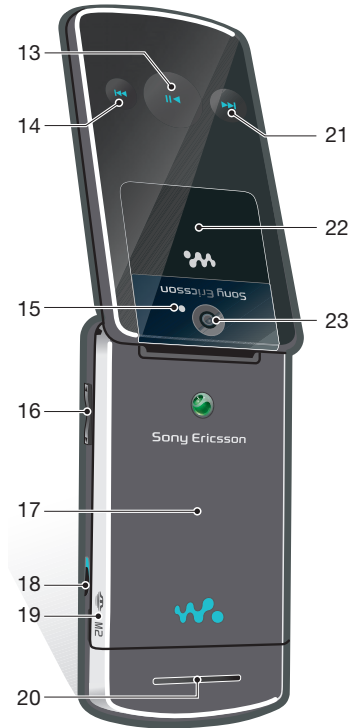

*Video call camera may not be available in every market.

Menu overview*



PlayNow™



Camera



Radio



Calls**



All



Answered



Dialled



Missed



Internet



Messaging

Write new

Inbox/Conversations

Messages

Email

IM

Call voicemail



Contacts

Myself

New contact



Organiser

File manager **

Alarms

Applications

Video call

Calendar

Tasks

Notes

Synchronisation

Timer

Stopwatch

Calculator

Code memo



Entertainment

Online services

TrackID™

Location services

Games

VideoDJ™

PhotoDJ™

MusicDJ™

Remote control

Record sound

Demo tour



Media

Photo

Music

Video

Games

Web feeds

Settings



WALKMAN



Settings

General

Profiles

Time & date

Language

Update service

Gesture control

Voice control

New events

Shortcuts

Flight mode

Security

Setup wizard

Accessibility

Phone status

Master reset

Sounds & alerts

Ring volume

Ringtone

Silent mode

Increasing ring

Vibrating alert

Message alert

Key response

Display

Wallpaper

Main menu layout

Theme

Startup screen

Screen saver

Clock size

Brightness


Edit line names
Calls
Speed dial
Smart search
Divert calls
Switch to line 2
Manage calls
Time & cost
Show/hide my no.
Handsfree
Open to answer
Connectivity
Bluetooth
USB
Phone name
Synchronisation
Device management
Mobile networks
Data communication
Internet settings
Streaming settings
Message settings
SIP settings
Accessories
User help
User guide
Settings download
Basic setup
Tips and tricks

* Some menus are operator-, network- and subscription-dependent.


** You can use the navigation key to scroll between tabs in submenus. For more information, see *Navigation* on page 14.

Navigation

To access the main menu

- When **Menu** appears on the screen, press the centre selection key to select **Menu**.
- If **Menu** does not appear on the screen, press , and then press the centre selection key to select **Menu**.

To navigate the phone menus

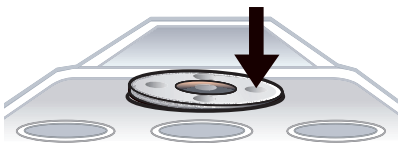

- Press the navigation key , ,  or  to move through the menus.

To select actions on the screen

- Press the left, centre or right selection key.

To view options for an item

- Select **Options** to, for example, edit.

To end a function

- Press .

 
To return to standby

- Press .

To navigate your media

- 1 Select **Menu** > **Media**.
- 2 Scroll to a menu item and press .
- 3 To go back, press .

To delete items

- Press  to delete items such as numbers, letters, pictures and sounds.

Tabs

Tabs may be available. For example, **Calls** have tabs.



To scroll between tabs

- Press the navigation key  or .

Shortcuts

You can use keypad shortcuts to go directly to functions from standby.

To use navigation key shortcuts

- Press , ,  or  to go directly to a function.

To edit a navigation key shortcut

- 1 Select **Menu** > **Settings** > **General** > **Shortcuts**.
- 2 Scroll to an option and select **Edit**.
- 3 Scroll to a menu option and select **Shortc..**

Main menu shortcuts

Menu numbering starts from the top left icon and moves across and then down row by row.

To go directly to a main menu item

- Select **Menu** and press (1) – (9), (* 0 #), (□ +) or (# ← →).

- ! *The Main menu layout must be set to Grid. See To change the main menu layout on page 61.*

Activity menu

The activity menu gives you quick access to:

- **New events** – missed calls and new messages.
- **Running apps** – applications that are running in the background.
- **My shortcuts** – add your favourite functions to access them quickly.
- **Internet** – quick access to the Internet.

To open the activity menu

- Press (☰).

Memory

You can save content on the memory card, in the phone memory and on the SIM card. Photos and music are saved on the memory card, if a memory card is inserted. If not, or if the memory card is full, photos and music are saved in the phone memory. Messages and contacts are saved in the phone memory, but you can choose to save them on the SIM card.


Memory card

- ! *You may have to purchase a memory card separately.*

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

You can move content between a memory card and the phone memory. See *Handling content in the phone* on page 25.

To insert a memory card

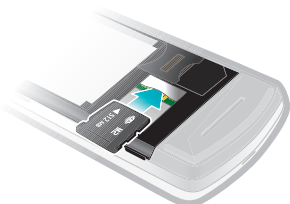

- Remove the battery cover and insert the memory card with the gold-coloured contacts facing down.

Phone language

You can select a language to use in your phone.

To change the phone language

- 1 Select **Menu > Settings > General > Language > Phone language**.
- 2 Select an option.

Entering text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

To change text input method

- When you enter text, press and hold down **(✕ a/A)**.

To shift between capitals and lower-case letters

- When you enter text, press **(✕ a/A)**.

To enter numbers

- When you enter text, press and hold down **(0 +) – (9)**.

To enter full stops and commas

- When you enter text, press **(1)**.

To enter a symbol

- 1 When you enter text, select **Options > Add symbol**.
- 2 Scroll to a symbol and select **Insert**.

To enter text using T9™ Text Input

- 1 Select, for example, **Menu > Messaging > Write new > Message**.
- 2 If **T9** is not displayed, press and hold down **(✕ a/A)** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press **(5)**, **(2)**, **(6)**, **(3)**. Write the whole word before looking at the suggestions.
- 4 Use **(↶)** or **(↷)** to view suggestions.
- 5 Press **(# →)** to accept a suggestion.

To enter text using multitap

- 1 From standby select, for example, **Menu > Messaging > Write new > Message**.
- 2 If **T9** is displayed, press and hold down **(*)a/A** to change to multitap text input.
- 3 Press **(2)** – **(9)** repeatedly until the desired letter appears.
- 4 When a word is written, press **(#...>)** to add a space.

To add words to the built-in dictionary

- 1 When you enter text using T9 Text Input, select **Options > Spell word**.
- 2 Write the word using multitap input and select **Insert**.

Walkman™

You can listen to music, audio books and podcasts. Use Media Go™ to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 27.


Stereo portable handsfree



To use a handsfree

- Connect a portable handsfree. Music stops when you receive a call and resumes when the call has ended.

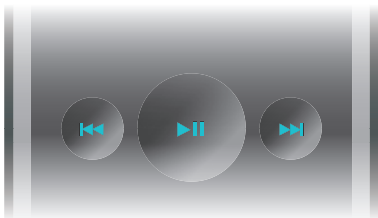


Walkman™ player




You can use the media player keys to control the Walkman™ player when the phone is closed. The keys must be unlocked. For information on how to unlock the keys, see *To unlock the media player keys* on page 65.

To play music



- 1 When the phone is open, select **Menu > Media > Music**.
- 2 Browse by category using the navigation key.
- 3 Scroll to a title and select **Play**.

 You can use  to start playing music when the phone is closed.  starts the last used music application, that is the Walkman™ player or the radio.



To stop playing music

- When the phone is closed, press .

To fast forward and rewind

- When the phone is closed, press and hold down  or .


To move between tracks

- When the phone is closed, press  or .

To minimise the player

- When the phone is open, select **Options > Minimise**.


To return to the player

- When the phone is open and you are not in any menu, press .

Shake control


To switch tracks



- 1 When the phone is closed and music is playing, press and hold down  and move the phone to the right with a flick of your wrist to go to the next track.
- 2 To go to the previous track, use the same action to the left.


To shuffle tracks



- When the phone is closed and music is playing, press and hold down  and shake your phone.

To change the volume



- 1 When the phone is closed and music is playing, hold the phone out in front of you facing upwards.
- 2 Press and hold down  and bend your arm upwards towards you to increase the volume. To decrease the volume, repeat the action in the opposite direction.

Playlists

You can create playlists to organise your music. You can add tracks and folders to a playlist. It may take a few minutes for the phone to create a playlist.


To create a playlist

- 1 When the phone is open, select **Menu** > **Media** > **Music** > **Playlists**.
- 2 Scroll to **New playlist** and select **Add**.
- 3 Enter a name and select **OK**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the marked tracks to the playlist.

To add tracks to a playlist

- 1 When the phone is open, select **Menu** > **Media** > **Music** > **Playlists**.
- 2 Select a playlist.
- 3 Scroll to **Add music** and select **Add**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the marked tracks to the playlist.

SensMe™

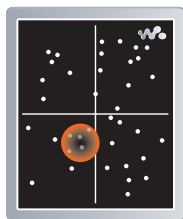







With SensMe™ you can create playlists in two ways, by mood or from all the tracks in your phone. By mood, you first use Media Go™ to transfer tracks to your phone. Information such as mood, tempo and chords is then added. The tracks are displayed as dots on a map with two axes. In the **All** view, all the tracks in your phone are placed randomly on the map.

To create a playlist by mood

- 1 When the phone is open, select **Menu** > **Media** > **Music**.
- 2 Scroll to **SensMe™** and select **Open**.
- 3 Press **⬆**, **⬇**, **⬅** or **⬅**.
- 4 Make sure you are in **Mood** view. If you are not, select **Mood**.
- 5 To preview different tracks, press **⬆**, **⬇** or **⬅**.
- 6 To choose an area of tracks, select **Add** and press **⬆** or **⬇**.
- 7 To create the playlist and play it in the Walkman™ player, select **Create**.
- 8 Select **Options** > **Save playlist**.
- 9 Enter a name and select **OK**.

To create a playlist from All view

- 1 When the phone is open, select **Menu** > **Media** > **Music**.
- 2 Scroll to **SensMe™** and select **Open**.
- 3 Press **⬆**, **⬇**, **⬅** or **⬅**.


- 4 Make sure you are in **All** view. If you are not, select **All**.
- 5 To preview different tracks, press , ,  or .
- 6 To choose an area of tracks, select **Add** and press  or .
- 7 To create the playlist and play it in the Walkman™ player, select **Create**.
- 8 Select **Options** > **Save playlist**.
- 9 Enter a name and select **OK**.

Audio books

If you use Media Go™ to transfer audio books to your phone from a computer, you can listen to the audio books in your phone. It may take a few minutes before a transferred audio book appears in the list of available audio books.

To access audio books

- When the phone is open, select **Menu** > **Media** > **Music** > **Audio books**.

 You can find audio books in formats other than M4B and those that do not have ID3v2 chapter tags in the **Tracks** folder.

 
Buy Now

If you subscribe to a music service allowing limited, non-permanent use with your phone, you can mark a track you are interested in buying later. The

next time you synchronise your music with Windows Media® Player on a computer with enabled Internet access, you should be asked if you want to buy the track you marked earlier. If you accept, the track is downloaded to your computer and your selected music service account is charged. This service requires a subscription and account with a downloadable music service, a computer with Microsoft® Windows Media® Player 11 or subsequent compatible version of Windows Media® Player, and a USB computer connection.

- ! You cannot see that a track is marked.
You cannot unmark tracks you have already marked.

To mark a track

- When the phone is open and the track you want to mark is playing, press and hold down .

PlayNow™

When you select **PlayNow™** you enter **PlayNow™** arena, where you can download music, games, ringtones, themes and wallpapers. You can preview or listen to content before you purchase and download it to your

phone. If you cannot use PlayNow™ and PlayNow™ arena, see *I cannot use Internet-based services* on page 66.

! *This service is not available in all countries.*

For extended functionality, you can also access the PlayNow™ arena Web shop on a computer from www.playnow-arena.com. For more information, go to www.sonyericsson.com/support to read the *PlayNow™ arena* Feature guide.

To use PlayNow™

- 1 Select **Menu > PlayNow™**.
- 2 Scroll through PlayNow™ arena and follow the instructions to preview and purchase content.

TrackID™

TrackID™ is a music recognition service. You can search for title, artist and album name for a track you hear playing through a loudspeaker or on the radio in your phone. If you cannot use TrackID™, see *I cannot use Internet-based services* on page 66.

To search for track information

- When you hear a track through a loudspeaker, select **Menu > Entertainment > TrackID™ > Start**.
- When the radio in your phone is playing select **Options > TrackID™**.

💡 *For best results, use TrackID™ in a quiet area.*

Online music and video clips

You can view video clips and listen to music by streaming them to your phone from the Internet. If you cannot use the Internet, see *I cannot use Internet-based services* on page 66.

To select a data account for streaming

- 1 Select **Menu > Settings > Connectivity > Streaming settings > Connect using:**
- 2 Select the data account to use.
- 3 Select **Save**.

To stream music and video clips

- 1 Select **Menu > Internet**.
- 2 Select **Options > Go to > Bookmarks**.
- 3 Select a link to stream from.

Video player

To play videos

- 1 Select **Menu > Media > Video > Videos**.
- 2 Scroll to a title and select **Play**.

To stop playing videos

- Press the centre selection key.

To fast forward and rewind

- Press and hold down  or .

To move between videos

- Press  or .

To change the volume

- Press the volume key up or down.


To change the video screen size

- 1 Select **Options > Video size**.
- 2 Select an option.

To save a picture from a video clip

- 1 To pause the video clip, press the centre selection key.
- 2 To save the paused image as a picture, select **Options > Save picture**.

Radio

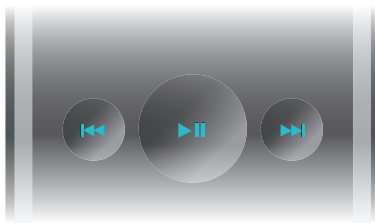



You can use the media player keys to control the radio when the phone is closed. The keys must be unlocked. For information on how to unlock the keys, see *To unlock the media player keys* on page 65.

- ! Do not use your phone as a radio in places where this is prohibited.

To turn on the radio



- 1 Connect a handsfree to the phone.
- 2 When the phone is open, select **Menu > Radio**.

- 💡 You can use  to turn on the radio when the phone is closed.  starts the last used music application, that is the radio or the Walkman™ player.

To search for channels automatically

- When the phone is open, select **Search**.

To search for channels manually

- When the phone is closed, press  or .

To change the volume

- Press the volume key up or down.

To minimise the radio

- When the phone is open, select **Options > Minimise**.

To return to the radio

- When the phone is open, select **Menu > Radio**.

Saving channels

You can save up to 20 preset channels.

To save channels automatically

- When the phone is open, select **Options > Auto save**.



To save channels manually

- 1 When the phone is open and you have found a radio channel, select **Options > Save**.
- 2 Scroll to a position and select **Insert**.

To select saved channels

- 1 When the phone is open, select **Options > Channels**.
- 2 Select a radio channel.





To switch between saved channels

- When the phone is closed, press and hold down  or .

MusicDJ™

You can compose and edit your own melodies to use as ringtones. Pre-arranged sounds with different characteristics are available.

To compose a melody

- 1 Select **Menu > Entertainment > MusicDJ™**.
- 2 Select to **Insert, Copy** or **Paste** sounds.
- 3 Use , ,  or  to scroll between the sounds.
- 4 Select **Options > Save melody**.

Record sound

You can record a voice memo or a call. Recorded sounds can also be set as ringtones.

- ! *In some countries or states it is required by law that you inform the other person before recording the call.*

To record a sound

- Select **Menu > Entertainment > Record sound > Record.**

To record a call


- 1 During an ongoing call, select **Options > Record.**
- 2 To save the recording, select **Save.**

To listen to a recording

- 1 Select **Menu > Organiser > File manager.**
- 2 Scroll to **Music** and select **Open.**
- 3 Scroll to a recording and select **Play.**

Transferring and handling content

You can transfer and handle content such as pictures and music.

- ! You are not allowed to exchange some copyright-protected material.  identifies a protected item.

Handling content in the phone

You can use **File manager** to handle content saved in the phone memory or on a memory card. Tabs and icons in **File manager** show where the content is saved. If the memory is full, delete some content to create space.

To view memory status

- 1 Select **Menu > Organiser > File manager.**
- 2 Select **Options > Memory status.**
- 3 Select **Memory card** or **Phone.**

To select more than one item in a folder

- 1 Select **Menu > Organiser > File manager.**
- 2 Scroll to a folder and select **Open.**
- 3 Select **Options > Mark > Mark several.**
- 4 For each item you want to mark, scroll to the item and select **Mark.**

To move items between the phone memory and the memory card

- 1 Select **Menu > Organiser > File manager**.
- 2 Find an item and select **Options > Manage file > Move**.
- 3 Select **Memory card or Phone**.
- 4 Scroll to a folder and select **Open**.
- 5 Select **Paste**.

To view information about content

- 1 Select **Menu > Organiser > File manager**.
- 2 Find an item and select **Options > Information**.

Sending content to another phone

You can send content, for example, in messages or using Bluetooth™ wireless technology.

To send content

- 1 Scroll to an item and select **Options > Send**.
- 2 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

Using a USB cable

You can connect your phone to a computer with a USB cable to synchronise, transfer and back up phone content and use your phone as a modem. For more information, go to www.sonyericsson.com/support to read Feature guides.

- ! *You may have to purchase a USB cable separately.*

Before using a USB cable

See *Required operating systems* on page 27.

- ! *Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.*

To disconnect the USB cable safely

- 1 **Computer:** Close any software that you are using with your phone.
- 2 Disconnect the USB cable.

Drag and drop content

You can drag and drop content between your phone, a memory card and a computer in *Microsoft Windows Explorer*.

To drag and drop content

- 1 Connect your phone to a computer using a USB cable.
- 2 **Phone:** Select **Media transfer**. The phone will remain activated during file transfer.
- 3 **Computer:** Wait until the phone memory and memory card appear as external disks in *Windows Explorer*.
- 4 Drag and drop selected files between the phone and the computer.

Transferring content to and from a computer

You can use Media Go™ to transfer media content between your phone and a computer.

-  *Media Go™ is available for download at www.sonyericsson.com/support.*

Required operating systems

You need one of these operating systems to use Sony Ericsson PC software:

- Microsoft® Windows Vista™
- Microsoft® Windows XP, Service Pack 2 or higher

To download Media Go™

- 1 **Computer:** In your Internet browser, go to www.sonyericsson.com/support.


- 2 Select a region and country.
- 3 Select *Software downloads*.
- 4 Select a phone from the list.
- 5 Select *Read more and download* under Media Go™.
- 6 Select *Download now* and save the file to your computer.

-  *Remember where you save the file.*

To install Media Go™ from the downloaded file

- 1 Locate the downloaded Media Go™ file on the computer.
- 2 Double-click the file and follow the instructions.

To transfer content using Media Go™

-  *Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.*
- 1 Connect the phone to a computer with a USB cable supported by your phone.
 - 2 **Computer:** Select *Start/Programs/Sony/Media Go™*.
 - 3 **Phone:** Select **Media transfer**.
 - 4 **Computer:** Select *Transfer to or from Device using Media Go™* and click **OK**.
 - 5 Wait until the phone appears in Media Go™.

- 6 Move files between your phone and the computer in Media Go™.

Phone name

You can enter a name for your phone that is shown to other devices when using, for example, Bluetooth™ wireless technology.

To enter a phone name

- 1 Select **Menu > Settings > Connectivity > Phone name**.
- 2 Enter the phone name and select **OK**.

Using Bluetooth™ wireless technology

The Bluetooth™ function is free of charge and makes wireless connection to other Bluetooth devices possible. You can, for example:

- Connect to handsfree devices.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Exchange items.
- Play multiplayer games.

- ! *A range within 10 metres (33 feet), with no solid objects in between, is recommended for Bluetooth communication.*

Before using Bluetooth wireless technology

You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices.

To turn on the Bluetooth function

- Select **Menu > Settings > Connectivity > Bluetooth > Turn on**.
- ! *Make sure that the device you want to pair your phone with has the Bluetooth function activated and Bluetooth visibility turned on.*

To pair the phone with a device

- 1 Select **Menu > Settings > Connectivity > Bluetooth > My devices**.
- 2 Scroll to **New device** and select **Add** to search for available devices.
- 3 Select a device.
- 4 Enter a passcode, if required.

To allow connection to the phone

- 1 Select **Menu > Settings > Connectivity > Bluetooth > My devices**.
- 2 Select a device from the list.
- 3 Select **Options > Allow connection**.

- 4 Select **Always ask** or **Always allow**.

! *This is only possible with devices that require access to a secure service.*

To pair the phone with a Bluetooth handsfree for the first time

- 1 Select **Menu > Settings > Connectivity > Bluetooth > Handsfree**.
- 2 Select a device.
- 3 Enter a passcode, if required.

Power saving

You can save battery power with the Power save function. In Power save mode you can only connect with a single Bluetooth device. If you want to connect with more than one Bluetooth device at the same time you must turn this function off.

To turn on power save

- Select **Menu > Settings > Connectivity > Bluetooth > Power save > On**.

Transferring sound to and from a Bluetooth handsfree

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

To transfer sound

- 1 Select **Menu > Settings > Connectivity > Bluetooth > Handsfree > Incoming call**.
- 2 Select an option. In phone transfers sound to the phone. In handsfree transfers sound to the handsfree.

! *You need to answer the call with the phone key for this setting to apply.*

To transfer sound during a call

- 1 During a call, select **Sound**.
- 2 Select from the list.


Backing up and restoring

You can backup and restore contacts, the calendar, tasks, notes and bookmarks using the *Sony Ericsson PC Suite*.

Before backing up and restoring, you need to install the *Sony Ericsson PC Suite*, which is available from www.sonyericsson/support.

You can backup and restore contacts within your phone using a Memory Stick Micro™ (M2™) memory card. You can move content between the memory card and the phone memory.


See *Handling content in the phone* on page 25.

 *Back up your phone content regularly to make sure you do not lose it.*

To make a backup using the Sony Ericsson PC Suite

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and make a backup.

To restore phone content using the Sony Ericsson PC Suite

 *The Sony Ericsson PC Suite will overwrite all the phone content during the restore process. You may damage your phone if you interrupt the process.*

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.

3 **Phone:** Select **Phone mode**.


4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and restore your phone.


Calling

Making and receiving calls


You need to turn on your phone and be within range of a network.

To make a call



- 1 Enter a phone number (with international country code and area code, if applicable).
- 2 Press .

 You can call numbers from your contacts and call list. See *Contacts* on page 33, and *Call list* on page 33.

To end a call


- Press .

To make international calls

- 1 Press and hold down  until a “+” sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

To re-dial a number

- When **Retry?** appears select **Yes**.

 Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

To answer a call

- Press .

 

To reject a call

- Press .

To change the ear speaker volume during a call


- Press the volume key up or down.

To mute the microphone during a call

- 1 Press and hold down .
- 2 Press and hold down  again to resume.

To turn on the loudspeaker during a call

- Press **SpkrOn**.

 Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

To view missed calls

- Press  to open the call list.

Networks

Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability. Some network operators allow you to switch networks manually.

To switch networks manually

- 1 Select **Menu > Settings > Connectivity > Mobile networks > GSM/3G networks.**
- 2 Select an option.

Emergency calls

Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

- ! *In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

To make an emergency call

- Enter 112 (the international emergency number) and press .


To view your local emergency numbers

- 1 Select **Menu > Contacts.**
- 2 Scroll to **New contact** and select **Options > Special numbers > Emergency nos..**

Video call

You can share experiences with friends and family as they happen or save them to share later. You see the person you are talking to on your screen. The other person sees what is on your camera.


Before making video calls

3G (UMTS) service is available when  appears. To make a video call, both parties on the call must have a 3G (UMTS) phone subscription that supports 3G (UMTS) service and 3G (UMTS) coverage.


To make a video call

- 1 Enter a phone number (with international country code and area code, if applicable).
- 2 Select **Options > Make video call.**

To use the zoom with an outgoing video call

- Press  or .

To share photos and videos during a video call

- 1 During a video call, press  to switch to the video share mode tab.
- 2 Scroll to a video clip or photo and select **Share.**



To view video call options

- During the call, select **Options**.

Call list

You can view information about recent calls.

To call a number from the call list

- 1 Press  and scroll to a tab.
- 2 Scroll to a name or a number and press .

Contacts

You can save names, phone numbers and personal information in **Contacts**. Information can be saved in the phone memory or on the SIM card.

 You can synchronise your contacts using the Sony Ericsson PC Suite.

Default contacts

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in **Contacts**. If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

To select default contacts

- 1 Select **Menu > Contacts**.

- 2 Scroll to **New contact** and select **Options > Advanced > Default contacts**.
- 3 Select an option.

Phone contacts


Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.

To add a phone contact

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Scroll to **New number:** and select **Add**.
- 5 Enter the number and select **OK**.
- 6 Select a number option.
- 7 Scroll between the tabs and add information to the fields.
- 8 Select **Save**.

Calling contacts

To call a contact

- 1 Select **Menu > Contacts**.
- 2 Scroll to a contact and press .

To go directly to the contacts list

- Press and hold down  – .

To call with Smart search

- 1 Press **(0+)** – **(9)** to enter a sequence of (at least two) digits. All entries which match the sequence of digits or corresponding letters are shown in a list.
- 2 Scroll to a contact or a phone number and press **(↻)**.


To turn on or off Smart search

- 1 Select **Menu > Settings > Calls > Smart search**.
- 2 Select an option.

Editing contacts

To add information to a phone contact

- 1 Select **Menu > Contacts**.
- 2 Scroll to a contact and select **Options > Edit contact**.
- 3 Scroll between the tabs and select **Add** or **Edit**.
- 4 Select an option and an item to add or edit.
- 5 Select **Save**.


 *If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts.*

To copy names and numbers to phone contacts

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Copy from SIM**.
- 3 Select an option.

To copy names and numbers to the SIM card

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Copy to SIM**.
- 3 Select an option.

 *When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.*

To automatically save names and phone numbers on the SIM card

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Auto save on SIM**.
- 3 Select an option.

To save contacts on a memory card

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Back up to m. card**.

SIM contacts

SIM contacts can contain names and numbers only. They are saved on the SIM card.

To add a SIM contact

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Enter the number and select **OK**.
- 5 Select a number option and add more information, if available.
- 6 Select **Save**.

Deleting contacts

To delete all contacts

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Delete all contacts**.
- 3 Select an option.

Contact memory status

The number of contacts you can save in your phone or on the SIM card depends on available memory.

To view contact memory status

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Memory status**.

Myself

You can enter information about yourself and, for example, send your business card.

To enter Myself information

- 1 Select **Menu > Contacts**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to an option and edit the information.
- 4 Select **Save**.

To add your own business card

- 1 Select **Menu > Contacts**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to **My contact info** and select **Add > Create new**.
- 4 Scroll between the tabs and add information to the fields.
- 5 Enter the information and select **Save**.

Groups

You can create a group of phone numbers and email addresses from **Phone contacts** to send messages to. See *Messaging* on page 40. You can also use groups (with phone numbers) when you create accepted callers lists. See *Accept calls* on page 39.

To create a group of numbers and email addresses

- 1 Select **Menu > Contacts**.

- 2 Scroll to **New contact** and select **Options > Groups**.
- 3 Scroll to **New group** and select **Add**.
- 4 Enter a name for the group and select **Continue**.
- 5 Scroll to **New** and select **Add**.
- 6 For each contact phone number or email address you want to mark, scroll to it and select **Mark**.
- 7 Select **Continue > Done**.


Speed dial

Speed dialling lets you select nine contacts that you can dial quickly from standby. The contacts can be saved in positions 1-9.

To add contacts to speed dial numbers

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Speed dial**.
- 3 Scroll to a position number and select **Add**.
- 4 Select a contact.

To speed dial

- Enter the position number and press .

More calling features


Vicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

To enter your voicemail number

- 1 Select **Menu > Messaging > Messages > Settings > the Message settings tab > Voicemail number**.
- 2 Enter the number and select **OK**.

To call your voicemail service

- Press and hold down .

Voice control

By creating voice commands you can:

- Voice dial – call someone by saying their name
- Answer and reject calls when you use a handsfree

To record a voice command using voice dialling

- 1 Select **Menu > Settings > General > Voice control > Voice dialling > Activate**.
- 2 Select **Yes > New voice command** and select a contact. If the contact has

- more than one number, select the number to add the voice command to.
- 3 Record a voice command such as “John mobile.”
 - 4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
 - 5 If the recording sounds OK, select **Yes**. If not, select **No** and repeat steps 3 and 4.

! *Voice commands are saved in the phone memory only. They cannot be used in another phone.*

To voice dial

- 1 Press and hold down a volume key.
- 2 Wait for the tone and say a recorded name, for example “John mobile.” The phone plays the name back to you and connects the call.

Diverting calls

You can divert calls, for example, to an answering service.

! *When **Restrict calls** is used, some divert call options are not available. See **Restricted dialling** on page 39.*

To divert calls

- 1 Select **Menu > Settings > Calls > Divert calls**.

- 2 Select a call type and a divert option.
- 3 Select **Activate**.
- 4 Enter the number to divert calls to and select **OK**.

More than one call

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.



Call waiting

You will hear a beep if you receive a second call while call waiting is active.


To activate call waiting

- Select **Menu > Settings > Calls > Manage calls > Call waiting > Activate**.


To make a second call

- 1 During the call, press . This puts the ongoing call on hold.
- 2 Select **Options > Add call**.
- 3 Enter the number to call and press .

To answer a second call

- During the call, press . This puts the ongoing call on hold.

To reject a second call

- During the call, press  and continue with the ongoing call.

To end an ongoing call and answer a second call

- During the call, select **Replace active call**.

Handling two voice calls

You can have calls ongoing and on hold at the same time.

To switch between two calls

- During the call, press .

To join two calls

- During the call, select **Options > Join calls**.

To connect two calls

- During the call, select **Options > Transfer call**. You are disconnected from both calls.



To end an ongoing call and return to the call on hold

- First press  and then .

Conference calls

With a conference call, you can have a joint conversation with up to five people.

To add a new participant

- 1 During the call, press . This puts the joined calls on hold.
- 2 Select **Options > Add call**.
- 3 Enter the number to call and press .
- 4 Select **Options > Join calls** to add the new participant.
- 5 Repeat this task to add more participants.

To release a participant

- 1 Select **Options > Release party**.
- 2 Select the participant to release.

To have a private conversation

- 1 During the call, select **Options > Talk to** and select the participant to talk to.
- 2 To resume the conference call, select **Options > Join calls**.

My numbers

You can view, add and edit your own phone numbers.

To check your phone numbers

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Special numbers > My numbers**.
- 3 Select an option.

Accept calls

You can choose to receive calls from certain phone numbers only.

To add numbers to the accepted callers list

- 1 Select **Menu > Settings > Calls > Manage calls > Accept calls > Only from list.**
- 2 Scroll to **New** and select **Add.**
- 3 Select a contact or **Groups.**


 See *Groups* on page 35.

To accept all calls

- Select **Menu > Settings > Calls > Manage calls > Accept calls > All callers.**

Restricted dialling

You can restrict outgoing and incoming calls. A password from your service provider is required.

 If you divert incoming calls, you cannot use some restrict calls options.

Restrict calls options

Standard options are:

- **All outgoing** – all outgoing calls
- **Outgoing intl** – all outgoing international calls

- **Outgoing intl roam.** – all outgoing international calls except to your home country
- **All incoming** – all incoming calls
- **Inc. when roaming** – all incoming calls when you are abroad

To restrict calls

- 1 Select **Menu > Settings > Calls > Manage calls > Restrict calls.**
- 2 Select an option.
- 3 Select **Activate.**
- 4 Enter your password and select **OK.**

Call time and cost

During a call, the phone shows how long you have been talking. You can also check on the duration of your last call, your outgoing calls and the total time of all your calls.

To check the call time

- Select **Menu > Settings > Calls > Time & cost > Call timers.**

Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

To hide your phone number

- 1 Select **Menu > Settings > Calls > Show/hide my no..**
- 2 Select **Hide number.**

Messaging

Text and picture messages

Messages can contain text, pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.

When sending messages, the phone automatically selects the most suitable method (as a text or picture message) for sending the message.



If you cannot use picture messages, see *I cannot use Internet-based services* on page 66.


Sending messages

You can send messages from your phone. The maximum size of a standard text message is 160 characters including spaces if no other items are added to the message. If you enter more than 160 characters, a second message is created. Your messages are sent as one concatenated message.

To create and send a message

- 1 Select **Menu > Messaging > Write new > Message**.

- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select **Continue > Contacts look-up**.
- 4 Select a recipient and select **Send**.

 *If you send a message to a group, you will be charged for each member.*

To copy and paste text in a message

- 1 When you write the message, select **Options > Copy & paste**.
- 2 Select **Copy all** or **Mark & copy**. Scroll to and mark text in the message.
- 3 Select **Options > Copy & paste > Paste**.

Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

To save an incoming message on a memory card

- Select **Menu > Messaging > Messages > Settings > Save to > Memory card**.


To save a message on the SIM card

- 1 Select **Menu** > **Messaging** > **Messages** and select a folder.
- 2 Scroll to a message and select **Options** > **Save message**.

To view a message from the inbox

- 1 Select **Menu** > **Messaging** > **Inbox**.
- 2 Scroll to the message and select **View**.



To call a number in a message

- When you view the message, scroll to the phone number and press .

Templates

If you often use the same phrases and pictures in a message, you can save the message as a template.

To add a message template

- 1 Select **Menu** > **Messaging** > **Messages** > **Templates** > **New template** > **Add**.
- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select **Save**.
- 4 Enter a title and select **OK**.

To save a message as a template

- 1 Select **Menu** > **Messaging** > **Inbox**.
- 2 Scroll to the message and select **View** > **Options** > **Save as template**.

Message options

You can set some options, such as the Message alert and default storage location, to apply to all messages. You can set other options, such as the Delivery priority and Delivery time, for each message you send.

To set options for all messages

- 1 Select **Menu** > **Messaging** > **Messages** > **Settings**.
- 2 Select an option.

To set options for a specific message

- 1 When the message is ready and a recipient is selected, select **Options** > **Advanced**.
- 2 Scroll to an option and select **Edit**.

Conversations

You can choose whether to view your messages in **Conversations** or **Inbox**. A messaging conversation shows all messaging communication between you and one of your contacts.

To view messages in Conversations

- 1 Select **Menu** > **Messaging** > **Inbox** > the **Conversations** tab.
- 2 Select a conversation.

To send a message from Conversations

- 1 Select **Menu > Messaging > Conversations**.
- 2 Select a conversation.
- 3 Write a message and select **Send**.

Voice messages

You can send and receive a sound recording as a voice message.

- ! *The sender and recipient must have a subscription supporting picture messaging.*

To record and send a voice message

- 1 Select **Menu > Messaging > Write new > Voice message**.
- 2 Record the message and select **Stop > Send > Contacts look-up**.
- 3 Select a recipient and select **Send**.

Email

You can use standard email functions and your computer email address in your phone.

- 💡 *You can synchronise your email using Microsoft® Exchange ActiveSync®.*

Before using email

You can use the setup wizard to check if settings are available for your email

account or you can enter them manually. You can also receive settings at www.sonyericsson.com/support.

To create an email account

- 1 To start the setup wizard, select **Menu > Messaging > Email**.
- 2 Follow the instructions to create the account.

- 💡 *If you enter settings manually, you can contact your email provider for more information. An email provider could be the company that supplied your email address.*

To write and send an email message

- 1 Select **Menu > Messaging > Email > Write new**.
- 2 Select **Add > Enter email address**. Enter the email address and select **OK**.
- 3 To add more recipients, scroll to **To:** and select **Edit**.
- 4 Scroll to an option and select **Add > Enter email address**. Enter the email address and select **OK**. When you are ready, select **Done**.
- 5 Select **Edit** and enter a subject. Select **OK**.
- 6 Select **Edit** and enter the text. Select **OK**.
- 7 Select **Add** and choose a file to attach.
- 8 Select **Continue > Send**.

To receive and read an email message

- 1 Select **Menu** > **Messaging** > **Email** > **Inbox** > **Options** > **Check new email**.
- 2 Scroll to the message and select **View**.

To save an email message

- 1 Select **Menu** > **Messaging** > **Email** > **Inbox**.
- 2 Scroll to the message and select **View** > **Options** > **Save message**.

To reply to an email message

- 1 Select **Menu** > **Messaging** > **Email** > **Inbox**.
- 2 Scroll to the message and select **Options** > **Reply**.
- 3 Write the reply and select **OK**.
- 4 Select **Continue** > **Send**.

To view an attachment in an email message

- When you view the message, select **Options** > **Attachments** > **Use** > **View**.

Active email account

If you have several email accounts, you can change which one is active.

To change the active email account


- 1 Select **Menu** > **Messaging** > **Email** > **Accounts**.
- 2 Select an account.

Push email

You can receive notification in your phone from your email server that you have new email messages.

To turn on push email notification

- Select **Menu** > **Messaging** > **Email** > **Settings** > **Push email**.

 *When using push email, the phone stays connected to the email server and normal traffic rates apply. Contact your network operator for details.*

Instant messaging

You can connect and log in to the Instant messaging server to communicate online using chat messages. If you cannot use Instant messaging, see *I cannot use Internet-based services* on page 66.

Before using Instant messaging

If no settings exist in your phone, you need to enter server settings. Your service provider can provide standard settings information such as:

- Username
- Password
- Server address
- Internet profile

To enter Instant messaging server settings

- 1 Select **Menu** > **Messaging** > **IM** > **Configure**.
- 2 Scroll to a setting and select **Add**.

To log in to the Instant messaging server

- Select **Menu** > **Messaging** > **IM** > **Log in**.

To log out of the Instant messaging server

- Select **Options** > **Log out**.

To add a chat contact

- 1 Select **Menu** > **Messaging** > **IM** > the **Contacts** tab.
- 2 Select **Options** > **Add contact**.

To send a chat message

- 1 Select **Menu** > **Messaging** > **IM** > the **Contacts** tab.
- 2 Scroll to a contact and select **Chat**.
- 3 Write the message and select **Send**.

Status

You can show your status, for example, **Happy** or **Busy**, to your contacts only. You can also show your status to all users on the Instant messaging server.

To view my status

- 1 Select **Menu** > **Messaging** > **IM**.
- 2 You are the first contact listed.

To update your status

- 1 Select **Menu** > **Messaging** > **IM** > the **Contacts** tab.
- 2 Scroll to your name and select **Change**.
- 3 Edit the information and select **Save**.

Chat group

A chat group can be started by your service provider, by an individual Instant messaging user or by yourself. You can save chat groups by saving a chat invitation or by searching for a specific chat group.

To create a chat group

- 1 Select **Menu** > **Messaging** > **IM** > the **Chat groups** tab.
- 2 Select **Options** > **Add chat group** > **New chat group**.
- 3 Select who to invite from your contacts list and select **Continue**.
- 4 Enter a short invitation text and select **Continue** > **Send**.

To add a chat group

- 1 Select **Menu** > **Messaging** > **IM** > the **Chat groups** tab > **Options** > **Add chat group**.

2 Select an option.

- *Conversation history is saved between log out and when you log in again to let you return to chat messages from previous conversations.*

To save a conversation

- 1 Select **Menu > Messaging > IM > the Conversations** tab.
- 2 Enter a conversation.
- 3 Select **Options > Advanced > Save conversation**.

Imaging

You can take photos and record video clips to view, save or send. You find saved photos and video clips in **Media** and in **File manager**.

Using the camera

To activate the camera

- Select **Menu > Camera**.


Viewfinder and camera keys




- 1 Zoom in or out
- 2 Take photos/Record video
- 3 Select still camera or video camera
- 4 Brightness
- 5 Self-timer

- 6 Night mode
- 7 Camera: Shoot mode
Video: Video length
- 8 Camera key guide

To take a photo

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press the centre selection key to take a photo. The photo is automatically saved.

To record a video clip

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press the centre selection key to start recording.
- 3 To stop recording, press the centre selection key. The video clip is automatically saved.

To use zoom




- Press  or .

 *When taking a photo, zoom is available only in VGA picture size.*


To adjust brightness

- Press the volume key up or down.

To view photos

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options > View all photos**
- 3 Press  or  to scroll to a photo.

To view video clips

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options > View all clips**.
- 3 Scroll to a video clip and press the centre selection key.

More camera features

To change settings

- Activate the camera and select **Options**.


To view information about settings

- Scroll to a setting and select **Info**.

Photo fix

You can use Photo fix to improve photos. In a one-click operation, brightness, light and contrast are adjusted to give you the best possible photo. The improvements are saved as a copy of the photo. The original photo is not affected.

To improve a photo with Photo fix


- 1 Activate the camera and press the navigation key to scroll to .
- 2 Make sure **Review** is set to **On**. Select **Options > Review > On**.
- 3 Take a photo.
- 4 During review, select **Options > Photo fix**.

Viewing and tagging photos

To view photos in a slide show

- 1 Select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options > Slide show**.
- 5 Select a mood.

Viewing photos on a map

When you take a photo, you can attach your geographical position to it. This is called geo tagging. Geo-tagged photos are tagged with  in **Media**.

To view photos on a map

- 1 Select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.

- 4 Select **Options > View on map.**

! *To view photos on a map, you need a subscription that supports data transmission and Internet settings in your phone. You can download Internet settings using the setup wizard or from www.sonyericsson.com/support.*

To change the geo tagging setting



- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options > Add position.**
- 3 Select an option.


Photo tags

You can tag photos to categorise them in **Photo tags**. For example, you can create a tag called vacation and add it to all your vacation photos.

To create a new photo tag

- 1 Select **Menu > Media > Photo > Camera album.**
- 2 Select a month.
- 3 Scroll to a photo and select **View.**
- 4 Press  and select **Options > New tag.**
- 5 Enter a name and select **OK.**
- 6 Select an icon.
- 7 To tag the photo, select **Options > Tag this photo.**

To tag photos

- 1 Select **Menu > Media > Photo > Camera album.**
- 2 Select a month.
- 3 Scroll to a photo and select **View.**
- 4 Press  and scroll to a tag.
- 5 Select **Options > Tag this photo.**
- 6 For each photo you want to tag, scroll to the photo and select **Options > Tag this photo.**

Using photos

You can add a photo to a contact, use it during phone startup, as a wallpaper in standby or as a screen saver.

To use photos

- 1 Select **Menu > Media > Photo > Camera album.**
- 2 Select a month.
- 3 Scroll to a photo and select **View.**
- 4 Select **Options > Use as.**
- 5 Select an option.

Working with photos

You can view, enhance and organise your photos and video clips on your computer by installing the *Adobe™ Photoshop™ Album Starter Edition*. It is available for download at www.sonyericsson.com/support.

Use Media Go™ to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 27.

PhotoDJ™ and VideoDJ™

You can edit photos and video clips.

To edit and save a photo

- 1 Select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options > Edit in PhotoDJ™**.
- 5 Edit the photo.

To edit and save a video clip

- 1 Select **Menu > Organiser > File manager > Videos**.
- 2 Scroll to a video clip and select **Options > Edit in VideoDJ™**.
- 3 Edit the video clip.
- 4 Select **Options > Save**.

To trim a video clip

- 1 Select **Menu > Organiser > File manager > Videos**.
- 2 Scroll to a video clip and select **Options > Edit in VideoDJ™ > Edit > Trim**.
- 3 Select **OK > Set > Start** to set the starting point.

- 4 Select **Set > End** to set the ending point.
- 5 Select **Trim > Options > Save**.

Sending content to a Web site

If your subscription supports this service, you can send photos or video clips to a Web site. If you cannot send content to a Web site, see *I cannot use Internet-based services* on page 66.

- ! *Web services may require a separate license agreement between you and the service provider. Additional regulations and charges may apply. Contact your service provider.*

To send photos saved in your phone to a Web site

- 1 Select **Menu > Media > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options > Send > To Web site**.
- 5 Select a Web site from the list or select **New Web site > Add**.
- 6 Enter the email address used for sending to the Web site.
- 7 Enter the Web address and title.
- 8 Select **Save**.
- 9 Select a Web site from the list.
- 10 Enter text.
- 11 Select **Continue > Send**.

To send video clips saved in your phone to a Web site

- 1 Select **Menu** > **Media** > **Video** > **Videos**.
- 2 Scroll to a video clip and select **Options** > **Send** > **To Web site**.
- 3 Select a Web site from the list or select **New Web site** > **Add**.
- 4 Enter the email address used for sending to the Web site.
- 5 Enter the Web address and title.
- 6 Select **Save**.
- 7 Select a Web site from the list.
- 8 Enter text.
- 9 Select **Continue** > **Send**.

To send photos or video clips you have just taken to a Web site

- 1 When you have taken a photo or recorded a video clip, select **Send** > **To Web site**.
- 2 Select a Web site from the list or select **New Web site** > **Add**.
- 3 Enter the email address used for sending to the Web site.
- 4 Enter the Web address and title.
- 5 Select **Save** and select the Web site.
- 6 Enter text.
- 7 Select **Continue** > **Send**.


To go to a Web address from contacts

- 1 Select **Menu** > **Contacts**.
- 2 Scroll to a contact and select **Open**.

- 3 Scroll to a Web address and select **Go to**.


Printing photos

You can print photos using a USB cable connected to a PictBridge™ compatible printer.

 You can also print using a Bluetooth compatible printer that supports the Object Push Profile.

To print photos using a USB cable

- 1 Connect a USB cable to the phone.
- 2 Connect the USB cable to the printer.
- 3 Wait for feedback in the phone and select **OK**.
- 4 Enter printer settings (if required) and select **Print**.
- 5 Select **Menu** > **Media** > **Photo** > **Camera album**.
- 6 Select a month.
- 7 Scroll to a photo and select **Options** > **Print**.

 You should disconnect and re-connect the USB cable if there is a printer error.

Internet

If you cannot use the Internet, see *I cannot use Internet-based services* on page 66.

To start browsing

- 1 Select **Search**.
- 2 Enter a Web address, a search phrase or the name of a bookmark.
- 3 Scroll to an item in the list and select **Go to** or **Search**.

To exit the browser

- Select **Options > Exit browser**.

Bookmarks

You can create and edit bookmarks as quick links to your favourite Web pages.

To create a bookmark

- 1 When you browse the Internet, select **Options > Tools > Add bookmark**.
- 2 Enter a title and an address. Select **Save**.

To select a bookmark

- 1 Select **Menu > Internet**.
- 2 Select **Options > Go to > Bookmarks**.
- 3 Scroll to a bookmark and select **Go to**.

History pages

 

You can view Web pages you have browsed.

To view history pages

- Select **Menu > Internet > Options > Go to > History**.

More browser features

To use pan and zoom on a Web page

- 1 When you browse the Internet, press .
- 2 Use the navigation key to move the frame.
- 3 Press **Zoom**.
- 4 To switch back to pan, press .

! *To use pan and zoom, Smart-Fit must be turned off.*

To turn on or off Smart-Fit Rendering™

- 1 Select **Menu > Internet > Options > Advanced > Smart-Fit**.
- 2 Select an option.

To make a call when you browse

- Press .

To save a picture from a Web page

- 1 When you browse the Internet, select **Options > Tools > Save picture**.

- 2 Select a picture.

To find text on a Web page

- 1 Select **Options > Tools > Find on page**.
- 2 Enter text and select **Find**.

 

 
 
 
To send a link

- 1 When you browse the Internet, select **Options > Tools > Send link**.
- 2 Select a transfer method.

- ! *Make sure the receiving device supports the transfer method you select.*

Internet keypad shortcuts

You can use the keypad to go directly to an Internet browser function.

Key	Shortcut
	Bookmarks
 - 	Enter text to Enter address, Search Internet or search in Bookmarks
	Zoom
	Pan & zoom (when Smart-Fit is off)

To select Internet keypad shortcuts

- 1 Select **Menu > Internet**.
- 2 Select **Options > Advanced > Keypad mode > Shortcuts**.

Internet security and certificates

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.


To view certificates in the phone

- Select **Menu > Settings > General > Security > Certificates**.

Web feeds

You can subscribe to and download frequently updated content, such as news, podcasts or photos, using Web feeds.





 
To add new feeds for a Web page


- 1 When you browse a page on the Internet that has Web feeds, indicated by , select **Options > Web feeds**.
- 2 For each feed you want to add, scroll to the feed and select **Mark**.
- 3 Select **Continue**.

To search for Web feeds


- 1 Select **Menu > Media > Web feeds**.
- 2 Select **New feed** and enter a Web address.

To download content via Web feeds

- 1 Select **Menu > Media > Web feeds**.
- 2 Scroll to an updated feed and select **View** or .
- 3 Select a heading to expand.
- 4 Select an icon depending on content,  to open a Web page,  to download an audio podcast,  to download a video podcast or  to download a photo.

 You can also subscribe to and download content to a computer via feeds using **Media Go™**. You can then transfer the content to your phone.

Updating Web feeds

You can manually update your feeds, or schedule updates. When there are updates,  appears on the screen.

To schedule Web feed updates

- 1 Select **Menu > Media > Web feeds**.
- 2 Scroll to a feed and select **Options > Schedule update**.
- 3 Select an option.

 *Frequent updates may be costly.*



Web feeds in standby

You can show news updates on the standby screen.

To show Web feeds in standby

- 1 Select **Menu > Media > Web feeds**.
- 2 Scroll to a feed and select **Options > Settings > Standby ticker > Show in standby**.

To access Web feeds from standby

- 1 Select **Ticker**.
- 2 To read more about a feed, press  or  to scroll to a headline and select **Go to**.

Podcasts

Podcasts are files, for example, radio programmes or video content, that you can download and play. You subscribe to and download podcasts using Web feeds.

To access audio podcasts

- Select **Menu > Media > Music > Podcasts**.

To access video podcasts

- Select **Menu > Media > Video > Podcasts**.

Photo feeds

You can subscribe to Photo feeds and download photos. To start using Photo feeds, see *Web feeds* on page 52.


To access photo feeds

- Select **Menu > Media > Photo > Photo feeds**.

YouTube™


You can watch video clips on your phone by using the YouTube™ Java™ application. You can search for video clips or upload your own videos.

To access YouTube

- Select **Menu > Media > Video > YouTube**.
-  *To upload videos to YouTube, you need to access YouTube and follow the instructions in the application.*

Synchronising

You can synchronise in two different ways. You can synchronise your phone using a computer program or you can synchronise using an Internet service.

-  *Use only one of the synchronisation methods at a time with your phone.*

For more information, go to www.sonyericsson.com/support to read the *Synchronisation Feature guide*.

Synchronising using a computer

You can use a USB cable or Bluetooth wireless technology to synchronise phone contacts, appointments, bookmarks, tasks and notes with a computer program such as Microsoft Outlook®.

Before synchronising, you need to install the *Sony Ericsson PC Suite*.

-  *Sony Ericsson PC Suite software is available for download at www.sonyericsson.com/support.*

See *Required operating systems* on page 27.

To download Sony Ericsson PC Suite

- 1 **Computer:** In your Internet browser, go to www.sonyericsson.com/support.
- 2 Select a region and country.
- 3 Select *Software downloads*.
- 4 Select a phone from the list.
- 5 Select *Read more and download* under *PC Suite*.
- 6 Select *Download now* and save the file to your computer.

 Remember where you save the file.


To install Sony Ericsson PC Suite from the downloaded file

- 1 Locate the downloaded **Sony Ericsson PC Suite** file on the computer.
- 2 Double-click the file and follow the instructions.

To synchronise using the Sony Ericsson PC Suite

- 1 **Computer:** Start *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** When you are notified that the *Sony Ericsson PC Suite* has found

your phone, you can start synchronising.

 For usage details, see the *Sony Ericsson PC Suite Help* section once the software has been installed on your computer.

Synchronising using an Internet service

You can synchronise with an Internet service using SyncML™ or a Microsoft® Exchange Server using Microsoft Exchange ActiveSync. For more information, go to www.sonyericsson.com/support to read the *Synchronisation Feature* guide.

More features

Flight mode

In **Flight mode** the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- **Normal mode** – full functionality
- **Flight mode** – limited functionality

To activate the flight mode menu

- Select **Menu > Settings > General > Flight mode > Continue > Show at startup**.

To select flight mode

- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select **Flight mode**.

Update Service

You can update your phone with the latest software using your phone or a PC.

- ! *Updating using your phone is not possible in all countries/regions.*

To view the current software in the phone

- 1 Select **Menu > Settings > General > Update service**.
- 2 Select **Software version**.

Update Service using the phone

You can update your phone over the air using your phone. You do not lose personal or phone information.

- ! *Update Service using your phone requires data access such as GPRS, 3G or HSDPA.*

To select settings for Update Service

- Select **Menu > Settings > General > Update service > Settings > Internet settings**.

To use Update Service using the phone

- 1 Select **Menu > Settings > General > Update service**.
- 2 Select **Search for update** and follow the instructions that appear.

Update Service using a PC

You can update your phone using a USB cable and an Internet-connected PC.

- ! *Make sure all personal data in your phone memory is backed up before you perform*

an update using a PC. See *Backing up and restoring* on page 29.

To use Update Service using a PC

- Go to www.sonyericsson.com/updateservice.

Gesture control

When the phone is closed, you can mute incoming calls or snooze alarms with a hand gesture.

To use gesture control

- When a call comes in or the alarm rings, a light appears adjacent to the camera. When the light appears, sweep your hand back and forth once in front of the camera lens to mute the call or snooze the alarm.

! *The distance between your hand and the camera lens must be 0–7 cm (0–3 inches).*

To turn on gesture control

- Select **Menu > Settings > General > Gesture control > Turn on**.

Location services

You can get help to find your way and save your favourite locations. With information from mobile towers near you, you may be able to view your approximate location on a map.

💡 *You can get more exact information about your location with a GPS accessory supported by your phone.*

! *If you cannot use some features of Location services, see I cannot use Internet-based services on page 66.*

To use Google Maps for mobile

- Select **Menu > Entertainment > Location services > Google Maps**.

To learn more about Google Maps

- When you use Google Maps, select **Options > Help**.

To view your location

- When using Google Maps, press **(□ +)**.

To view a saved location on a map

- 1 Select **Menu > Entertainment > Location services > My favourites**.
- 2 Scroll to a location and select **Go to**.

To access favourites from Google Maps

- Press **(✕ 0/0)**.

Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.


To set the alarm

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Time:** and select **Edit**.
- 4 Enter a time and select **OK** > **Save**.

To set the recurrent alarm

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Recurrent:** and select **Edit**.
- 4 Scroll to a day and select **Mark**.
- 5 To select another day, scroll to the day and select **Mark**.
- 6 Select **Done** > **Save**.

To set the alarm signal

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to the  tab.
- 4 Scroll to **Alarm signal:** and select **Edit**.
- 5 Find and select an alarm signal. Select **Save**.

To silence the alarm

- When the alarm sounds, press any key.
- To repeat the alarm, select **Snooze**.

To turn off the alarm

- When the alarm sounds, press any key, then select **Turn off**.

To cancel the alarm


- 1 Select **Menu** > **Organiser** > **Alarms**.

- 2 Scroll to an alarm and select **Turn off**.

The alarm in silent mode

You can set the alarm not to sound when the phone is in silent mode.


To set an alarm to sound or not in silent mode

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to the  tab.
- 4 Scroll to **Silent mode:** and select **Edit**.
- 5 Select an option.

To set the snooze duration

- 1 Select **Menu** > **Organiser** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Snooze duration:** and select **Edit**.
- 4 Select an option.

Calendar

 You can synchronise your calendar with a computer calendar, with a calendar on the Web or with a Microsoft® Exchange Server (Microsoft® Outlook®).

Appointments

You can add new appointments or reuse existing appointments.

To add an appointment

- 1 Select **Menu > Organiser > Calendar**.
- 2 Select a date.
- 3 Scroll to **New appointment** and select **Add**.
- 4 Enter the information and confirm each entry.
- 5 Select **Save**.

To view an appointment

- 1 Select **Menu > Organiser > Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.

To edit an appointment

- 1 Select **Menu > Organiser > Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.
- 4 Select **Options > Edit**.
- 5 Edit the appointment and confirm each entry.
- 6 Select **Save**.

To set when reminders should sound

- 1 Select **Menu > Organiser > Calendar**.
- 2 Select a date.
- 3 Select **Options > Advanced > Reminders**.
- 4 Select an option.

! *A reminders option set in calendar affects a reminders option set in tasks.*

Notes

You can make notes and save them. You can also show a note in standby.

To add a note

- 1 Select **Menu > Organiser > Notes**.
- 2 Scroll to **New note** and select **Add**.
- 3 Write a note and select **Save**.

To show a note in standby

- 1 Select **Menu > Organiser > Notes**.
- 2 Scroll to a note and select **Options > Show in standby**.

To hide a note from standby

- 1 Select **Menu > Organiser > Notes**.
- 2 Scroll to the note shown in standby. This is marked with an icon. Select **Options > Hide in standby**.

Tasks

You can add new tasks or reuse existing tasks.

To add a task

- 1 Select **Menu > Organiser > Tasks**.
- 2 Select **New task** and select **Add**.
- 3 Select an option.
- 4 Enter details and confirm each entry.

To set when reminders should sound

- 1 Select **Menu** > **Organiser** > **Tasks**.
- 2 Scroll to a task and select **Options** > **Reminders**.
- 3 Select an option.

! *A reminders option set in tasks affects a reminders option set in calendar.*

Profiles

You can change settings such as the ring volume and vibrating alert to suit different locations. You can reset all profiles to the phone's original settings.

To select a profile

- 1 Select **Menu** > **Settings** > **General** > **Profiles**.
- 2 Select a profile.

To view and edit a profile

- 1 Select **Menu** > **Settings** > **General** > **Profiles**.
- 2 Scroll to a profile and select **Options** > **View and edit**.

! *You cannot rename the Normal profile.*

Time and date

To set the time

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **Time**.

- 2 Enter the time and select **Save**.

To set the date

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **Date**.
- 2 Enter the date and select **Save**.

To set the time zone

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **My time zone**.
- 2 Select the time zone you are in.

! *If you select a city, My time zone also updates the time when daylight saving time changes.*

To change the clock size of the standby screen

- 1 Select **Menu** > **Settings** > **Display** > **Clock size**.
- 2 Select an option.

Theme

You can change the appearance of the screen through items such as colours and wallpaper. You can also create new themes and download them. For more information, go to www.sonyericsson.com/fun.

To set a theme

- 1 Select **Menu** > **Settings** > **Display** > **Theme**.

- 2 Scroll to a theme and select **Set**.

Main menu layout

You can change the layout of the icons in the main menu.

To change the main menu layout


 
- 1 Select **Menu > Options > Main menu layout**.
- 2 Select an option.

Ringtones


 
To set a ringtone

- 1 Select **Menu > Settings > Sounds & alerts > Ringtone**.
- 2 Find and select a ringtone.

To set the ringtone volume

- 1 Select **Menu > Settings > Sounds & alerts > Ring volume**.
- 2 Press  or  to change the volume.
- 3 Select **Save**.

To turn off the ringtone

- Press  and then press and hold down .

 *The alarm signal is not affected.*

To set the vibrating alert

- 1 Select **Menu > Settings > Sounds & alerts > Vibrating alert**.

- 2 Select an option.

Screen orientation

You can change between landscape and portrait orientation, or select **Auto rotate** to have the orientation change when you rotate the phone.

To change screen orientation in the browser

- 1 Select **Menu > Internet**.
- 2 Select **Options > View**.
- 3 Select **Landscape** or **Portrait**.

To change screen orientation in Media

- 1 Select **Menu > Media > Settings > Orientation**.
- 2 Select an option.

Games

Your phone contains preloaded games. You can also download games. For more information, go to www.sonyericsson.com/fun. Help texts are available for most games.

To start a game

- 1 Select **Menu > Media > Games**.
- 2 Select a game.

To end a game

- Press .

Applications

You can download and run Java applications. You can also view information or set different permissions. If you cannot use Java applications, see *I cannot use Internet-based services* on page 66.

To select a Java application

- 1 Select **Menu** > **Organiser** > **Applications**.
- 2 Select an application.

To set permissions for a Java application

- 1 Select **Menu** > **Organiser** > **Applications**.
- 2 Scroll to an application and select **Options** > **Permissions**.
- 3 Set permissions.

Java application screen size

Some Java applications are designed for a specific screen size. For more information, contact the application vendor.

To set the screen size for a Java application

- 1 Select **Menu** > **Organiser** > **Applications**.
- 2 Scroll to an application and select **Options** > **Screen size**.
- 3 Select an option.

To set a Java™ application as a wallpaper

- 1 Select **Menu** > **Settings** > **Display**.
- 2 Select **Wallpaper** > **Application**.
- 3 Select a Java application.

! *You can only see the Java applications that have support for wallpaper.*

Walk mate

Walk mate is a step counter application. It keeps track of how many steps you have walked and how many steps you have left towards a daily goal. You can put your phone in a pocket when you use Walk mate. You can also set Walk mate as wallpaper to view in standby.

To set Walk mate as wallpaper

- 1 Select **Menu** > **Settings** > **Display**.
- 2 Select **Wallpaper** > **Application** > **Walk mate**.

Locks

SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator.

To unblock the SIM card

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

To edit the PIN

- 1 Select **Menu > Settings > General > Security > Locks > SIM protection > Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.
- 4 Re-enter the new PIN and select **OK**.

- ! *If Codes do not match appears, you entered the new PIN incorrectly. If Wrong*

PIN appears, followed by Old PIN; you entered your old PIN incorrectly.

To use the SIM card lock

- 1 Select **Menu > Settings > General > Security > Locks > SIM protection > Protection**.
- 2 Select an option.
- 3 Enter your PIN and select **OK**.

Phone lock

You can stop unauthorised use of your phone. Change the phone lock code (0000) to any four-to-eight-digit personal code.

- ! *It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.*

To use the phone lock

- 1 Select **Menu > Settings > General > Security > Locks > Phone protection > Protection**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

To unlock the phone

- Enter your code and select **OK**.

To change the phone lock code

- 1 Select **Menu > Settings > General > Security > Locks > Phone protection > Change code**.
- 2 Enter the old code and select **OK**.
- 3 Enter the new code and select **OK**.
- 4 Repeat the code and select **OK**.

IMEI number

Keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone is stolen.


To view your IMEI number

- Press **(*) 0 6 / (A)**, **(#) 0 6 / (S)**, **(0) +**, **(6)**, **(#) 0 6 / (S)**.

Style-Up™ covers

You can change the front and battery covers of your phone. Extra covers may be included in some kits.

To change the front cover

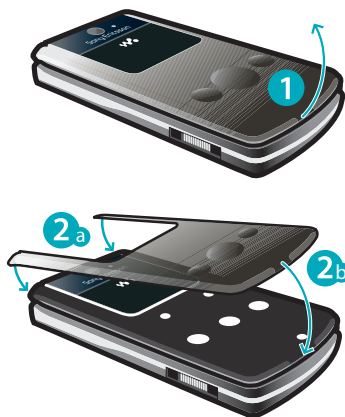


- 1 Lift the front cover off from the notch which is located on the right side of the flip.
- 2 Put the new front cover on top of the flip, then press the cover until it fits well into the flip.

💡 To change the battery cover, see To insert the SIM card on page 5.

Using the flip

When the phone is closed, you can use the media player keys on the flip to control your Walkman™ player or radio. You can lock these keys to avoid accidental touch.

To unlock the media player keys

- Slide the keylock switch away from .

To lock the media player keys

- Slide the keylock switch towards .

Troubleshooting

Some problems can be fixed using Update Service. Using Update Service on regular basis will optimize the phone's performance. See *Update Service* on page 56.

Some problems will require you to call your network operator.

For more support go to www.sonyericsson.com/support.

Common questions

I have problems with memory capacity or the phone is working slowly

Restart your phone every day to free memory or do a **Master reset**.

Master reset

If you select **Reset settings**, the changes that you have made to settings will be deleted.

If you select **Reset all**, your settings and content, such as contacts, messages, pictures, sounds and downloaded games, will be deleted. You may also lose content that was in the phone at purchase.

To reset the phone

- 1 Select **Menu > Settings > General > Master reset**.
- 2 Select an option.
- 3 Follow the instructions that appear.

I cannot charge the phone or battery capacity is low

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 8.

No battery icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

Some menu options appear in grey

A service is not activated. Contact your network operator.


I cannot use Internet-based services

Your subscription does not include data capability. Settings are missing or incorrect.

You can download settings using the setup wizard or by going to www.sonyericsson.com/support.

To download settings

- 1 Select **Menu > Settings > User help > Settings download**.
- 2 Follow the instructions that appear.

 *Contact your network operator or service provider for more information.*

I cannot send messages from my phone

Most messages require a service centre number to send them. The number is supplied by your service provider and is usually saved on the SIM card. If the number to your service centre is not saved on your SIM card, you must enter the number yourself.

To send most picture messages, you must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from your network operator, download settings using the setup wizard or at www.sonyericsson.com/support.

To enter a service centre number

- 1 Select **Menu > Settings > Connectivity > Message settings > Text message** and scroll to **Service centre**. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, select **Edit**.
- 3 Scroll to **New ServiceCentre** and select **Add**.
- 4 Enter the number, including the international “+” sign and country code.
- 5 Select **Save**.

To select an MMS profile

- 1 Select **Menu > Settings > Connectivity > Message settings > Picture message**.
- 2 Select an existing profile or create a new one.

To set the message server address

- 1 Select **Menu > Settings > Connectivity > Message settings > Picture message**.
- 2 Scroll to a profile and select **Options > Edit**.
- 3 Scroll to **Message server** and select **Edit**.
- 4 Enter the address and select **OK > Save**.

The phone does not ring or rings too softly

Make sure that **Silent mode** has not been set to **On**. See *To turn off the ringtone* on page 61.

Check the ringtone volume. See *To set the ringtone volume* on page 61.

Check the profile. See *To select a profile* on page 60.

Check the divert call options. See *To divert calls* on page 37.

The phone cannot be detected by other devices using Bluetooth wireless technology

You have not turned the Bluetooth function on. Make sure that the visibility is set to **Show phone**. See *To turn on the Bluetooth function* on page 28.

I cannot synchronise or transfer content between my phone and my computer, when using a USB cable.

The cable or software has not been properly installed. Go to www.sonyericsson.com/support to read Feature guides which contain detailed installation instructions and troubleshooting sections.

I have forgotten my code memo passcode

If you forget your passcode, you must reset the code memo. This means that all entries in the code memo are deleted. The next time you enter the code memo, you must proceed as if you are opening it for the first time.

To reset Code memo

- 1 Select **Menu > Organiser > Code memo**.
- 2 Enter an incorrect passcode three times.
- 3 **Reset Code memo and delete all items?** appears.
- 4 Select **Yes**.

Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?



Error messages

Insert SIM

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 5.

The SIM card connectors need cleaning. If the card is damaged, contact your network operator.

Insert correct SIM card

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select **Yes**.

PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 63.

Codes do not match

Codes that you have entered do not match. When you want to change a

security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 63.

No netw. coverage

Your phone is in flight mode. See *Flight mode* on page 56.

Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

Emerg. calls only

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 32.

PUK blocked. Contact operator.

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

Index

A

activity menu	15
alarms	57
answering service	36
applications	62
appointments	58
assembly	5
audio book	21
auto rotate	61

B

backing up and restoring	29
battery	
capacity	8
charging	8
inserting	6
Bluetooth™ wireless technology	28
bookmarks	51
business card	35

C

calendar	58
call divert	37
call list	33
call numbers in message	41
call time	39
caller-specific ringtones	34
calls	
accepting	39
answering and rejecting	31

emergency	32
handling two calls	38
international	31
making and receiving	31
putting on hold	37
recording	24
video	32

camera	45, 46
printing	50
code memo	68
conference calls	38

contacts

adding phone contacts	33
default contacts	33
groups	35
Smart search	34

costs	7
-------------	---

covers

changing	64
----------------	----

D

date	60
download	
settings	66
downloading music	22

E

email	42
emergency numbers	32
entering text	16

F

file manager	25
flight mode	56
flip	
locking	65
unlocking	65

G

games	61
geo tagging	47
gesture control	57
groups	35

H

handsfree	17, 36
Bluetooth™ wireless technology .	29
help	7
hiding number	39

I

imaging	45
IMEI number	64
instant messaging	43
Internet	
bookmarks	51
screen orientation	61
security and certificates	52
settings	66

K

keys	9
------------	---

L

language	16
location services	57
lock	
phone	63
SIM card	63
locking	
flip	65

M

master reset	65
Media Go™	27
media transfer	27
memory	15
memory card	15
memory status	35
menu overview	12
messages	
email	42
picture	40
text	40
voice	42
microphone	31
<i>MMS See picture messages</i>	
model name	8
MusicDJ™	24
my numbers	38
my phone number	8

N

navigating menus	14
notes	59

O	
online	
music	22
video clips	22
P	
pan and zoom	
Web pages	51
PC Suite	54
phone	
turning on	6
phone memory	8, 15
phone mode	55
phone name	28
photo fix	47
PhotoDJ™	49
photos	47
editing	49
feeds	54
geo tagging	47
improving	47
printing	50
tags	48
picture messages	40
pictures	47
PIN	7, 63
playlists	19
PlayNow™	21
podcasts	53
power saving	29
profiles	60
PUK	63
	push email
	43
R	
radio	23
recording	
listening to	25
restricted dialling	39
ringtones	61
setting	61
roaming	7
<i>RSS feeds See Web feeds</i>	
S	
screen orientation	61
search	
on Web pages	52
selection keys	14
SensMe™	20
setting	
ringtones	61
settings	
download	66
settings, Internet	66
shake control	18
shortcuts	14
SIM card	
copying to/from	34
inserting	5
lock and unblock	63
<i>SMS See text messages</i>	
<i>SOS See emergency numbers</i>	
sound recorder	24

speed dialling	36
standby	7
notes	59
step counter	62
streaming	22
Style-Up™ covers	64
synchronising	54

T

T9™ Text Input	16
tagging photos	47
tasks	59
templates	41
text messages	40
theme	60
time	60
time zone	60
TrackID™	22
transfer method	
Bluetooth™ wireless technology .	28
USB cable	26
transferring	
music	27
photos	27
sound	29
turning on/off	
Bluetooth™ function	28
phone lock	63
SIM lock protection	63

U

Update Service	56
----------------------	----

USB cable	26
-----------------	----

V

video editing	49
video player	23
video recorder	45
video ringtones	61
VideoDJ™	49
voice control	36
voice messages	42
voicemail	36
volume	
ear speaker	31
ringtone	61

W

Walk mate	62
Walkman™ player	17, 18
Web feeds	52
Web pages	
history	51

Y

YouTube	54
---------------	----

Z

zoom	46
------------	----

Sony Ericsson

Important information

Sony Ericsson Consumer Web site

On www.sonyericsson.com/support there is a support section where help and tips are on a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support
- A global network of Call Centers
- An extensive network of Sony Ericsson service partners

When you have any questions about the warranty conditions in this User guide, On www.sonyericsson.com, you will find the latest support tools and information. For operator-specific services and features, please contact your network operator. You can also contact our Call Centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes and/or a toll-free number). If you have any questions about the warranty needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to how to properly function, use the product checked by a certified service partner before charging or using it.

Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- Warning! May contain mercury. Do not dispose of in household waste.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not use the battery or try to lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint or attempt to disassemble or modify your product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic device or disable the radio transmitting functionality if the device when used causes any of the following conditions:
 - Do not use where a potentially explosive atmosphere exists.
 - Do not place your product or install wireless equipment in the area above an air bag in your car.
 - Do not use checked or broken displays may create sharp edges or splinters that could be harmful upon contact.
 - Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subjected to pressure.

BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL DAMAGES. EXTENDED WARRANTIES AND OTHER DAMAGES ARE NOT APPLICABLE. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

These limitations may affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

* GEOGRAPHICAL SCOPE OF THE WARRANTY

You have purchased your product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing of the Product, provided that an identical Product is sold in such country by an authorized Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country of original purchase due, for example, to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. In addition, ** In some countries/regions additional information (such as a valid warranty card) may be requested.

Instructions pour une utilisation efficace et sans danger

Respectez-les. Sinon, cela peut entraîner d'éventuels risques pour la santé ou un dysfonctionnement de l'appareil. Si vous doutez de vos bon fonctionnement, faites-le vérifier par un professionnel agréé des services agréés avant de le réutiliser.

Recommandations d'entretien et d'utilisation sûres de nos produits

- A volume élevé, les sons en provenance de l'extérieur peuvent être inaudibles. Évitez d'utiliser cette appareil en mode baladeur dans des situations où le sens de l'ouïe ne doit pas être altéré - en voiture, à bicyclette ou en traversant la rue par exemple.
- Manipulez l'appareil avec précaution et rangez-le dans un endroit propre, exempt de poussière.
- Attention! Ne laissez pas l'appareil à découvert si vous le jetez au sol.
- Ne jetez pas l'appareil à des températures extrêmes. N'exposez pas la batterie à des températures supérieures à +60°C (+140°F).
- Ne tenez pas l'appareil à proximité d'une flamme ou d'une cigarette allumée.
- N'exposez pas votre produit dans des zones présentant un risque d'explosion.
- N'exposez pas votre appareil et n'installez pas d'équipements de télécommunication sans fil au-dessus des coussins de sécurité de votre véhicule.
- N'utilisez pas votre appareil à proximité de stimulateurs cardiaques ou d'autres appareils médicaux. Consultez le personnel médical compétent et lisez les instructions de fabricant de l'appareil concerné.
- Cessez d'utiliser les appareils électroniques ou désactivez la fonctionnalité d'émission radio de l'appareil lorsque vous y êtes invité.
- Ne placez pas votre produit dans des zones présentant un risque d'explosion.
- N'exposez pas votre appareil et n'installez pas d'équipements de télécommunication sans fil au-dessus des coussins de sécurité de votre véhicule.
- N'utilisez pas votre appareil en présence de champs électromagnétiques ou des câbles au contact desquels vous risquez de vous blesser.
- N'utilisez pas votre oreillette Bluetooth dans une position inconfortable ou dans laquelle elle sera soumise à une pression.

Avertissement! Conservez hors de portée des enfants. Ne laissez pas les enfants jouer avec votre téléphone mobile ou ses accessoires. Ils pourraient se blesser ou blesser des tiers. Ces appareils peuvent contenir des petites pièces susceptibles de se détacher et d'être avalées ou respirées par les enfants.

Alimentation électrique (chargeur)

Ne branchez le chargeur que sur les sources d'alimentation indiquées sur le produit. Ne l'utilisez pas à l'extérieur ou dans des endroits humides. Ne modifiez pas le cordon et évitez de l'endommager ou de le tirer dessus. Débranchez le chargeur avant de le nettoyer. Ne modifiez jamais la fiche. Si elle ne s'insère pas dans la prise, faites installer une prise adéquate par un électricien. Lorsque le chargeur est branché, il consomme une petite quantité de courant. Pour éviter cette faible perte d'énergie, débranchez-la une fois que vous n'avez plus besoin de charger votre produit. Ne laissez pas le chargeur fonctionner sans surveillance pendant de longues périodes.

La capacité des batteries neuves ou utilisées peut être réduite à court terme. Chargez complètement votre produit avant sa première utilisation. Chargez-le uniquement pour l'usage recommandé. Chargez la batterie à une température ambiante comprise entre 0°C et 35°C.

La garantie fournie n'affecte ni les droits légaux du consommateur selon la législation applicable en vigueur, ni les droits du consommateur vis-à-vis du revendeur découlant de la législation en vigueur.

* PORTEE GEOGRAPHIQUE DE LA GARANTIE

Si vous avez acheté votre produit dans un pays membre de l'Espace Economique Européen (EEE), en Suisse ou en Turquie, vous pouvez le faire réparer dans n'importe quel pays de l'EEE, en Suisse ou en Turquie, selon les conditions de garantie en cours dans le pays dans lequel vous souhaitez réparer. à condition qu'un produit identique soit vendu dans ce pays par un distributeur agréé Sony Ericsson. Pour savoir si votre Produit est vendu dans le pays où vous vous trouvez, appelez le Centre Relation Consommateur Sony Ericsson local. Veuillez noter que certains services ne sont pas disponibles ailleurs que dans le pays de l'achat initial, par exemple parce que votre Produit présente des composants internes ou externes différents des modèles équivalents vendus dans d'autres pays et que les produits vendus à l'étranger de la carte SIM peuvent parfois ne pas être réparés.

Des informations supplémentaires (notamment une carte de garantie valide) peuvent être demandées dans certains pays/régions.

Wichtige Informationen

Sony Ericsson-Website für Verbraucher
Unter www.sonyericsson.com/support finden Sie einen Support-Bereich mit Hilfenformationen und Tipps. Die Site enthält Aktualisierungen der Computersoftware sowie Informationen zur empfohlenen Nutzung des Produkts.

Service und Support

Se profileren von folgenden exklusiven Leistungen:

- Globale und lokale Websites mit Supportinformationen
- Globales Netz von Call Centern
- Ein weltweites Netzwerk von Sony Ericsson Servicepartnern
- Service und Support. Weitere Informationen zur Garantie enthält diese Bedienungsanleitung.

Unter www.sonyericsson.com finden Sie die aktuellen Tools und Informationen. Wenden Sie sich mit Fragen zu betriebspezifischen Diensten und Funktionen an den jeweiligen Netzbetreiber. Sie können sich auch an einen unserer Call Center wenden. Ist Ihr Land bzw. Ihre Region nicht in der nachstehenden Liste aufgeführt, setzen Sie sich mit Ihrem Händler in Verbindung. Für Anrufe werden die üblichen Inlandsgebühren (einschließlich Steuer) berechnet, sofern es sich nicht um eine gebührenfreie Rufnummer handelt.) Ist für das Produkt eine Kundenentfernung erforderlich, setzen Sie sich mit dem Händler, bei dem es erworben wurde, oder mit einem unserer Servicepartner in Verbindung. Beachten Sie, dass die Kosten für den Kundendienst in der Regel nicht von der Garantie befreit sind.

Richtlinien für den sicheren und effizienten Einsatz

Beachten Sie sich sorgfältig. Ansonsten kann es zu Fehlfunktionen kommen und es besteht die Möglichkeit von Gesundheitsrisiken. Wenn das Produkt nicht richtig zu funktionieren scheint, lassen Sie es von einem zugelassenen Servicepartner untersuchen, bevor Sie es laden oder benutzen.

Children
Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others. Products may contain small parts that can become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may impose increased safety risks.

Battery

New and old batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for intended purpose only. Charge the battery in temperatures between +0°C (+41°F) and +45°C (+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before inserting the battery. Performance depends on temperature, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm (6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with your vehicle manufacturer's representative to be sure that your mobile phone is compatible with the vehicle's safety system. Performance depends on temperature, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks.

GPS/Location based functions

Some personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Accessibility Solutions/Special Needs

Ersetz persönliche Daten bevor Sie das Produkt zu entsorgen. Um Daten zu löschen, führen Sie ein vollständiges Zurücksetzen durch. Löschen von Daten aus dem Telefon garantiert nicht, dass diese nicht wiederhergestellt werden können. Sony Ericsson garantiert nicht gegen die Wiederherstellung von Informationen und übernimmt keine Verantwortung für die Offenlegung von Informationen, auch nach einem Zurücksetzen.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

+5°C (+41°F) et +45°C (+113°F). Ne mettez pas la batterie en bouche. Ne laissez pas les contacts de la batterie toucher un autre objet métallique. Mettez l'appareil hors tension avant de le nettoyer. Ne modifiez jamais la fiche. Si elle ne s'insère pas dans la prise, faites installer une prise adéquate par un électricien. Lorsque le chargeur est branché, il consomme une petite quantité de courant. Pour éviter cette faible perte d'énergie, débranchez-la une fois que vous n'avez plus besoin de charger votre produit. Ne laissez pas le chargeur fonctionner sans surveillance pendant de longues périodes.

Appareils médicaux personnels
Les téléphones mobiles peuvent nuire au fonctionnement de certaines prothèses. Réduisez le risque d'interférences en maintenant une distance minimale de 15 cm (6 pouces) entre la téléphone mobile et le dispositif. Utilisez le téléphone à l'oreille droite. Ne transportez pas le téléphone dans la poche d'une chemise. Mettez le téléphone hors tension si vous soupçonnez la présence d'interférences. Si vous possédez tout autre appareil médical, demandez conseil à un médecin et à son fabricant.

Sécurité routière

Certains constructeurs automobiles interdisent l'utilisation de téléphones dans leurs véhicules, sauf avec un kit mains libres et une antenne extérieure. Vérifiez auprès de votre concessionnaire que votre téléphone mobile ou oreillette Bluetooth n'affectera pas le système de sécurité de votre véhicule. A tout moment, toute votre attention doit se porter sur la conduite et vous êtes tenu de respecter la législation ainsi que les réglementations locales limitant l'utilisation d'appareils sans fil au volant.

Fonctions de localisation/GPS

Certains données personnelles avant de mettre l'appareil au rebut. Pour supprimer les données, effectuez une réinitialisation générale. La suppression des données n'est pas garantie par la loi, et il sera impossible de les récupérer. Sony Ericsson ne fournit aucune garantie quant à la récupération d'informations et n'assume aucune responsabilité vis-à-vis d'une divulgation ultérieure d'informations, même en cas d'exécution d'une réinitialisation générale.

Avertissement relatif au volume sonore

Ersetz persönliche Daten bevor Sie das Produkt zu entsorgen. Um Daten zu löschen, führen Sie ein vollständiges Zurücksetzen durch. Löschen von Daten aus dem Telefon garantiert nicht, dass diese nicht wiederhergestellt werden können. Sony Ericsson garantiert nicht gegen die Wiederherstellung von Informationen und übernimmt keine Verantwortung für die Offenlegung von Informationen, auch nach einem Zurücksetzen.

Appels d'urgence

Ces appels ne peuvent être garantis dans toutes les conditions. Ne vous fiez jamais uniquement à votre téléphone mobile pour effectuer des communications essentielles. Il peut y avoir impossibilité de passer un appel en n'importe quel endroit.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Medizinische Geräte
Mobiltelefone können die Funktion von implantierten medizinischen Geräten beeinträchtigen. Wird ein Mindestabstand von 15 cm (6 Zoll) zwischen Telefon und Schrittmacher eingehalten, wird das Risiko einer Störung verringert. Halten Sie das Telefon aus der Nähe von Herzschrittmachern oder anderen medizinischen Geräten und Systemen entfernt. Fragen Sie einen Arzt und Ihren Hersteller, bevor Sie das Produkt verwenden. Für alle medizinischen Geräte gilt: Fragen Sie einen Arzt und beachten Sie die Informationen des Herstellers.

Auto fahren

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

GPS-/Ortsbezogene Funktionen
Einige persönliche Daten bevor Sie das Produkt zu entsorgen. Um Daten zu löschen, führen Sie ein vollständiges Zurücksetzen durch. Löschen von Daten aus dem Telefon garantiert nicht, dass diese nicht wiederhergestellt werden können. Sony Ericsson garantiert nicht gegen die Wiederherstellung von Informationen und übernimmt keine Verantwortung für die Offenlegung von Informationen, auch nach einem Zurücksetzen.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage your radio, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna or use accessories that could block or interfere with the antenna.

Radio frequency (RF) exposure and Specific Absorption Rate (SAR)
When your phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic testing and evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value. Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone must be tested at a minimum of 15 mm from the body. For ear-to-ear use, only any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to: www.sonyericsson.com/health.

Malware

Malware (short for malicious software) is software that can harm your mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While your device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that your device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or clicking on links to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to your mobile phone from known, reliable sources.

Accessories

Only Sony Ericsson branded original accessories and certified service partners. Ersetz persönliche Daten bevor Sie das Produkt zu entsorgen. Um Daten zu löschen, führen Sie ein vollständiges Zurücksetzen durch. Löschen von Daten aus dem Telefon garantiert nicht, dass diese nicht wiederhergestellt werden können. Sony Ericsson garantiert nicht gegen die Wiederherstellung von Informationen und übernimmt keine Verantwortung für die Offenlegung von Informationen, auch nach einem Zurücksetzen.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Exposition aux hautes fréquences (HF) et taux d'absorption sélective (SAR)
Lorsque votre téléphone ou mains libres Bluetooth est sous tension, il émet de faibles niveaux d'énergie radiofréquence. Des lignes directrices de sécurité ont été développées à partir d'évaluations complètes et régulières tirées d'études scientifiques. Ces consignes fixent des seuils d'exposition aux ondes radio autorisées. Elles prévoient une marge de sécurité destinée à assurer la sécurité de toutes les personnes, ainsi qu'à prévoir tout écart de mesure.

Le taux d'absorption sélective (SAR, Specific Absorption Rate) permet de mesurer l'énergie hautes fréquences absorbée par le corps humain en cas d'utilisation d'un téléphone mobile. La valeur du taux d'absorption sélective est déterminée au niveau de puissance certifié le plus élevé, mesuré dans des conditions de laboratoire, mais comme le téléphone est conçu pour consommer le moins d'énergie possible pour atteindre le réseau choisi, elle peut être bien inférieure à cette valeur. Il n'existe aucune preuve qu'une différence de SAR puisse entraîner des différences de sécurité.

Les produits avec radio transmetteurs vendus aux États-Unis doivent être certifiés par la FCC (Federal Communications Commission). Le cas échéant, des tests sont effectués lorsque le téléphone est placé au niveau de l'oreille et porté sur le corps. Si vous portez le téléphone sur vous, celui-ci a été testé à une distance de 15 mm au moins du corps. Pour l'usage corps-à-corps, le téléphone doit être testé à une distance de 15 mm au moins du corps. Pour l'usage corps-à-corps, le téléphone doit être testé à une distance de 15 mm au moins du corps. Pour plus d'informations sur le taux d'absorption sélective (SAR) et l'exposition aux hautes fréquences (HF), accédez au site Web : www.sonyericsson.com/health.

Antiprogramme

Un antiprogramme (malware, abréviation de malicious software en anglais) est un logiciel susceptible de nuire à votre téléphone mobile ou à d'autres ordinateurs. Les antiprogrammes ou applications nuisibles peuvent comprendre des virus, des vers, des logiciels indésirables et autres programmes indésirables. Même si votre appareil applique des mesures de sécurité pour résister à ces intrus, Sony Ericsson ne peut garantir ou affirmer que votre appareil sera impénétrable à toute intrusion d'antiprogramme. Vous pouvez cependant réduire le risque d'attaques d'antiprogrammes en usant de précautions lors du téléchargement de contenu, en évitant de cliquer sur des liens suspects, en ne faisant pas ouvrir ou répondre aux messages provenant de sources inconnues, en utilisant des services de confiance pour accéder à Internet et en ne téléchargant sur votre téléphone mobile que le contenu provenant de sources connues et fiables.

Accessoires

Utilisez exclusivement des accessoires d'origine de marque Sony Ericsson, et faites uniquement appel à des partenaires de services certifiés. Sony Ericsson ne teste pas les accessoires d'autres fabricants. Les accessoires peuvent influencer l'exposition aux hautes fréquences (HF) et les performances radio. Le volume audio, la sécurité des composants électriques et d'autres domaines. L'utilisation d'accessoires et de pièces d'autres fabricants risque de mettre en péril votre santé et votre sécurité ou de réduire les performances.

Accessoires compatibles/Besoins particuliers

Aux États-Unis, les téléphones compatibles Sony Ericsson peuvent être utilisés avec les terminaux TTY (équipés de l'accessoire requis). Pour plus d'informations, appelez le Sony Ericsson Special Needs Center au 877 878 1996 (TTY) ou 877 207 2056 (voix), ou visitez le site Web www.sonyericsson-snc.com.

Disposing of the battery
Check local regulations or call a Sony Ericsson Call Center for information. Never use municipal waste.

If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use. The memory card is formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact your service support.

WARNING:
If your device requires an Adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press, bend or end the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check your device regularly for correct operation of the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any data loss or corruption you store on the memory card.
- Corrupted data may be damaged or lost when you remove the memory card or memory card adapter, or turn off the power while formatting, reading or writing data, or when you use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Ersetz persönliche Daten bevor Sie das Produkt zu entsorgen. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Some headphones may be harmful to your hearing.

End User License Agreement

This wireless device, including without limitation any media delivered with the device, is subject to a license agreement, other regulations and technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Einige Hersteller verbieten die Verwendung von Mobiltelefonen in ihren Fahrzeugen, es sei denn, ein Freisprecheinrichtung mit externer Antenne eingesetzt wird. Klären Sie mit dem Fahrzeughändler, ob das Mobiltelefon oder das Bluetooth-Headset mit dem Freisprecheinrichtung kompatibel ist. Beachten Sie, dass die Funkfunktionalität in bestimmten Umgebungen wie im Verkehr und das Fahren. Die geltenden Bestimmungen und Gesetze zur Benutzung von Mobilfunkgeräten während der Fahrt sind zu beachten.

Carte mémoire

Si votre produit est fourni d'origine avec une carte mémoire amovible, il est généralement compatible avec le combiné acheté, mais il peut qu'il ne soit pas compatible avec d'autres appareils ou avec les fonctionnalités de leurs cartes mémoire. Vérifiez la compatibilité des autres appareils avant tout achat ou utilisation. Si votre produit est équipé d'un lecteur de carte mémoire, vérifiez la compatibilité de la carte mémoire avant tout achat ou utilisation.

Si votre produit est fourni d'origine avec une carte mémoire amovible, il est généralement compatible avec le combiné acheté, mais il peut qu'il ne soit pas compatible avec d'autres appareils ou avec les fonctionnalités de leurs cartes mémoire. Vérifiez la compatibilité des autres appareils avant tout achat ou utilisation. Si votre produit est équipé d'un lecteur de carte mémoire, vérifiez la compatibilité de la carte mémoire avant tout achat ou utilisation.

Si votre produit est fourni d'origine avec une carte mémoire amovible, il est généralement compatible avec le combiné acheté, mais il peut qu'il ne soit pas compatible avec d'autres appareils ou avec les fonctionnalités de leurs cartes mémoire. Vérifiez la compatibilité des autres appareils avant tout achat ou utilisation. Si votre produit est équipé d'un lecteur de carte mémoire, vérifiez la compatibilité de la carte mémoire avant tout achat ou utilisation.

AVERTISSEMENT :

- Si votre périphérique nécessite un adaptateur pour pouvoir être inséré dans le combiné ou dans un autre périphérique, n'insérez pas la carte directement sans l'adaptateur requis.

Précautions relatives à l'utilisation de la carte mémoire

- N'exposez pas la carte mémoire à l'humidité.
- N'touchez pas les bornes avec les mains ou un objet métallique.
- N'exposez pas, n'insérez pas et ne laissez pas tomber la carte mémoire.
- N'essayez pas de démonter ou de modifier la carte mémoire.
- Ne rangez pas et n'utilisez pas la carte mémoire dans des endroits humides ou corrosifs, ou encore dans un endroit très chaud, notamment à l'intérieur d'un véhicule fermé en été, en plein soleil, à proximité d'un appareil de chauffage, etc.
- N'exposez pas et n'insérez pas une force excessive sur l'extrémité de l'adaptateur pour carte mémoire.
- N'exposez pas la mémoire à la

Sony Ericsson

FCC Statement
Declaration of Conformity

Sony Ericsson W508 Walkman™

UMTS HSDPA band 1 GSM GPRS/EDGE 850/900/1800/1900

FCC Statement

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2)

This device must accept any interference received, including interference that may cause undesired operation.



Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for W508

We, **Sony Ericsson Mobile Communications AB** of
Nya Vattentorget
SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony Ericsson type AAD-3880016-BV

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 908-1:V3.2.1, EN 301 908-2:V3.2.1, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V1.3.2, EN 301 489-24:V1.4.1, EN 60 950-1:2006 following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive **1999/5/EC** .

Lund, December 2008

CE 0682



Rikko Sakaguchi,
Head of Creation & Development

We fulfil the requirements of the R&TTE Directive (1999/5/EC).

.R&TTE (1999/5/EC) **إننا نحترم مقتضيات التوجيهات**

Biz R&TTE Təlimatlarının tələblərini yerinə yetiririk (1999/5/EC).

Ние изпълняваме изискванията на Директивата R&TTE (1999/5/EC).

Mi ispunjavamo zahtjeve R&TTE Direktive (1999/5/EC).

Complim els requisits de la directiva R&TTE (1999/5/EC).

Výrobek splňuje požadavky směrnice R&TTE (1999/5/EC).

Vi opfylder kravene i R&TTE-direktivet (1999/5/EC).

Die Anforderungen der Richtlinie für Funk- und Fernmeldegeräte **(1999/5/EG)** werden erfüllt.

Πληρούμε τις απαιτήσεις της Οδηγίας R&TTE **(1999/5/EK)**.

Cumplimos los requisitos de la Directiva R&TTE **(1999/5/EC)**.

Vastab direktiivi R&TTE Directive **(1999/5/EC)** nõuetele.

R&TTE **(1999/5/EC)** arteztarauaren baldintzak betetzen ditugu.

ما مقررات R&TTE را به طور کامل طبق دستورالعمل **(EC/1999/5)** انجام داده ایم.

Täytämme radio- ja telepäätelaitedirektiivin **(1999/5/EY)** asettamat vaatimukset.

Ce produit est conforme à la directive R&TTE **(1999/5/EC)**.

Sony Ericsson cumple cos requisitos esixidos pola directiva R&TTE **(1999/5/EC)**.

Mun cika sharadīn bayanin R&TTE **(99/5/EC)**.

Mi ispunjavamo zahtjeve R&TTE Direktive **(1999/5/EC)**.

Teljesítjük az R&TTE irányelv **(1999/5/EC)** követelményeit.

Kami memenuhi persyaratan yang ditetapkan Petunjuk R&TTE **(1999/5/EC)**.

Við uppfyllum R&TTE tilskipunina **(1999/5/EB)**.

Il prodotto soddisfa i requisiti della Direttiva R&TTE **(1999/5/EC)**.

אנו עומדים בכל הדרישות שבהנחיית ה-R&TTE **(EC/1999/5)**.

Mes vykdomė R&TTE direktyvos **(1999/5/EC)** reikalavimus.

Mēs izpildām R&TTE direktīvas **(1999/5/EK)** prasības.

Ние ги исполнуваме барањата на R&TTE Directive **(1999/5/EC)**.

We voldoen aan de vereisten die in de R&TTE-richtlijn **(1999/5/EG)** worden gesteld.

Vi oppfyller kravene i R&TTE-direktivet **(1999/5/EC)**.

Atendemos aos requisitos da Diretriz R&TTE **(1999/5/EC)**.

Spełniamy wymagania dyrektywy R&TTE (1999/5/WE).

São cumpridos os requisitos da Directiva R&TTE (1999/5/EC).

Îndeplinim cerințele Directivei R&TTE (1999/5/EC).

Изделие удовлетворяет требованиям Директивы R&TTE (1999/5/EC).

Výrobok spĺňa požiadavky smernice R&TTE (1999/5/EC).

Izpolnjujemo zahteve direktive za radijsko in telekomunikacijsko terminalsko opremo (1999/5/ES).

Ne përbushim kërkesat e direktivës R&TTE (1999/5/EC).

Mi ispunjavamo zahteve direktive R&TTE (1999/5/EC).

Re phethisa dithhoko tsa Taelo ya R&TTE (1999/5/EC).

Vi uppfyller kraven i R&TTE-direktivet (1999/5/EC).

เราปฏิบัติตามข้อกำหนดของข้อบังคับ R&TTE (1999/5/EC)

R&TTE Kararnamesinin (1999/5/EC) gerekliliklerini yerine getirmektediriz.

Цей Виріб відповідає вимогам Директиви R&TTE (1999/5/EC).

Chúng tôi đáp ứng các yêu cầu của Chỉ thị R&TTE (1999/5/EC).

A ti mu awon ibeere llana ti R&TTE se (99/5/EC).

我們符合 R&TTE 規程中的要求 (1999/5/EC)。

本公司符合 R&TTE Directive (1999/5/EC) 中的規定。

我们符合 R&TTE 指令 (1999/5/EC) 的要求。

Siyazifeza izidingo zeMiyalelo ye-R&TTE (1999/5/EC).

www.sonyericsson.com



Sony Ericsson

Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden

1225-6125.1