

Sony Ericsson

# User guide

T707

**Thank you** for purchasing a Sony Ericsson T707 Style. For additional phone content, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun). Register now to get free online storage and special offers at [www.sonyericsson.com/myphone](http://www.sonyericsson.com/myphone). For product support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support). Please read the *Important information* before you use your mobile phone.

## Instruction symbols

These symbols may appear in the User guide.



Note



Tip



Warning

- > Use a selection or navigation key to scroll and select. See *Navigation* on page 12.

# Getting started

## Assembly

Before you start using your phone, you need to insert a SIM card and the battery.

To insert the SIM card



- 1 Remove the battery cover.
- 2 Slide the SIM card into its holder with the gold-coloured contacts facing down.

To insert the battery



- 1 Insert the battery with the label side up and the connectors facing each other.
- 2 Attach the battery cover.

## Turning on the phone

To turn on the phone



- 1 Press and hold down ①.
  - 2 Enter your SIM card PIN, if requested, and select **OK**.
  - 3 Select a language.
  - 4 Follow the instructions to use the setup wizard for basic settings and useful tips.
- 💡 If you want to correct a mistake when you enter your PIN, press (C).

### Help

In addition to this User guide, an extended User guide, Feature guides and more information are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

Help and information are also available in your phone.

### To access the User guide

- Select **Menu** > **Settings** > **User help** > **User guide**.

### To view tips and tricks

- Select **Menu** > **Settings** > **User help** > **Tips and tricks**.

### To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.

## Charging the battery

The phone battery is partly charged when you buy it.

### To charge the battery



 
- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.

2 Remove the charger by tilting the plug upwards.

- ☛ You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.


## Phone overview

- 1 Ear speaker
- 2 Video call camera\*
- 3 Screen
- 4 Selection keys
- 5 Call key
- 6 Activity menu key
- 7 Navigation key
- 8 Connector for charger, handsfree and USB cable
- 9 End key, On/off key
- 10 C key (Clear)

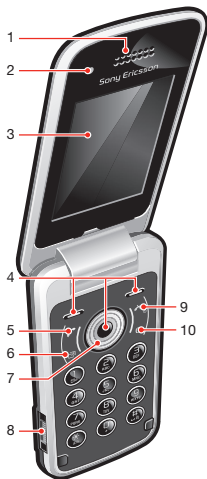



 - 11 Circular light effects
- 12 Pulsating light effects
- 13 External display
- 14 Screen light sensor
- 15 Main camera
- 16 Volume, digital zoom keys
- 17 Loudspeaker

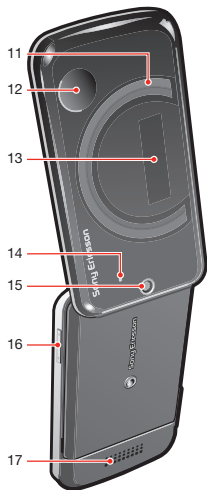

\*Video call camera may not be available in every market.

## Menu overview\*



### PlayNow™



### Camera



### Alarms



### Calls\*\*



#### All



#### Answered



#### Dialled



#### Missed



### Internet



### Messaging

Write new,  
InboxConversations,  
Messages, Email, IM, Call  
voicemail



### Contacts

Myself, New contact



### Organiser

File manager,  
Applications, Video call,  
Calendar, Tasks, Notes,  
Synchronisation, Timer,  
Stopwatch, Calculator,  
Code memo



### Entertainment

Online services,  
TrackID™, Location  
services, Games,  
VideoDJ™, PhotoDJ™,  
MusicDJ™, Remote  
control, Record sound,  
Demo tour



### Media

Photo, Music, Video,  
Games, Web feeds,  
Settings



### Radio



### Settings

#### General

Profiles, Time & date,  
Language, Update  
service, Gesture control,  
Voice control, New events,

Shortcuts, Flight mode, Security, Setup wizard, Accessibility, Phone status, Master reset

### **Sounds & alerts**

Ring volume, Ringtone, Silent mode, Light effects, Increasing ring, Vibrating alert, Message alert, Key sound

### **Display**

Wallpaper, Main menu layout, Theme, Startup screen, Screen saver, Clock size, Brightness, Edit line names

### **Calls**

Speed dial, Smart search, Divert calls, Switch to line 2, Manage calls, Time & cost, Show/hide my no., Handsfree, Open to answer

### **Connectivity**

Bluetooth, USB, Phone name, Synchronisation, Device management, Mobile networks, Data communication, Internet settings, Streaming settings, Message settings, SIP settings, Accessories

### **User help**


User guide, Settings download, Basic setup, Tips and tricks

\* Some menus are operator-, network- and subscription-dependent.

 
\*\* You can use the navigation key to scroll between tabs in submenus. For more information, see *Navigation* on page 12.





## Navigation

### To access the main menu

- When **Menu** appears on the screen, press the centre selection key to select **Menu**.
- If **Menu** does not appear on the screen, press , and then press the centre selection key to select **Menu**.

### To navigate the phone menus



- Press the navigation key , ,  or  to move through the menus.


### To end a function

- Press .

### To return to standby

- Press .

### To delete items

- Press  to delete items such as numbers, letters, pictures and sounds.

## Memory card

! You may have to purchase a memory card separately.

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also

be used as a portable memory card with other compatible devices.

You can move content between a memory card and the phone memory. See *Handling content in the phone* on page 23.

### To insert a memory card



- Remove the battery cover and insert the memory card with the gold-coloured contacts facing down.

## Entering text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

### To change text input method

- When you enter text, press and hold down **(\*) a/A**.

### To shift between capitals and lower-case letters

- When you enter text, press **(\*) a/A**.

### To enter numbers

- When you enter text, press and hold down (0+) – (9).

### To enter full stops and commas

- When you enter text, press (1).

### To enter a symbol

- 1 When you enter text, select **Options > Add symbol**.
- 2 Scroll to a symbol and select **Insert**.

### To enter text using T9™ Text Input

- 1 Select, for example, **Menu > Messaging > Write new > Message**.
- 2 If **T9** is not displayed, press and hold down (\*aA) to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press (5), (2), (6), (3). Write the whole word before looking at the suggestions.
- 4 Use (↻) or (↺) to view suggestions.
- 5 Press (#↵) to accept a suggestion.

### To enter text using multitap



- 1 From standby select, for example, **Menu > Messaging > Write new > Message**.
- 2 If **T9** is displayed, press and hold down (\*aA) to change to multitap text input.
- 3 Press (2) – (9) repeatedly until the desired letter appears.
- 4 When a word is written, press (#↵) to add a space.

# Calling

## Making and receiving calls

You need to turn on your phone and be within range of a network.



### To make a call

- 1 Enter a phone number (with international country code and area code, if applicable).
  - 2 Press .
-  You can call numbers from your contacts and call list. See *Contacts* on page 17, and *Call list* on page 16.

### To end a call

- Press .

### To make international calls

- 1 Press and hold down  until a “+” sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

### To answer a call

- Press .

### To reject a call

- Press .

### To change the ear speaker volume during a call


- Press the volume key up or down.

### To mute the microphone during a call

- 1 Press and hold down .
- 2 Press and hold down  again to resume.


### To turn on the loudspeaker during a call

- Press **SpkrOn**.


 Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

### Emergency calls

Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

 In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.

### To make an emergency call

- Enter 112 (the international emergency number) and press .



### To view your local emergency numbers

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Special numbers > Emergency nos..**

### Call list

You can view information about recent calls.

### To call a number from the call list

- 1 Press  and scroll to a tab.
- 2 Scroll to a name or a number and press .



## Contacts

You can save names, phone numbers and personal information in **Contacts**. Information can be saved in the phone memory or on the SIM card.

- 💡 You can synchronise your contacts using the *Sony Ericsson PC Suite*.

### To add a phone contact

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Scroll to **New number:** and select **Add**.
- 5 Enter the number and select **OK**.
- 6 Select a number option.
- 7 Scroll between the tabs and add information to the fields.
- 8 Select **Save**.

## Calling contacts

### To call with Smart search

- 1 Press **(0+)** – **(9)** to enter a sequence of (at least two) digits. All entries which match the sequence of digits or corresponding letters are shown in a list.
- 2 Scroll to a contact or a phone number and press **(↶)**.

### To turn on or off Smart search

- 1 Select **Menu > Settings > Calls > Smart search**.
- 2 Select an option.

## Imaging

You can take photos and record video clips to view, save or send. You find saved photos and video clips in **Media** and in **File manager**.

### Using the camera

To activate the camera

- Select **Menu > Camera**.

### Viewfinder and camera keys



- 
- 1 Zoom in or out

---

  - 2 Take photos/Record video

---

  - 3 Select still camera or video camera

---

  - 4 Brightness

---

  - 5 **Self-timer**

---

  - 6 **Night mode**


---

  - 7 Camera: **Shoot mode**  
Video: **Video length**


---

  - 8 Camera key guide
- 




### To take a photo

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press the centre selection key to take a photo. The photo is automatically saved.


### To record a video clip

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press the centre selection key to start recording.
- 3 To stop recording, press the centre selection key. The video clip is automatically saved.

### To view photos

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options > View all photos**
- 3 Press  or  to scroll to a photo.

### To view video clips

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options** > **View all clips**.
- 3 Scroll to a video clip and press the centre selection key.

## Music

You can listen to music, audio books and podcasts. Use **Media Go™** to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 25.

### Stereo portable handsfree



## Music player

### To play music

- 1 Select **Menu** > **Media** > **Music**.
- 2 Browse by category using the navigation key.
- 3 Scroll to a title and select **Play**.

### To stop playing music

- Press the centre selection key.

### To fast forward and rewind

- Press and hold down ⏩ or ⏪.

### To move between tracks

- Press ⏩ or ⏪.

### To change the volume

- Press the volume key up or down.

## PlayNow™

When you select **PlayNow™** you enter PlayNow™ arena, where you can download music, games, ringtones, themes and wallpapers. You can preview or listen to content before you purchase and download it to your phone. If you cannot use PlayNow™ and PlayNow™ arena, see *I cannot use Internet-based services* on page 34.

! This service is not available in all countries.

For extended functionality, you can also access the PlayNow™ arena Web shop on a computer from [www.playnow-arena.com](http://www.playnow-arena.com). For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read the *PlayNow™ arena* Feature guide.

### To use PlayNow™

- 1 Select **Menu > PlayNow™**.
- 2 Scroll through PlayNow™ arena and follow the instructions to preview and purchase content.

## TrackID™


TrackID™ is a music recognition service. You can search for title, artist and album name for a track you hear playing through a loudspeaker or on the radio in your phone. If you cannot use TrackID™, see *I cannot use Internet-based services* on page 34.

### To search for track information

- When you hear a track through a loudspeaker, select **Menu > Entertainment > TrackID™ > Start**.
- When the radio in your phone is playing select **Options > TrackID™**.

 For best results, use TrackID™ in a quiet area.

## Radio

 Do not use your phone as a radio in places where this is prohibited.

### To turn on the radio

- 1 Connect a handsfree to the phone.
- 2 Select **Menu > Radio**.

### To search for channels manually

- Press  or .



## Saving channels

You can save up to 20 preset channels.

To save channels automatically


- Select **Options** > **Auto save**.

To switch between saved channels

- Press  or .

## Transferring and handling content

You can transfer and handle content such as pictures and music.

- ! You are not allowed to exchange some copyright-protected material.  identifies a protected item.

### Handling content in the phone

You can use **File manager** to handle content saved in the phone memory or on a memory card. Tabs and icons in **File manager** show where the content is saved. If the memory is full, delete some content to create space.

To select more than one item in a folder

- 1 Select **Menu** > **Organiser** > **File manager**.
- 2 Scroll to a folder and select **Open**.
- 3 Select **Options** > **Mark** > **Mark several**.
- 4 For each item you want to mark, scroll to the item and select **Mark**.

To move items between the phone memory and the memory card

- 1 Select **Menu** > **Organiser** > **File manager**.
- 2 Find an item and select **Options** > **Manage file** > **Move**.
- 3 Select **Memory card** or **Phone**.

- 4 Scroll to a folder and select **Open**.
- 5 Select **Paste**.

## Sending content to another phone

You can send content, for example, in messages or using Bluetooth™ wireless technology.

### To send content

- 1 Scroll to an item and select **Options > Send**.
  - 2 Select a transfer method.
- ! Make sure the receiving device supports the transfer method you select.

## Using a USB cable

You can connect your phone to a computer with a USB cable to synchronise, transfer and back up phone content and use your phone as a modem. For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read Feature guides.

- ! You may have to purchase a USB cable separately.

## Before using a USB cable

See *Required operating systems* on page 25.

- ! Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.

### To disconnect the USB cable safely

- 1 **Computer:** Close any software that you are using with your phone.
- 2 Disconnect the USB cable.



## Drag and drop content

You can drag and drop content between your phone, a memory card and a computer in *Microsoft Windows Explorer*.

### To drag and drop content

- 1 Connect your phone to a computer using a USB cable.
- 2 **Phone:** Select **Media transfer**. The phone will remain activated during file transfer.
- 3 **Computer:** Wait until the phone memory and memory card appear as external disks in *Windows Explorer*.
- 4 Drag and drop selected files between the phone and the computer.

## Transferring content to and from a computer

You can use **Media Go™** to transfer media content between your phone and a computer.

-  **Media Go™** is available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### Required operating systems

You need one of these operating systems to use Sony Ericsson PC software:

- Microsoft® Windows Vista™
- Microsoft® Windows XP, Service Pack 2 or higher

### To download Media Go™

- 1 **Computer:** In your Internet browser, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).
- 2 Select a region and country.
- 3 Select *Software downloads*.

- 4 Select a phone from the list.
- 5 Select *Read more and download* under **Media Go™**.
- 6 Select *Download now* and save the file to your computer.

💡 Remember where you save the file.

#### To install Media Go™ from the downloaded file

- 1 Locate the downloaded **Media Go™** file on the computer.
- 2 Double-click the file and follow the instructions.

#### To transfer content using Media Go™

- ⚠ Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.
- 1 Connect the phone to a computer with a USB cable supported by your phone.
  - 2 **Computer:** Select *Start/Programs/Sony/Media Go™*.
  - 3 **Phone:** Select **Media transfer**.
  - 4 **Computer:** Select *Transfer to or from Device using Media Go™* and click *OK*.
  - 5 Wait until the phone appears in **Media Go™**.
  - 6 Move files between your phone and the computer in **Media Go™**.

## Backing up and restoring

You can backup and restore contacts, the calendar, tasks, notes and bookmarks using the *Sony Ericsson PC Suite*. Before backing up and restoring, you need to install the *Sony Ericsson PC Suite*, which is available from [www.sonyericsson/support](http://www.sonyericsson/support).

You can backup and restore contacts within your phone using a Memory Stick Micro™ (M2™) memory card. You can

move content between the memory card and the phone memory. See *Handling content in the phone* on page 23.

- ☛ **Back up your phone content regularly to make sure you do not lose it.**

To make a backup using the Sony Ericsson PC Suite

- 1 Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 Phone:** Select **Phone mode**.
- 4 Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and make a backup.

## Messaging



To view a message from the inbox

- Select **Menu > Messaging > Inbox**.
- Scroll to the message and select **View**.

### Sending messages

You can send messages from your phone. The maximum size of a standard text message is 160 characters including spaces if no other items are added to the message. If you enter more than 160 characters, a second message is created. Your messages are sent as one concatenated message.

To create and send a message

- Select **Menu > Messaging > Write new > Message**.
- Enter text. To add items to the message, press , scroll  and select an item.

3 Select **Continue** > **Contacts look-up**.

4 Select a recipient and select **Send**.

- If you send a message to a group, you will be charged for each member.

## Conversations

You can choose whether to view your messages in **Conversations** or **Inbox**. A messaging conversation shows all messaging communication between you and one of your contacts.

To view messages in **Conversations**

- 1 Select **Menu** > **Messaging** > **Inbox** > the **Conversations** tab.
- 2 Select a conversation.

To send a message from **Conversations**

- 1 Select **Menu** > **Messaging** > **Conversations**.
- 2 Select a conversation.
- 3 Write a message and select **Send**.

## Internet

If you cannot use the Internet, see *I cannot use Internet-based services* on page 34.

To start browsing

- 1 Select **Search**.
- 2 Enter a Web address, a search phrase or the name of a bookmark.
- 3 Scroll to an item in the list and select **Go to** or **Search**.

To exit the browser

- Select **Options** > **Exit browser**.

### To create a bookmark

- 1 When you browse the Internet, select **Options** > **Tools** > **Add bookmark**.
- 2 Enter a title and an address. Select **Save**.

## More features

### Flight mode

In **Flight mode** the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- **Normal mode** – full functionality
- **Flight mode** – limited functionality

### To activate the flight mode menu

- Select **Menu** > **Settings** > **General** > **Flight mode** > **Continue** > **Show at startup**.

### To select flight mode

- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select **Flight mode**.

### Update Service

You can update your phone with the latest software using your phone or a PC.

- ! Updating using your phone is not possible in all countries/regions.

### To view the current software in the phone

- 1 Select **Menu** > **Settings** > **General** > **Update service**.

## 2 Select **Software version**.

### **Update Service using a PC**

You can update your phone using a USB cable and an Internet-connected PC.

- ! Make sure all personal data in your phone memory is backed up before you perform an update using a PC. See *Backing up and restoring* on page 26.

#### To use Update Service using a PC

- Go to [www.sonyericsson.com/updateservice](http://www.sonyericsson.com/updateservice).

### **Gesture control**

When the phone is closed, you can mute incoming calls or snooze alarms with a hand gesture.

#### To use gesture control

- When a call comes in or the alarm rings, a light appears adjacent to the camera. When the light appears, sweep your hand back and forth once in front of the camera lens to mute the call or snooze the alarm.
- ! The distance between your hand and the camera lens must be 0–7 cm (0–3 inches).

#### To turn on gesture control

- Select **Menu** > **Settings** > **General** > **Gesture control** > **Turn on**.

### **Ringtones**

#### To set a ringtone

- 1 Select **Menu** > **Settings** > **Sounds & alerts** > **Ringtone**.
- 2 Find and select a ringtone.

### To turn off the ringtone

- Press  and then press and hold down .

! The alarm signal is not affected.

## Light effects


You can use circular light effects to be notified of new messages or incoming calls. You can add pulsating light effects to your favourite contacts. Turn off light effects to save battery power.

! Certain light effects cannot be turned off, for example, those you see when you open and close the phone, or when you add or remove an accessory.

### To turn on light effects

- 1 Select **Menu** > **Settings** > **Sounds & alerts** > **Light effects**.
- 2 Select **On**.

### To set a light effect for a phone contact

- 1 Select **Menu** > **Contacts**.
- 2 Scroll to a contact and select **Options** > **Edit contact**.
- 3 Scroll to  and then select **Light effect**.
- 4 Select an option and then select **Save**.

## Locks

### SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal

Unlocking Key). Your PIN and PUK are supplied by your network operator.

#### To unblock the SIM card

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

#### To edit the PIN

- 1 Select **Menu > Settings > General > Security > Locks > SIM protection > Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.
- 4 Re-enter the new PIN and select **OK**.

! If **Codes do not match** appears, you entered the new PIN incorrectly. If **Wrong PIN** appears, followed by **Old PIN:**, you entered your old PIN incorrectly.

## Troubleshooting

Some problems can be fixed using Update Service. Using Update Service on regular basis will optimize the phone's performance. See *Update Service* on page 29.

Some problems will require you to call your network operator.

For more support go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).



## Common questions

### I have problems with memory capacity or the phone is working slowly

Restart your phone every day to free memory or do a **Master reset**.

#### Master reset

If you select **Reset settings**, the changes that you have made to settings will be deleted.

If you select **Reset all**, your settings and content, such as contacts, messages, pictures, sounds and downloaded games, will be deleted. You may also lose content that was in the phone at purchase.

#### To reset the phone

- 1 Select **Menu > Settings > General > Master reset**.
- 2 Select an option.
- 3 Follow the instructions that appear.

### I cannot charge the phone or battery capacity is low

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 6.

### No battery icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

### Some menu options appear in grey


A service is not activated. Contact your network operator.

## I cannot use Internet-based services

Your subscription does not include data capability. Settings are missing or incorrect.

You can download settings using the setup wizard or by going to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### To download settings

- 1 Select **Menu > Settings > User help > Settings download**.
  - 2 Follow the instructions that appear.
-  Contact your network operator or service provider for more information.

## I cannot send messages from my phone

Most messages require a service centre number to send them. The number is supplied by your service provider and is usually saved on the SIM card. If the number to your service centre is not saved on your SIM card, you must enter the number yourself.

To send most picture messages, you must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from your network operator, download settings using the setup wizard or at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### To enter a service centre number

- 1 Select **Menu > Settings > Connectivity > Message settings > Text message** and scroll to **Service centre**.  
The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, select **Edit**.
- 3 Scroll to **New ServiceCentre** and select **Add**.

- 4 Enter the number, including the international “+” sign and country code.
- 5 Select **Save**.

#### To select an MMS profile

- 1 Select **Menu > Settings > Connectivity > Message settings > Picture message**.
- 2 Select an existing profile or create a new one.

#### To set the message server address

- 1 Select **Menu > Settings > Connectivity > Message settings > Picture message**.
- 2 Scroll to a profile and select **Options > Edit**.
- 3 Scroll to **Message server** and select **Edit**.
- 4 Enter the address and select **OK > Save**.

### **I cannot synchronise or transfer content between my phone and my computer, when using a USB cable.**

The cable or software has not been properly installed. Go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read Feature guides which contain detailed installation instructions and troubleshooting sections.

## **Error messages**

### **Insert SIM**

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 3.

The SIM card connectors need cleaning. If the card is damaged, contact your network operator.

### **Insert correct SIM card**

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

### **Wrong PIN/Wrong PIN2**

You have entered your PIN or PIN2 incorrectly. Enter the correct PIN or PIN2 and select **Yes**.

### **PIN blocked/PIN2 blocked**

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 31.

### **Codes do not match**

Codes that you have entered do not match. When you want to change a security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 31.

### **No netw. coverage**

Your phone is in flight mode. See *Flight mode* on page 29. Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are. The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

### **Emerg. calls only**

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 16.

## **PUK blocked. Contact operator.**

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

# **Legal information**

## **Sony Ericsson T707 Style**

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2009

Publication number: 1224-0623.1

**Attention: Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.**

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Sony, Memory Stick Micro™, M2™ and Media Go are trademarks or registered trademarks of Sony Corporation.

Google™, Google Maps™, YouTube and the YouTube logo are trademarks or registered trademarks of Google, Inc.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Microsoft, Windows and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

All illustrations are for illustration only and may not accurately depict the actual phone.

[www.sonyericsson.com](http://www.sonyericsson.com)



**Sony Ericsson**

Sony Ericsson Mobile Communications AB  
SE-221 88 Lund, Sweden







**Sony Ericsson**

FCC Statement  
Declaration of Conformity

**Sony Ericsson T707**

UMTS HSDPA band 1 GSM GPRS/EDGE 850/900/1800/1900

## FCC Statement

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2)

This device must accept any interference received, including interference that may cause undesired operation.



Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Declaration of Conformity for T707

We, **Sony Ericsson Mobile Communications AB** of  
Nya Vattentorget

SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

**Sony Ericsson type AAD-3880029-BV**

and in combination with our accessories, to which this  
declaration relates is in conformity with the appropriate  
standards EN 301 511:V9.0.2, EN 301 908-1:V3.2.1, EN 301  
908-2:V3.2.1, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301  
489-17:V1.3.2, EN 301 489-24:V1.4.1, EN 60 950-1:2006  
following the provisions of, Radio Equipment and  
Telecommunication Terminal Equipment directive **1999/5/EC** .

Lund, January 2009

**CE 0682**



---

Rikko Sakaguchi,

*Corporate Vice President and Head of Creation & Development*

We fulfil the requirements of the R&TTE Directive (1999/5/EC).

.R&TTE (1999/5/EC) **إننا نحترم مقتضيات التوجيهات**

Biz R&TTE Təlimatlarının tələblərini yerinə yetiririk (**1999/5/EC**).

Ние изпълняваме изискванията на Директивата R&TTE (**1999/5/EC**).

Mi ispunjavamo zahtjeve R&TTE Direktive (**1999/5/EC**).

Complim els requisits de la directiva R&TTE (**1999/5/EC**).

Vi opfylder kravene i R&TTE-direktivet (**1999/5/EC**).

Die Anforderungen der Richtlinie für Funk- und Fernmeldegeräte **(1999/5/EG)** werden erfüllt.

Πληρούμε τις απαιτήσεις της Οδηγίας R&TTE **(1999/5/EK)**.

Cumplimos los requisitos de la Directiva R&TTE **(1999/5/EC)**.

Vastab direktiivi R&TTE Directive **(1999/5/EC)** nõuetele.

R&TTE **(1999/5/EC)** arzetarauaren baldintzak betetzen ditugu.

**(EC/1999/5)** ما مقررات R&TTE را به طور کامل طبق دستورالعمل انجام داده ایم.

Täytämme radio- ja telepäätelaitedirektiivin **(1999/5/EY)** asettamat vaatimukset.

Ce produit est conforme à la directive R&TTE **(1999/5/EC)**.

Sony Ericsson cumple cos requisitos esixidos pola directiva R&TTE **(1999/5/EC)**.

Mun cika sharađin bayanin R&TTE **(99/5/EC)**.

Mi ispunjavamo zahtjeve R&TTE Direktive **(1999/5/EC)**.

Teljesítjük az R&TTE irányelv **(1999/5/EC)** követelményeit.

Kami memenuhi persyaratan yang ditetapkan Petunjuk R&TTE **(1999/5/EC)**.

Við uppfyllum R&TTE tilskipunina **(1999/5/EB)**.

Il prodotto soddisfa i requisiti della Direttiva R&TTE **(1999/5/EC)**.

**(EC/1999/5)** .אנו עומדים בכל הדרישות שבהנחיית ה-R&TTE.

Mes vykdome R&TTE direktyvos **(1999/5/EC)** reikalavimus.

Mēs izpildām R&TTE direktīvas **(1999/5/EK)** prasības.

Ние ги исполнуваме барањата на R&TTE Directive **(1999/5/EC)**.

We voldoen aan de vereisten die in de R&TTE-richtlijn **(1999/5/EG)** worden gesteld.

Atendemos aos requisitos da Diretriz R&TTE **(1999/5/EC)**.

Spełniamy wymagania dyrektywy R&TTE **(1999/5/WE)**.

São cumpridos os requisitos da Directiva R&TTE (1999/5/EC).  
Îndeplinim cerințele Directivei R&TTE (1999/5/EC).  
Изделие удовлетворяет требованиям Директивы R&TTE (1999/5/EC).  
Výrobok spĺňa požiadavky smernice R&TTE (1999/5/EC).  
Izpolnjujemo zahteve direktive za radijsko in telekomunikacijsko terminalsko opremo (1999/5/ES).  
Ne përbushim kërkesat e direktivës R&TTE (1999/5/EC).  
Mi ispunjavamo zahteve direktive R&TTE (1999/5/EC).  
Re phethisa ditlhoko tsa Taelo ya R&TTE (1999/5/EC).  
Vi uppfyller kraven i R&TTE-direktivet (1999/5/EC).  
เราปฏิบัติตามข้อกำหนดของข้อบังคับ R&TTE (1999/5/EC)  
Цей Виріб відповідає вимогам Директиви R&TTE (1999/5/EC).  
Chúng tôi đáp ứng các yêu cầu của Chỉ thị R&TTE (1999/5/EC).  
A ti mu awon ibeere Ilana ti R&TTE şe (99/5/EC).  
我們符合 R&TTE 規程中的要求 (1999/5/EC)。  
本公司符合 R&TTE Directive (1999/5/EC) 中的規定。  
我们符合 R&TTE 指令 (1999/5/EC) 的要求。  
Siyazifeza izidingo zeMiyalelo ye-R&TTE (1999/5/EC).

[www.sonyericsson.com](http://www.sonyericsson.com)



**Sony Ericsson**

Sony Ericsson Mobile Communications AB  
SE-221 88 Lund, Sweden

**1224-1618.1**