

Basic Manual



W62S
by Sony Ericsson

CDMA 1X
WIN
au by KDDI

- Contents/
Before use
- Phone call
- Text input
- Phone book
Pair Function
- Mail
- Camera
- EZweb
- EZ Navi
- LISMO
- Troubleshooting/
Remote Ctrl Lock
- Other features/
Index

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Welcome

Thank you for purchasing a W62S.

Before using your W62S, read this W62S Basic Manual (PDF manual) to ensure correct use of your W62S. After you have finished reading this manual, save this PDF manual on your PC or recordable media, and store the printed manuals in a safe place so you can retrieve them whenever they are needed.

If you lose any of these manuals, contact an au shop or Customer Service Center.

Printed manuals for W62S (Japanese)

The W62S comes with the "W62S かんたんマニュアル" and the "W62S 取扱説明書."

"W62S かんたんマニュアル"



Equivalent to this PDF manual.

"W62S 取扱説明書"



English version is not available.

The following manuals are also available from the au homepage:

- The downloadable "W62S かんたんマニュアル" and "W62S 取扱説明書"
(<http://www.au.kddi.com/torisetsu/index.html>)
- The au online manual (Japanese) for searching by keyword
(<http://www.au.kddi.com/manual/index.html>)

The au online manual (Japanese) is also available from the EZweb:

<To access>

☞ (EZ) → ☞ (EZweb) → "au one Top" → "auお客さまサポート" (au Customer Support)
→ "調べる" → "オンラインマニュアル"

If you have any trouble with your cellphone, please visit the "auお客さまサポート" (au Customer Support) "故障診断/困ったときは" web site and find out your problem before calling for professional repairs.

- From your W62S ⇒ ☞ (EZ) → ☞ (EZweb) → "au one Top" → "auお客さまサポート" (au Customer Support) → "調べる" → "オンラインマニュアル" → "故障診断Q&A"
- From your PC ⇒ (<http://www.kddi.com/customer/service/au/trouble/kosho/index.htm>)



The font, typeface, shape and color used in this manual may differ from those used on actual screen or may be omitted.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Etiquette

Cellphone etiquette

- Cellphones always emit weak signals while its power is on.
- Enjoy using your cellphone safely without disturbing those around you.

 
■ ■ Some places forbid the use of cellphones.

- Do not use your cellphone while you are driving. Doing so is dangerous and against the law.
- The use of a cellphone on aircraft is against the law. Be sure to turn your cellphone off before you board an aircraft.



■ ■ Consider where to use your cellphone and be careful of how loud you are speaking.

- Do not make calls while in cinemas, theaters, museums, libraries or other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being disturbed by the ringtone.
- Use your cellphone in places where you are not blocking traffic from passing.
- Move to areas where you do not disturb others on trains or in hotel lobbies.
- Take care not to speak too loudly during conversations.
- Ask for other people's permission before taking their photos with your cellphone's camera.

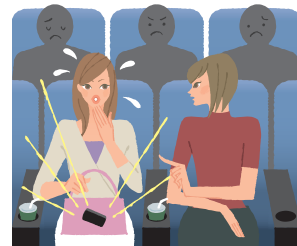

■ ■ Signals from cellphones may adversely effect medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may have a pacemaker. Turn your cellphone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or possess cellphones.



PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	

Basics of the cellphone

What W62S offers

International Roaming

You can use your W62S overseas as well as in Japan (supports GSM area).



Page
26

Mail

You can send mails to other cellphones or PCs.



Page
52

Camera

You can take photos or record movies and send them by e-mail easily.



Page
66

EZweb

You can download Chaku-Uta®(ringtones), Chaku-Uta-Full®(full songs) or wallpapers.



Page
72

2

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

EZ Navi

W62S supports "EZ Navi Walk," "Passenger Seat Navi," "Evacuate Navi" and "Security Navi" functions to confirm various location information.



Page
80

LISMO

W62S can be used as a portable music player.



Page
82

EZ FeliCa


You can use W62S as electronic money for shopping, member's cards, point cards, or to get e-coupon information as well.



Custom Menu

You can customize your own menu by setting frequently used functions.



 For details on other useful features, see page 88.


3


<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Manner mode and record message

Manner mode

You can use the manner mode to turn ringtones and other tones off to prevent others from being disturbed.

 
Hold down  for at least one second in the idle screen.

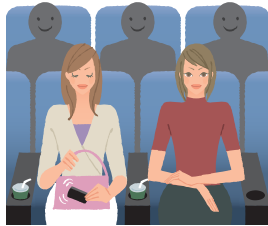

Page
32

Record message

You can record messages from other parties using answering message when you are unable to answer the call.

Hold down  for at least one second in the idle screen.




Page
35

Check the power, the signal, and the battery!

Usually, keep the cellphone's "power" on.

To make or receive calls, turn the power on.


Hold down  for at least one second.



Page
17

You cannot connect where you are not able to get a "signal."

It is sometimes difficult to get a signal in places even within the service area.

 indicates the reception strength.



Page
17

Pay attention to the remaining "battery" power.

The cellphone may not function properly if the remaining battery power is low.

 indicates the remaining battery power.



Page
17

4

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Do not use the cellphone while driving

It is against the law to even handle a cellphone while driving.

(November 1, 2004 Implementation of the Revised Road Traffic Law Enforcement)



✗ Glancing at the screen to see mail



✗ Holding the cellphone to talk

Use drive mode or turn the power off while driving

■ Drive mode

When the drive mode is set, the answering message saying "I am driving right now. Please leave your name and message after the beep." plays in Japanese and the caller's message can be recorded.

Press in the idle screen, and use and to select "Drive."



PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
---------------	---	----

Watch out for spam and one-ring call!

■ If you get incoming spam...

You can use the mail filter function to block the mail you specify/spoof e-mail.

The following are the main mail filter functions available for preventing spam:

- Reject e-mails marked with "未承諾広告※."
- Reject specified e-mails.
- Reject spoof e-mail.




Page
60


 
 
 
■ If you have an incoming call from an unknown number...

Such calls may be a scam to get you to return a call to the service with very high charges. This is called a "one-ring call."



The icon  will appear in the Received calls when you receive a one-ring call.

Be careful when you return a call to a number you don't know.

	Received	Dialed
No Image	3/29 11:06 	
	1 030001XXXX	
No Image	3/29 10:00	
	2 030004XXXX	
No Image	3/29 9:00	
	3 Carol Adam 	
No Image	3/28 22:00	
	4 John Smith 	
No Image	3/28 17:05	
	5 Ron Edward 	

6

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Disaster Message Board Service

 
If a large scale disaster occurs, you can register your vital information through EZweb. The registered vital information can be viewed from anywhere in Japan through EZweb or the Internet.

Registering the vital information

- ◆ If a large scale disaster occurs, you can use your au cellphone to register your vital information such as your condition or comments to the "Disaster Message Board" created on EZweb.
- ◆ After registering your vital information, you can notify it by e-mail to your preregistered family or acquaintances. They will be able to know that you posted your vital information on the "Disaster Message Board."


Viewing the vital information

- ◆ You can view the vital information of a person you want to know by entering the phone number from EZweb or the Internet.^{※1}
- ※1 You can view the vital information from other carriers' cellphones, PHS or PC by accessing <http://dengon.ezweb.ne.jp/>.

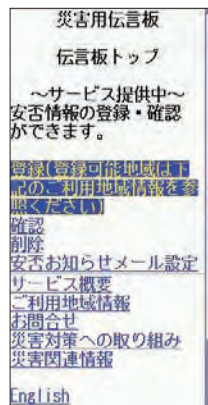

To access	<input type="button" value="E"/> (EZ) → press <input type="button" value="▶"/> to select <input type="button" value="Z"/> (EZweb) → use <input type="button" value="◀"/> and <input type="button" value="●"/> to select "au one Top" → "災害用伝言板"
	http://dengon.ezweb.ne.jp/

 - The registered information is saved for up to 72 hours.
- Up to 10 entries can be registered per phone number. When the number of entries exceeds 10, the oldest entry will be overwritten.
- A demonstration for this service can be viewed from (EZ) → press to select (EZweb) → use and to select "au one Top" → "auお客さまサポート" (au Customer Support) → "災害用伝言板(デモ版)."
- You can use the English version by selecting "English."

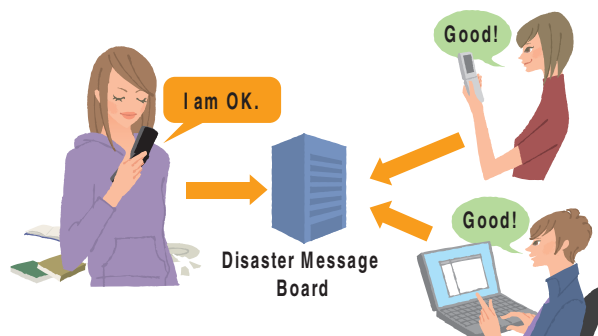

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認

Contents

Etiquette	1
Cellphone etiquette	1
Basics of the cellphone	2
What W62S offers	2
Manner mode and record message	4
Check the power, the signal, and the battery!	4
Do not use the cellphone while driving	5
Use drive mode or turn the power off while driving.....	5
Watch out for spam and one-ring call!	6
Disaster Message Board Service	7
Before use	10
Checking the package	10
Names of parts	11
How to charge the battery.....	12
How to connect stereo earphone to W62S	13
How to use the keys.....	14
Turning the power on	17
Default settings	17
Before using English display	18
How to read the display	18
Displaying the menu	20
Initial settings for e-mail and EZweb	22
Confirming your cellphone number/e-mail address	23
Changing your e-mail address	24
Using W62S overseas.....	26
Changing network from abroad	27
Phone call	28
Making a call.....	28
Making an international call	28
Receiving a call.....	30
Redialing the number (Dialed/Received)	31
Changing the volume during a call.....	31
Setting the manner mode	32
Changing the volume and tone of the ringtone	33
Setting the record message.....	35
Playing back recorded messages	36
Text input	37
Changing the input mode.....	37
Inputting text	38
Phone book	44
Saving to the phone book	44
Editing the phone book	46
Making a call from the phone book	48
Saving from Dialed/Received calls	49
Pair Function	50
Saving to the Pair Function.....	50
Making a call by using Pair Function	51

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Mail		52
	Using e-mail	52
	Creating and sending e-mail	53
	Opening a received e-mail	56
	Replying to a received e-mail	58
	Reading e-mails with photo or movie attached	59
	Filtering spam	60
	Using C-mail	61
	Creating and sending C-mail	62
	Opening a received C-mail	64
Camera		66
	What you can do with the camera	66
	Successful taking of photos	67
	Taking photos	68
	Viewing photos you have taken	70
	Attaching a photo to e-mail	71
EZweb		72
	About EZweb	72
	Displaying the au one Top	72
	Saving your favorite sites	74
	Viewing a site saved to the Bookmark	75
	Confirming your call costs	76
	Downloading Chaku-Uta®(ringtones)/Chaku-Uta-Full®(full songs)	76
EZ News Flash		78
	What you can do with EZ News Flash	78
	Setting EZ News Flash service	79
EZ Navi		80
	What you can do with EZ Navi	80
LISMO		82
	What you can do with LISMO	82
	Playing back an audio/movie file	83
Troubleshooting		85
Remote Ctrl Lock		86
	In case you have lost your W62S	86
Other features		88
	Radio Wave Exposure and Specific Absorption Rate (SAR) Information	90
Index		98


PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	

Before use


Checking the package

Before use

 ◆ Main unit

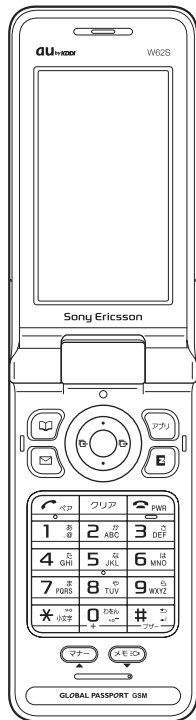


◆ Battery pack

 

◆ Desktop holder



 
◆ USB cable (sample)

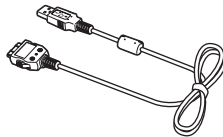

◆ CD-ROM



 ◆ Sony Ericsson round-type earphone jack conversion adaptor 01



◆ Stereo earphone (sample)



◆ "W62S かんたんマニュアル" (Japanese)



◆ "W62S 取扱説明書" (Japanese)



◆ Warranty (Japanese)

◆ Others (Japanese)

◆ Safety Precautions (Japanese)




- GLOBAL Passport GSM User's Guide (Leaflet)
- OsaiFu-Keitai® Basic Manual (Leaflet)
- LISMO Installation Guide (Japanese)
- Promotional Fliers (Japanese)

AC adaptor and microSD™ Memory Card are not included in this package. Please purchase standard AC adaptor 01/02 (optional) and microSD™ Memory Card (sold separately).

Standard AC adaptor 01 is designed for use in Japan only. When charging your W62S overseas, please be sure to use standard AC adaptor 02.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

   Names of parts

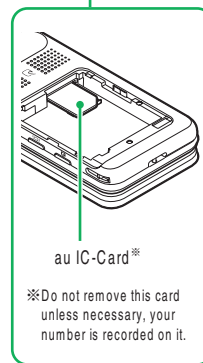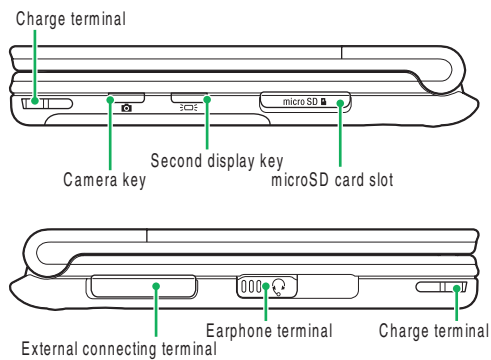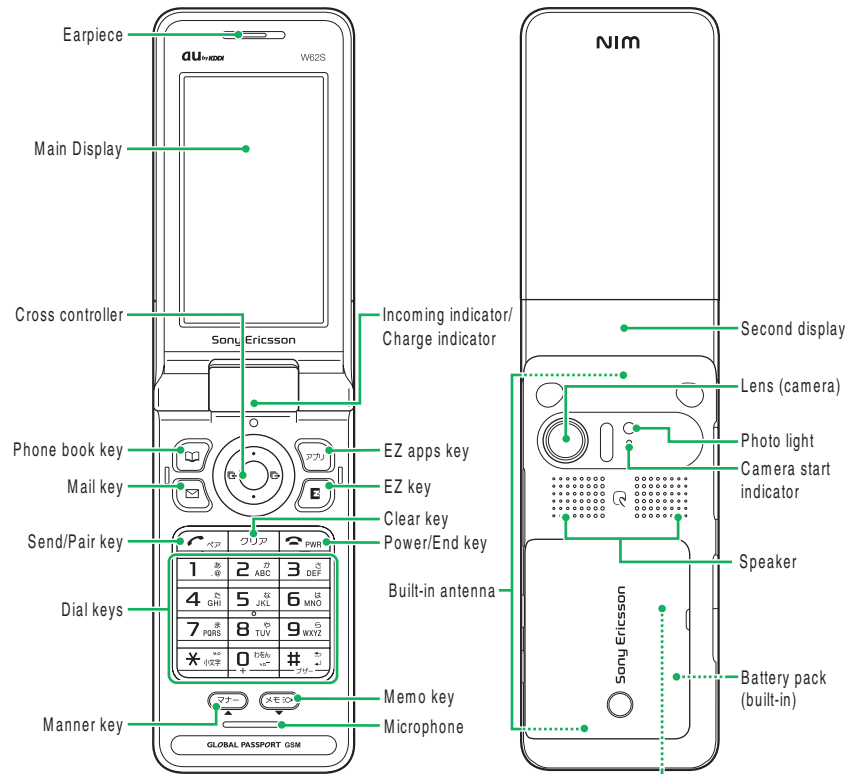



Before use

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

How to charge the battery

 
The battery pack is not fully charged at the time of purchase.
Before you use the W62S, charge the battery pack.

1 Connect the standard AC adaptor 01/02 (optional) to the connecting terminal of the desktop holder.

-  Carefully check the connector shape, and then connect it.
-  When charging your W62S overseas, please be sure to use standard AC adaptor 02.

2 Fold out the power plug of the standard AC adaptor 01/02 (optional), and plug it into a 100 V AC power outlet.

3 Place W62S (closed, Battery pack attached) onto the desktop holder.

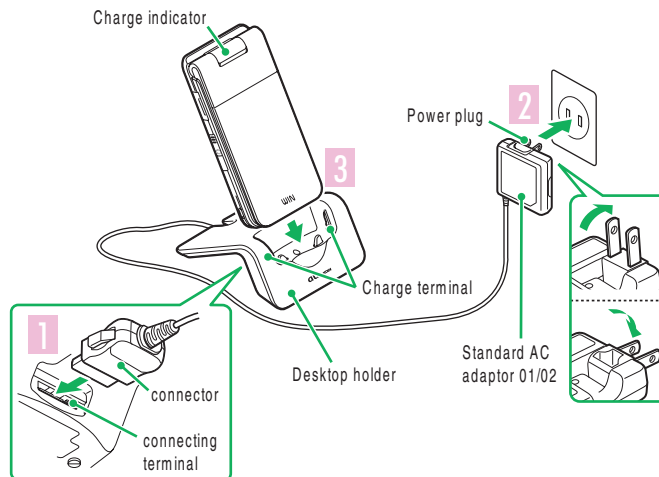


• Charging is in progress

Charge start tone sounds and the charge indicator lights up in red.

 appears.

• Charging is finished

Charge completed tone sounds and the charge indicator light turns off.


 When the battery is fully charged, pull out W62S upwards.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Charging by directly connecting the standard AC adaptor 01/02 (optional)

You can also charge the battery pack by directly connecting the standard AC adaptor 01/02 (optional) to the W62S.

 Carefully check the connector shape, and then connect it.

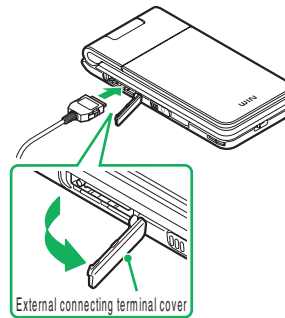


Before use

How to connect stereo earphone to W62S

1 Connect the stereo earphone to the Sony Ericsson round-type earphone jack conversion adaptor 01.


 
2 Slide the earphone terminal cover to open in the direction of the arrow, as shown below. Then insert the Sony Ericsson round-type earphone jack conversion adaptor 01 plug straight to the terminal.

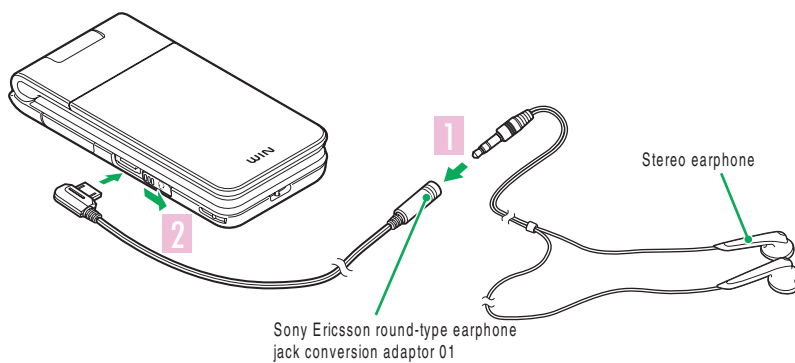

Do not force to connect in the wrong direction. Otherwise, it may cause damage. Please connect in the direction as shown in the illustration above.


<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

  How to use the keys

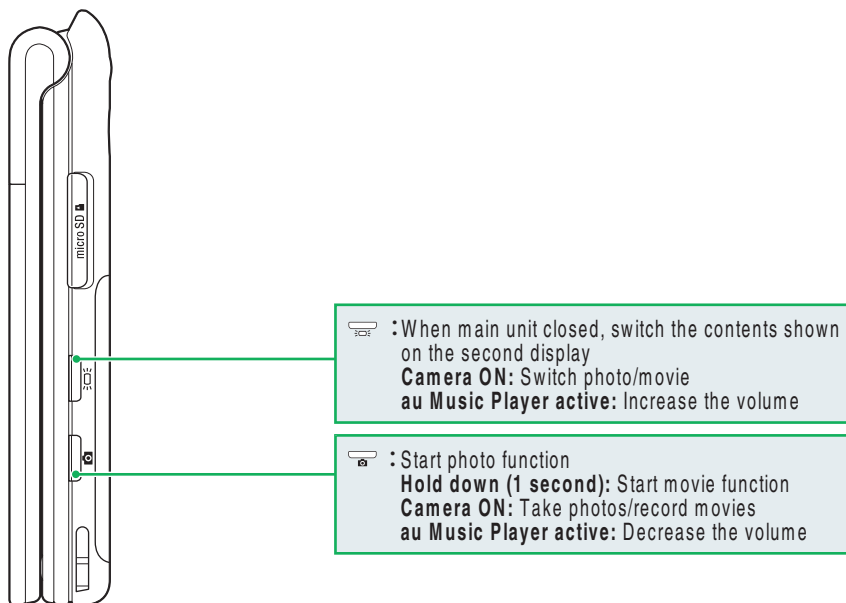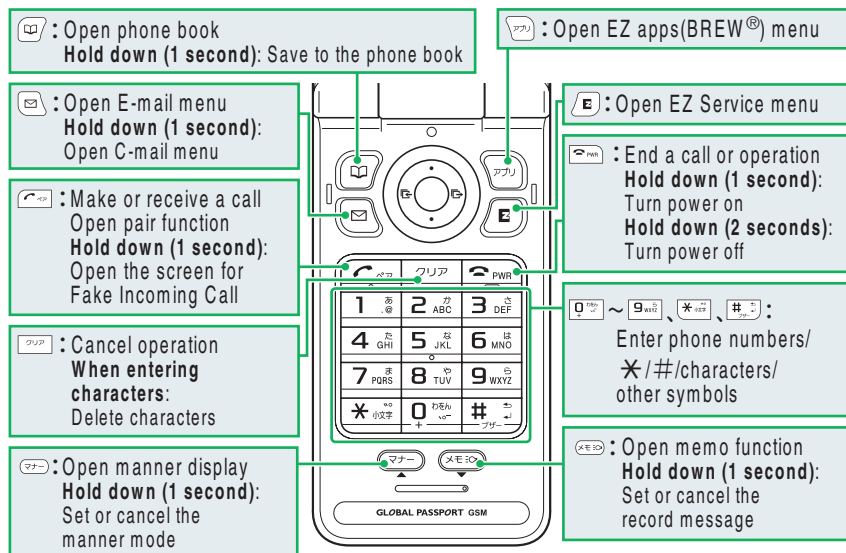

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

 How to use cross controller™

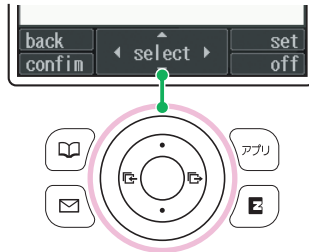

Display	Description in this manual	Operation	Explanation
			Press up and down Move the cursor up and down Operations in the idle screen ▲ Hold down (1 second): Open schedule ▼ Hold down (1 second): Open data folder (page 70)
			Press left and right Move the cursor left or right Display previous or next screen Operations in the idle screen ◀:Open Received calls (page 31) ▶:Open Dialed calls (page 31)
			Press center (center key) Select the item Operations in the idle screen Open Main menu Hold down (1 second): Set or cancel keylock

Before use

➔ Continued on the next page


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

Before use

Soft keys

Soft keys work according to the displayed indication as shown below.

 The displayed indications and function of the keys will vary depending on the operation selected.


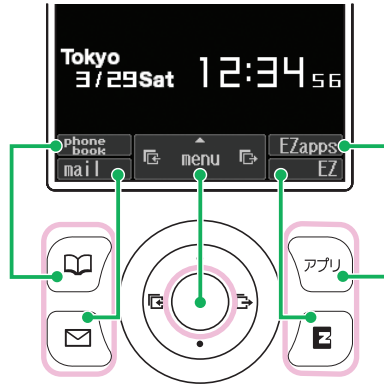


16

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----


Turning the power on

  1 Hold down  for at least one second.

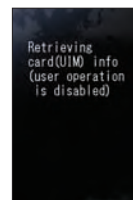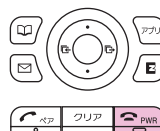

Check the remaining battery power.



- Charge the battery pack when the power is low.
- "" appears during charging.

Check the reception strength.



- You cannot receive or make calls when "" (Out of service area) is displayed.
- You may not be able to receive or make calls when "" (Very weak) is displayed.



(the idle screen)

Before use

To turn the power off

Hold down  for at least two seconds.

Default settings

The followings are set by default.

Chg Lock No. (Change Lock No.)	1234	Font size	General font : Large EZweb font : Middle E-mail font : Middle C-mail font : Large Input font : Large
Caller ID	ON		


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

Before using English display

To set English display

- ① Press (メニュー) in the idle screen → press .
- ② Press to select "English," and press (選択).

 How to read the display

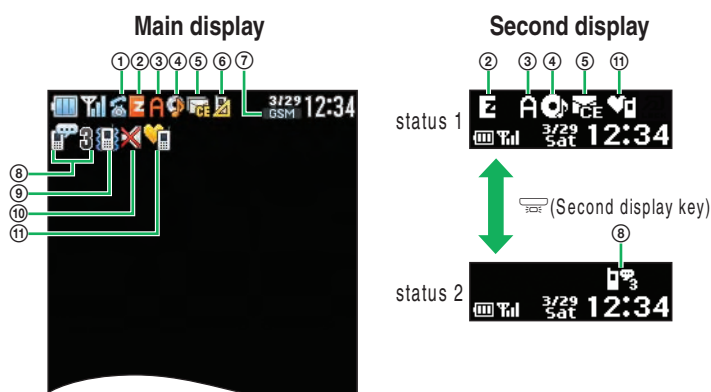




Icon ^{**1}	Description
①	- During a call
②	While you are using EZ Service menu/EZweb
③	While you are using EZ apps
④	While you are using au Music Player
⑤	When mail was received but not yet read
⑥	When you missed an incoming call
⑦	While Overseas (GSM) mode is set - appears when data communications is available.
⑧	While record message is set The number of recorded messages (1 to 10)
⑨	When the vibrator is set to "ON"
⑩	When the ring volume is set to "OFF"
⑪	While the manner mode is set






**1 Main display icon is on the left, Second display icon is on the right.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	

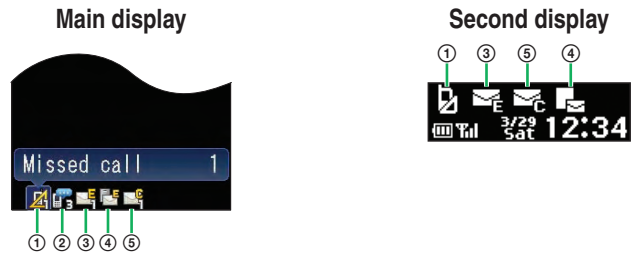  
 


Notification Icons

Notification Icons appear on screen when you have missed calls or unread mails, other function-related information to notify, etc. On main display, you can see that information using  to move the cursor on the icon and press  (select).



Icon ^{※1}	Description
① 	When there is a missed call
② 	When there is an unheard recorded message
③ 	When an e-mail was received
④ 	When there is an unreceived e-mail stored at the center
⑤ 	When a C-mail was received



※1 Main display icon is on the left, Second display icon is on the right.

 To open Main menu from the screen with Notification Icons, press  or  to move the cursor away from the icon and press  (menu).

Before use

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Displaying the menu

You can access "Main menu" and "EZ Service menu" to use various settings and functions of W62S. Use  and  for operation.

Main menu



PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	