

# Basic Manual



W64S

by Sony Ericsson



Contents/  
Before use

Phone call

Text input

Phone book  
Pair Function

Mail

Camera

EZweb

EZ Navi

au Media Tuner

Troubleshooting/  
Remote Ctrl Lock

Other features/  
Index

PTX-930 暫定版	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Welcome

Thank you for purchasing a W64S.

Before using your W64S, read this W64S Basic Manual (PDF manual) to ensure correct use of your W64S. After you have finished reading this manual, save this PDF manual on your PC or recordable media, and store the printed manuals in a safe place so you can retrieve them whenever they are needed.

If you lose any of these manuals, contact an au shop or Customer Service Center.

### Printed manuals for W64S (Japanese)

The W64S comes with the "W64S かんたんマニュアル" and the "W64S 取扱説明書."

#### "W64S かんたんマニュアル"



Equivalent to this PDF manual.

#### "W64S 取扱説明書"



English version is not available.

The following manuals are also available from the au homepage:

- The downloadable "W64S かんたんマニュアル" and "W64S 取扱説明書"  
(<http://www.au.kddi.com/torisetsu/index.html>)
- The au online manual (Japanese) for searching by keyword  
(<http://www.au.kddi.com/manual/index.html>)

The au online manual (Japanese) is also available from the EZweb:

<To access>

- (EZ) (EZweb) "au one Top" "auお客さまサポート" (au Customer Support)  
"調べる" "オンラインマニュアル"

If you have any trouble with your cellphone, please visit the "auお客さまサポート" (au Customer Support) "故障診断/困ったときは" web site and find out your problem before calling for professional repairs.

- From your W64S (EZ) (EZweb) "au one Top" "auお客さまサポート" (au Customer Support) "調べる" "オンラインマニュアル" "故障診断Q&A"
- From your PC (<http://www.kddi.com/customer/service/au/trouble/kosho/index.html>)

The font, typeface, shape and color used in this manual may differ from those used on actual screen or may be omitted.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

# Etiquette

## Cellphone etiquette

Cellphones always emit weak signals while its power is on.  
Enjoy using your cellphone safely without disturbing those around you.

### ■ ■ Some places forbid the use of cellphones.

- Do not use your cellphone while you are driving. Doing so is dangerous and against the law.
- The use of a cellphone on aircraft is against the law. Be sure to turn your cellphone off before you board an aircraft.



### ■ ■ Consider where to use your cellphone and be careful of how loud you are speaking.

- Do not make calls while in cinemas, theaters, museums, libraries or other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being disturbed by the ringtone.
- Use your cellphone in places where you are not blocking traffic from passing.
- Move to areas where you do not disturb others on trains or in hotel lobbies.
- Take care not to speak too loudly during conversations.
- Ask for other people's permission before taking their photos with your cellphone's camera.



### ■ ■ Signals from cellphones may adversely effect medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may have a pacemaker. Turn your cellphone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or possess cellphones.



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

# Basics of the cellphone

## What W64S offers

### International Roaming

You can use your W64S overseas as well as in Japan (supports GSM area).



Page  
26

### Mail

You can send mails to other cellphones or PCs.



Page  
50

### Camera

 
You can take photos or record movies and send them by e-mail easily.



Page  
64

### EZweb

You can download Chaku-Uta® (ringtones), Chaku-Uta-Full® (full songs) or wallpapers.

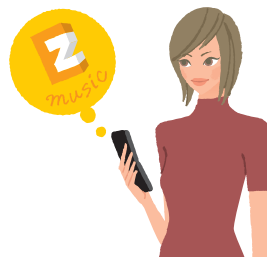

Page  
70

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

## EZ Navi

W64S supports "EZ Navi Walk," "Passenger Seat Navi," "Evacuate Navi" and "Security Navi" functions to confirm various location information.



Page  
**78**

## LISMO

W64S can be used as a portable music player.

## au Media Tuner

You can enjoy Television (1Seg), EZ Channel-Plus and EZ Channel.



Page  
**80**

## EZ FeliCa


You can use W64S as electronic money for shopping, member's cards, point cards, or to get e-coupon information as well.



## Custom Menu

You can customize your own menu by setting frequently used functions.




 For details on other useful features, see page 88.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

## Manner mode and record message

### Manner mode

You can use the manner mode to turn ringtones and other tones off to prevent others from being disturbed.


Hold down  for at least one second in the idle screen.



Page  
31

### Record message

You can record messages from other parties using answering message when you are unable to answer the call.

Hold down  for at least one second in the idle screen.



Page  
34

## Check the power, the signal, and the battery!

### Usually, keep the cellphone's "power" on.

To make or receive calls, turn the power on.


Hold down  for at least one second.



Page  
16

### You cannot connect where you are not able to get a "signal."

It is sometimes difficult to get a signal in places even within the service area.

 indicates the reception strength.



Page  
16

### Pay attention to the remaining "battery" power.

The cellphone may not function properly if the remaining battery power is low.

 indicates the remaining battery power.



Page  
16

4

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Do not use the cellphone while driving

Do not use the cellphone while driving a car/motorcycle/bicycle. It may cause a traffic accident. Use of the cellphone while driving a car/motorcycle is forbidden by the law. Use of the cellphone while driving a bicycle may be punished by the law too.



✗ Glancing at the screen to see mail



✗ Holding the cellphone to talk

## Use drive mode or turn the power off while driving

### ■ Drive mode

When the drive mode is set, the answering message saying "I am driving right now. Please leave your name and message after the beep." plays in Japanese and the caller's message can be recorded.

Press in the idle screen, and use and to select "Drive."



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Watch out for spam and one-ring call!

### ■ If you get incoming spam...

You can use the mail filter function to block the mail you specify/spoof e-mail.

The following are the main mail filter functions available for preventing spam:

- Reject e-mails marked with "未承諾広告".
- Reject specified e-mails.
- Reject spoof e-mail.




Page  
59

### ■ If you have an incoming call from an unknown number...

Such calls may be a scam to get you to return a call to the service with very high charges. This is called a "one-ring call."



The icon  will appear in the Received calls when you receive a one-ring call.

Be careful when you return a call to a number you don't know.

Received	Dialed
 9/25 11:00 1 030001XXXX	
 9/25 10:00 2 030004XXXX	
 9/25 9:00 3 Carol Adam	
 9/24 22:00 4 John Smith	
 9/24 17:05 5 Ron Edward	

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	



## Disaster Message Board Service

If a large scale disaster occurs, you can register your vital information through EZweb. The registered vital information can be viewed from anywhere in Japan through EZweb or the Internet.

### Registering the vital information

 
If a large scale disaster occurs, you can use your au cellphone to register your vital information such as your condition or comments to the "Disaster Message Board" created on EZweb.

After registering your vital information, you can notify it by e-mail to your preregistered family or acquaintances. They will be able to know that you posted your vital information on the "Disaster Message Board."

### Viewing the vital information


You can view the vital information of a person you want to know by entering the phone number from EZweb or the Internet. <sup>1</sup>

<sup>1</sup> You can view the vital information from other carriers' cellphones, PHS or PC by accessing <http://dengon.ezweb.ne.jp/>.

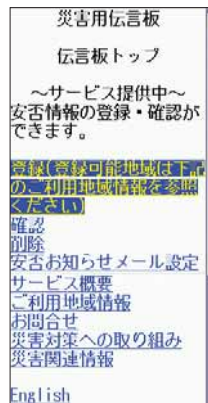

<b>To access</b>	☰(EZ) press ◀▶ to select ☒(EZweb) use
	⬇ and ◼ to select "au one Top" "災害用伝言板"
<a href="http://dengon.ezweb.ne.jp/">http://dengon.ezweb.ne.jp/</a>	

 - The registered information is saved for up to 72 hours.
- Up to 10 entries can be registered per phone number. When the number of entries exceeds 10, the oldest entry will be overwritten.
- A demonstration for this service can be viewed from ☰(EZ) press ◀▶ to select ☒(EZweb) use ⬇ and ◼ to select "au one Top" "auお客さまサポート" (au Customer Support) "災害用伝言板(デモ版)"
- You can use the English version by selecting "English."

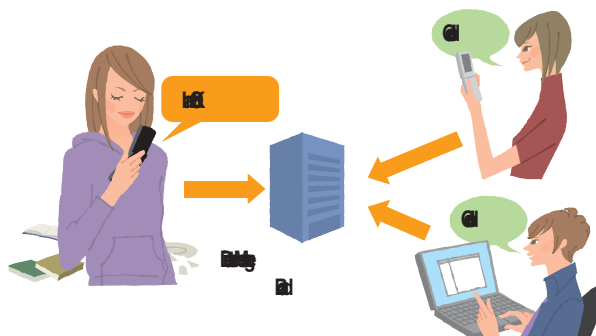

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

# Contents

<b>Etiquette</b>	<b>1</b>
Cellphone etiquette .....	1
<b>Basics of the cellphone</b>	<b>2</b>
What W64S offers .....	2
Manner mode and record message .....	4
Check the power, the signal, and the battery! .....	4
Do not use the cellphone while driving .....	5
Use drive mode or turn the power off while driving.....	5
Watch out for spam and one-ring call! .....	6
Disaster Message Board Service .....	7
<b>Before use</b>	<b>10</b>
Checking the package .....	10
Names of parts .....	11
How to charge the battery.....	12
How to connect stereo earphone to W64S .....	13
How to use the keys.....	14
Turning the power on .....	16
Default settings .....	17
Before using English display .....	17
How to read the display .....	17
Displaying the menu .....	19
Styles of W64S .....	22
Initial settings for e-mail and EZweb .....	23
Confirming your cellphone number/e-mail address .....	23
Changing your e-mail address .....	24
Using W64S overseas.....	26
<b>Phone call</b>	<b>27</b>
Making a call .....	27
Making an international call .....	27
Receiving a call.....	29
Redialing the number (Dialed/Received) .....	30
Changing the volume during a call.....	30
Setting the manner mode .....	31
Changing the volume and tone of the ringtone .....	32
Setting the record message.....	34
Playing back recorded messages .....	35
<b>Text input</b>	<b>36</b>
Changing the input mode.....	36
Inputting text .....	37
<b>Phone book</b>	<b>42</b>
Saving to the phone book .....	42
Editing the phone book .....	44
Making a call from the phone book .....	46
Saving from Dialed/Received calls .....	47
<b>Pair Function</b>	<b>48</b>
Saving to the Pair Function.....	48
Making a call by using Pair Function .....	49

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

<b>Mail</b>	<b>50</b>
Using e-mail .....	50
Creating and sending e-mail .....	51
Opening a received e-mail .....	54
Searching e-mail .....	56
Replying to a received e-mail .....	57
Reading e-mails with photo or movie attached .....	58
Filtering spam .....	59
Using C-mail .....	60
Creating and sending C-mail .....	61
Opening a received C-mail .....	62
<b>Camera</b>	<b>64</b>
What you can do with the camera .....	64
Successful taking of photos .....	65
Taking photos .....	66
Viewing photos you have taken .....	68
Attaching a photo to e-mail .....	69
<b>EZweb</b>	<b>70</b>
About EZweb .....	70
Displaying the au one Top .....	70
Saving your favorite sites .....	72
Viewing a site saved to the Bookmark .....	72
Confirming your call costs .....	73
Downloading Chaku-Uta®(ringtones)/Chaku-Uta-Full®(full songs) .....	74
<b>EZ News Flash</b>	<b>76</b>
What you can do with EZ News Flash .....	76
Setting EZ News Flash service .....	77
<b>EZ Navi</b>	<b>78</b>
What you can do with EZ Navi .....	78
<b>au Media Tuner</b>	<b>80</b>
What you can do with au Media Tuner .....	80
Initial settings for au Media Tuner .....	82
Viewing Television (1Seg) .....	83
Viewing Television (1Seg) in TV style .....	84
Ending au Media Tuner .....	84
<b>Troubleshooting</b>	<b>85</b>
<b>Remote Ctrl Lock</b>	<b>86</b>
In case you have lost your W64S .....	86
<b>Other features</b>	<b>88</b>
Radio Wave Exposure and Specific Absorption Rate (SAR) Information .....	90
<b>Index</b>	<b>99</b>

 
PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある 理由:	

# Before use

## Checking the package


Before use

### Main unit

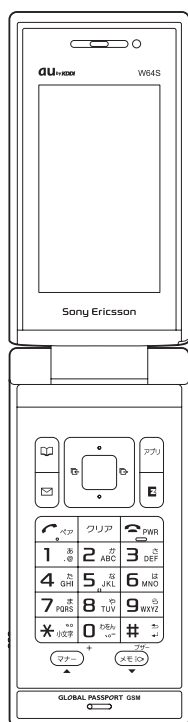


### Battery pack

 Overseas and Japan use




### USB cable (sample)

 Japan use only

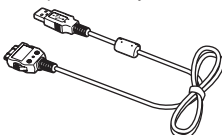

### Sony Ericsson round-type earphone jack conversion adaptor 03

 Overseas and Japan use




### "W64S かんたんマニュアル" (Japanese)




### Desktop holder

 Overseas and Japan use



### CD-ROM

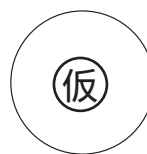 

### Stereo earphone (sample)



### "W64S 取扱説明書" (Japanese)





### Warranty (Japanese)

### Safety Precautions (Japanese)

### Others (Japanese)

- GLOBAL Passport GSM Owner's Guide (Japanese)
- Osai-fu-Keitai® Basic Manual (Japanese)
- LISMO Installation Guide (Japanese)
- Promotional Fliers (Japanese)

 
 AC adaptor and microSD™ Memory Card are not included in this package. Please purchase standard AC adaptor 01/02 (optional) and microSD™ Memory Card (sold separately).

 Standard AC adaptor 01 is designed for use in Japan only. When charging your W64S overseas, please be sure to use standard AC adaptor 02.

10

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Names of parts

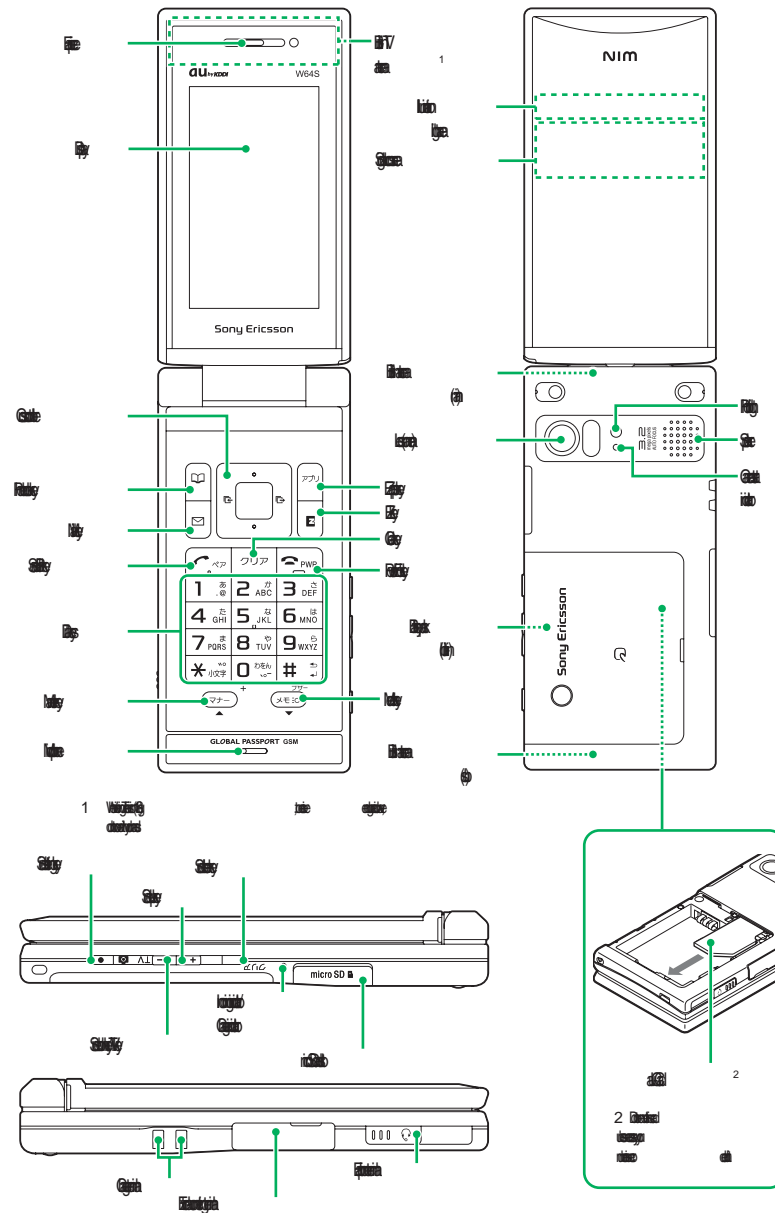



Before use

<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。  <input type="checkbox"/> 数値(スペック値)が正しいか。  <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。  <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

## How to charge the battery

 
The battery pack is not fully charged at the time of purchase.  
Before you use the W64S, charge the battery pack.

### 1 Connect the standard AC adaptor 01/02 (optional) to the connecting terminal of the desktop holder.


-  Carefully check the connector shape, and then connect it.
-  When charging your W64S overseas, please be sure to use standard AC adaptor 02.

### 2 Fold out the power plug of the standard AC adaptor 01/02 (optional), and plug it into a 100 V AC power outlet.

### 3 Place W64S (closed, Battery pack attached) onto the desktop holder.

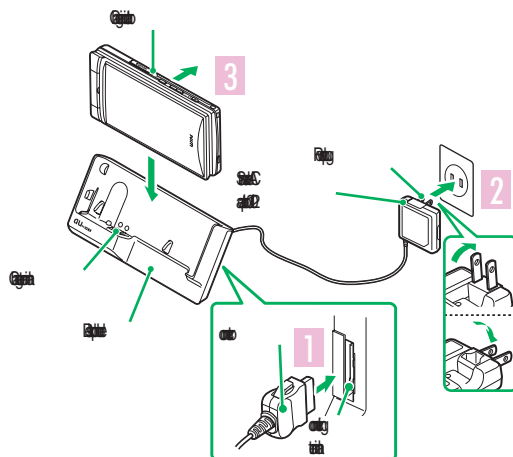

#### • Charging is in progress

Charge start tone sounds and the charge indicator lights up in red.  
 appears.

#### • Charging is finished


Charge completed tone sounds and the charge indicator light turns off.

 
-  When the battery is fully charged, pull out W64S upwards.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## ■ Charging by directly connecting the standard AC adaptor 01/02 (optional)

You can also charge the battery pack by directly connecting the standard AC adaptor 01/02 (optional) to the W64S.

 Carefully check the connector shape, and then connect it.

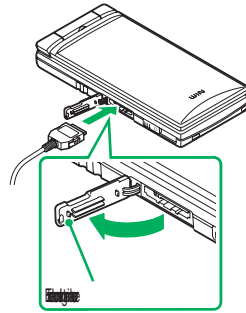



Before use

## How to connect stereo earphone to W64S

 **1** Connect the stereo earphone to the Sony Ericsson round-type earphone jack conversion adaptor 03.

**2** Slide the earphone terminal cover to open in the direction of the arrow, as shown below. Then insert the Sony Ericsson round-type earphone jack conversion adaptor 03 plug straight to the terminal.


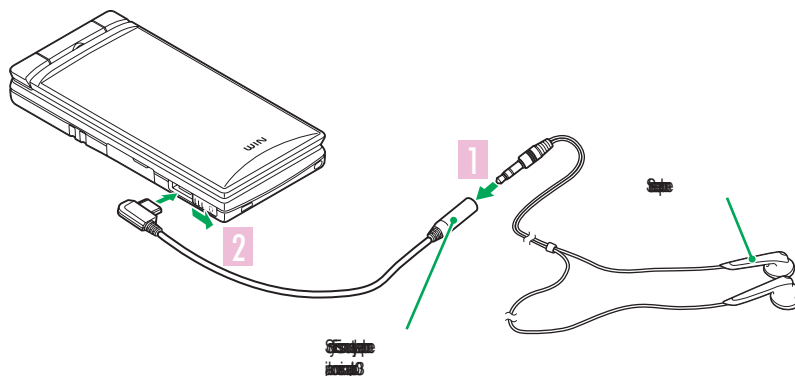


 Do not force to connect in the wrong direction. Otherwise, it may cause damage. Please connect in the direction as shown in the illustration above.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

## How to use the keys

  
Before use

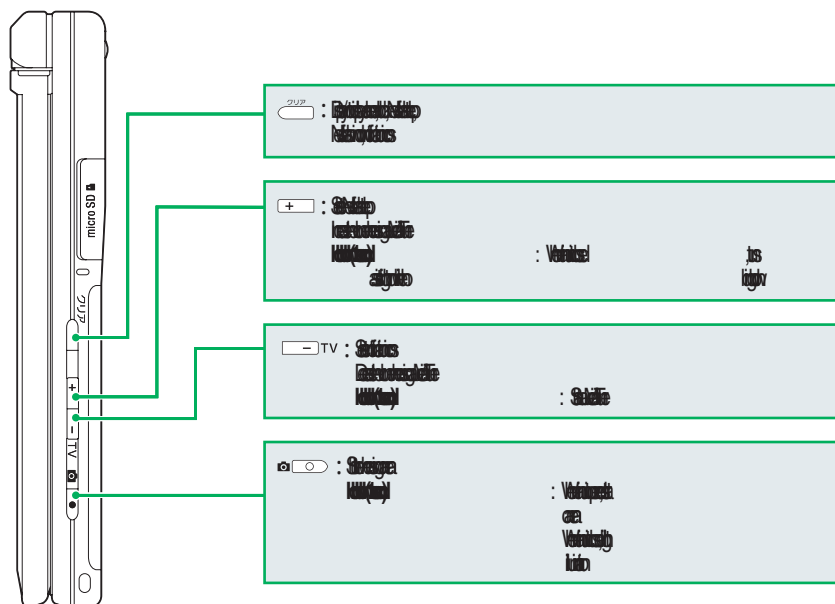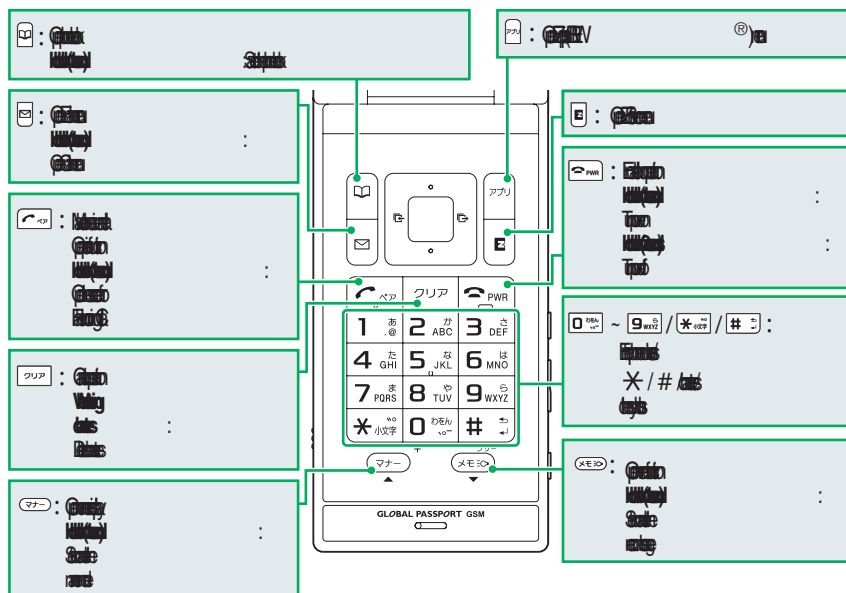

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	



## How to use cross controller™

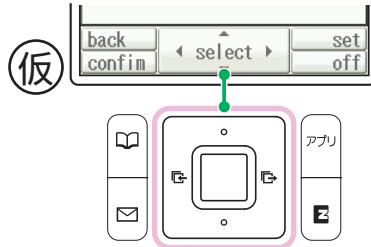 

Display	Description in this manual	Operation	Explanation
			<p><b>Press up and down</b> Move the cursor up and down</p> <p><b>Operations in the idle screen</b></p> <ul style="list-style-type: none"> <li> <b>Hold down (1 second):</b> Open schedule</li> <li> <b>Hold down (1 second):</b> Open data folder (page 68)</li> </ul>
			<p><b>Press left and right</b> Move the cursor left or right Display previous or next screen</p> <p><b>Operations in the idle screen</b></p> <ul style="list-style-type: none"> <li> :Open Received calls (page 30)</li> <li> :Open Dialed calls (page 30)</li> </ul>
			<p><b>Press center (center key)</b> Select the item</p> <p><b>Operations in the idle screen</b> Open Main menu</p> <p><b>Hold down (1 second):</b> Set or cancel side keylock</p>

Before use

➔ Continued on the next page


15

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Soft keys

 
Soft keys work according to the displayed indication as shown below.

The displayed indications and function of the keys will vary depending on the operation selected.

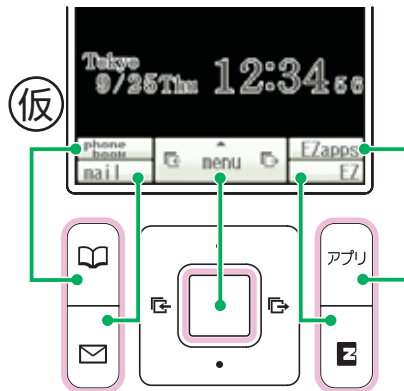

## Turning the power on

 Hold down  for at least one second.

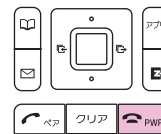


Retrieving card(UIM) info  
(user operation is disabled)


### Classify


 
### Classify

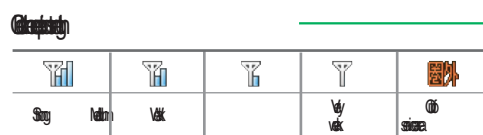

### Classify

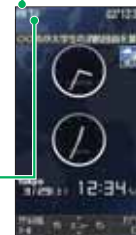 

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## ■ ■ To turn the power off

Hold down  for at least two seconds.







## Default settings

The followings are set by default.

 
Chg Lock No. (Change Lock No.)	1234	Font size	General font : Large
Caller ID	ON		EZweb font : Middle
			E-mail font : Middle
			C-mail font : Large
			Input font : Large


## Before using English display

### ■ ■ To set English display

- ① Press  (メニュー) in the idle screen press   4 .
- ② Press  to select "English," and press  (選択).

## How to read the display

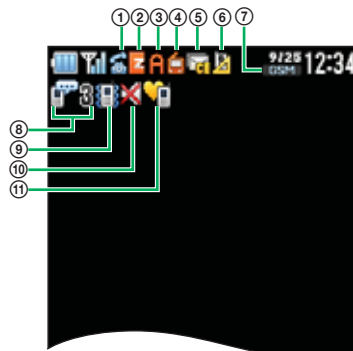

 Continued on the next page

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Icon	Description
	During a call
	While you are using EZ Service menu/EZweb
	While you are using EZ apps
	While you are using au Media Tuner
	When mail was received but not yet read
	When you missed an incoming call
	While Overseas (GSM) mode is set •  appears when data communications is available.
	While record message is set The number of recorded messages (1 to 5)
	When the vibrator is set to "ON"
	When the ring volume is set to "OFF"
	While the manner mode is set

## Notification Icons

Notification Icons appear on screen when you have missed calls or unread mails, other function-related information to notify, etc. You can see that information using to move the cursor on the icon and press (select).



Icon	Description
	When there is a missed call
	When there is an unheard recorded message
	When an e-mail was received
	When there is an unreceived e-mail stored at the center
	When a C-mail was received

 
To open Main menu from the screen with Notification Icons, press or to move the cursor away from the icon and press (menu).

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Displaying the menu

W64S offers various settings/functions by using "Main menu" and "EZ Service menu" in Normal style/"Media Launcher" in TV style. For operation, use / in Normal style and TV / in TV style.

### Main menu

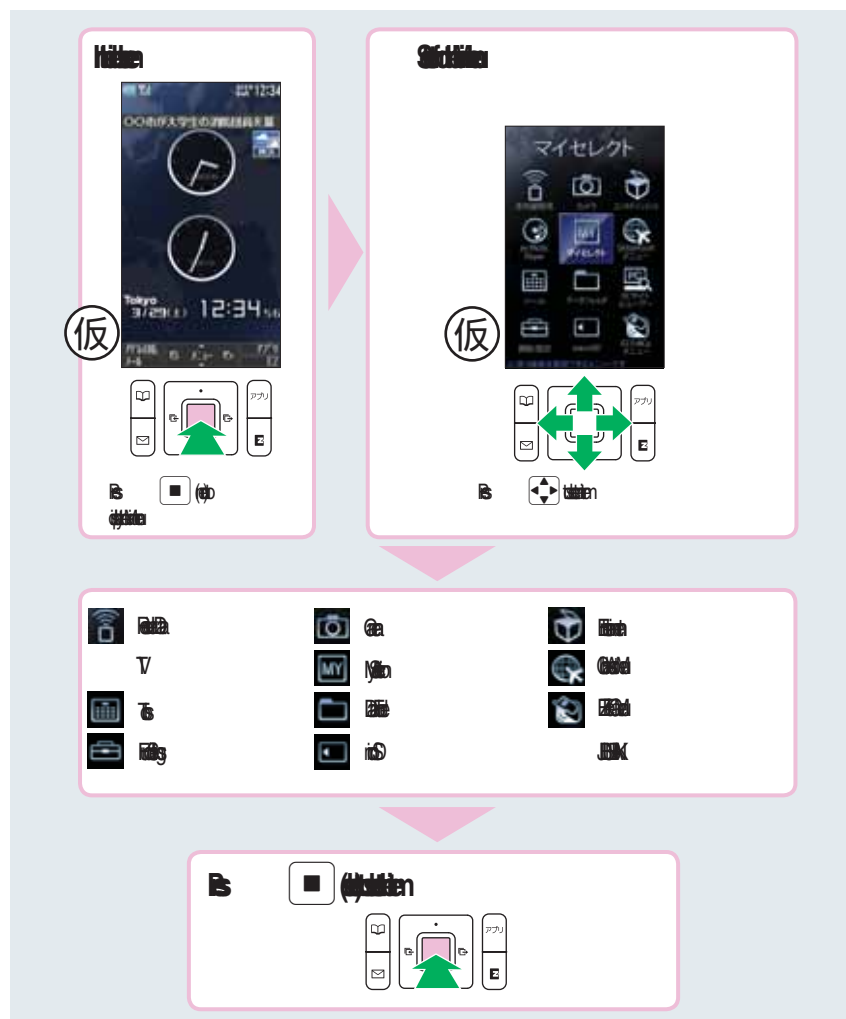


Before use

Continued on the next page

<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。  <input type="checkbox"/> 数値(スペック値)が正しいか。  <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。  <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

## EZ Service menu

 
You can access the information sites on EZweb and use EZ Navi, EZ Channel-Plus/  
EZ Channel, etc.

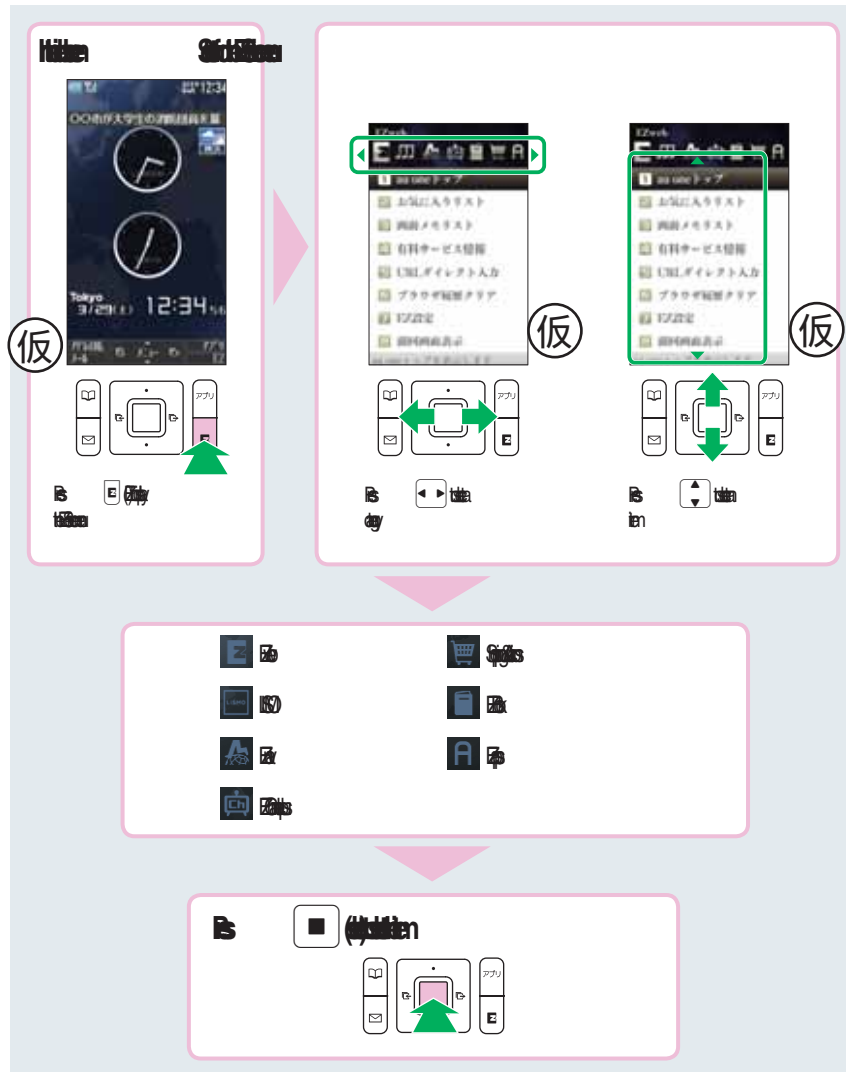

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Media Launcher

 To display Media Launcher, press in TV style while the idle screen is displayed.

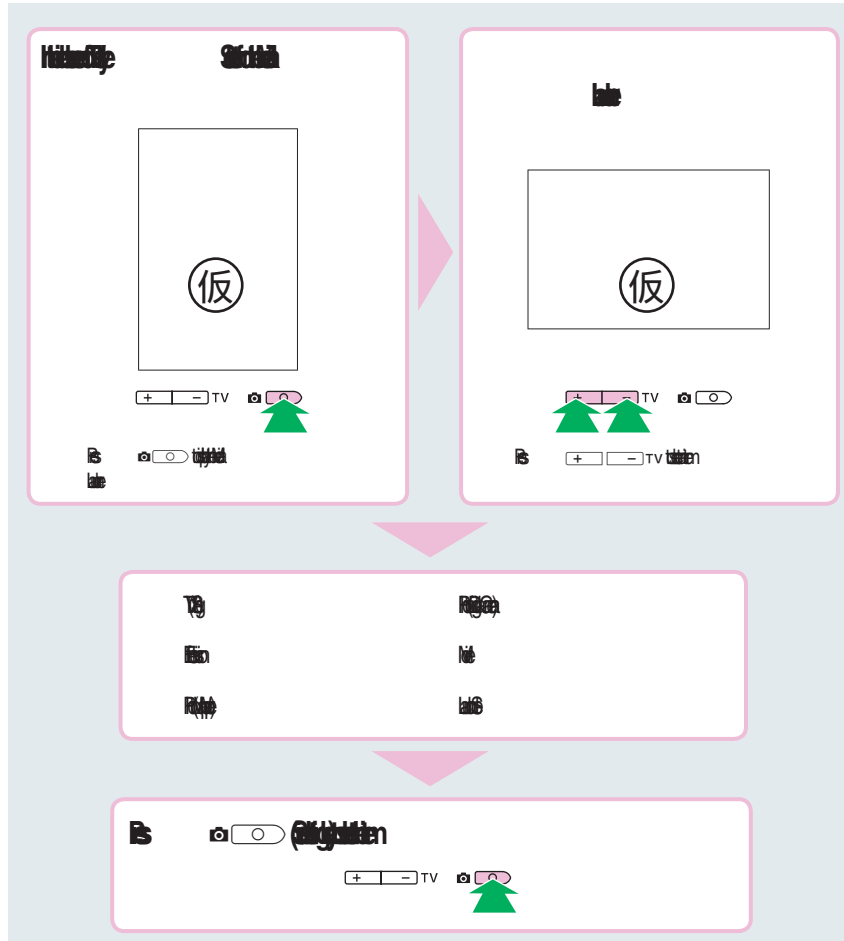

The default menu screen design depends on the color of the main unit.

Before use



<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。  <input type="checkbox"/> 数値(スペック値)が正しいか。  <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。  <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

## Styles of W64S

  You can use W64S in Normal style which the main unit is open with the display part facing inside, also in TV style and Recording oneself style.

### Setting to TV style and Recording oneself style

- ① Open the display part.
- ② Rotate the display part 180 degrees clockwise.

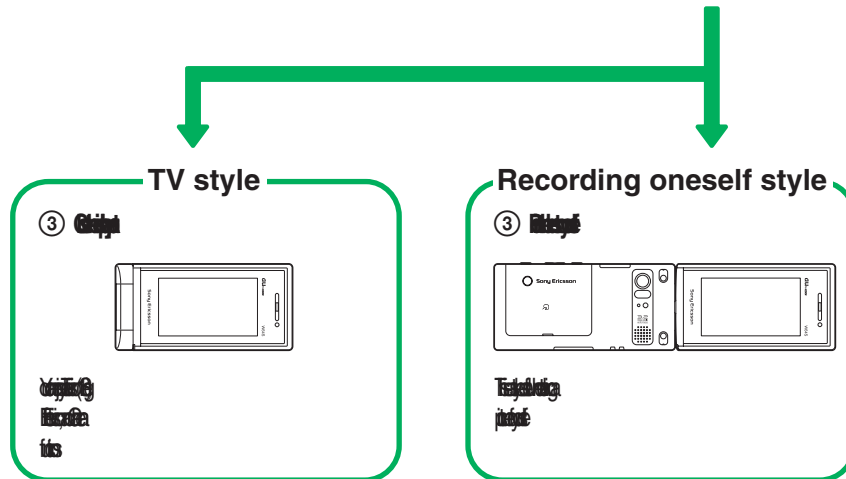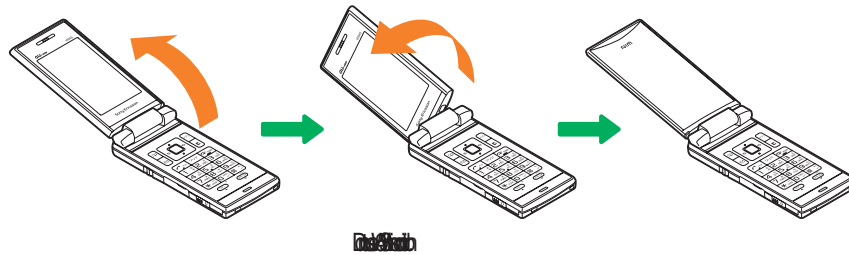

- Rotate the display part to the direction shown in the illustration. Forcing to rotate the display may cause damage or malfunction.
- In this manual, the operation step explanations are described in Normal style which the main unit is open with the display part facing inside.




Before use


PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	







 
 

## Initial settings for e-mail and EZweb

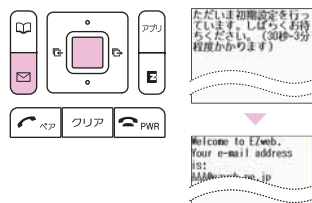If you subscribed to the EZweb service, make the following initial settings.

Press  (mail) in the idle screen,  
and press  (ok).  
Press  (OK).





 Without EZ News Flash settings, EZ News Flash setting screen appears.

-  Initial settings cannot be made from overseas.
-  You can also initialize the settings by pressing  (EZ) or , or holding down  (Side down key/TV key) for at least one second.
-  Your e-mail address is automatically determined when you initialize the settings.


### If you have not subscribed to EZweb service yet





 Contact an au shop or Customer Service Center. You need to subscribe to the EZweb service to use e-mail, EZweb or other EZ services.

## Confirming your cellphone number/e-mail address

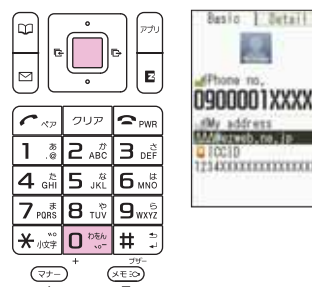Press  (menu) in the idle screen, and press .

You can confirm your cellphone number and e-mail address.




 You can also confirm your cellphone number and e-mail address by pressing  (menu) in the idle screen, and use  and  to select "Func/Settings" "Profile."

Before use


<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。</p> <p><input type="checkbox"/> 数値(スペック値)が正しいか。</p> <p><input type="checkbox"/> 注意文や説明文に誤り、不足がないか。</p> <p><input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

## Changing your e-mail address

 Before use


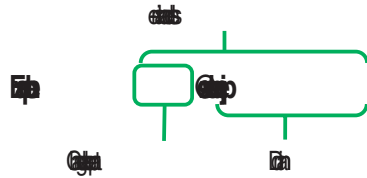


 - 1 Press (mail) in the idle screen.  
Press to select "Settings,"  
and press (select).


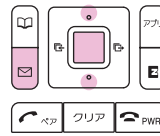


(仮)


 
 
- 2 Press to select "Other," and  
press (select).  
Press to select "Yes," and  
press (select).

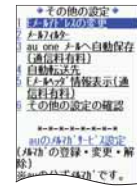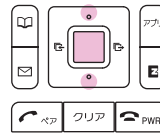

  - 3 Press to select "Eメール  
アドレスの変更," and press  
 (Select).

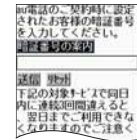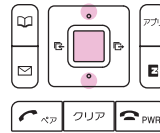

   - 4 Press to select the input field,  
and press (Edit).  
Enter your security code, and  
press (ok).

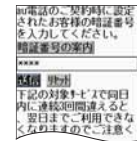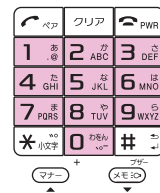

- Security code is the 4-digit number that you wrote in the application form when subscribing.
- Note that no setting operation is allowed until the following day if you enter the wrong security code three times a day.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

**5** Press to select "送信," and press (Select).  
Press to select "承諾する," and press (Select).

**6** Press to select the input field, and press (Edit).  
Enter the text before @, and press (ok).

For details on how to input e-mail addresses, see page 37.

**7** Press to select "送信," and press (Select).

**When the e-mail address cannot be changed**  
The e-mail address that you entered is already used. Enter a different e-mail address.

**8** Press to select "OK," and press (Select).

For details on how to confirm your e-mail address, see page 23.

Before use

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Using W64S overseas

 
You can use your W64S overseas just by changing the Area Setting to "Overseas (GSM)".

Before use

1



Press  (menu) in the idle screen.

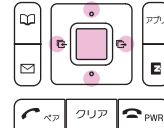

Press  to select "GlobalAssort Menu," and press  (select).

 
 


仮

2


Press  to select "Overseas Settings," and press  (select).

Press  to select "Area Setting," and press  (select).

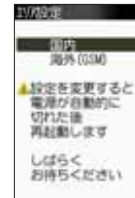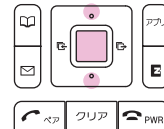


仮

3

Press  to select "Overseas (GSM)," and press  (select).

 W64S will restart after the power is automatically off, then **GSM** and "Important notice" appears in the idle screen.

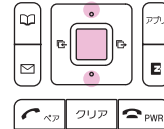

仮



Change Area Setting after finishing currently running functions.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

# Phone call

When making a call, set W64S to Normal style.

## Making a call

1 Press **0** to enter the other party's phone number, and press **CALL**.



Phone call

To call a regular phone, enter the phone number starting with the area code.

**To notify the other party of your cellphone number**

Enter "186" before the cellphone number of the other party.

**Not to notify the other party of your cellphone number**

 
Enter "184" before the cellphone number of the other party.

## Making an international call

### ■ au International Call Service

Available without any additional application.

Example: To call 212-123- in the USA



Calling charges for this service are added to monthly mobile phone calling charges and billed together.

Please check the Country code at the au Customer Center.


For charges, please refer to au MOBILE PHONE SERVICE GUIDE or au Customer Center.

Continued on the next page


PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	




## 001 KOKUSAI MOBILE TALK

 Application required. For inquiries, please contact the KDDI Customer Service Center.






 **0077-7160** (toll-free; open 9:00 to 20:00 on everyday including weekends and national holiday)

Example: To call 212-123- in the USA



-  Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
-  Please check the Country code at the au Customer Center.
-  For charges, please refer to au MOBILE PHONE SERVICE GUIDE or au Customer Center.

## Making an international call from overseas

 
- ① See steps 1 to 3 in "Using W64S overseas" (page 26) to set the Area Setting to "Overseas (GSM)."
- ② Press  to  to enter the other party's phone number, and press  (call).
- ③ Press  to select how to call, and press  (select).
  - "Call" : Make a call
  - "Dial to Japan (+81)": Automatically delete the first "0" of the entered phone number and attach "+" (international code) and "81" (Japan country code); then make a call
  - "Int'l call (+)" : Automatically attach "+" (international code) before the phone number and call

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

## Receiving a call

1

Press or (call) to answer the call.

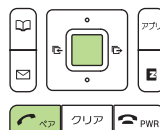

仮

When you have finished the call, press .

### The display when you receive a call

Phone number	When the other party has set to notify Caller ID If the other party's name and phone number are already saved in the phone book, that person's name is also displayed
"ID Unsent"	When the other party has set not to notify Caller ID
"Payphone"	When you have received a call from a payphone
"Not support"	When you have received a call from a party that is not able to notify Caller ID

### The display if you are unable to answer a call

If you are unable to answer a call, you are notified that you had a call on the display.

If you press (select), you can confirm the phone number of the other party that called you and redial that party.







仮

 
Phone call

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	




## Redialing the number (Dialed/Received)

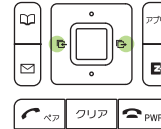

**1** Press   in the idle screen.


-  : Display Received calls.
-  : Display Dialed calls.




### Icons of Received calls

 - : The call that you did not answer (missed call)
- : The call within three seconds of incoming time (one-ring call)
- : The message stored at the Voice Mail center

**2** Press   to select the phone number you want to call, and press

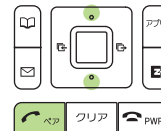




The call is connected to the phone number you selected.

 In each memory, the phone numbers of last 30 calls can be saved.

## Changing the volume during a call

 **1** Press   during a call.

- : The volume increases (Level 1 to 5).
- : The volume decreases (Level 5 to 1).

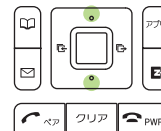

仮




PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	



## Setting the manner mode

The W64S vibrates to notify you of incoming calls.


### 1 Hold down for at least one second in the idle screen.

The manner mode is set, and  and  appear in the display. At the same time, record message is set, and  appears in the display.



### To cancel the manner mode

Hold down  for at least one second in the idle screen.

 There are four types of manner settings: "Manner," "Silent," "Drive" and "Original."


Phone call

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

## Changing the volume and tone of the ringtone

Example: When setting a "preset" ringtone

Phone call

**1** Press  (menu) in the idle screen.  
Press  to select  
"Func/Settings," and  
press  (select).





 

(仮)

**2** Press  to select  
"Sound/Vibrator," and  
press  (select).





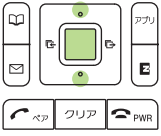


(仮)

**3** Press  to select  
"Incoming set," and  
press  (select).



 
(仮)

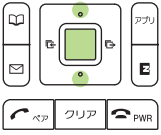**4** Press  to select  
"Incom. call," and  
press  (select).

(仮)

**5** Press  to select "Volume," and  
press  (select).





(仮)

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

6

Press to adjust the volume, and press (ok).

 - "OFF" :The ringtone does not sound.
- "1" to "5" :The ringtone sounds at the level you set.
- "Step down" :The volume of the ringtone decreases.
- "Step up" :The volume of the ringtone increases.

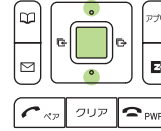


仮

"Step down" and "Step up" can be selected by pressing over "5."

7

 Press to select "Melody," and press (select).

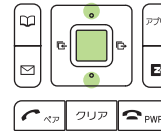


仮

"Feel Comfort" is set by default.

8

 Press to select "Preset," and press (select).

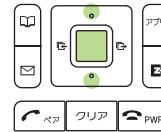


仮

- If you press (play), the ringtone you selected plays back.
- If you press ( ) while the ringtone is being played, W64S stops playing.

9

 
Press to select a ringtone, and press (save).

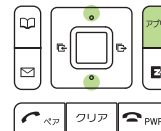


<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。  <input type="checkbox"/> 数値(スペック値)が正しいか。  <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。  <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------




## Setting the record message

 1 Hold down  for at least one second in the idle screen.

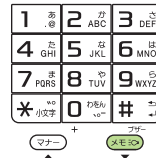Record message is set, and  appears in the display.







仮

-  You can also use the record message to record a message from the other party by pressing  (memo) while receiving a call.
-  You can record up to five messages within 60 seconds in Japan mode and 20 seconds in Overseas (GSM) mode.

### To cancel record message


Hold down  for at least one second in the idle screen.

-  If the record message still contains any message,  remains in the display even after canceling record message.  disappears when record message data is deleted.
-  When you turn the power off or when you are in a place where the signal is weak, use Answering Service (Voice Mail).

- 操作説明、画面が仕様とあっているか。
- 数値(スペック値)が正しいか。
- 注意文や説明文に誤り、不足がないか。
- チェックできない箇所がある理由:

## Playing back recorded messages

### When a message is recorded

A message and  (number of recorded messages) appear in the idle screen.



 
仮

### 1 Press in the idle screen.




仮

### 2 Press to select "Record msg.," and press (select).

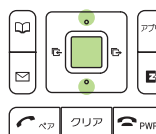


仮

### 3 Press to select "Play msg.," and press (select).

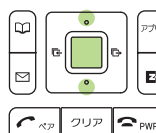 



仮
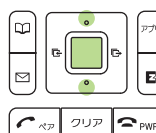 
### 4 Press to select the recorded message to play back, and press (play).



仮


 You can delete recorded messages by pressing  (delete) while the recorded message is playing back.

<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。  <input type="checkbox"/> 数値(スペック値)が正しいか。  <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。  <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

# Text input

 
## Changing the input mode

Input text by changing the input modes below.

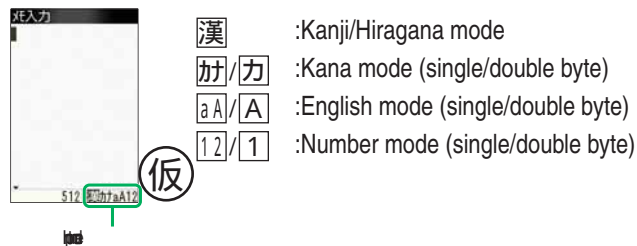


Text input

 Press (mode) in the text input screen.

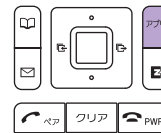

 Each time you press (mode), the input mode changes in following order:  
 English Number Kanji/Hiragana Kana English...

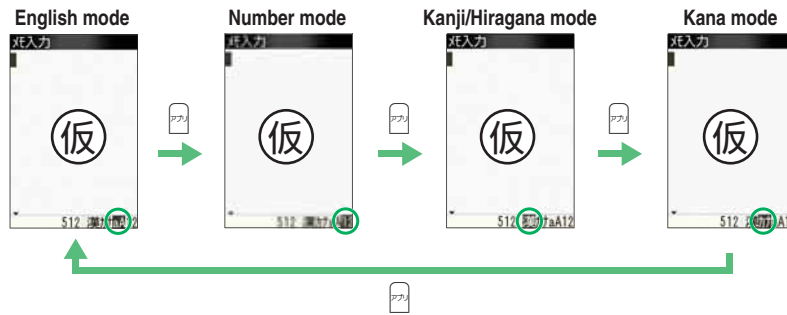


The input mode that you can select is different depending on the current input screen.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

## Inputting text
 
### To input alphanumerics

In the text input screen, press the keys as described in the table below.



Character key assignment table (single byte alphanumerics)

Key	Number of times to press the key																																		
	1	2	3	4	5	6	7	8	9																										
	.	@	-	_	/	:	~	1																											
	a	b	c	A	B	C	2																												
	d	e	f	D	E	F	3																												
	g	h	i	G	H	I	4																												
	j	k	l	J	K	L	5																												
	m	n	o	M	N	O	6																												
	p	q	r	s	P	Q	R	S	7																										
	t	u	v	T	U	V	8																												
	w	x	y	z	W	X	Y	Z	9																										
	Space	0	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/	:	;	<	=	>	?	@	[	¥	]	^	_	`	{		~		
	.	,	-	!	?																														
	Break lines																																		
	Back space function when entering characters <sup>2</sup>																																		

1 is also used to switch between uppercase and lowercase of current displayed characters.

2 When you enter the characters by pressing keys, is used to reverse the order of characters to be appeared (Back Space function).

Example:

a b a



You can input your e-mail address using up to 30 single bytes alphanumeric in lowercase including "-" (hyphen), "." (dot), and "\_" (underscore). Note, however, "." (dot) and "0" cannot be used at the beginning of your e-mail address. Characters and symbols with blue background in the above table cannot be used before @ of " @ezweb.ne.jp."

Continued on the next page


PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Example: To input "Autumn of 2008" in the mail subject

## 1 Input "Autumn" in the text input screen.

 - A : Press once.  
 u : Press twice.  
 t : Press once.  
 u : Press twice.  
 m : Press once.  
 n : Press twice.

Prediction candidate appears. You do not have to enter "Autumn" entirely if the word you want to enter appears in the Prediction candidate.

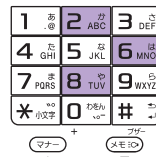


仮

## 2 Press , Press to select "Autumn," and press (select).

 "Autumn (space)" is entered, and Phrase Item appears.


A space is automatically entered after a word.

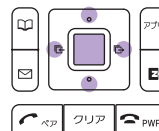

仮

## 3 Press , Press to select "of" from the Phrase Item, and press (select).

 You can also input "of" by pressing three times and three times.

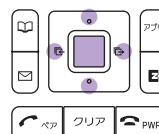

仮

## 4 Enter "2008," and press (fix).

- 2: Press once.  
 0: Press once.  
 0: Press once.  
 8: Press once.



仮

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	