 


■ ■ To consecutively input characters assigned to the same key

Input the first character, press  and press the next character key.

After inputting the first character, no operation for about four seconds automatically moves entering position.

 
Example: To input "ab"

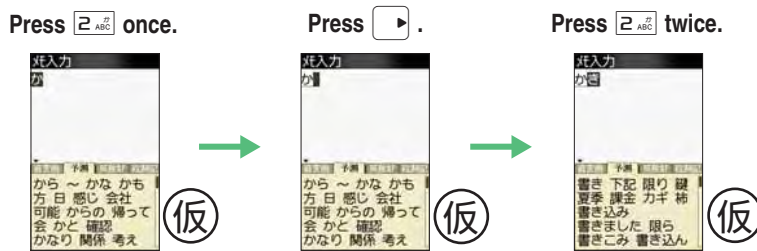

■ ■ To input uppercase characters



■ ■ To delete characters

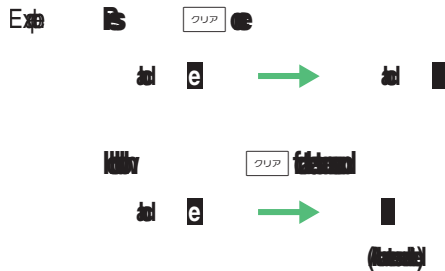



➡ Continued on the next page

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
----------------	---	----

To input pictorial characters, symbols and emoticons


Press (😊/smb) in the text input screen.

  Each time you press (😊/smb), the character group changes in following order: Pictorial characters Symbols (double byte) Symbols (single byte) Emoticons Pictorial characters...

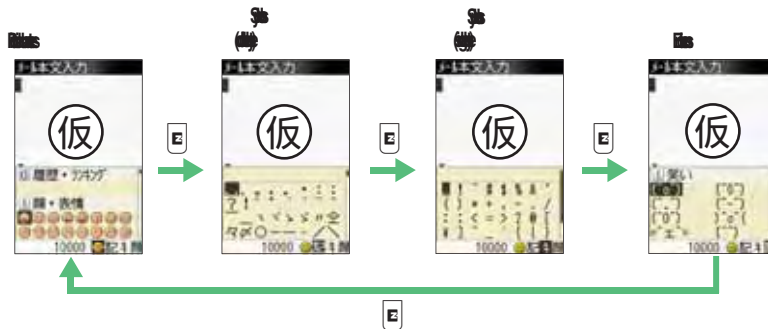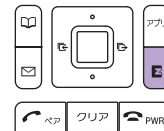

You can switch categories of pictorial characters or emoticons by pressing (category) on each selection screen.

 2 Press to select the character group you want to use, and press (select).

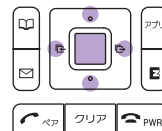

The character group that you can select is different depending on the current input screen.


PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	


 
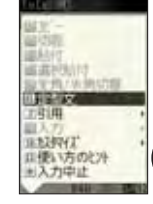 
■ ■ To input useful sentences

You can enter your frequently used sentences using our useful sentence list.

Example: To input "@ezweb.ne.jp" in the mail address



1


 
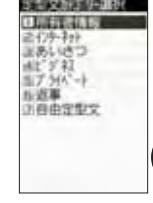 
Press  (option) in the text input screen.

仮



2


 
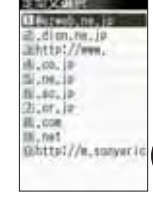 
Press  to select "useful sentence," and press  (select).

仮



3


 

Press  to select "Internet," and press  (select).

仮

4

Press  to select "@ezweb.ne.jp," and press  (select).

仮


Text input


<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。</p> <p><input type="checkbox"/> 数値(スペック値)が正しいか。</p> <p><input type="checkbox"/> 注意文や説明文に誤り、不足がないか。</p> <p><input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------




Phone book


You can save up to 1,000 phone numbers or e-mail addresses.

 Saving to the phone book

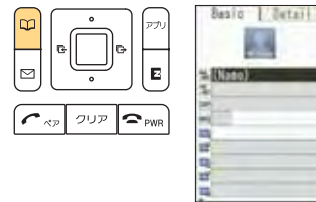 
1 Hold down  (phone book) for at least one second in the idle screen.



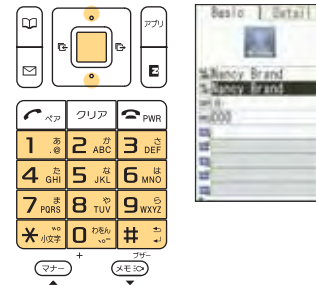


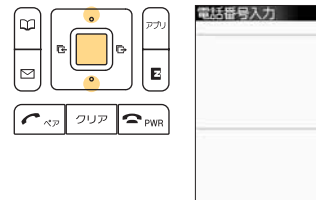 
2 Press  to select **NAME** (Name), and press  (select). Enter the name, and press  (ok).



 (JP reading) is automatically entered.

 For details on how to enter text, see page 36.



3 Press  to select  (Phone no.1), and press  (select).






PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

4

 
Enter the phone number, and press **■** (ok).

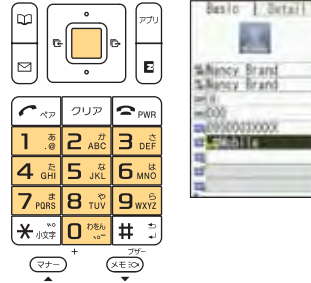
" Mobile" is automatically entered to  (phone type).



-  When saving a regular phone number, start with the area code.
-  To end saving to the phone book, jump to step 7.

5

 Press **▲** to select  (Mail address1), and press **■** (select).

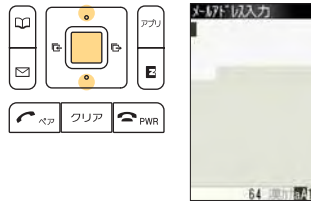




仮


Phone book

6

Enter the e-mail address, and press **■** (ok).

 
" Mobile" is automatically entered to  (e-mail address type).

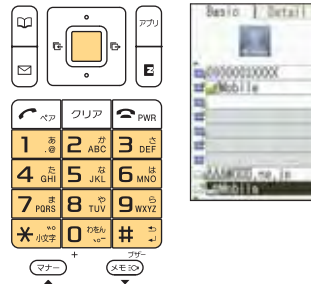



-  For details on how to enter e-mail addresses, see page 37.

 7

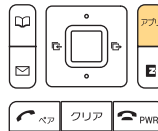Press **▲** (cmplt).




-  The entry is automatically saved to the smallest available memory number from 000 to 999.
-  You can also save other items such as groups, ringtones, postal addresses and birthdays.


PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Editing the phone book

Example: To edit phone numbers

1

 Press  (phone book) in the idle screen.

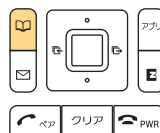


To switch from the " あ " to "ETC" display lines

Press  .




2

  Press   to select the entry to edit, and press  (select).

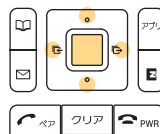



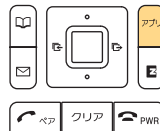


3

Press  (edit).



4

 Press   to select the item you want to edit (in this case, ,) and press  (select).

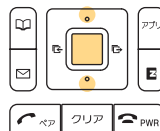


仮

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

5


Edit the information, and press

   (ok).

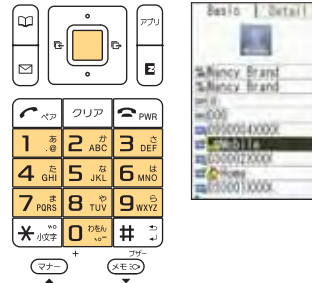





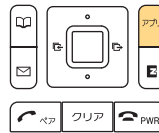



6

Press  (cmplt).



Deleting the phone book


Example: To delete one entry


- ① Press  (phone book) in the idle screen. Press  to select the entry to delete, and press  (select).
- ② Press  (option). Press  to select "delete," and press  (select).
- ③ Press  to select "Yes," and press  (select).

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

Making a call from the phone book


1

 Press  (phone book) in the idle screen.

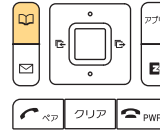



 
To switch from the " あ " to "ETC" display lines

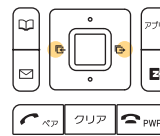Press  .




2

 Press  to select the person to call, and press  (select).

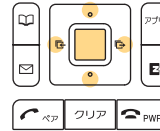

3

 Press  to select the phone number, and press .

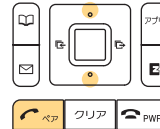

<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------




Saving from Dialed/Received calls

1 Press   in the idle screen.

 : Display Received calls.

 
 : Display Dialed calls.



2 Press   to select the phone number to save in the phone book, and press  (save).

"New": Create and save a new address.


"Add": Add and save newly added information.

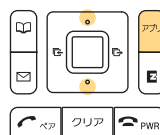


3 Press   to select "New," and press  (select).

The phone book edit screen appears.

 The phone number you selected is automatically entered.

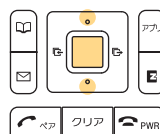

 For details on how to save information in the phone book, see steps 2 to 7 on pages 42 and 43.

<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

Pair Function

 
Saving to the Pair Function

You can save up to five phone numbers (like frequently used ones) from the phone book, and make calls or send mails with a simple operation.

You need to save Pair Partners to the phone book beforehand. For details on how to save numbers in the phone book, see pages 42 and 43.


1

Press  in the idle screen, press   to display the tab you want to save a partner to.

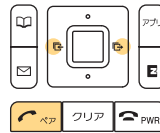




2

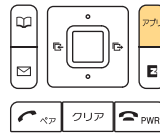 Press  (set).




3

 Press  to select the person to save, and press  (save).

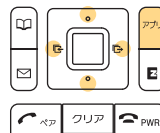


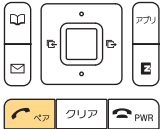 

Name, Phone no., Mail address and image of the person you selected are saved.



 Deleting Pair Partner's data from the phone book also cancel the Pair Function for those data.



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	





Making a call by using Pair Function

 

1 Press  in the idle screen.

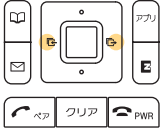
2 Press   to select the person to call.





 
3 Press   to select  (Call), and press  (select).

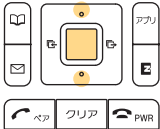To send mail

Press   to select  (E-mail) or  (C-mail), and press  (select) in step 3.

 For details on how to create or send e-mail, see steps 7 to 11 on pages 52 and 53.

 For details on how to create or send C-mail, see steps 3 to 4 on page 61.

Pair Function

仮

<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

Mail

Using e-mail

 
 EZweb subscription required


About e-mail

E-mail allows you to exchange mail with PCs or cellphones that supports e-mail. You can send mail comprising up to 5,000 double/10,000 single byte characters, also photos and movies.

Before using e-mail

- You need to subscribe to the EZweb service to use the e-mail service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase.
 - Make initial settings before using the e-mail and EZweb services. See page 23 to make initial settings.
 - You can send e-mail to up to 30 recipients ¹ at a time.
 - You can send up to 1,000 e-mails (counted by recipients of messages) in one day.
 - It may take a short while to send/receive mails when they have attachments.
- ¹ When address number restrict is set to "on," you can send e-mail to up to 5 recipients (Includes To/Cc/Bcc, within 640 single-byte characters).


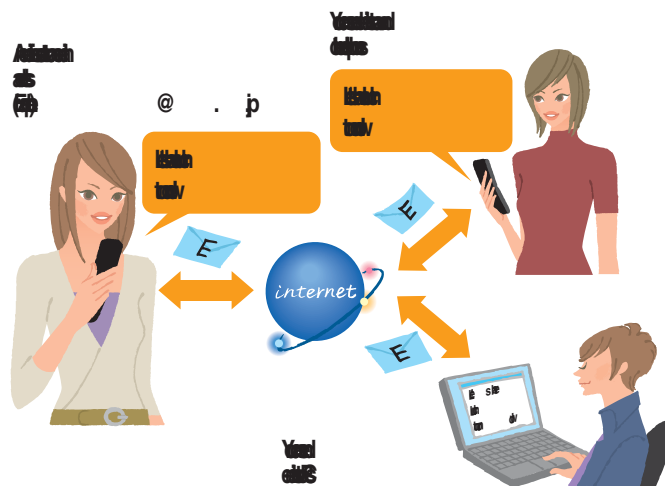


 Data communications fee (varied by the data amount) is charged when sending/receiving e-mail.



<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。</p> <p><input type="checkbox"/> 数値(スペック値)が正しいか。</p> <p><input type="checkbox"/> 注意文や説明文に誤り、不足がないか。</p> <p><input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

 
 
Creating and sending e-mail

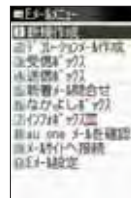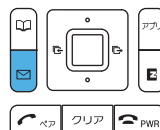1 Press  (mail) in the idle screen.



仮

  2 Press  to select "Create new," and press  (select).

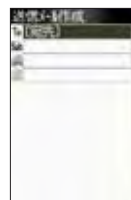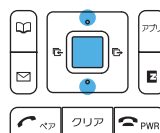

仮


Icons

 
 
To (E-mail address): The e-mail address of the recipient

Sub (Subject) : The subject of the e-mail


 (Attached data) : The data attached to e-mail

 (Text) : The main text of the e-mail

3 Press  to select **To** (E-mail address), and press  (select).

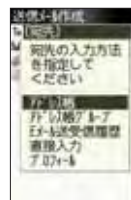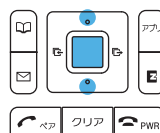



仮

 There are three types of destinations: To, Cc and Bcc. You can send e-mail to several destinations at a time.

➔ Continued on the next page



<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

 4 Press to select "Phone book," and press (select).

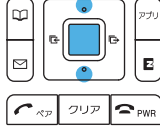




  You can also select an address from sent/received record or enter an address manually.

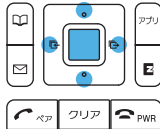
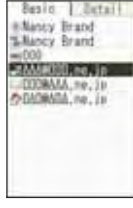 
5 Press to select a person you want to send an e-mail to, and press (select).

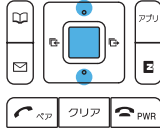


6 Press to select an e-mail address, and press (select).



  
7 Press to select Sub (Subject), and press (select).

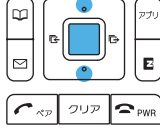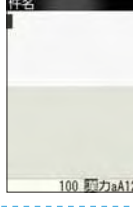



8 Enter the subject, and press (ok).





 
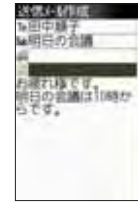 
<p>PTX-930 暫定版</p>	<ul style="list-style-type: none"> <input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由: 	<p>確認</p>
------------------------	---	-----------

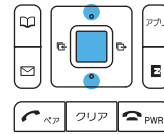9 Press  to select  (Text), and press  (select).



仮

 
10 Enter the main text, and press  (ok).



仮

11 Press  (send).

The e-mail is sent.

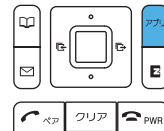

Mail

<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

Opening a received e-mail

When you receive an e-mail

A message and  appear in the idle screen.

 
 


②

1 Press (select).

Icon

: The folder containing new mail

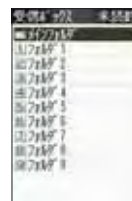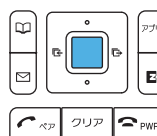


②

2 Press to select the folder containing new mail, and press (select).

Icons

: The "read mail" that has already been read

  
: The "unread mail" that has not yet been read

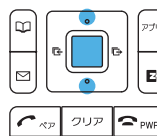
 





②

3 Press to select the new mail, and press (viewer).

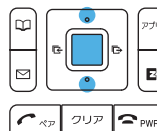How to view received mail





 Hold down  for at least one second to change the font size.

 Press  or  to return to the received messages.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

☐ To open an e-mail in the Inbox

  1 Press  (mail) in the idle screen.

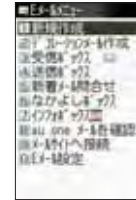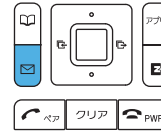




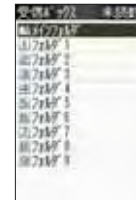 
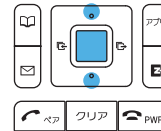 
仮

Icon


:The "unread mail" that has not yet been read

 
The number on the right side is the number of unread mails.

2 Press   to select "Inbox," and press  (select).






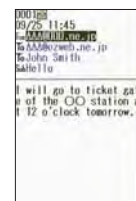 
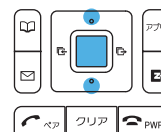 
仮

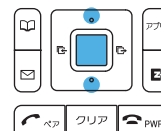3 Press   to select the folder containing the mail you want to read, and press  (select).



仮

4 Press   to select the mail you want to read, and press  (viewer).






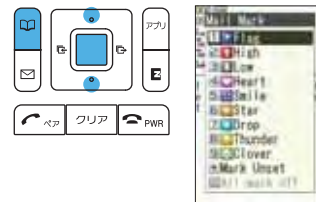 
PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

Searching e-mail

 
By sorting beforehand using mail marks, you can search e-mails by using the mail search function.

1 See steps 1 to 4 in "To open an e-mail in the Inbox" (page 55) to display the e-mail to sort.

2 Press  (option), use  to select "mark on/off," and press  (select).



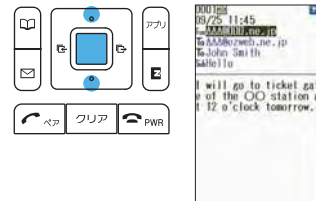


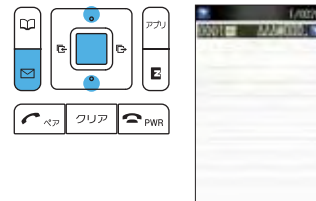 
3 Press  to select the mail mark, and press  (select).



To use mail search function

1 See steps 1 to 2 in "To open an e-mail in the Inbox" (page 55) to display the Inbox.


2 Press  (search), use  to select the mail mark to search, and press  (select).





PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

Replying to a received e-mail

 1 See steps 1 to 4 in "To open an e-mail in the Inbox" (page 55) to display the e-mail to reply.

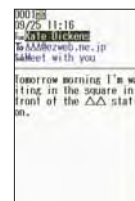



2 Press (reply).

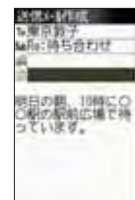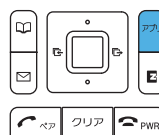  

Sub (Subject) is prefixed with "Re:," and the main text of the e-mail is quoted.


仮

  3 Press to select , and press (select).

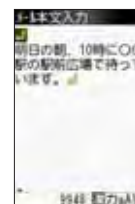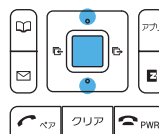

仮

 
4 Input the main text, and press (ok).

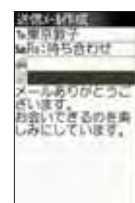

仮

5 Press (send).

 The e-mail is sent.

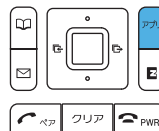

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Reading e-mails with photo or movie attached

Example: To read an e-mail with photo and movie attached

1

See steps 1 to 3 in "Opening a received e-mail" (page 54) to view a mail.



The photo is displayed.



2

Press to select Attached data field, and press (select).

  The Attachment list screen appears.

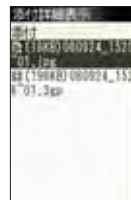
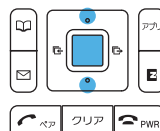


仮

3

Press to select a file name, and press (recv).

  The movie is received. Press (play) to view the movie.

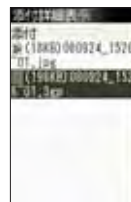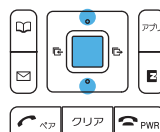

仮



仮

- Press to select a photo, and press (view) to display the entire photo on the screen.
- Some attached data do not appear automatically depending on their size. If they do not appear, go to step 3.
- It may take a short while to send/receive mails depending on the data attached to them or the reception strength of the place you are in.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Filtering spam

We recommend that you set our mail filter function to block spam.

Using Supportive setting, you can set mail filter function with simple operations answering onscreen questions.

 
 
Setting the mail filter

Example: To access the Supportive setting

- ① Press (mail) in the idle screen. Press to select "Settings" "Mail filter," and press (select).
- ② Press to select "Yes," and press (select). Press to select "次へ," and press (Select).
- ③ Enter your security code. Press to select "送信," and press (Select).
- ④ Press to select the item you want to confirm, and press (Select).



Simple settings

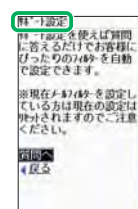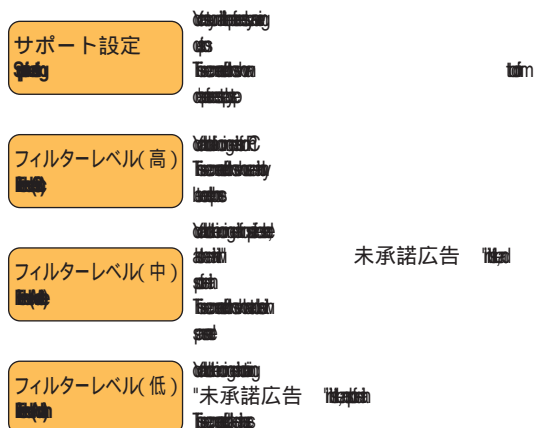


By changing your e-mail address, you can prevent spam from being received. For details on how to change e-mail address, see pages 24 and 25.



<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

Using C-mail

 ■ About C-mail

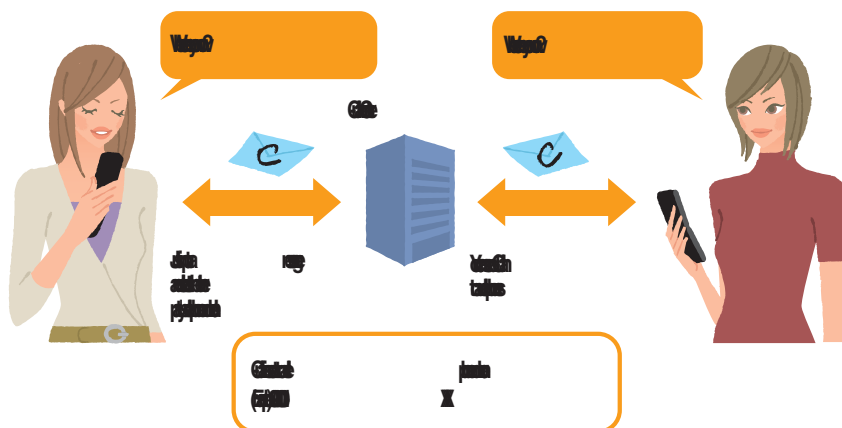C-mail allows you to exchange mail among other au cellphones that supports C-mail using cellphone numbers. You can send C-mail comprising up to 50 double/100 single byte characters.



-  C-mail transmission fee is charged when sending C-mail.
-  In overseas, EZ non-subscriber (including who once subscribed but cancelled EZ service) can not send C-mail.


■ C-mail Safety Block



C-mail Safety Block allows you to reject C-mails that include URL (http:// , https://) or phone numbers in the C-mail main text.

C-mail Safety Block is valid by default. You can cancel the setting to receive C-mails that include URL or phone numbers.



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

 
 
Creating and sending C-mail

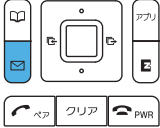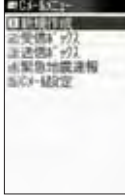  1 Hold down  (mail) for at least one second in the idle screen.






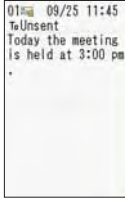 
(仮)

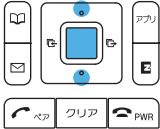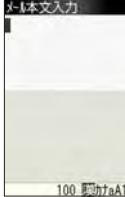2 Press  to select "Create new," and press  (select).

(仮)

3 Enter the main text, and press  (ok).

 
4 Press  (send).







➡ Continued on the next page

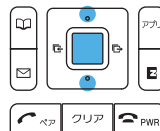
<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------


5 Press  to select "Phone book," and press  (select).





 You can also select a phone number from sent/received messages or enter a phone number manually.

 6 Press  to select a person you want to send a C-mail to, and press  (select).

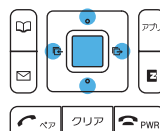


  7 Press  to select a phone number, and press  (select).

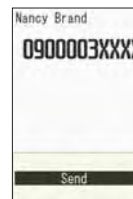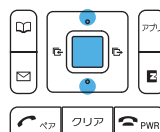

8 Press  (select).

 The C-mail is sent.

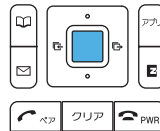

Opening a received C-mail

When you receive a C-mail



A message and  appear in the idle screen.




仮



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

  1 Press  (select).

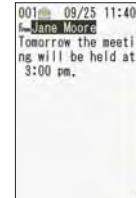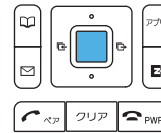



To open a C-mail in the Inbox

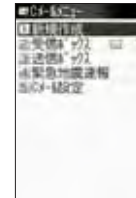 
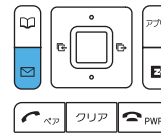 
1 Hold down  (mail) for at least one second in the idle screen.






Icon

  : The "unread mail" that has not yet been read
The number on the right side is the number of unread mails.

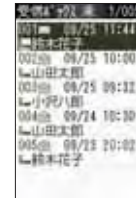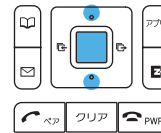2 Press  to select "Inbox," and press  (select).



 3 Press  to select the C-mail you want to read, and press  (viewer).

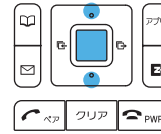

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

Camera

The W64S has a 3.2 Megapixel camera and allows you to take photos and record movies.

What you can do with the camera

You can use images on the W64S.

You can set photos you took as the image for the idle screen, set them to display when you have an incoming call, or save photos or movies to the phone book.



仮

You can mail photos and movies.

You can send images up to 500 KB ¹ by attaching to an e-mail.

¹ It may take a short while to send/receive mails depending on the reception strength of the place you are in.



 
Page
69



仮

You can print out photos or browse them using a PC.

You can save photos you took in the microSD™ Memory Card and print them out with a printer or at a DPE shop, or browse them using a PC.

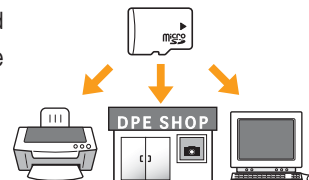


PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	


Successful taking of photos

How to hold the W64S

 
To take "Photo (Wallpaper)" photos

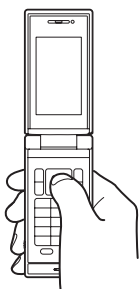


To take "Photo (Digital Camera)" photos

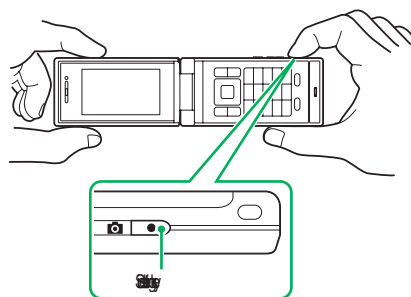 

To take in Recording oneself style

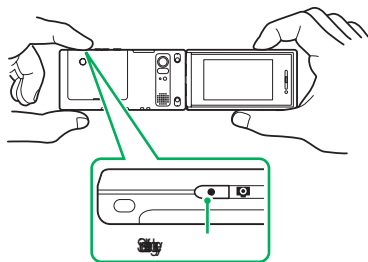 

To take in TV style

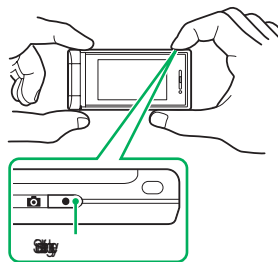 

How to set the W64S


- ① **Hold your bent arm tight against your body.**
- ② **Hold the main unit not to shake it.**
If your armpits are open or your arms are stretched, the main unit may move and it may cause a blur.
- ③ **Be sure not to cover the lens with your fingers.**
Smearred lens (with fingerprint, etc.) can blur your images.

To stabilize the shot


- ① **Do not move the main unit.**
Do not move the main unit after you press the shutter until the shutter sound stops.
Be careful especially when you shoot in the dark.
- ② **Use self-timer.**
You can prevent a blur caused by pressing the shutter.


<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

Taking photos


- 1 Hold down  (Side setting key) on the side of your cellphone for at least one second in the idle screen.

The photo monitor screen appears.

  The photo monitor screen appears in the previous selected size. "3M" is set by default.

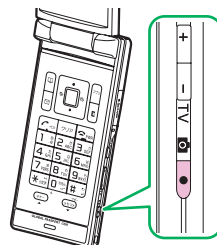


 
- 2 Hold the W64S horizontally with both hands. View the subject you want to take on the photo monitor screen.

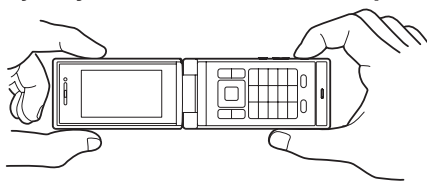



②

  - 3 Half-press  (Side setting key) on the side of your cellphone.

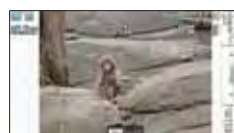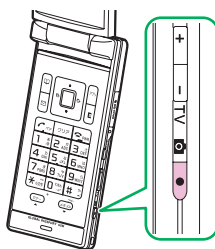W64S camera automatically focuses on the subject. The frame's color turns into green from white with a short sound.



③


 You can also automatically focus on the subject by pressing  (AFlock).

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	


4

Full press  (Side setting key) on the side of your cellphone.

 
You hear the shutter sound, and the photo you have taken is displayed (preview screen).

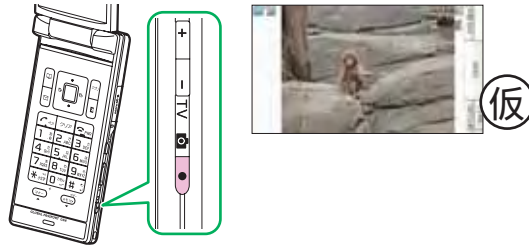






5

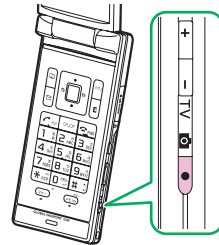 Press  (Side setting key) on the side of your cellphone.

"Saved in data folder" appears, and the display returns to the monitor screen.



 -  You can also save photos by pressing  (save).
-  Photos are saved in the "Photo folder" in the data folder if the microSD™ Memory Card is not inserted.
-  Seven photo shooting modes (shown below) are available.

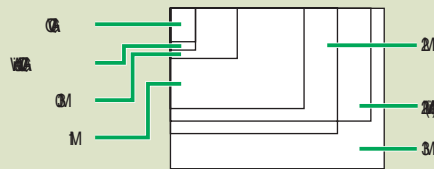



About the microSD™ Memory Card

If you take photos with "0.3M," "1M," "2M," "2M(Wide)," or "3M" with inserting the microSD™ Memory Card in the W64S, the images are saved in the "DigiCame folder" in the microSD™ Memory Card.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	


Viewing photos you have taken

  1 Hold down  for at least one second in the idle screen.

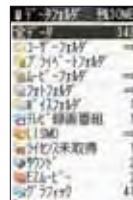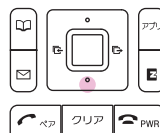




仮

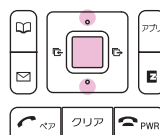 2 Press  to select "Photo folder," and press  (select).





 
仮

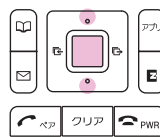3 Press  to select the date folder containing the photo you want to view, and press  (select).




仮


 
4 Press  to select the photo you want to view, and press  (view).

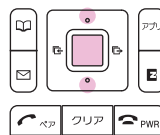



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

  
Attaching a photo to e-mail

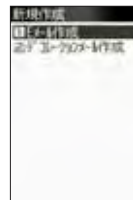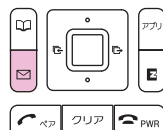1 Press  (E-mail) in the preview screen immediately after you have taken the image.



 ①



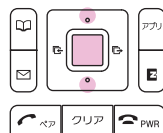





2 Press  to select "Create E-mail," and press  (select).



②

The create screen appears.

For details on how to create and send e-mail, see steps 3 to 11 on page 51 to 53.

-  The photo or the movie you have taken is automatically attached to an e-mail  (Attached data).
-  "Other phone cannot play size over case happen" may appear. Press  to select "Attach on," and press  (select).
-  "Cannot attach over 500KB Resize?" may appear. Press  to select "Yes," and press  (select) to select the size.

Camera

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

 
EZweb


 EZweb subscription required

About EZweb

EZweb is an information service that allows you to enjoy the Internet on your cellphone. With EZweb, you can obtain Chaku-Uta-Full®(full songs), the latest news, and other contents from information sites.


- You need to subscribe to the EZweb service to use the EZweb service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase.
- Make initial settings before using. If you have not made initial settings yet, see page 23. However, initial settings cannot be made from overseas.

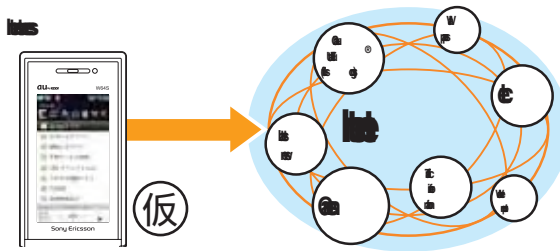



 Data communications fee (varied by the sent/received data amount, regardless of the connection time) is charged when connecting EZweb.

 Displaying the au one Top

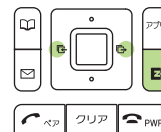

1 Press **E** (EZ) in the idle screen.
Press **←** **→** to select **Z** (EZweb).




 Press **E** () in the EZweb screen, and you can access to "PlayNow by Sony Ericsson."



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

 2

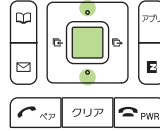Press  to select "au one Top," and press  (select).



検索 (Keyword search function)	Provides information search function by keywords
カテゴリ(メニューリスト)(Category search function)	Provides a list of sites offering each contents
トップニュース (Top news)	Provides the automatically-updated latest news
最新オススメ情報 (Latest recommended information)	Introduces hot information on entertainment, living and contents
天気(Weather) 乗換(Transfer) 占い(Fortune-telling)	テレビ(TV programs) 銀行(Banking)
買う (Shopping Information)	Provides information on internet shopping and internet auction which allows you to sell and buy goods easily
知る (Useful information)	Provides information on sports and stock prices, also useful tools such as map and dictionary
楽しむ (Entertainment information)	Provides the latest information on hobby such as games, music, e-book, and entertainment trends
暮らす (Living information)	Provides daily life useful information such as gourmet and travel
集まる (Community information)	Provides appealing information about features like SNS, Blog, etc. you might want to try
メール(大容量6GB)(Mail (6GB storage capable))	Provides another e-mail address for both cellphone and PC use
マイページ (My Page)	Provides various information, useful tools or mass data storage capabilities to suit your needs
au style	Introduces au-recommended information and sites
とくする情報 (Valuable information)	Provides gifts and beneficial information exclusively for EZweb service subscribers for free
auお客さまサポート (au Customer Support)	Provides phone bills, procedures, au online manual, and notice from au
auワンちゃんの部屋 (au ワンちゃん's room)	Introduces you to the contents of the au ワンちゃん mascot
カンタンアクセス・オープンサイト (Simple Access & Open Site)	Introduces Simple Access and Open Site
災害用伝言板 (Disaster Message Board)	Registers/checks the vital information in disasters
ENGLISH	Introduces English sites


-  It may take a short while for each screen to appear.
-  The screen layout and contents are just examples. These are subject to change.



EZweb

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	



Saving your favorite sites

 
 
1

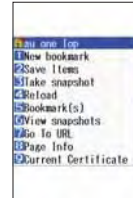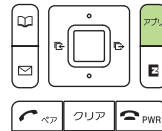Display the site you want to save, and press  (Browser Menu).



2

  
Press  to select "New bookmark," and press  (Select).

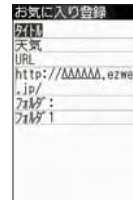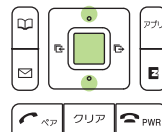


仮

 3

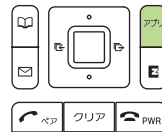


Press  (cmplt).



 You can save up to 100 sites in the Bookmark. However, some sites may not be saved.

Viewing a site saved to the Bookmark



1

 
Press  (EZ) in the idle screen.
Press  to select  (EZweb).



仮

2



Press  to select "Bookmark(s)," and press  (select).

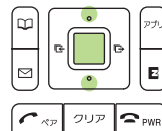

仮


PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

  3 Press to select a folder, and press (select).

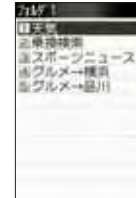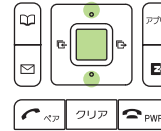

仮

 
4 Press to select the site you want to view, and press (select).

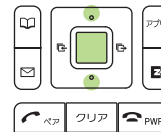

Confirming your call costs

You can confirm call and communication charges.

 1 Press (menu) in the idle screen.

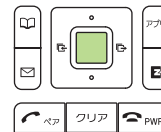

仮

2 Press .
Press to select "Yes," and press (select).

Select the item you want to confirm.




EZweb

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	


Downloading Chaku-Uta® (ringtones)/Chaku-Uta-Full® (full songs)

 - 1** Press **E** (EZ) in the idle screen.
Press **◀ ▶** to select **Z** (EZweb).


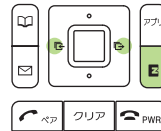


仮


 
- 2** Press **▲ ▼** to select "au one Top," and press **■** (select).

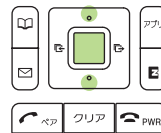

  
- 3** Press **▲ ▼** to select "カテゴリ(メニューリスト)" and press **■** (OK).

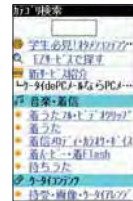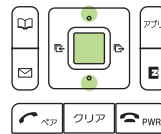

  - 4** Press **▲ ▼** to select "着うた" or "着うたフル・ビデオクリップ," and press **■** (Select).

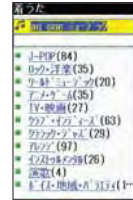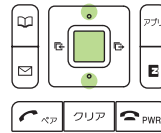

 - 5** Press **▲ ▼** to select the desired site, and press **■** (Select).

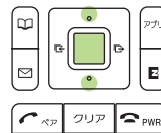


Follow the on-screen instructions to select the melody you want to download.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

6

Select and download a melody.

 Download the melody by following the on-screen instructions.

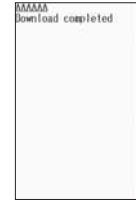

- To use paid information site, you must enter the EZ Password or the Premium EZ Password. EZ Password or Premium EZ Password is any 4-digit number that you wrote in the application form.
- The screen layout and contents are just examples. These are subject to change.

EZweb

75

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

EZ News Flash

 EZweb subscription required

 
What you can do with EZ News Flash




EZ News Flash is a service distributing updated news, weather, and fortune telling information to the idle screen for no charge.

Updated news is always displayed on the idle screen as a scrolling ticker, and you can browse detailed information by selecting it. You can use EZ News Flash easily with simple settings just after making initial settings for EZweb (page 23). All information is distributed for no charge.

When updating EZ News Flash by manual operation or connecting to EZweb site, data communications fee may be required. If data communications fee is required, confirmation screen appears.

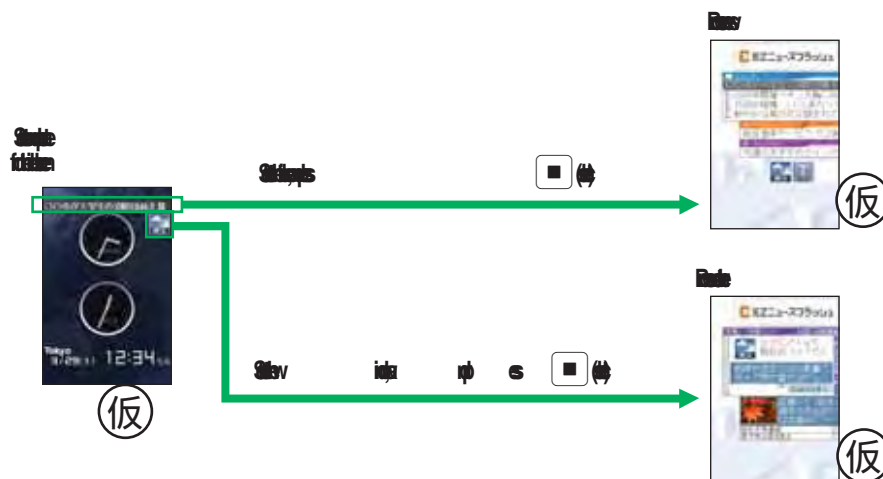The service is unavailable in Overseas (GSM) mode.






-  The information is updated in regular time intervals.  appears while receiving information.
-  If you are using "au one My Page," you can confirm the updated contents by selecting "My Page" from the top page of EZ News Flash.





PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

 Setting EZ News Flash service

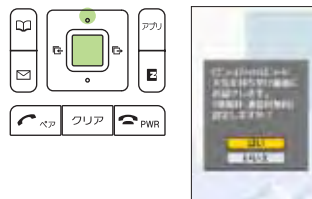You can use EZ News Flash with simple settings for no charge.
Make settings for EZ News Flash after making initial settings for EZweb (page 23).

- 1** Press  in the idle screen to select the ticker, and press  (select).
















- 2** Press  to select "はい," press  (選択), press  to select "OK," and press  (Select).



Setup is complete.
When you complete setup and return to the idle screen, a message "次回配信までしばらくお待ち下さい。" will be displayed on the ticker.

Canceling EZ News Flash service

- ① Press  in the idle screen to select the ticker, and press  (select).
- ② Press  (メニュー), press  to select "サービス設定解除," and press  (選択).
- ③ Press  to select "YES," press  (選択), press  to select "解除する," and press  (Select).
- ④ Press  to select "OK," press  (Select), press  to select "OK," and press  (Select).

Changing settings of receiving notifications

You can change the settings of volume, tone, vibrator, and indicator which notifies EZ News Flash was distributed.

If you do not need notifications when receiving EZ News Flash, set the volume to "off".

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

EZ Navi

 EZweb subscription required

What you can do with EZ Navi

EZ Navi is a handy service using location information by GPS.
The service is unavailable in Overseas (GSM) mode.



A When the front passenger check for driving route information: "Passenger Seat Navi"

Passenger Seat Navi is the service for the passenger (sitting next to the driver) to provide the optimum route information to the destination using map and voice navigation.



B When you want to know where your child is: "Security Navi"

"Security Navi" application provides three features.

"Auto Position Search" (paid), "Area Message" (free), "Position Search Mail" (free)

With the operation from W64S, you can check the position of an au cellphone supporting "Position Search." Also, W64S automatically sends a notice message to specified au cellphone under the following condition; during specified time frame, the person (with W64S) enters (or stays)/leaves (or is no longer in) specified area.



<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

C When you go out: "EZ Navi Walk"

You can display various menus convenient for going out.



ナビをする	Route information (voice prompt) for your destination or search shops/facilities around
地図を見る(無料)	See your current position or selected map
乗換検索する(無料 ¹)	Search transit/time table or railway information
道路情報を見る	See real time route information nationwide
もっとナビウォーク	Help information for various settings or search by web
インフォメーション	Membership registration or inquiries

The star symbol shows that you can use your voice to enter search terms. This is called "Voice input" function.

 
¹ Some menus are paid service.

Measuring current position



The result of the first measurement is displayed as ★ on the map. Your current location will be displayed as a person icon in real time by successive measurement.

3D Navi

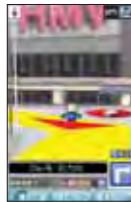

Change to 3D display around guidance point or your destination. Navigation engine by NAVITIME JAPAN
Map: Shobunsha Publications, Inc./ Sumitomo Electric Industries, Ltd.
3D data: ZENRIN CO., LTD./ GEO Technical Laboratory Co., Ltd. Z06A-No. 2137

D When you try to find nearest evacuation sites or your way home: "Evacuate Navi"

Even when you have difficulty to get connected due to large scale disaster, W64S provides map/route information for evacuation sites or your way home using preset map data ("Evacuate Area Map"). Also, you can download various application programs from "Evacuate Navi" EZwebsite (for example, "Route Home Map" program provides map/route information between two places you specified, like "Office to Home").

To get these map/route information, you need to save GPS information of your home to phone book on au cellphone, and set it as destination beforehand.

To use some of the programs, application fee is charged respectively.

Evacuate Area Map



Route Home Map



Map: Shobunsha Publications, Inc./ Preparation: Asia Air Survey Co., Ltd.

- For the use of EZ Navi, data communications fee is charged. And to use some of the services, information fee is charged in addition to the data communications fee.
- Regarding evacuation sites or other disaster related information, follow instructions by police, fire brigade, or local authority. Those instructions always take priority over the provided map/route information on the screen.
- For the use of "Evacuate Navi," it may take a short while to get GPS information of your current location depending on the GPS satellite conditions.
- The screen layout and contents are just examples, and may differ from the actual screen.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

au Media Tuner

 EZweb subscription required

You can view Television (1Seg), EZ Channel-Plus and EZ Channel.

What you can do with au Media Tuner

■ ■ Television (1Seg)

You can view the "1Seg" television service, which has begun broadcasting digital terrestrial television in Japan for cellphones and portable devices.

For details on the "1Seg" television service, see the following websites.

The Association for Promotion of Digital Broadcasting

From your PC: <http://www.dpa.or.jp/>

From your cellphone: <http://www.dpa.or.jp/1seg/k/>

 
Page
83

■ ■ EZ Channel-Plus

You can enjoy registered programs with EZ Channel-Plus or EZ Channel.

Built-in TV antenna


The antenna for Television (1Seg) is built in the main unit. When viewing Television (1Seg), do not cover the built-in TV antenna with your hands.

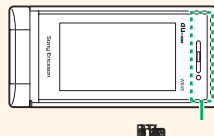




- If the reception strength is not strong enough, open the main unit. Reception strength will improve with the main unit open.
- The antenna for Television (1Seg) is also built in the Sony Ericsson round-type earphone jack conversion adapter 03. When viewing Television (1Seg) in TV style, connecting the stereo earphone and the Sony Ericsson round-type earphone jack conversion adapter 03 is recommended.


When the stereo earphone and the Sony Ericsson round-type earphone jack conversion adapter 03 is connected, sound will be outputted from the stereo earphone by default. To output sound from the speaker, set "スピーカー" (Speaker) for "音声出力先設定" (Sound output settings) of "音声設定" (Sound settings).

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	


 You need to make initial settings before using au Media Tuner. If you have not made initial settings yet, see page 23.

 No call or data communication fees are charged for using au Media Tuner to view Television (1Seg). No data communication fees are charged for viewing data broadcasting programs. However, data communication fees are charged when using services such as program guide acquisition, song title search function, and accessing information sites on EZweb or acquiring additional information from information provided by data broadcasting programs.

 When remaining battery level shows , you can not start au Media Tuner.

 The approximate continuous viewing time is shown below. The time will differ depending on the operation of data broadcasting programs.

Television (1Seg)	Reception time	Using earphone	Time with DBEX On : XXXX Time with DBEX Off : XXXX
		Using speaker	Time with DBEX On : XXXX Time with DBEX Off : XXXX
	Recording time		XXXX

 The screen layout and contents are just examples. These are subject to change.


PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	



Initial settings for au Media Tuner

To view Television (1Seg) by using au Media Tuner, you need to make initial settings for both au Media Tuner and Television (1Seg).

 
1 Hold down  TV for at least one second in the idle screen.

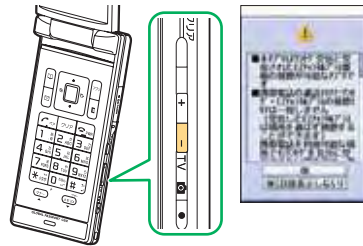Precautions appear.




2 Confirm the precautions, use  to select "OK" and press  (選択).

 Initial setting screens for au Media Tuner appear. Follow the onscreen instructions, and channel setting screen for Television (1Seg) appears.

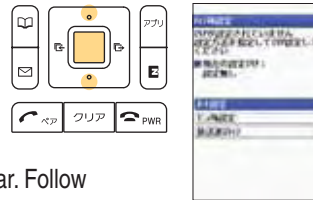

 3 Use  to select "オート設定," and press  (選択).

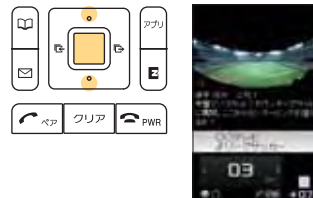



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Viewing Television (1Seg)

1

Hold down  TV for at least one second in the idle screen.

Television (1Seg) starts in the mode you used the last time, and the channel selected when you used the last time is displayed (television operation screen).

 
After receiving data broadcasting, the screen automatically switches to data operation screen. If you want to switch to television operation screen, press  (テレビ操作). Pressing  while the television operation screen is displayed will switch the channel.



Television operation screen




Data operation screen

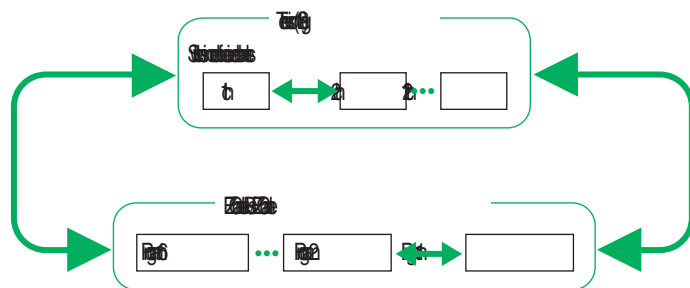

<p>PTX-930 暫定版</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
------------------------	--	-----------

Viewing Television (1Seg) in TV style

 After making initial settings for au Media Tuner, you can view Television (1Seg) in TV style. You can also view Television (1Seg) while charging the battery using the desktop holder.

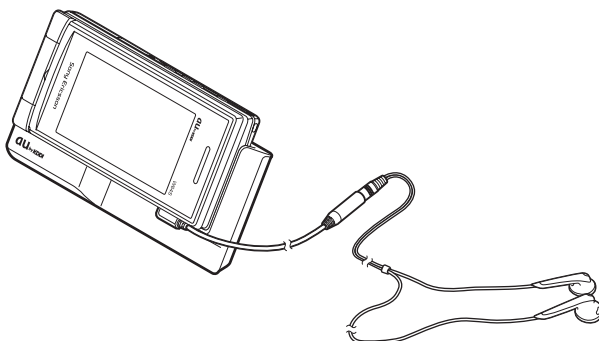

1 Set W64S to TV style.

2 Hold down TV for at least one second in the idle screen.

 
Press TV to adjust the volume.
Press to switch the channel.



When "Launch Set" is set to "TV (1Seg)," Television (1Seg) will start just by setting W64S to TV style while the idle screen is displayed.











Ending au Media Tuner

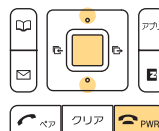1 Press PWR, use to select "Quit," and press (select).



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

        Troubleshooting

Symptom	Items to check	Solution	Page
Unable to turn the power on.	Is the battery pack properly installed?	Properly install the battery pack.	—
	Is the battery pack charged?	Charge the battery pack.	12
	Did you hold down  for at least one second?	Hold down  for at least one second.	16
Unable to make calls.	Is "圏外" displayed on the screen?	Make a call from a location where "圏外" is not displayed.	16
	Did you enter the area code when entering the phone number?	When making a call to a phone other than a cellphone, first enter the area code even when both parties are inside the same city.	27
	Is the power turned on?	Hold down  for at least one second.	16
	Did you press  ?	Press  .	27
	Is W64S set to Recording oneself style or TV style?	Set W64S to Normal style.	22
	Is the Area Setting properly set?	For making a call in Japan, set "Japan" in Area Setting.	26
Unable to receive calls.	Is "圏外" displayed on the screen?	Move to a location where "圏外" is not displayed.	16
	Is the power turned on?	Hold down  for at least one second.	16
No reaction when a key is pressed.	Is the power turned on?	Hold down  for at least one second.	16
	Is the side keylock set?	Hold down  for at least one second to cancel side keylock.	15
Warning tone sounds, and power turns off.	There is not enough power remaining in the battery pack.	Charge the battery pack.	12
Incoming calls are automatically answered.	Is the record message set?	Hold down  for at least one second to cancel the record message.	34
Unable to hear the other party.	Is the volume during a call set too low?	Press  while you are talking. The volume during a call will increase.	30

Please visit the au web site for more information.

- From W64S  (EZ)  (EZweb) "au one Top" "auお客さまサポート" (au Customer Support) "調べる" "オンラインマニュアル" "故障診断Q&A"
- From your PC (<http://www.kddi.com/customer/service/au/trouble/kosho/index.html>)

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Remote Ctrl Lock

 
In case you have lost your W64S

Using Remote Ctrl Lock, you can lock your W64S (Auto lock, FeliCa lock and Phone book lock) remotely against unauthorized use.





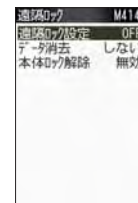


■ ■ To set up the working environment of Remote Ctrl Lock

Auto lock, FeliCa lock and Phone book lock are enabled by calling to your W64S specific times from the phone number specified beforehand.

- ① Press  (menu) in the idle screen press   .
- ② Enter Lock No., and press  (ok).



②


- ③ Press  to select "Rmt.CtrlLock," and press  (select). Set each item below:
 - "Set" : Select "ON"/"OFF."
 - "Duration" : Enter the time (1 to 10 minutes) as for the time frame starting with the first incoming call to be ended with set times call.
 - "Frequency" : Enter the times of incoming call (3 to 10 times) to set and release Remote Ctrl Lock.
 - "Caller" : Register phone number (up to 3 numbers) to use when setting and releasing Remote Ctrl Lock.
- ④ Press  to select "Data erase" "Erase"/"Not erase," and press  (select).
Set whether to delete saved data when setting Remote Ctrl Lock or not.
- ⑤ Press  to select "Local unlock" "ON"/"OFF," and press  (select).
Set whether to release Remote Ctrl Lock by entering Lock No. or not.
- ⑥ Press  (back).

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

■ ■ To set Auto lock, FeliCa lock and Phone book lock on W64S by Remote Ctrl Lock

Make a call to W64S under the working condition (Duration, Frequency, Caller) set by Remote Ctrl Lock.

Remote Ctrl Lock is set, and announcement is played notifying that Remote Ctrl Lock is set.

 Remote Ctrl Lock cannot be set if W64S is turned off or in the area where reception strength is not good.

 "Not erase" (for "Data erase") and "OFF" (for "Local unlock") are set by default.

■ ■ To lock Remote Ctrl Lock on W64S by Security Lock Service

With no Remote Ctrl Lock setting has been made, call au Customer Service Center or visit our web site from your PC to set Auto lock, FeliCa lock and Phone book lock. You can use Security Lock Service with no charge.

au Customer Service Center

From au cellphones: 113 area code not required (toll free)


From other operators/regular phones:  0077-7-113 (toll free)
(24 hrs a day)

Follow the voice guidance to set the lock.

au Customer Support

Visit our au Customer Support web site (<http://cs.kddi.com/>) and follow the onscreen instructions to set the lock.

Application required for the first time use (we also accept your application after the loss).

 You cannot set the lock if W64S is turned off or in the area where reception strength is not good.

Remote Ctrl Lock

87






PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----



Other features

Safety Buzzer

 
To show that you are in emergencies, you can use the Safety Buzzer function in extreme volume sound. To use this function, set the Safety Buzzer to "ON" beforehand.

To set the Safety Buzzer "ON"

- ① Press  (menu) in the idle screen press  .
- ② Press  to select "ON," and press  (select).


 While Safety Buzzer is set to "OFF," you can set Safety Buzzer "ON" by holding down  for at least one second in the idle screen.




To use the Safety Buzzer

Hold down  for at least one second in the idle screen.

 To stop the Safety Buzzer sound

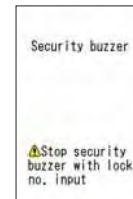Enter the Lock No..



-  The Safety Buzzer sound continues until Lock No. is entered or battery is fully discharged.
-  Even with the manner mode set or stereo earphone connected, the Safety Buzzer sounds from speaker.
-  While the Safety Buzzer sound continues, you cannot turn W64S off or perform other operations. But you can dial 110 (Police), 118 (Japan Coast Guard), and 119 (Fire brigade).

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Other Functions

GlobalAssort Menu

You can use tools such as Twin Planet Clock and Global Calculator which is useful both in Japan and Overseas.

EZ keitai-arrange

You can set/change ringtones or designs of the idle screen, icons, etc. collectively. Also, you can use downloaded data for those settings.

au one My Page

You can save data such as a phone book, e-mail, or the data in the data folder to au one My Page.

Various ways to get audio files

You can enjoy your favorite songs by EZ "Chaku-Uta-Full[®]" (full songs), the full length music download service, and also enjoy other audio files transferred from your music CDs via au Music Port.

EZ apps (BREW[®])

You can download game software from EZweb sites and play games.


Infrared data exchange feature

You can exchange data such as a phone book, profile, or the data in the data folder between au cellphones that support infrared data exchange.

PC Site Viewer

You can view WEB sites intended for PC on W64S with smooth high-speed data communication.

Fake Incoming Call

Holding down  for at least one second makes ringtone sound as if you have an incoming call.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

Radio Wave Exposure and Specific Absorption Rate (SAR) Information

Mobile Phone GSM/GPRS 900/1800/1900

United States & Canada

THIS PHONE MODEL HAS BEEN CERTIFIED IN COMPLIANCE WITH THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

The W64S mobile phones have been designed to comply with applicable safety requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed to not exceed the limits* of exposure to radio frequency (RF) energy set by governmental authorities. These limits establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by international scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a safety margin designed to assure the safety of all individuals, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands. While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves. For more information on SAR, please refer to the safe and efficient use chapter in the User Guide.

The highest SAR value as reported to the authorities for this phone model when tested for use by the ear is 0.57 W/kg*, and when worn on the body is 0.09 W/kg* for speech and 0.22 W/kg* for data calls. Body worn measurements are made while the phone is in use and worn on the body with a Sony Ericsson accessory supplied with or designated for use with this phone. It is therefore recommended that only Ericsson and Sony Ericsson original accessories be used in conjunction with Sony Ericsson phones.

**Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure*. The tests are performed in positions and locations (i.e., by the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for this phone model with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC equipment authorization meet the government requirement for safe exposure. SAR information on this phone model is on file at the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea> after searching on FCC ID PY7A5880001 Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.ctia.org>.

Other features

90

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.

** This paragraph is only applicable to authorities and customers in the United States.

Europe

This mobile phone model W64S has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

For more information on SAR, please refer to the safety chapter in the User's Guide.

SAR data information for residents in countries that have adopted the SAR limit recommended by the International Commission of Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/kg averaged over ten (10) gram of tissue (for example European Union, Japan, Brazil and New Zealand):

The highest SAR value for this model phone tested by Sony Ericsson for use at the ear is 0.36 W/kg (10g).

PTX-930 暫定版	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	--	----

Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When the phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to:
www.sonyericsson.com/health.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.



Recommendations for care and safe use of our products

Handle with care and keep in a clean and dust-free place.

Warning! May explode if disposed of in fire.

Do not expose to liquid or moisture or excess humidity.

For optimum performance, the product should not be operated in temperatures below +5° C (+41° F) or above +35° C (+95° F). Do not expose the battery to temperatures above +35° C (+95° F).

Do not expose to flames or lit tobacco products.



Do not drop, throw or try to bend the product.

Do not paint or attempt to disassemble or modify the product.



Consult with authorized medical staff and the instructions of the medical device manufacturer before using the product near pacemakers or other medical devices or equipment.

Discontinue use of electronic devices or disable the radio transmitting functionality of the device where required or requested to do so.

Do not use where a potentially explosive atmosphere exists.

Do not place your product or install wireless equipment in the area above an air bag in a car.

Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.

Children



Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. When a power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for the intended purpose only. Charge the battery in temperatures between +5° C (+41° F) and +35° C (+95° F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 22cm (8.7 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufactures forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with the vehicle manufacturer's representative to be sure that the mobile phone or Bluetooth handsfree will not affect the electronic systems in the vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". KDDI/Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communication. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Malware

Malware (short for malicious software) is software that can harm the mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While the device does employ security measures to resist such efforts, KDDI/Sony Ericsson does not warrant or represent that the device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to the mobile phone from known, reliable sources.

Accessories

Use only KDDI original accessories. KDDI/Sony Ericsson does not test third-party accessories. Accessories may influence RF exposure, radio performance, loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Disposal of old electrical and electronic equipment



Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product.

Disposing of the battery



Check local regulations or call a Sony Ericsson call centre for information. Never use municipal waste.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	---	----

Memory Card

If the product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If the product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

Warning!

If the device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on memory card use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. KDDI/Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

FCC Statement for the USA

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions :



- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

PTX-930 暫定版	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------	--	----

Declaration of Conformity for W64S

We, Sony Ericsson Mobile Communications AB of Nya Vattentorget SE-221 88 Lund, Sweden declare under our sole responsibility that our product


Sony Ericsson type AAH-5880001-BV

and in combination with KDDI AC-charger 02 (0203PQA), KDDI Desktop stand (64SOPUA) and Sony Earphone (MDR-E0921LP), to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 489-7:V1.3.1, EN 300 440-2:V1.1.2, EN 300 440-1:V1.7.1, EN 301 489-3:V1.4.1 and EN 60950-1:2006, following the provisions of Radio Equipment and Telecommunication Terminal Equipment Directive 1999/5/EC

Lund, September 2008

CE0682

 Signature

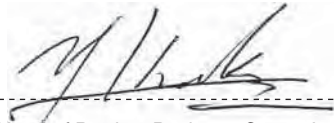

Yoshiro Kido, Head of Product Business Group Japan

We fulfill the requirements of the R&TTE Directive (1999/5/EC)

Other features

98

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

MEMO

99

PTX-930 暫定版	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
----------------	--	----

Index

A	
accessories	10
au IC-Card	11
au Media Tuner	80
initial settings.....	82
au one Top	70
B	
battery pack	10
battery power, remaining	4
before use	10
Bookmark	
saving	72
viewing	72
C	
C-mail	60
C-mail Safety Block	60
creating and sending.....	61
icon.....	63
opening	62, 63
receiving.....	62
camera	64
photo	66
successful taking.....	65
cellphone etiquette	1
charge indicator	12
charging the battery pack	12
confirming your call costs	73
confirming your cellphone number	
.....	23
cross controller™	15
D	
desktop holder.....	12
Dialed calls.....	30
Disaster Message Board Service	
(demonstration).....	7
display	17
domain	24
downloading Chaku-Uta-Full®	
(full songs).....	74
downloading Chaku-Uta®	
(ringtones)	74
drive mode	5
E	
e-mail	50
attaching photo.....	69
creating and sending.....	51
icons.....	51, 54, 55
initial settings.....	23
opening	54, 55
receiving.....	54
replying.....	57
searching.....	56
viewing attached photo/movie.....	58
e-mail address	
changing.....	24
confirming	23
English display	17
EZ Navi	78
EZ News Flash	76
EZ Service menu	20
EZweb	70
Bookmark.....	72
confirming your call costs.....	73
initial settings.....	23
I	
icons	17, 18
idle screen	16
ID Unsent	29
incoming indicator	11
initial settings	23
international call	27
Internet (See "EZweb")	
M	
mail	
C-mail.....	60
e-mail	50
mail filter	59
Main menu	19

PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

manner mode 4, 31

Media Launcher 21

N

names of parts 11

Normal style 22

O

one-ring call 6

overseas use 26

P

Pair Function 48

 making a call 49

 saving 48

phone book 42

 deleting 45

 editing 44

 making a call 46

 saving 42

 saving from dialed/received calls 47

Phone call 27

 if you are unable to answer 29

 making 27

 making an international call 27

 notify/not notify the other party 27

 receiving 29

photo

 attaching to e-mail 69

 saving 67

 taking 66

 viewing 68

power 4

R

Received calls 30

reception strength 4

record message 4, 34

 playing back 35

Recording oneself style 22

redialing 30

Remote Ctrl Lock 86

ringtone 32

S

Safety Buzzer 88

Security Lock Service 87

soft key 16

spam 6, 59

stereo earphone 13

T

television (1Seg) 83

text input 36

 alphanumerics 37

 Back Space function 37

 changing input mode 36

 character key assignment table 37

 characters assigned to the same key 39

 deleting characters 39

 emoticons 40

 pictorial characters 40

 sentences 41

 symbols 40

 uppercase characters 39

troubleshooting 85

TV style 22

V

volume during a call 30

PTX-930 暫定版	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある	
	理由:	

For inquiries, call:
au Customer Service Center

File

How to access

- EZ ▶ EZweb ▶ au one Top
- ▶ auお客さまサポート
(au Customer Support)
- ▶ お問い合わせ (Inquiries)



Menu structure is subject to change without prior notice.

File

File

0077-7-111
フリーコール



File

0077-7-113
フリーコール



File

File

0077-7-113
フリーコール



File

0077-7-113
フリーコール



Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.



Check the operation, screen, and specifications of the product.

File

File

File

0077-7-111



157



0077-7-113

File



PTX-930 暫定版	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	