


Stereo Streaming Bluetooth™

Headset MH110

1. Microphone
2. Call key
3. 3.5 mm audio connector
4. Touch area for Volume/Select
5. On/off key
6. Charger connector
7. Next/Play-pause/Previous keys
8. Display

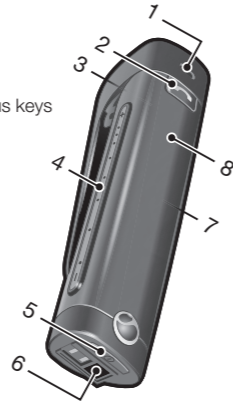

2

Display information

- Battery status. Animated when charging
- The headset is on
- The headset is ready to be paired with another device
- Incoming call
- Outgoing call
- Ongoing call
- Voice activated dialing is on
- Connecting to a phone or other device
- Adjusting the ringtone volume (in standby) or the music volume (in music mode)
- Adjusting the voice volume
- Streaming device selection menu
- Calling device selection menu
- Music mode selection menu
- Normal mode
- Music mode

3

Introduction

The Stereo Streaming Bluetooth Headset MH110 lets you stay in control of your incoming and outgoing phone calls. You can enjoy stereo audio from a phone or other Bluetooth device, such as a computer or a portable music player. During calls, the music automatically pauses and starts playing again when the call ends.

4

Charging



- Before using the headset for the first time, charge it with the supplied charger for 8 hours.
- The normal charging time is 2.5 hours.
- It is not possible to use the headset during charging.

5

Turning on and off

To turn on the headset

- Press and hold down the on/off key until **sony ericsson** appears on the display.

To turn off the headset

- Press and hold down the on/off key until **sony ericsson** disappears from the display.

6

Pairing the headset

The MH110 is already pre-paired with the phone it is shipped with. The MH110 and the phone connect automatically the first time you turn on the headset.

Pairing the headset with another device

In order to use the headset with another device you need to pair the headset with that device. After successful pairing, the headset connects automatically to the other device as soon as the headset is turned on and within range.

To pair the headset with another device

1. Make sure the headset is turned off.
2. Turn on the Bluetooth function in the other device. For instructions, see the user guide of the other device.
3. Place the other device within 20 cm (8 inches) of the headset.
4. Press and hold down the on/off key on the headset for about 5 seconds until the pairing indicator appears on the display.
5. In the other device: Search for and add a new device.
6. If a passcode is requested then enter 0000.
7. The paired device list is shown shortly when successfully paired.

Note: The headset turns off if you do not pair it with the device within 10 minutes.

7

Adjusting the volume

To adjust voice or music volume

1. Enable volume control by swiping the whole touch area
2. Swipe the touch area again to adjust the volume.

For repeated volume adjustment hold down your finger at the end of the touch area after a swipe.

8

Calling

To make a call

- Dial the number using the phone keys. The call is automatically activated in the headset.

To end a call

- Press the call key.

To make a call using voice commands

- Press the call key, wait for a beep and then say the command.

To answer a call

- Press the call key.

To reject a call

- Press and hold down the call key until you hear a beep.

To re-dial a number

- Double-click the call key.

To answer a second call

- Press the call key. The ongoing call is put on hold.

To switch between two calls

- Press and hold down the call key until you hear a beep.

Note: During a call the total call time is indicated on the display.

9

Calling using voice commands

- Voice commands can be useful when you are using the headset. For more information on voice commands, and if your phone supports it, see **Voice control** in the phone user guide.

Transferring sound

To transfer the sound from the headset to the phone

- See **Transferring sound to and from a Bluetooth handsfree** in the phone user guide.

To transfer the sound from the phone to the headset

- During a call on the phone, press the call key.

Using another device for calling

Before you can use another device for calling, the headset has to be paired with the device. The headset can be paired with up to four devices. Every time a phone is paired, this device becomes the calling device automatically.

- **Note:** Only one of the paired devices can be selected as a calling device at the same time.

To select a calling device

1. Press and hold down the call key until the calling device selection menu appears.
2. Select the calling device by using the touch area. After releasing the touch area the selected calling device will be connected.

10

Listening to music

To listen to music

1. Press the play-pause key to start the media player.
2. To start or pause the music, press the play-pause key on the headset.

To move between tracks

- When you listen to music, press the next or previous key.

To move within a track

- Press and hold the next or previous key until you reach the desired position.

Using another device as a music source

Before you can listen to music from another device, the headset has to be paired with the device. The headset can be paired with up to four devices. When pairing a Gaming device or PC, this device becomes the music source automatically.

- **Note:** Only one of the paired devices can be selected as a music source at the same time.

To select a music source

1. Press and hold down the play-pause key until the music source selection menu appears.
2. Select the music device by using the touch area. After releasing the touch area the selected music source will be connected.

11

Music mode selection

There are two music modes.

- Normal mode for gaming and video (applicable for PSP@go only).
- Music mode for listening to music.

To select a music mode

1. Press both the previous key and next key simultaneously. The music selection menu appears.
2. Select the music mode by using the touch area. After releasing the touch area the selected music mode will be activated.

12

Resetting headset

Reset the headset if it behaves unexpectedly.

Resetting the headset removes all information about paired devices other than the phone it was shipped with.

To reset the headset

1. Make sure the headset is turned off.
2. Press and hold down the on/off key until the pairing indication appears.
3. Simultaneously press and hold down the on/off key and the call key until the headset turns off.

13

Battery

A battery that has been infrequently used, or a new one, could have reduced capacity. You may need to recharge it a number of times.

When the battery level is low, you hear a low beep. If you do not charge the headset, it automatically turns off after 10 minutes.

To check the battery status

- Activate the display to see how full the battery is.

14

Troubleshooting

Redial does not work

- Make sure the call list in the phone is not empty.
- Make sure the correct calling device is selected.
- Make sure your phone or other device supports the Bluetooth handsfree profile.

I cannot answer a second call

- Make sure your phone supports the Bluetooth handsfree profile.
- Make sure the correct calling device is selected.

Voice commands do not work

- Make sure the voice commands are enabled and recorded in your phone before you start using them.
- Make sure the correct calling device is selected.
- Make sure your phone supports the Bluetooth headset or handsfree profile.

The music is not played in the headset

- Make sure your phone or other device is paired with the headset. You may have to restart the media player and select to use the headset.
- Make sure the correct music source is selected.

15

The headset is automatically turned off

- The battery level is too low. You hear a beep approximately 10 minutes before the headset turns off. Charge the battery.
- The headset turns off if you do not pair it with the phone within 10 minutes.

Unexpected behaviour

- Reset the headset.

Volume control doesn't work

- Enable volume control by swiping the whole touch area. Swipe the touch area again to adjust the volume.

No connection to the phone

- Make sure the headset is charged and within range of the phone. We recommend a maximum distance of 10 meters (33 feet) with no solid objects in between. Check or reset the Bluetooth settings in the phone. Try to pair the headset again.

16

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

17

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for MH110

We, **Sony Ericsson Mobile Communications AB** of Nya Vattentorget S-221 88 Lund, Sweden declare under our sole responsibility that our product **Sony Ericsson type DDA-0002027**

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V2.1.1 and EN 60950-1:2006 following the provisions of Radio Equipment and Telecommunication Equipment directive 1999/5/EC.

Lund, August 2009
Place & date of issue

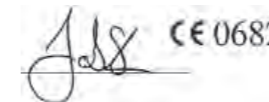

Jacob Sten,
Head of Product Business Unit Accessories
We fulfil the requirements of the R&TTE Directive (1999/5/EC).

18

Sony Ericsson MH110

This User guide is published by Sony Ericsson Mobile Communications AB, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2009

Publication number: 1231-5025.1

Some of the services in this User guide are not supported by all networks. This also applies to the GSM International Emergency Number 112. Contact your network operator or service provider if you are in doubt whether you can use a particular service.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Ericsson is under license. Sony and WALKMAN are trademarks or registered trademarks of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

19